

SECTION 2. INSTALLATION

2-1. INTRODUCTION

This section provides the installation instructions for the Henny Penny Rotisserie Display unit.

NOTICE

Installation of this unit should be performed only by a qualified service technician.



Do not puncture the skin of the rotisserie display with drills or screws as component damage or electrical shock could result.

2-2. UNPACKING



Figure 2-1

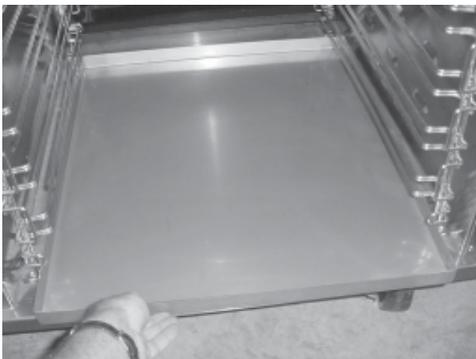


Figure 2-2

The Henny Penny Rotisserie Display had been tested, inspected, and expertly packed to ensure arrival at its destination in the best possible condition. The cabinet rests on cardboard pads that sit on a wooden skid. The racks inside the cabinet are boxed separately and the unit is packed inside a heavy cardboard carton with sufficient padding to withstand normal shipping treatment.

1. Remove the racks, casters or legs, and drip pan, from their box.
2. Tilt unit onto its side and install casters or legs onto unit, using a washer and lockwasher per bolt. Install the locking casters on the control side of unit.
3. The side racks are hooked on the brackets at the top of the interior of the unit. The bottom of the brackets rests on the base of the unit. (Figure 2-1)
4. The shelves slide onto the side racks.
5. The drip pan slides into the bottom of the unit. (Figure 2-2)

NOTICE

A stacking kit must be used to stack rotisseries, or to stack a rotisserie on a display. This kit ensures 3 inches clearance from a rear wall. The part numbers of the stacking kits are 02664, for use on the SCD-6 and SCR-6, and 02665 is used on the SCD-8 and SCR-8.

2-3. STACKING INSTRUCTIONS

2-3. STACKING INSTRUCTIONS
(Continued)

1. Lay unit on its side and bolt locking casters or legs, to the control side of unit.
2. Using the bolts provided for the non-locking casters, or legs, bolt both the stacking spacer (provided in the kit) and the non-locking caster, or legs, to the front side of the unit. The stacking spacer should extend out the front of the unit about three inches.
3. Carefully lift the rotisserie and place it on top of the display, or place the display unit on top of the rotisserie, with the controls on the same side.



Take care when moving the unit to prevent personal injury. The SCD-8 weighs approximately 400 lbs. (180 Kg) and the SCD-6 weighs 315 lbs. (143 Kg).



Figure 2-3


4. Remove the three bottom side panel screws from the top unit and remove the three top side panel screws from the bottom unit (on both sides of the unit). Refer to Figure 2-3.
5. Mount the stacking brackets to each side of the units, as shown in Figure 2-3, using the screws removed in step 4.
6. Unit is now ready for use.



For units being installed in Canada, proceed with the following steps:

7. Remove the black plug button from the top of the upper unit.
8. Remove the screws from the channel assembly and take the two parts apart.

2-3. STACKING
INSTRUCTIONS
(Continued)

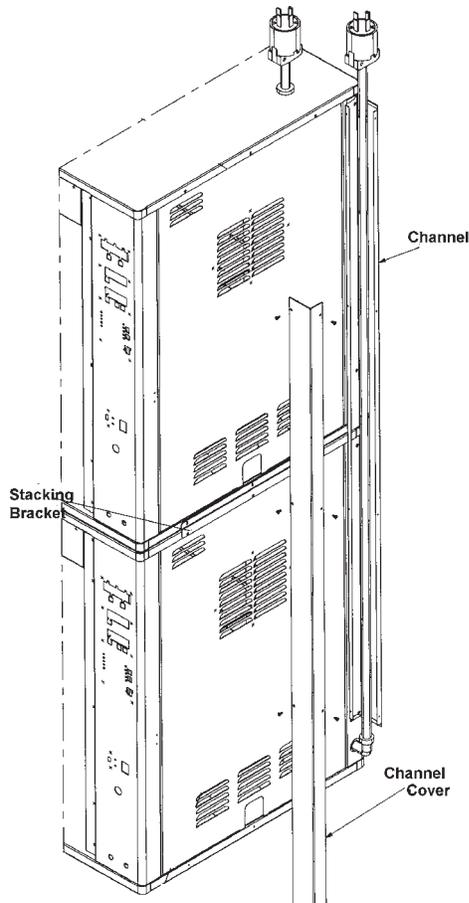

9. Remove the screws along the corners of both top and bottom units.

10. Mount the one side of the channel to the units, using the screws previously removed in step 9. See Figure 2-4.

11. Route the power cord up through the mounted channel and attach the cover to the channel, using the screws previously removed in step 8. See Figure 2-4.

12. Unit is now ready for use

Figure 2-4

2-4. LEVELING OF UNIT

For proper operation, the display should be level from side to side and front to back. This will ensure proper door operation.

2-5. ELECTRICAL
REQUIREMENTS

The Henny Penny Rotisserie Display is available from the factory, wired for 208 or 240 volt, 220-380 volt, 230-400 volt, 1 phase, 50/60 hertz service.