

## SECTION 2. INSTALLATION

### 2-1. INTRODUCTION

This section provides the installation instructions for the Henny Penny Rotisserie.

#### NOTE

The installation of this unit must conform to all local, state, and federal codes.

#### WARNING

Do not puncture the Rotisserie with any objects such as drills or screws as electrical shock, or component damage could result.

#### NOTE

Installation of this unit should be performed by a qualified service technician.

### 2-2. LOCATION

The proper location of the unit is very important for operation and convenience. Choose a location which will provide easy loading and unloading without interfering with the final assembly of food orders.

#### NOTE

The rotisseries must be 4 inches from any side wall and 9 inches from any rear wall. After the Henny Penny Rotisserie has been placed on a table, run a bead of silicone (silicone or equivalent sealant must be a NSF listed material) around the perimeter of the unit sealing it to the table top. You are now ready to make the electrical connection.

#### WARNING

The TR series rotisserie is a commercial appliance, and many surfaces could be hot. To prevent burns it is recommended that the unit be located in an area that cannot be accessed by the public.

**2-3. UNPACKING**

The Henny Penny Rotisserie has been tested, inspected, and expertly packed to insure arrival at its destination in the best possible condition. The unit is packed inside a heavy cardboard carton with sufficient padding to withstand normal shipping treatment.

**NOTE**

Any shipping damages should be noted in the presence of the delivery agent and signed prior to his or her departure.

To remove the Henny Penny Rotisserie from the carton you should:

1. Carefully cut banding straps.
2. Remove packing from around the unit.
3. Lift carton from unit.
4. Remove brackets securing unit to skid.
5. Remove unit from skid.
6. Your Rotisserie is now ready for setup.

**2-4. LEVELING OF UNIT**

For proper operation, the Rotisserie should be level from side to side and front to back. This will ensure proper door operation.

**2-5. ELECTRICAL REQUIREMENTS**

The Henny Penny rotisserie is available from the factory wired for 208 or 240 volt, 1 or 3 phase, 50/60 hertz service. (TR-3 1 phase only.)

**WARNING**

The cabinet must be adequately and safely grounded according to local electrical codes to prevent the possibility of electrical shock.

| Model No. | Product No. | Voltage | Phase | Amps | Watts  | Wire |
|-----------|-------------|---------|-------|------|--------|------|
| TR-8      | 02685       | 208     | 3     | 33   | 11,100 | 3+G  |
|           |             | 208     | 1     | 55   | 11,100 | 2+G  |
|           | 02686       | 240     | 3     | 28   | 11,100 | 3+G  |
|           |             | 240     | 1     | 47   | 11,100 | 2+G  |
| TR-6      | 02690       | 208     | 3     | 22   | 6800   | 3+G  |
|           |             | 208     | 1     | 33   | 6800   | 2+G  |
|           | 02691       | 240     | 3     | 19   | 6800   | 3+G  |
|           |             | 240     | 1     | 28   | 6800   | 2+G  |
|           | 02698       | 208     | 3     | 25   | 7600   | 3+G  |
|           |             | 208     | 1     | 37   | 7600   | 2+G  |
|           | 02699       | 240     | 3     | 21   | 7600   | 3+G  |
|           |             | 240     | 1     | 32   | 7600   | 2+G  |
| TR-3      | 02662       | 208     | 1     | 19   | 3850   | 2+G  |
|           | 02663       | 240     | 1     | 16   | 3850   | 2+G  |

## 2-6. STACKING INSTRUCTIONS

1. Lay bottom rotisserie on its side and bolt the locking casters or legs, to the control side of unit.
2. Using the bolts provided for the non-locking casters or legs, bolt both the stacking spacer and non-locking casters or legs, to the front side of the unit. The stacking spacer should extend out the front of the unit about six inches.
3. Remove the four mounting screws from the top of the bottom rotisserie.
4. Remove side panels from top rotisserie.
5. Carefully lift the top rotisserie and place it on top of the bottom rotisserie, with the controls on the same side as the bottom rotisserie.

**WARNING**

The TR-8 weighs approximately 500 lbs. (230 kg) and the TR-6 weighs 380 lbs. (172 kg). Extreme care should be taken when lifting the rotisserie to prevent personal injury.

6. Line up the holes in the top rotisserie with the holes in bottom rotisserie and secure the rotisserie in place with the screws previously removed.
7. Replace side panels on the top rotisserie and units are now ready for operation.