

## Section 2. INSTALLATION

### 2-1. INTRODUCTION

This section provides the installation instructions for the Henny Penny Heated Holding Cabinet.

#### NOTE

Installation of this unit should be performed only by a qualified service technician.

#### WARNING

Do not puncture the skin of the Heated Holding Cabinet with drills or screws as component damage or electrical shock could result.

### 2-2. UNPACKING

The Henny Penny Heated Holding Cabinet has been tested, inspected, and expertly packed to ensure arrival at its destination in the best possible condition. The cabinet rests on cardboard pads that sit on a wooden skid. The racks inside the cabinet are secured with cardboard packing. The unit is then packed inside a heavy cardboard carton with sufficient padding to withstand normal shipping treatment.

#### NOTE

Any shipping damage should be noted in the presence of the delivery agent and signed prior to his or her departure.

To remove the Henny Penny Heated Holding Cabinet from the carton, you should:

1. Carefully cut banding straps.
2. Lift the carton off the unit.
3. Lift the unit off the cardboard padding and skid.

#### WARNING

Care should be taken when lifting unit to prevent personal injury.

4. Open doors and remove packing from behind racks.

**2-3. LOCATION**

5. Peel off any protective covering from the exterior of the cabinet.
6. Your Heated Holding Cabinet is now ready for location and set up.

**NOTE**

Be certain to save any literature that is packed inside the cabinet.

The HC-900 should be placed in an area where the doors can be opened without interruption and loading and unloading of product is easy. For proper operation, the cabinet must be level.

**WARNING**

Do not set anything on top of the cabinet that might close off the vent holes.

**2-4. ELECTRICAL CONNECTION**


The Heated Holding Cabinet is available from the factory as a 120 VAC unit. The data plate, located on the side of the module, will specify the correct electrical supply. The unit requires a grounded receptacle with a separate electrical line protected by a fuse or circuit breaker of the proper rating.

**WARNING**

The cabinet must be adequately and safely grounded according to local electrical codes to prevent the possibility of electrical shock. Refer to the table below for electrical ratings for the HC-900.

Product Number	Volts	Watts	Amps
05148	120	1940	16.2

## 2-5. CABINET DIMENSIONS

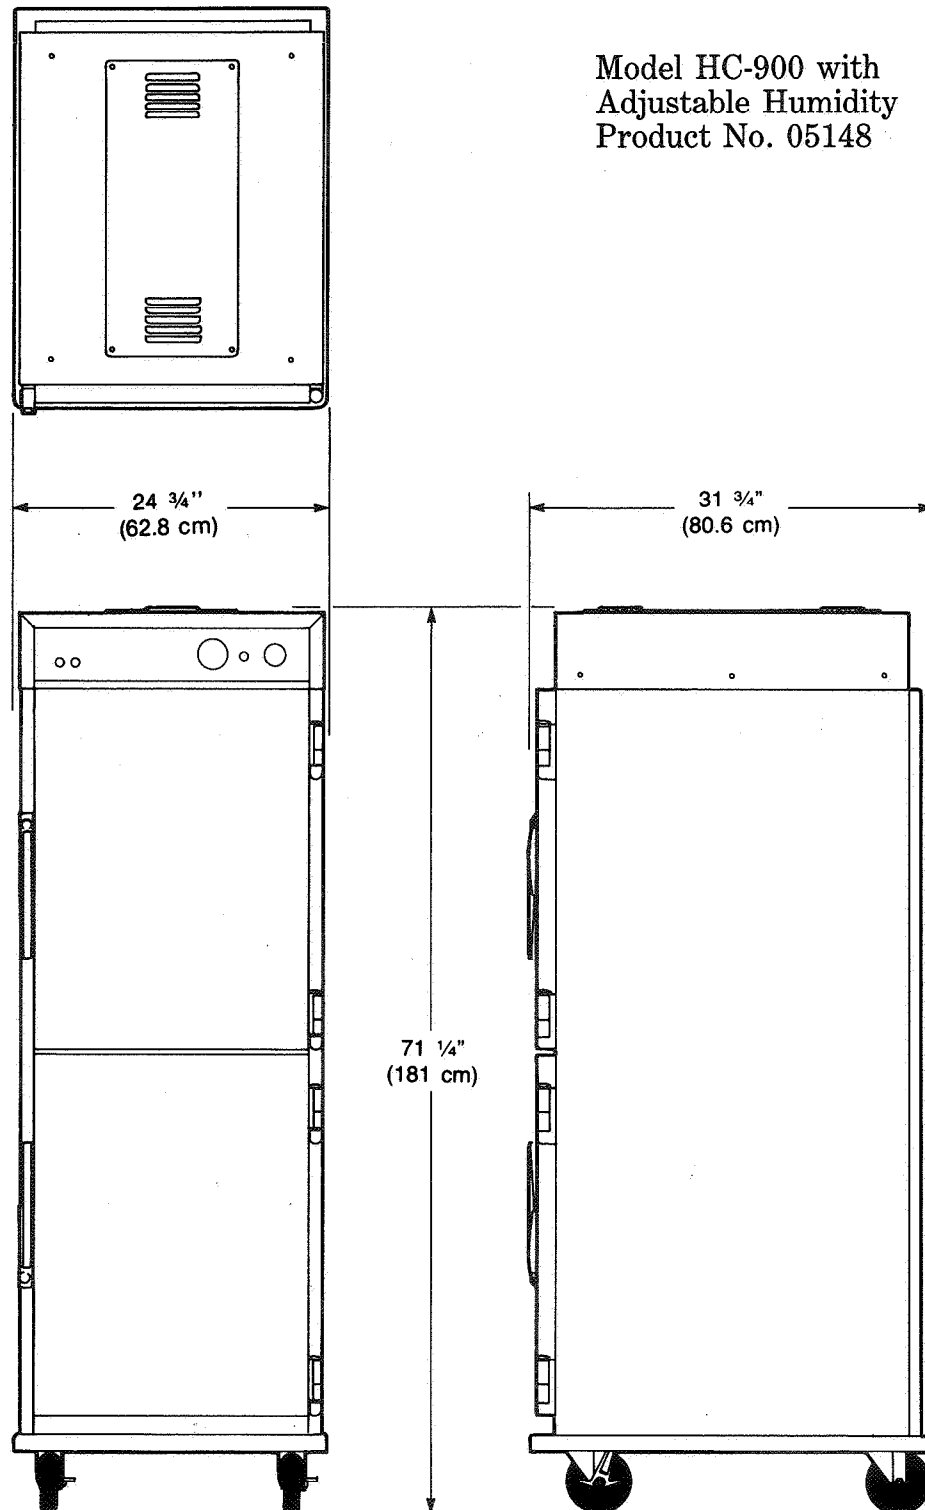

## 2-6. WATER SUPPLY CONNECTION

The automatic water fill system requires a water supply. The unit is equipped with a water strainer and clamp for a hose connection. It is also equipped with an eight foot nylabraid hose tubing. Run the tubing to the cabinet location, providing enough tubing to allow movement of the unit for cleaning or maintenance. The use of a water conditioner or filter is recommended. A shut-off valve should be installed in the supply line.

**CAUTION**

Do not operate this unit without water connected to cabinet. Damage to components will result.

To install water supply connection, follow these steps:

1. Flush the incoming water line.
2. Slide tubing over end of water strainer.
3. Tighten tubing clamp.
4. Check for leaks.