



# **Henny Penny**

## **COUNTERTOP DISPLAY WARMERS**

**Product Numbers 05072, 05073, 05074, and 05075**



# **SERVICE MANUAL**

# OPERATING INSTRUCTIONS

---

1. Turn the light switch to the ON position and set the infinite regulator for the upper heat to the number 3 setting. Set the infinite regulator for the lower heat at the number 5 setting.

## NOTE

Wait approximately 30 minutes before placing product in unit to insure that the unit has reached operating temperature.

2. After placing product in unit and product temperature has stabilized, check product temperature. If more heat is required, turn lower heat setting to a higher number, or if less heat is required, turn to a lower number.
3. Upper heat adjustment should be as low as possible to avoid drying out of product. If additional heat is required, turn upper heat setting to a higher number.

## NOTE

Avoid locations subject to drafts. Heating characteristics of the unit can be affected.

# CLEANING INSTRUCTIONS

---

1. Unit should be cleaned after each day's use. Turn light switch and both upper and lower heat regulators to the OFF position.

## WARNING

Allow unit to cool before attempting to clean unit.

2. Clean unit with a soft cloth and soapy water.

# MAINTENANCE INSTRUCTIONS

The following information will assist you when replacing parts within the unit becomes necessary.

## INFINITE REGULATOR

1. Tip unit on its back to allow access to regulator.

### CAUTION

Care should be taken when tipping unit to avoid damage to the unit and also personal injury. Remove doors before tipping unit.

2. Remove twelve screws holding wire cover and remove cover.
3. Remove knob and nut from regulator.
4. Remove wires from old infinite switch and place on new.

### NOTE

Mark wires before removing to be sure new infinite regulator is wired correctly.

5. Install in reverse order of above.

## STRIP HEATER (bottom)

1. Tip unit on its back to allow access to the strip heaters.
2. Remove twelve screws holding wire cover and remove wire cover.
3. Using a 7/16" nut driver, remove eleven nuts holding the heater brackets and heater guard.
4. Remove two 7/16" nuts holding heater in place.
5. Replace heater.

### CAUTION

Maximum torque on aluminum studs is 20 inch pounds.

## RADIANT HEATER (upper)

1. Remove three screws holding heater bracket to heat deflector and gently pull down until heater is accessible.
2. Remove screws holding electrical wire to heater and remove bracket from heater.
3. Install new heater.

## LIGHT SOCKET

1. Remove four screws holding top cap on and remove top cap.
2. Remove light socket wires from wire nuts.
3. Loosen nut holding light socket assembly and replace assembly.

### CAUTION

When placing new light socket wires into wire nut, be sure nut is secure. Use electrical tape to hold nut.

## LIGHT SWITCH

1. Tip unit on its back to allow access to switch. Remove doors before tipping unit.
2. Remove twelve screws holding wire cover and remove cover.
3. Remove nut holding switch and remove switch.
4. Place wires on new switch exactly as on old switch.
5. Install new switch.

## PARTS LIST

Vertical

DESCRIPTION	2 Pan V. 05071 PART NUMBER	2 Pan H. 05072 PART NUMBER	3 Pan 05073 PART NUMBER	4 Pan 05074 PART NUMBER	5 Pan 05075 PART NUMBER
Radiant Heater (upper)	22059 (120V 350W)	22006 (120V 1100W)	22007 (120V 1500W) 22303 (240V 1500W)	22267 (240V 2000W)	22270 (240V 2400W)
Strip Heater (lower)	22058 (120V) Quantity 2	22063 (120V 200W) Quantity 2	22025 (120V 300W) 22304 (240V 300W) Quantity 2	22249 (240V 200W) Quantity 4	22250 (240V 250W) Quantity 4
Infinite Regulator	22045 (120V)	22045 (120V)	22045 - (120V) 22317 - (240V)	22317 (240V)	22317 (240V)
Infinite Regulator Knob	22046	22046	22046	22046	22046
Light Bulbs	BL01-002 Quantity 2	BL01-001 Quantity 1	BL01-001 Quantity 2	BL01-001 Quantity 3	BL01-001 Quantity 4
Light Socket Ass'y	Upper - 22158 Middle - 22628	22158	22158	22158	22158
Light Switch	22195	22195	22195	22195	22198
Fuse	N/A	N/A	EF02-007	N/A	N/A
Fuse Holder	N/A	N/A	18364	N/A	N/A
Cord & Plug	22172 (15 amp/120V)	22172 (15 amp/120V)	22145 (30 amp/120V)	22281 (20 amp/240V)	22281 (20 amp/240V)
Receptacle	N/A	N/A	22300 (30 amp/120V) 22298 (20 amp/240V)	22298 (20 amp/240V)	22298 (20 amp/240V)
Plug	N/A	N/A	22193 (30 amp/120V) 22283 (20 amp/240V)	22283 (20 amp/240V)	22283 (20 amp/240V)
Pan Rack	Center - 22055 Bottom - 22056	22070	22122	22192	22243
End Glass Assembly	RH - 22426 LH - 22425	22200	22200	22200	22200
Front Glass Assembly	22424	22201	22074	22202	22203
Sliding Door Assembly	N/A	22320 (1 Door)	22254 (1 Door)	22269 (1 Door)	22272 (1 Door)
Sneeze Guard Assembly	N/A	22205	22206	22207	22208
Sliding Door Conversion Kit	N/A	22313	22028	22314	22315
End Frame & Handle Assembly	N/A	22354	22354	22354	22354
Door Handle	N/A	23250	23250	23250	23250
Leg	½" Leveling Foot - 26411	½" Leveling Foot - 26411	4" 22232	4" 22232	4" 22232
Electrical (All Int'l Voltages Available)	120V	120V	120 or 120/240V	120/240V	120/240V
	1070W 50/60 HZ	1600W 50/60 HZ	2300W 50/60 HZ	3100W 50/60 HZ	3800W 50/60 HZ
	Single Phase	Single Phase	Single Phase	Single Phase	Single Phase
	3 Wire	3 Wire	3 or 4 Wire	4 Wire	4 Wire
	9 amps	13.3 amps	19.2 or 9.6 amps	14.2 amps	15.9 amps