APW WYOTT EOUIPMENT LIMITED WARRANTY

APW WYOTT Foodservice Equipment Company warrants its equipment against defects in materials and workmanship, subject to the following conditions:

This warranty applies to the original owner only and is not assignable.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at the option of APW WYOTT such product will be repaired or replaced by APW WYOTT or its Authorized Service Agency. APW WYOTT will only be responsible for charges incurred or service performed by its Authorized Agencies. The use of other than APW WYOTT Authorized Service Agencies will void this warranty and APW WYOTT will not be responsible for such work or any charges associated with same. The closest APW WYOTT Authorized Service Agency must be used.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, metropolitan areas of Alaska and Canada. There will be no labor coverage for equipment located on any island not connected by roadway to the mainland.

TIME PERIOD

One-year parts, one-year labor, effective from the date of purchase by the original owner. The Authorized Service Agency may, at their option, require proof of purchase. Parts replaced under this warranty are warranted for the unexpired portion of the original product warranty only.

EXCEPTIONS:

*Gas/Electric Cookline - Models GCB, GCRB, GF, GGM, GGT, GHP-H, GWW, EBC, EF, EG, EHP, EWW Three (3) Year Warranty on all component part, except switches and thermostats. (2 additional years on parts only - No labor on second or third year.)

*Heat Strips - Models FD - Two (2) Year Warranty on element only - No labor second year.

*Glass Windows, Door Seals, Rubber Seals, Light Bulbs, Broiler Briquettes 90 Day Material Only - No labor.

In all cases parts covered by extended warranty will be shipped FOB the factory after the first year.

PORTABLE CARRY-IN PRODUCTS

Equipment weighing over 70 pounds or permanently installed will be serviced on-site as per the terms of this warranty. Equipment weighing 70 pounds or under, and which is not permanently installed i.e., with cord and plug, is considered portable and is subject to the following warranty handling limitations.

If portable equipment fails to operate in its intended manner on the first day of connection, or use, at APW WYOTT's option or its Authorized Service Agency, it will be serviced on-site or replaced.

From day two through the conclusion of this warranty, portable units must be taken or sent prepaid to the APW WYOTT Authorized Service Agency for in-warranty repairs. No mileage or travel charges are allowed on portable units after the first day of use. If the customer wants on-site service they may receive same by paying the travel and mileage charges.

EXCLUSIONS:

The following conditions are not covered by warranty.

*Equipment failure relating to improper installation, improper utility connection or supply and problems due to ventilation.

*Equipment that has not been properly maintained, calibration of controls, adjustments, damage from improper cleaning and water damaged controls.

*Equipment that has not been used in an appropriate manner, or has been subject to misuse or misapplication, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, not or act of God.

*Equipment that has had the model number or serial number removed or altered.

If the equipment has been changed, altered, modified or repaired by other than a qualified service technician during or after

the warranty period then the manufacturer shall not be liable for any damages to any person or property which may result from the use of the equipment thereafter.

This warranty does not cover services performed at overtime or premium labor rates. Should service be required at times which normally involve overtime or premium labor rates, the owner shall be charged for the difference between normal service rates and such premium rates APW WYOTT does not assume any liability for extended delays in replacing or repairing any items beyond its control.

In all cases the use of other than APW WYOTT authorized OEM replacement parts will void this warranty.

This equipment is intended for commercial use only. Warranty is void if equipment is installed in other than commercial application.

THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS AND CONSTITUTES THE ENTIRE LIABILITY OF APW WYOTT IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN.

P/N 88362-15, 01/01

12

IMPORTANT
FOR FUTURE REFERENCE
Please complete this information and retain
this manual for the life of the equipment.
MODEL #
SERIAL #
DATE PURCHASED
For Warranty Service and/or Parts
this information is required



PRODUCT MANUAL
Safety Instructions
Installation Instructions
Operation Instructions
Maintenance Instructions
Replacement Parts List
Warranty/Service Information

Model EHP And SEHP Electric Hot Plates

\wedge	W	۱RN	IN

Improper installation, operation, service or maintenance can cause property damage, injury or death. Read these instructions thoroughly before installing, operating, maintaining or servicing this equipment.

APW/WYOTT Foodservice Equipment Co. P.O. Box 1829 Cheyenne, WY 82003 (307) 634-5801 FAX: (307) 637-8071

THIS MANUAL SHOULD BE RETAINED FOR FUTURE REFERENCE

CAUTION

The models are designed, built and sold for commercial use. If these models are positioned so the general public can use the equipment, make sure that all cautions, warnings and operating instructions are clearly posted near each unit so that anyone using the equipment will use it correctly and not injure themselves or harm the equip-

WARNING

CHECK THE DATA PLATE ON THIS UNIT BEFORE INSTALLATION. CONNECT THE UNIT ONLY TO THE VOLTAGE AND FREQUENCY LISTED ON THE DATA PLATE. CONNECT ONLY TO 1— OR 3-PHASE AS LISTED ON THE DATA PLATE.

Improper installation, service, or maintenance can cause property damage, injury or death. Read these instructions thoroughly before installing, operating, maintaining or servicing this equipment.

WARNING

ELECTRICAL AND GROUNDING CONNECTIONS MUST COMPLY WITH THE APPLICABLE PORTIONS OF THE NATIONAL ELECTRICAL CODE AND/OR OTHER LOCAL ELECTRICAL CODES.

WARNING

DISCONNECT ELECTRICAL POWER SUPPLY AND PLACE A TAG AT THE DISCONNECT SWITCH INDICATING THAT YOU ARE WORKING ON THE CIRCUIT.

Install per the spacing requirements listed in the installation section of this manual. We strongly recommend having a competent professional install this equipment. A licensed electrician should make the electrical connections and connect power to the unit. Local codes should always be used when connecting these units to electrical power. In the absence of local codes, use the latest version of the National Electrical Code.

Maintenance and repair should be handled by a factory authorized agent. Before doing any maintenance or repair, contact APW Wyott Foodservice Equipment Company, (800) 752-0863,

MAINTENANCE

WARNING

Never clean any electrical unit by immersing it in water. Turn unit off before cleaning surface.

Once a week, or more often if necessary, clean the unit thoroughly. Turn off the unit and allow it to cool

STAINLESS STEEL: To remove normal dirt or product residue from stainless steel, use ordinary soap and water (with or without detergent) applied with a sponge or cloth. Dry thoroughly with a clean cloth. Never use vinegar or corrosive cleaner. Do not use chlorine based cleaners.

To remove grease and food splatter or condensed vapors that have baked on the equipment, apply cleaners to a damp cloth or sponge and rub cleanser on the metal in the direction of the polished lines on the metal. Rubbing cleanser as gently as possible in the direction of the polished lines will not mar the finish of the stainless steel. REVER RUB WITH A CIRCULAR MOTION. Soil and burned deposits which do not respond to the above procedure can usually be removed by rubbing the surface with SCOTCH-BRITE scouring pads or STAINLESS scouring

CAUTION

DO NOT USE ordinary steel wool as any particles left on the surface will rust.

NEVER USE a wire brush, steel or abrasive scouring pads (except stainless), scraper, file or other steel tools. Surfaces which are marred collect dirt more rapidly and become more difficult to clean. Marring also increases the possibility of corrosive attack.

NEVER use any corrosive cleaner. Use only cleaners approved for stainless steel.

NEVER use cleaning solvents with a hydrocarbon base.



WARNING

SHOCK HAZARD

De-energize all power to equipment before cleaning the equipment.

NOTES

NOTES

Congratulations on your purchase of APW Wyott commercial cooking or refrigeration equipment. APW Wyott takes pride in the design and quality of our products. When used as intended and with proper care and maintenance, you will experience years of reliable operation from this equipment. To ensure best results, it is important that you read and follow the instructions in this manual carefully.

This unit incorporates a 2000-2400 watt heating element for fast and even cooking and heating, the remotely connected control box isolates the temperature controller from the potentially damaging heat from the main unit.

TABLE OF CONTENTS:

Maintenance	2
Troubleshooting	
Safety Precautions	
Specifications	
Installation	
Operation/Seasoning Instructions	
Parts Lists	
Exploded View	
Wiring Diagram	
Warranty	

LOCATION OF DATA PLATE

The data plate for the electric hot plate is located on the under side of the unit.

IMMEDIATELY INSPECT FOR SHIPPING DAMAGE

All containers should be examined for damage before and during unloading. The freight carrier has assumed responsibility for its safe transit and delivery. If equipment is received damaged, either apparent or concealed, a claim must be made with the delivering carrier.

- A) Apparent damage or loss must be noted on the freight bill at the time of delivery. It must then be signed by the carrier representative (Driver). If this is not done, the carrier may refuse the claim. The carrier can supply the necessary forms.
- B) For concealed damage or loss, if not apparent until after equipment is uncrated, a request for inspection must be made to the carrier within 15 days. The carrier should arrange an inspection. Be certain to hold all contents and packaging material.

Installation and start-up should be performed by a qualified installer who thoroughly read, understands and follows these instructions.

If you have questions concerning the installation, operation, maintenance or service of this product, write Technical Service Department APW Wyott Foodservice Equipment Company, P.O. Box 1829, Cheyenne, WY 82003. Telephone number (800) 752-0863.

GENERAL TROUBLESHOOTING

If the unit fails to operate check the following:

- 1. Is the unit connected to a live power source?
- 2. Check circuit breaker?
- 3. Is power switch on and pilot light glowing?
- 4. Check the data plate. Are you operating the unit on proper voltage?

If the above checks out and you still have problems, call an APW WYOTT authorized service agency.

NOTICE Service work should be performed only by a qualified technician who is experienced in and knowledgeable with the operation of commercial gas, electric, steam cooking equipment. Contact the Authorized Service Agency for reliable service, dependable advise or other assistance and for genuine factory parts.

Warranty will be void and the manufacturer is relieved of all liability if:

(A)Service work is performed by other than an APW WYOTT Authorized Service Agency or

(B)Other than Genuine APW WYOTT replacement parts are installed.

A current listing of all authorized APW WYOTT authorized parts/service distributors is included with this product manual at the time of shipment. In the absence of this list you can call the APW WYOTT 24 hour Service Hot Line which gives access to the nearest Authorized APW WYOTT parts/service distributor. Call 1-800-733-2203.

SAFETY PRECAUTIONS

Before installing and operating this equipment be sure everyone involved in its operation is fully trained and is aware of all precautions. Accidents and problems can result by a failure to follow fundamental rules and precautions.

The following words and symbols, found in this manual, alert you to hazards to the operator, service personnel or the equipment. The words are defined as follows:



↑ DANGER

This symbol warns of imminent hazard which will result in serious injury or death.



WARNING

This symbol refers to a potential hazard or unsafe practice which could result in serious injury or death.



CAUTION

This symbol refers to a potential hazard or unsafe practice which may result in minor or moderate injury or product or property damage.

NOTICE

This symbol refers to information that need special attention or must be fully understood even though not dangerous.

This product is intended for commercial use only. Not for household use.



CAUTION

The models are designed, built and sold for commercial use. If these models are positioned so the general public can use the equipment, make sure that all cautions, warnings and operating instructions are clearly posted near each unit so that anyone using the equipment will use it correctly and not injure themselves or harm the equipment.



WARNING

SHOCK HAZARD

Do not open any panels that requires the use of tools.



WARNING


Improper installation, operation, service or maintenance can cause property damage, injury or death. Read these instructions thoroughly before installing, operating, maintaining or servicing this equipment.

NOTICE: THE UNIT, WHEN INSTALLED, MUST BE ELECTRICALLY GROUNDED AND COMPLY WITH LOCAL CODES, OR IN THE ABSENCE OF LOCAL CODES, WITH THE NATIONAL ELECTRICAL CODE ANSI/NFPA 70-LATEST EDITION.

CANADIAN INSTALLATION MUST COMPLY WITH CSA-STANDARD C.22.2 No. 0 M1982 General Requirements—Canadian Electrical Code, Part II, 109-M1981—Commercial Cooking Appliances.

WIRING DIAGRAM

TERMINAL BLOCK

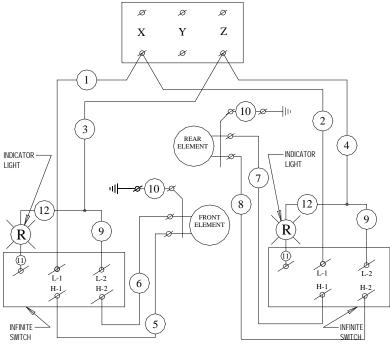

- Wiring shown is for single phase . For three phase move wires #3 & #2 to the "Y" terminal on the terminal block.
- On the SEHP units the #10 ground wire is omitted.
- For power supply use No. 10 AWG for both single and three phase.

SPECIFICATIONS

Electrical			Dimensions		
	EHP	208 Volt, 4000 Watt, 60 Hz, 19.3 Amps	14"H x 14"W x 24"D		
	EHP	240 Volt, 4000 Watt, 60 Hz, 16.7 Amps	14"H x 14"W x 24"D		
	SEHP	208 Volt, 4800 Watt, 60 Hz, 23.1 Amps	14"H x 14"W x 24"D		
	SEHP	240 Volt, 4200 Watt, 60 Hz, 17.5 Amps	14"H x 14"W x 24"D		

INSTALLATION

CAUTION

This unit is to be installed in a noncombustible location only

NOTICE: THESE PROCEDURES MUST BE PERFORMED BY QUALIFIED PERSONNEL OR WARRANTY WILL BE VOIDED.

CAUTION

CHECK THE DATA PLATE ON THIS UNIT BEFORE INSTALLATION. CONNECT THE UNIT ONLY TO THE VOLTAGE AND FREQUENCY LISTED ON THE DATA PLATE. CONNECT ONLY TO 1– OR 3-PHASE AS LISTED ON THE DATA PLATE.

- Unbox the hotplate. Make sure no parts are discarded with crating and packing material.
- Always clean equipment thoroughly before the first use. Check rating label for your model designation and electrical rating. For best results, use stainless steel countertops.
- Attach legs to units.
- Set the hotplate in the operating location.

ELECTRICAL CONNECTIONS

Check the data plate to determine what voltage this hotplate is wired for and what voltage service to use.

★ WARNING

IMPROPER GROUNDING COULD RESULT IN ELECTRICAL SHOCK

This appliance is equipped with a three-prong (grounded) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.

OPERATING/SEASONING INSTRUCTIONS

Operation: Plug hotplate in and turn on the power switch. The unit has been calibrated at the factory. Wait about 30 minutes for the unit to heat up. If the product is too cool or too warm, adjust the infinite switch. The temperature adjustment is located in the control box of the unit. If you are unable to set your hotplate to the desired temperature, contact your factory authorized service agent for adjustment.

- 1. All food service equipment should be operated by trained personnel.
- 2. Never hold food below 150°F or above 40°F.

WARNING

WARNING: This unit is not intended to hold potentially hazardous foods such as uncooked or unpreserved meats and sausages.

Item #	<u>Description</u>	Qty.	Stock NO.
1	Weldment, front panel	1	218159-00
2	Side panel, left & right	2	218133-13
3	Leg support	2	218155-72
4	Leg, 4"	4	86320-00
5	EHP, Weldment, top	1	218159-50
5	SEHP, Weldment, top	1	218159-51
5a	SEHP, Fixing bracket	2	14104-10
6	Pan, outside	1	218159-13
7	Pan, inside	1	218159-12
8	Knob	2	87056-10
9	EHP-208v, Element, heater, 2000w	2	14044-07
9	EHP-240v, Element, heater, 2000w	2	14044-08
9	SEHP-208v, Hot plate, EGO, 2400w	2	14104-00
9	SEHP-240v, Hot plate, EGO, 2100w	2	14104-01
10	Back panel	1	218155-27
12	Infinite switch 240v	2	13016-02
13	Terminal block	1	11072-03
20	Lug, solderless	1	218159-00

