




## INSTALLATION AND OPERATING INSTRUCTIONS

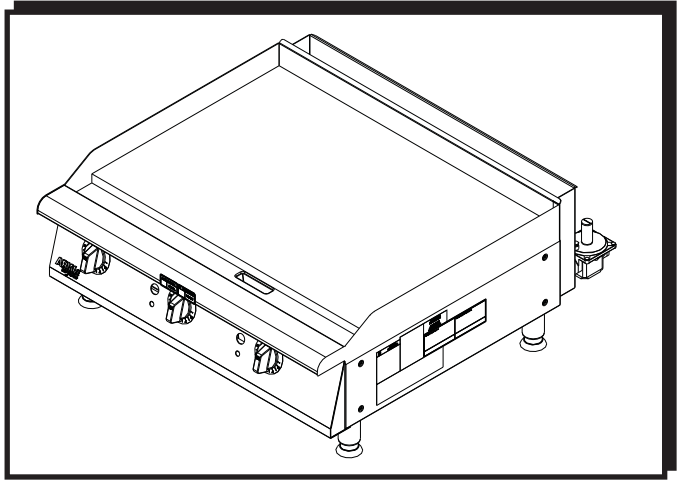

# Thermostatic Heavy Duty Gas Griddles

**MODELS:** HTG-2424, HTG-2436, HTG-2448, HTG-2460, HTG-2472

(US & Canadian units are convertible and are assembled for Natural Gas)  
(European units are not convertible and assembled for the appropriate gas)

### IMPORTANT FOR FUTURE REFERENCE

Please complete this information and retain this manual for the life of the equipment. For Warranty Service and/or Parts, this information is required.

Model Number

Serial Number

Date Purchased



**FOR YOUR SAFETY:** Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.



**WARNING:** Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing, or servicing this equipment.



**WARNING:** Instructions must be posted in a prominent location. All safety precautions must be taken in the event the user smells gas. Safety information can be obtained from your local gas supplier.



### APW Wyott Foodservice Equipment Company

P/N 8839000 2-09

#### Dallas Plant

729 Third Ave. Dallas, TX 75226  
Local: 1-(214) 421-7366  
Toll Free: 1-(800) 527-2100  
Parts/Service Fax: 1-(214) 565-0976

#### Cheyenne Plant

1938 Wyott Drive, Cheyenne, WY 82007  
Local: 1-(307) 634-5801  
Toll Free: 1-(800) 752-0863  
Parts/Service Fax: 1-(307) 772-0460

E-mail: [info@apwwyott.com](mailto:info@apwwyott.com)  
[www.apwwyott.com](http://www.apwwyott.com)

## TABLE OF CONTENTS:

<u>ITEM</u>	<u>PAGE</u>	<u>ITEM</u>	<u>PAGE</u>
Safety Precautions .....	3	Cleaning/Maintenance .....	11
General Installation Instructions.....	4	Service/Repair .....	11
Specifications & Dimensions.....	5	Troubleshooting Guide.....	12
Conversion .....	8	Replacement Parts Lists & Exploded View.....	13
Lighting Instructions .....	9	Warranty .....	20
Operating Instructions .....	10		

### LOCATION OF DATA PLATE

The data plate is located on the right side panel.



**CAUTION:** These models are designed, built, and sold for commercial use. If these models are positioned so the general public can use the equipment, make sure that cautions, warnings, and operating instructions are clearly posted near each unit so that anyone using the equipment will use it correctly and not injure themselves or harm the equipment.



**WARNING:** Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing, or servicing this equipment.



**WARNING:** For your safety do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. Keep the area free and clear of combustibles. (See ANZI Z83. 14B, 1991).



**NOTICE:** Instructions to be followed if anyone smells gas should be posted in a prominent place. These may be obtained from the gas supplier.



### GAS PRESSURE

The appliance and it's individual shutoff valve (to be supplied by user) must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of ½ psi (3.45 kPa).

The appliance must be isolated from the gas supply piping system by closing it's individual manual shut-off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than ½ psi (3.45 kPa).



**WARNING:** A factory authorized agent should handle all maintenance and repair. Before doing any maintenance or repair, contact APW Wyott.



Congratulations on your purchase of APW Wyott commercial cooking or refrigeration equipment. APW Wyott takes pride in the design and quality of our products. When used as intended and with proper care and maintenance, you will experience years of reliable operation from this equipment. To ensure best results, it is important that you read and follow the instructions in this manual carefully.

## IMMEDIATELY INSPECT FOR SHIPPING DAMAGE

All containers should be examined for damage before and during unloading. The freight carrier has assumed responsibility for its safe transit and delivery. If equipment is received damaged, either apparent or concealed, a claim must be made with the delivering carrier.

A) Apparent damage or loss must be noted on the freight bill at the time of delivery. It must then be signed by the carrier representative (Driver). If this is not done, the carrier may refuse the claim. The carrier can supply the necessary forms.

B) Concealed damage or loss if not apparent until after equipment is uncrated, a request for inspection must be made to the carrier within 15 days. The carrier should arrange an inspection. Be certain to hold all contents and packaging material.















Installation and start-up should be performed by a qualified installer who thoroughly read, understands and follows these instructions.

If you have questions concerning the installation, operation, maintenance or service of this product, write Technical Service Department APW Wyott Foodservice Equipment Company, 1938 Wyott Drive, Cheyenne, WY 82007.

## SAFETY PRECAUTIONS

Before installing and operating this equipment be sure everyone involved in its operation is fully trained and is aware of all precautions. Accidents & problems can result by a failure to follow fundamental rules and precautions.

The following words and symbols, found in this manual, alert you to hazards to the operator, service personnel or the equipment. The words are defined as follows:

	<b>DANGER:</b> This symbol warns of imminent hazard which will result in serious injury or death.	
	<b>WARNING:</b> This symbol refers to a potential hazard or unsafe practice, which could result in serious injury or death.	
	<b>CAUTION:</b> This symbol refers to a potential hazard or unsafe practice, which may result in minor or moderate injury or product or property damage.	
	<b>NOTICE:</b> This symbol refers to information that needs special attention or must be fully understood even though not dangerous.	
<hr/> <hr/>		
	<b>NOTICE:</b> This product is intended for commercial use only. Not for household use.	
	<b>CAUTION:</b> These models are designed, built, and sold for commercial use. If these models are positioned so the general public can use the equipment make sure that cautions, warnings, and operating instructions are clearly posted near each unit so that anyone using the equipment will use it correctly and not injure themselves or harm the equipment.	
	<b>WARNING:</b> Improper installation, operation, service or maintenance can cause property damage, injury or death. Read and understand these instructions thoroughly before positioning, installing, maintaining or servicing this equipment.	



**WARNING:** Keep the appliance free & clear of all combustible substances. If gas odor is detected at any time, immediately shut unit down at the main shutoff valve. Do not permit any open flames in the area of the appliance. Immediately contact an authorized Service Agency or your local Gas Supplier for service.



**WARNING:** Do not obstruct either the air inlet (underneath unit) or the ventilation air (back of unit). Provisions must be provided to provide an adequate air supply to the griddle.



**NOTICE:** Local codes regarding installation vary greatly from one area to another. The National Fire Protection Association, Inc., states in its NFPA96 latest edition that local codes are "Authority Having Jurisdiction" when it comes to requirement for installation of equipment. Therefore, installation should comply with all local codes.



## GENERAL INSTALLATION INSTRUCTIONS

Ensure gas supply and gas type, as shown on unit nameplate agree.

Unit installation must conform with the National Fuel Gas Code, ANSI Z223.1/NFPA 54, the National Gas Installation Code, CSA-B149.1, or the Propane Installation Code, CSA-B149.2 as applicable and in accordance with local codes.

Screw legs into the permanently fastened nuts on the four corners of the unit and tighten by hand. Level the unit by turning the adjustment screw at the bottom of each leg. Do not slide unit with legs mounted, lift if necessary to move unit.

Pipe threading compound must be resistant to the action of liquefied petroleum gases.

**Caution:** DO NOT use an open flame to check for leaks. Check all gas piping for leaks with a soap and water solution before operating unit.

### **THESE UNITS ARE SUITABLE FOR INSTALLATION ON NON-COMBUSTIBLE SURFACES ONLY.**

Noncombustible clearances:

0" sides (0 mm)      0" rear (0 mm)      4" floor (102mm)

Do not obstruct the flow of combustion and ventilation air, under the unit by the legs or behind the unit by the flue.

Adequate clearance for air openings into the combustion chamber is required. Do not place objects between the bottom of the unit and the counter top.

There must be adequate clearance for removal of the front panel. All major parts except the burners are removable thru the front if the gas line is disconnected.

Unit must have adequate clearances for servicing. (Sides = 0", Rear = 0", Floor = 4").

### **European Community Installation Instructions:**

"THIS APPLIANCE MUST BE FITTED BY A COMPETENT PERSON. IN THE UK, CORGI REGISTERED INSTALLERS (INCLUDING THE REGIONS OF BRITISH GAS) UNDERTAKE TO WORK TO SAFE AND SATISFACTORY STANDARDS. THIS APPLIANCE MUST BE INSTALLED IN ACCORDANCE WITH THE GAS SAFETY (INSTALLATION AND USE) REGULATIONS AND THE RELEVANT BUILDING REGULATIONS / IEE. REGULATIONS. DETAILED RECOMMENDATIONS ARE CONTAINED IN THE FOLLOWING BRITISH STANDARD CODES OF PRACTICE - BS 6172, BS 5440 PART 2, BS 6891"

"THIS APPLIANCE MUST BE INSTALLED IN ACCORDANCE WITH THE RULES IN FORCE"

"MUST BE INSTALLED IN A WELL VENTILATED AREA. Ventilation requirements ie. B.S. 5440."

## SPECIFICATIONS AND DIMENSIONS


MODEL	WIDTH IN. (MM)	DEPTH IN. (MM)	HEIGHT IN. (MM)	# OF BURNERS	BTU/kW PER BURNER	TOTAL BTU/kW HOUR	W.C. IN. ('Mbar')
HTG-2424	24" (609.6)	38.038" (966)	15.440" (392.2)	2	32,000 (9.78)	64,000 (18.8)	5 (12.4)
HTG-2436	36" (914.4)	38.038" (966)	15.507" (393.9)	3	32,000 (9.78)	96,000 (28.1)	5 (12.4)
HTG-2448	48" (1219.2)	38.038" (966)	15.440" (392.2)	4	32,000 (9.78)	128,000 (37.5)	5 (12.4)
HTG-2460	60" (1524.0)	38.038" (966)	15.460" (392.7)	5	32,000 (9.78)	160,000 (46.9)	5 (12.4)
HTG-2472	72" (1828.8)	38.038" (966)	15.457" (392.6)	6	32,000 (9.78)	192,000 (56.3)	5 (12.4)

### Griddle Surface Dimensions



MODEL	WIDTH IN. (MM)	DEPTH IN. (MM)
HTG-2424	23.850" (605.8)	24" (609.6)
HTG-2436	35.850" (910.6)	24" (609.6)
HTG-2448	47.850" (1215.4)	24" (609.6)
HTG-2460	59.850" (1520.2)	24" (609.6)
HTG-2472	71.850" (1825.0)	24" (609.6)

## SPECIFICATIONS - HEAVY DUTY GAS GRIDDLE: HTG-2424

21826500

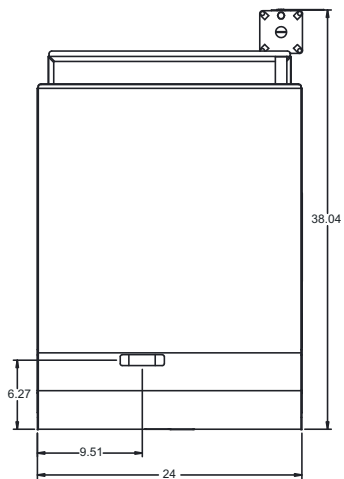


24" THERMISTATIC GRIDDLE

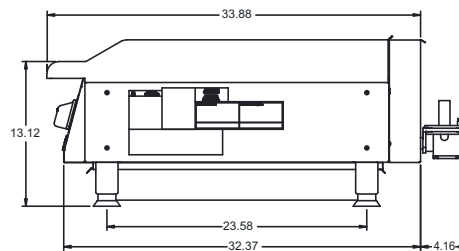
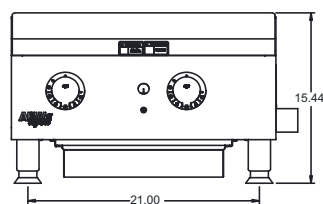


## SPECIFICATIONS - HEAVY DUTY GAS GRIDDLE: HTG-2436

21826600

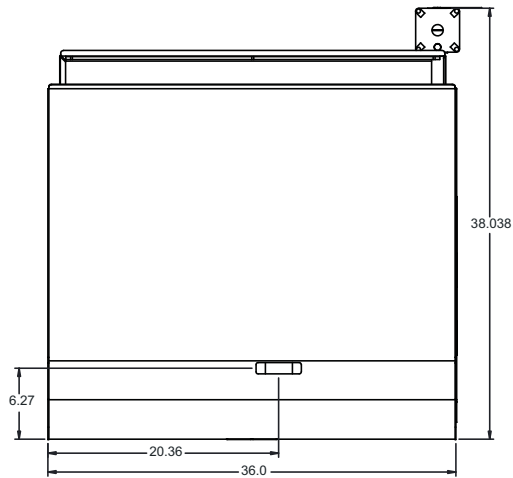


36" THERMISTATIC GRIDDLE

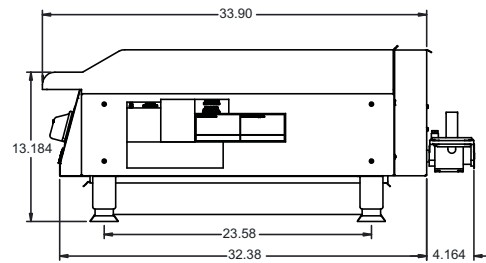
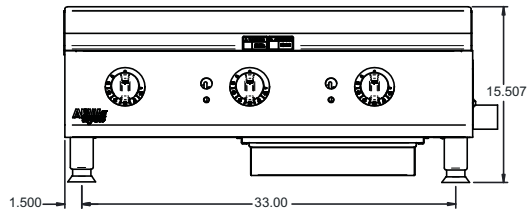


## SPECIFICATIONS - HEAVY DUTY GAS GRIDDLE: HTG-2448

21826700

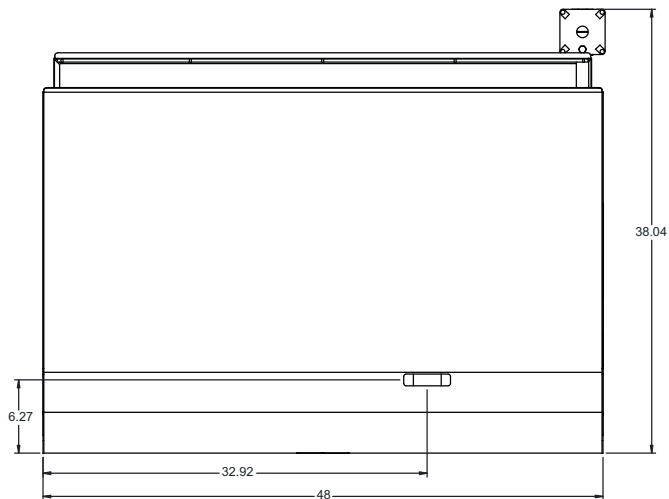


48" THERMISTATIC GRIDDLE

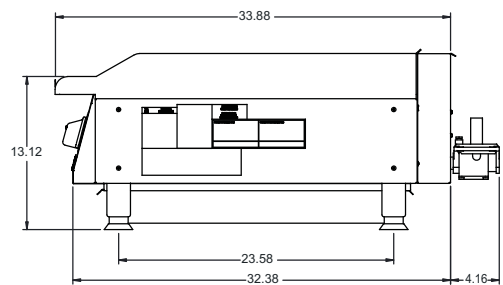
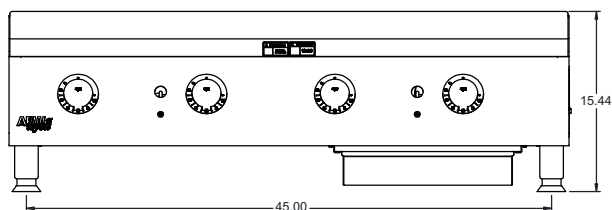


## SPECIFICATIONS - HEAVY DUTY GAS GRIDDLE: HTG-2460

21826800

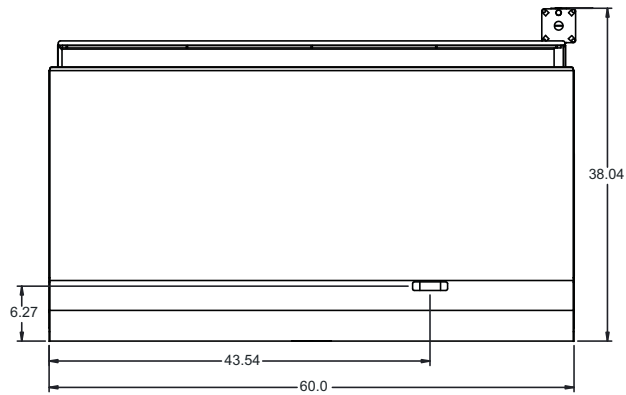


60" THERMISTATIC GRIDDLE

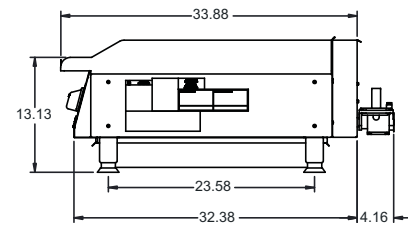
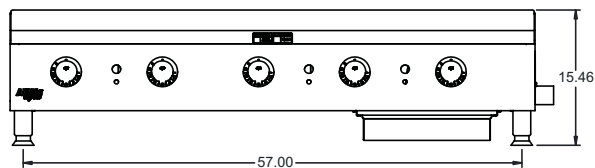


## SPECIFICATIONS - HEAVY DUTY GAS GRIDDLE: HTG-2472

21826900

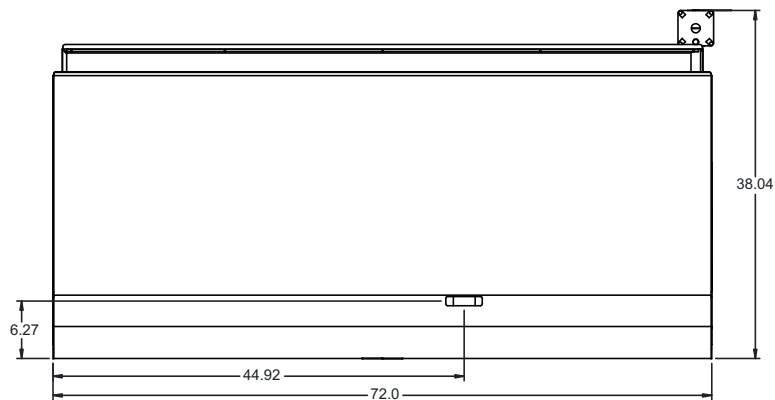


72" THERMISTATIC GRIDDLE

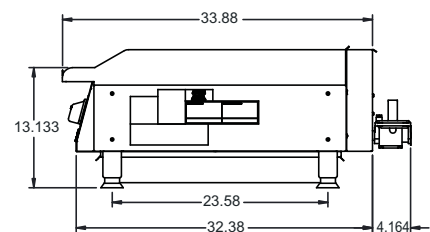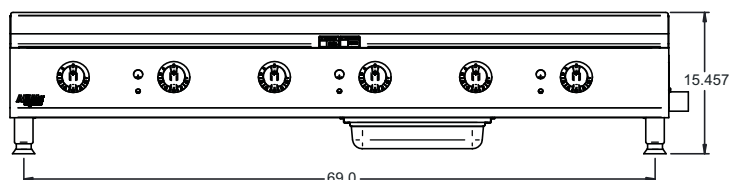


## CONVERSION

- Instructions are for conversion from Natural Gas to Propane (L.P.) on all models HTG.
- The conversion should be done before connecting the unit to the gas supply.
- Units are shipped from the factory equipped for use on natural gas. Orifices necessary for LP (propane) are provided in a bag tied to the valve on the front panel.
  1. Remove the knobs and front panel.
  2. Remove the orifice fittings from the valve. Change the orifices to the size recommended for propane (L.P.).
  3. Replace the orifice fittings into the valve.
- To change the regulator:

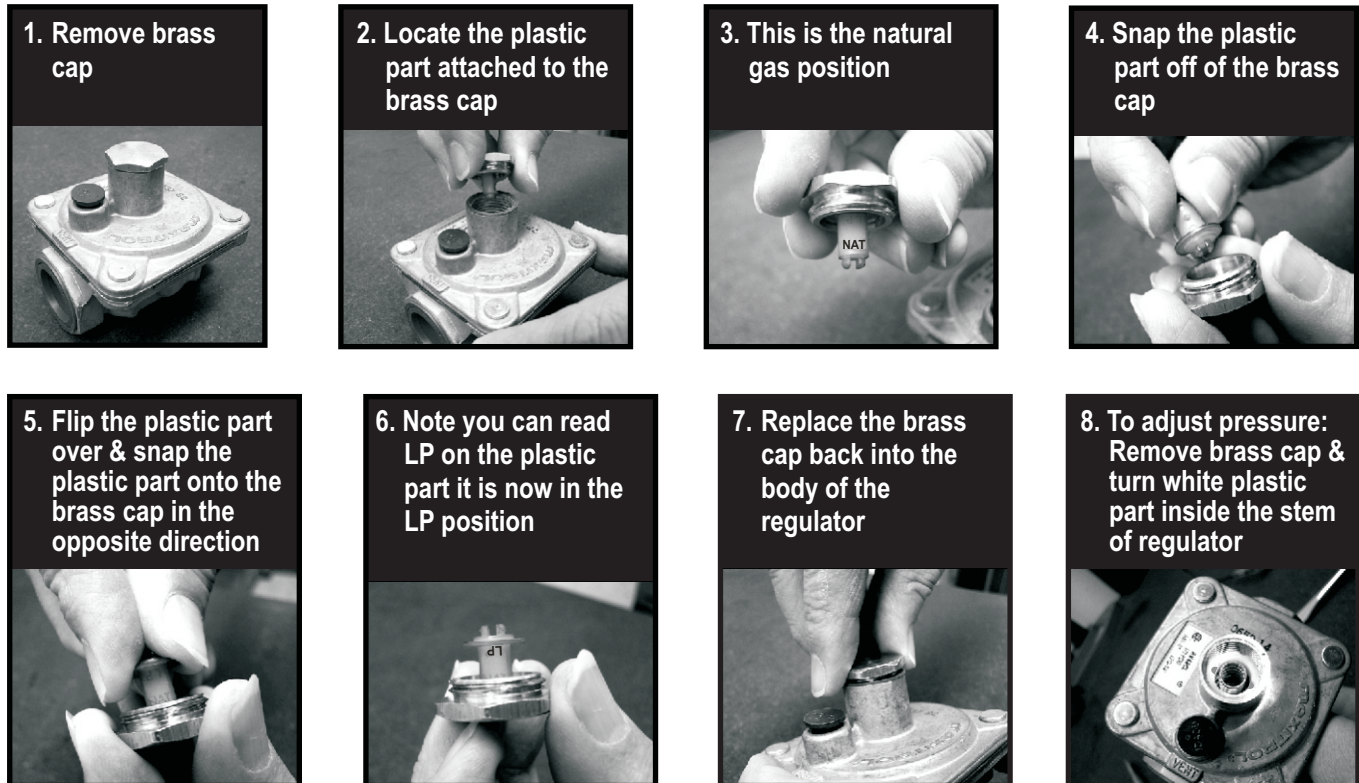

- Connect the regulator to the unit, connect gas and check for leaks. **WARNING:** Do not use an open flame to check for leaks.
- Check the system pressure. With the front panel removed remove the plug from the manifold.
- Place a fitting in the plug opening and connect a manometer.
- For Natural gas the pressure in the manifold should be 5" water column or 12.4 millibar. For LP the pressure in the manifold should be 10" water Column or 24.9 millibar.
- To adjust the pressure remove the brass cap and turn the white plastic part inside the stem of the regulator. See picture regulator 8.
- Take a wide straight screw driver and place it in the two notches shown in picture regulator 7 turn clockwise to increase pressure and counter-clockwise to reduce pressure. See picture regulator 8.
- Once the pressure has been adjusted replace the brass cap.
- Note the blue cap on the regulator, this is the vent there are openings below the top rim. **NEVER** block these openings your regulator will fail to operate correctly. On at least a monthly basis blow off any dust or grease which may accumulate around this cap. The openings must remain open for the regulator to function. Clean more often in a very greasy atmosphere.

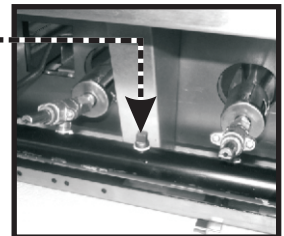

## LIGHTING INSTRUCTIONS

HTG Griddles are furnished with either a pilot safety valve or a standing pilot (not available in the European Community). Please follow the instructions for your unit.

### **Standing Pilot Lighting Instructions:** ( Not Available in the European Community )

The pilot lights on the broilers have been set at the factory. A screwdriver may be required for the first lighting to adjust the flame for your elevation.

1. Turn off the manual shut off valve and wait 5 minutes to clear the gas.
2. Turn all knobs to the "OFF" position.
3. The valve can be accessed through an opening in the front panel or remove the cooking grates and light the pilot from above.
4. Turn the manual shut off valve on.
5. Hold an ignition source (match) to both openings on the pilot tube. When the flames are established, remove the ignition source.
6. Turn the burner knobs to "HI". If the burner does not ignite, promptly open the pilot valve more. If the pilot flame appears larger than necessary, turn it down and reset burner ignition. The pilot flame should be as small as possible but large enough to guarantee reliable ignition of the burners when the knobs are turned to "HI".

### **RELIGHTING PILOT**

If the pilot light should go out for any reason:

- Promptly shut off all gas at the manual shut off valve.
- Turn off all knobs and pilot valves; wait 5 minutes to clear gas.
- Relight following steps 4 through 6 under Standing Pilot Lighting Instructions.

### **HTG Pilot Safety Valve Lighting Instructions**

1. Turn on main gas supply to unit, on-off valve located behind the unit (not supplied with unit).
2. Turn the burner control knobs to "OFF" position. Wait at least 5 minutes to allow any gas which may have accumulated in the firebox compartment to escape.
3. Through the hole in the front panel, press red button on the pilot safety valve and light through observation hole in firebox. Keep red button on pilot safety depressed for at least 1 minute after pilot has lit. If pilot does not light, repeat this step.
4. To adjust the pilot flame, rotate knob next to the red button. Turning the knob clockwise increases the pilot flame. A properly sized pilot should be 1/2" to 3/4" long (12/19 mm).

### **HTG LIGHTING THE MAIN BURNER:**

- Turn the thermostat to the desired temperature.

Main burner air supply:

1. For efficient burner operation, a proper balance of gas volume and primary air supply must be maintained which will result in complete combustion. Insufficient air supply results in a yellow streaming flame. Primary air supply is controlled by an air shutter on the front of the burner.
2. Loosen the screws on the front of the burner and adjust the air shutter to just eliminate the yellow tips of the burner flame. Lock the air shutter in place by tightening the screws.

### **European Community**

If adjustment becomes necessary in the field, it should be done by a factory authorized and trained technician who should seal the screw after the adjustment to safeguard against unauthorized tampering by the end user.

All burners are lit from constantly burning pilots. Turning the thermostat to the desired temperature is all that is required to put the unit in service.

Do not permit fans to blow directly at the unit. Wherever possible, avoid open windows next to the units' sides or back. Avoid wall type fans which create air cross-currents within a room.

It is also necessary that sufficient air should be allowed to enter the room to compensate for the amount of air removed by any ventilating system. Otherwise, a subnormal atmospheric pressure will occur, which will effect operation and cause undesirable working conditions.

A properly designed and installed hood will act as the heart of the ventilating system for the room or area in which the unit is installed and will leave the unit independent of changing draft conditions.

All valves must be checked and lubricated periodically. This must be done by an authorized service representative in your area.



## OPERATING INSTRUCTIONS

### Season Griddle:

Heat to low temperature (300 - 350 F/150-180C) and pour on a small amount of cooking oil, about one ounce (30cc) per square foot of surface. Spread the oil over the entire griddle surface with a cloth to create a thin film. Wipe off any excess oil with a cloth. Repeat this procedure 2 to 3 times until the griddle has a slick, mirror-like surface.

### Operation:

Turn the burners on about 15-20 minutes before cooking for preheating. Set the knobs to the desired temperature (HTG). Each valve will control the gas flow to the burner to bring that area of the plate up to the set temperature. If different temperature settings are to be used, adjoining areas should be set at progressively higher temperatures using the lowest temperatures on the outside burners. A uniform and systematic approach to the loading of the griddle will produce the most consistent product results.

	<b>CAUTION:</b> Do not turn on gas valves without lighting pilots. This could cause a build up of gas and potential explosion.	
---	--	---

## CLEANING / MAINTENANCE

### Initial Cleaning:

Prior to operating your new griddle, thoroughly wash the griddle surface and the exterior with a mild detergent or soap solution. Do not use abrasive cleaners since this might damage the cabinet finish. If the stainless steel surfaces become discolored, scrub by rubbing only in the direction of the finished grain.

### Cleaning:

1. Always turn unit off and allow it to cool completely before cleaning. Clean thoroughly before first use.
2. After each use, clean the griddle with wire brush or flexible spatula.
3. Once a day, thoroughly clean splash back, sides and front. Remove the grease drawer, empty it and wash it out.
4. Once a week, clean the griddle surface thoroughly. If necessary, use a griddle stone, wire brush or steel wool on the surface. Rub with the grain of the metal while the griddle is still warm. A detergent may be used on the plate surface to help clean it; but, care must be taken to be sure the detergent is thoroughly removed. After removal of the detergent, the surface of the plate should then be covered with a thin film of oil to prevent rusting. Clean stainless surfaces with a damp cloth and polish with a soft dry cloth. To remove discoloration, use a nonabrasive cleaner. After each "weekly" cleaning, the griddle must be seasoned again. If the griddle usage is very high, the "weekly" cleaning procedures may be done more often than once a week.

### Extended Shutdown:

Turn the manual shutoff valve to "OFF"; (field installed valve not supplied by the manufacturer); turn all control knobs to the "OFF" position; and shut off the pilot flame by turning the adjustment on the pilot valve. **\*NOTE:** Gas shutoff valve is supplied by the manufacturer on CE or European Community models.

If the griddle is to be shut down for an extended period, put a heavy coat of grease over the griddle plate.

## SERVICE / REPAIR

**NOTE: THIS APPLIANCE MUST ONLY BE SERVICED BY AN AUTHORIZED AGENT.**


**NOTE:** Parts protected by the manufacturer or his agent are not to be adjusted by the installer unless the installer is an authorized service agent.

**If you have any questions or problems contact your nearest APW Wyott Service Representative.**

## TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Heat does not come on when thermostat is turned on.	Thermostat is bad.
	Pilot burner not lit.
	Gas valve is bad.
Pilot burner will not light.	Obstructed pilot orifice.
	Pilot gas turned off at automatic pilot.
	Automatic pilot valve is bad.
Pilot burner will not stay lit.	Thermocouple is bad.
	Thermocouple is not hot enough.
	Obstructed or wrong size pilot orifice.
	Gas supply is not purged of air.
	Air is blowing pilot light out.
	Automatic pilot valve is bad.
Fat appears to smoke excessively.	Heat is set too high.
	Moisture in the food may be turning into steam.
Food sticks to griddle.	Heat is set too high.
	Griddle surface needs cleaning and/or seasoning.
	Surface under food may not have been covered with
	enough cooking oil.
Food burned around edges or contains dark specks.	Heat is set too high.
	Griddle surface needs cleaning and/or seasoning.
	Surface under food may not have been covered with enough cooking oil.
Food is undercooked inside.	Heat is set too high.
	Food may not have been cooked for long enough time.
Food tastes greasy or has objectionable off-flavor.	Food itself may have off flavor.
	Food may have been stored improperly before cooking.
	Too much griddle fat used.
Noticeable build-up of gum on griddle.	Heat is set too low.
	Heat is set too high
	Griddle surface needs cleaning and/or seasoning.
	Too much griddle fat used.


# HTG GRIDDLES (DOMESTIC) - EXPLODED VIEW & PARTS LIST

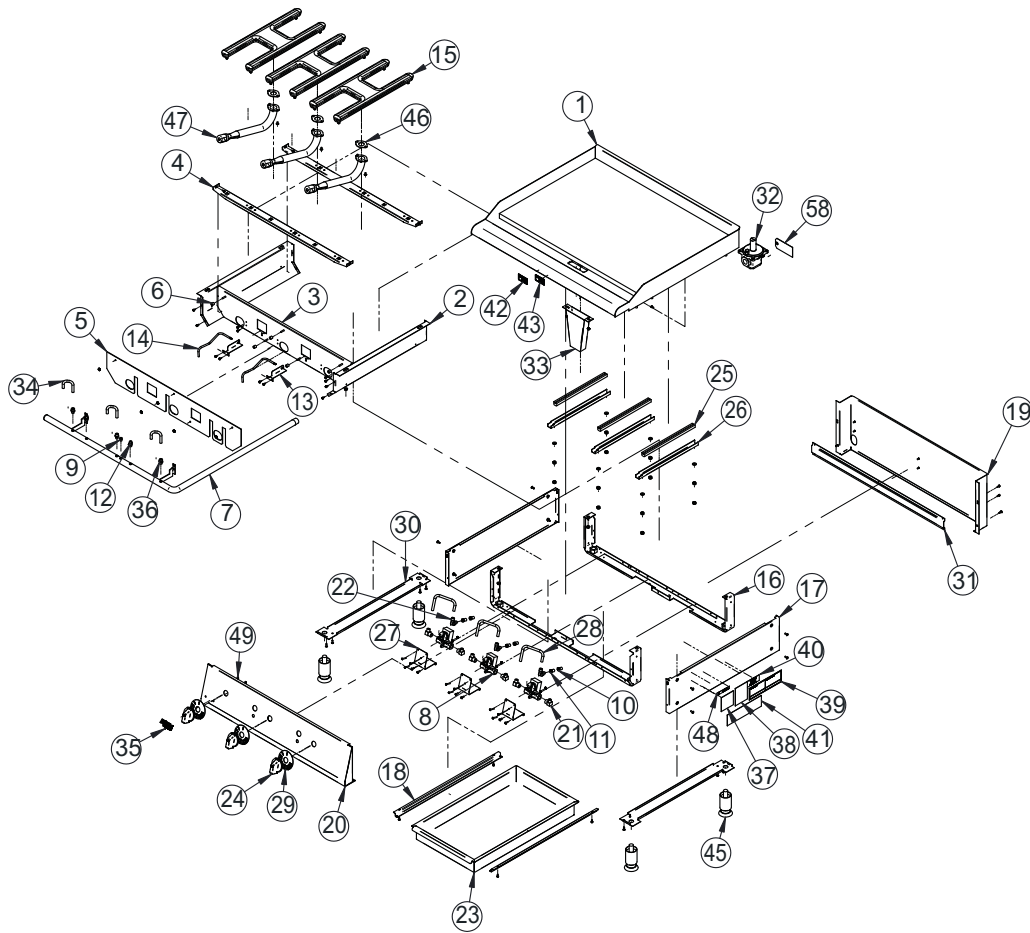

ITEM	P/N	DESCRIPTION	HTG-2424	HTG-2436	HTG-2448	HTG-2460	HTG-2472
1	21826520 21826620 21826720 21826820 21826920	WELDM'T, GRIDDLE PLATE WELDM'T, GRIDDLE PLATE WELDM'T, GRIDDLE PLATE WELDM'T, GRIDDLE PLATE WELDM'T, GRIDDLE PLATE	1	1	1	1	1
2	21826433	SIDE, FIREBOX	2	2	2	2	2
3	21831222 21831322 21826722 21826822	BODY, 24" FIREBOX BODY, 36" FIREBOX BODY, 48" FIREBOX BODY, 60" FIREBOX	1	1	1	1	1
4	21826922 21826017 21826117 21826217 21826317	BODY, 72" FIREBOX SUPPORT, BURNER SUPPORT, BURNER SUPPORT, BURNER SUPPORT, BURNER	2	2	2	2	1
5	21826417 21826027 21826127 21826227 21826327	SUPPORT, BURNER BAFFLE, FRONT HEAT BAFFLE, FRONT HEAT BAFFLE, FRONT HEAT BAFFLE, FRONT HEAT	1	1	1	1	2
6	21826427 21813085	BAFFLE, FRONT HEAT SPACER	4	4	5	5	1
7	21831225 21831325 21831525	MANIFOLD, 24" MANIFOLD, 36" MANIFOLD, 48"	1	1	1		6

ITEM	P/N	DESCRIPTION	HMG-2424	HMG-2436	HMG-2448	HMG-2460	HMG-2472
8	21832925	MANIFOLD, 60"				1	
	21833025	MANIFOLD, 72"					1
	2067700	THERMOSTAT, GAS SNAP ACTION	2	3	4	5	6
	2092517	PLUG, 1/8 NPTM	1	1	1	1	1
10	2066834	HOOD, ORIFICE #34	2	3	4	5	6
11	2066851	HOOD, ORIFICE #51	2	3	4	5	6
12	2068002	VALVE, PILOT 90DEG	1	2	2	3	3
13	21825113	BRACKET, PILOT	1	2	2	3	3
14	21830712	BURNER, PILOT	1	2	2	3	3
15	2065846	BURNER, CAST H	2	3	4	5	6
16	21825053	SUPPORT, LEG 24"	2				
	21825153	SUPPORT, LEG 36"		2			
	21825253	SUPPORT, LEG 48"			2		
	21825353	SUPPORT, LEG 60"				2	
	21825453	SUPPORT, LEG 72"					2
17	21826053	PANEL, RIGHT & LEFT SIDE	2	2	2	2	2
18	21825011	GUIDE, GREASE SLIDE	2	2	2	2	2
19	21831232	PANEL, BACK 24"	1				
	21826652	PANEL, BACK 36"		1			
	21826752	PANEL, BACK 48"			1		
20	21826332	PANEL, BACK 60"				1	
	21826932	PANEL, BACK 72"					1
	21826515	PANEL, CONTROL 24"	1				
	21826615	PANEL, CONTROL 36"		1			
	21826715	PANEL, CONTROL 48"			1		
21	21826815	PANEL, CONTROL 60"				1	
	21826915	PANEL, CONTROL 72"					1
	2092506	ELBOW, 3/8C X 3/8IPT MALE	4	6	8	10	12
	2092614	ELBOW, 3/8C X 3/8-27 BRASS	2	3	4	5	6
	2425310	PAN, GREASE 24"	1	1	1	1	1
24	8706310	KNOB, METAL COOKLINE .272 D SHAFT	2	3	4	5	6
25	1018064	INSULATION, THERMOSTAT BULB	2	3	4	5	6
26	21723090	COVER, THERMOSTAT BULB	2	3	4	5	6
27	21826512	MOUNT, TSTAT HTG	2	3	4	5	6
28	21826646	TUBE, MANIFOLD/ORIFICE SHORT	2	3	4	5	6
29	8834910	DECAL, DIAL PLATE					
		THERMOSTATIC GRIDDLES	2	3	4	5	6
30	21825031	BRACE, LEG	2	2	2	2	2
31	21826134	CHANNEL, STIFFINER	NA	1			
	21826234	CHANNEL, STIFFINER			1		
	21826334	CHANNEL, STIFFINER				1	
32	21826434	CHANNEL, STIFFINER					1
	2067600	REGULATOR, 5" W.C. & 10" W.C.	1	1	1	1	1
33	21825012	SIDE, GREASE CHUTE	2	2	2	2	2
34	21826547	TUBE, MANIFOLD/T'STAT	2	3	4	5	6
35	2065847	NAMEPLATE, 8" BAKERS PRIDE	1	1	1	1	1
36	2092624	FITTING, 3/8C X 1/8 NPT MALE STRAIGHT	2	3	4	5	6
37	8861000	LABEL, SPEC	1	1	1	1	1
38	8809920	DECAL, IMPROPER INSTALLATION	1	1	1	1	1
39	8837134	LABEL, ORIFICE SIZE	1	1	1	1	1
40	8825300	DECAL, LEG	1	1	1	1	1
41	8839000	DECAL, OPERATING INSTRUCTIONS	1	1	1	1	1
42	43813103	LABEL, HOT SURFACE	1	1	1	1	1
43	43813149	LABEL, HOT SURFACE(FR)	1	1	1	1	1
44	8839000	INST/OP MANUAL(N/S)	1	1	1	1	1
45	8633700	LEG, 2" DIA. HVY DTY	4	4	4	4	4
46	2065916	GASKET, BURNER	2	3	4	5	6
47	2065849	VENTURI, HVY DTY BP GRIDDLES	2	3	4	5	6
48	8832600	LABEL, SERVICE HOTLINE	1	1	1	1	1
49	8460900	NUT, PUSH	2	2	2	2	2

# HMG GRIDDLES (CE) - EXPLODED VIEW & PARTS LIST

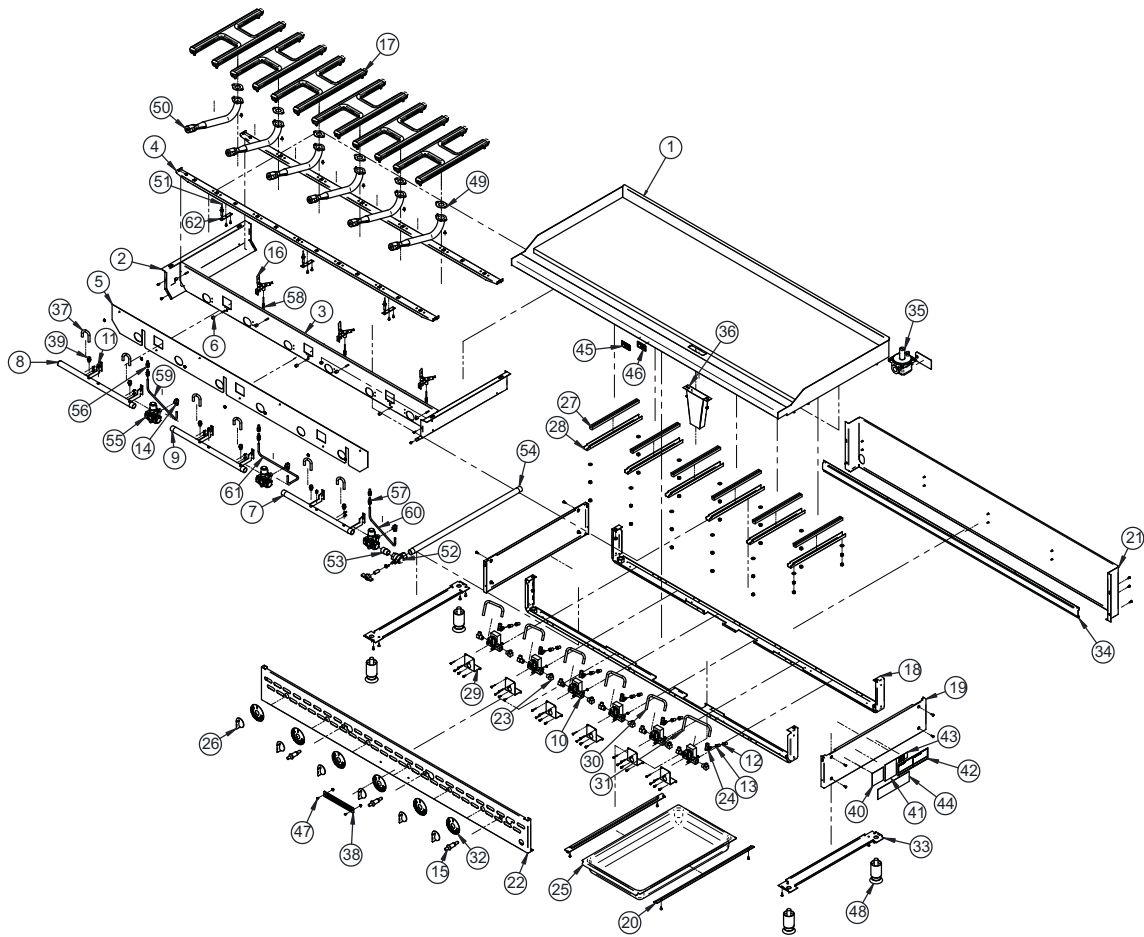

ITEM	P/N	DESCRIPTION	HMG-2424	HMG-2436	HMG-2448	HMG-2460	HMG-2472
1	21826520 21826620 21826720 21826820 21826920	WELDM'T, GRIDDLE PLATE WELDM'T, GRIDDLE PLATE WELDM'T, GRIDDLE PLATE WELDM'T, GRIDDLE PLATE WELDM'T, GRIDDLE PLATE	1	1	1	1	1
2	21826433	SIDE, FIREBOX	2	2	2	2	2
3	21831222 21831322 21826722 21826822	BODY, 24" FIREBOX BODY, 36" FIREBOX BODY, 48" FIREBOX BODY, 60" FIREBOX	1	1	1	1	
4	21826922 21826017 21826117 21826217 21826317	BODY, 72" FIREBOX SUPPORT, BURNER SUPPORT, BURNER SUPPORT, BURNER SUPPORT, BURNER	2	2	2	2	1
5	21826417 21826027 21826127 21826227 21826327	SUPPORT, BURNER BAFFLE, FRONT HEAT BAFFLE, FRONT HEAT BAFFLE, FRONT HEAT BAFFLE, FRONT HEAT	1	1	1	1	2
6	21826427 21813085	BAFFLE, FRONT HEAT SPACER	4	4	5	5	1
7	21831235 21826961 21831535	MANIFOLD, 24" CE MANIFOLD, 36" CE MANIFOLD, 48" CE	1	1	1		6

ITEM	P/N	DESCRIPTION	HMG-2424	HMG-2436	HMG-2448	HMG-2460	HMG-2472
8	21832935	MANIFOLD, 60" CE				1	
	21826963	MANIFOLD, 72" CE					1
	21826635	MANIFOLD, 36" CE		1			
	21831536	MANIFOLD, 48" CE			1	1	1
9	21826962	MANIFOLD, 60" CE				1	1
10	2067700	THERMOSTAT, GAS SNAP ACTION	2	3	4	5	6
11	2092517	PLUG, 1/8 NPTM	1	2	2	3	3
12	2066834	HOOD, ORIFICE #34	2	3	4	5	6
13	2066851	HOOD, ORIFICE #51	2	3	4	5	6
14	2068001	VALVE, PILOT 90DEG	1	2	2	3	3
15	2065854	IGNITOR,	1	2	2	3	3
16	21831275	WELDM'T, PILOT	1	2	2	3	3
17	2065846	BURNER, CAST H	2	3	4	5	6
18	21825053	SUPPORT, LEG 24"	2				
	21825153	SUPPORT, LEG 36"		2			
19	21825253	SUPPORT, LEG 48"			2		
	21825353	SUPPORT, LEG 60"				2	
	21825453	SUPPORT, LEG 72"					2
	21826053	PANEL, RIGHT & LEFT SIDE	2	2	2	2	2
20	21825011	GUIDE, GREASE SLIDE	2	2	2	2	2
21	21831232	PANEL, BACK 24"	1				
	21826652	PANEL, BACK 36"		1			
	21826752	PANEL, BACK 48"			1		
	21826332	PANEL, BACK 60"				1	
	21826932	PANEL, BACK 72"					1
22	21826540	PANEL, CONTROL 24"	1				
	21826640	PANEL, CONTROL 36"		1			
	21826740	PANEL, CONTROL 48"			1		
	21826840	PANEL, CONTROL 60"				1	
	21826940	PANEL, CONTROL 72"					1
23	2092506	ELBOW, 3/8C X 3/8IPT MALE	4	6	8	10	12
24	2092614	ELBOW, 3/8C X 3/8-27 BRASS	2	3	4	5	6
25	2425310	PAN, GREASE 24"	1	1	1	1	1
26	8706310	KNOB, METAL COOKLINE .272 D SHAFT	2	3	4	5	6
27	1018064	INSULATION, THERMOSTAT BULB	2	3	4	5	6
28	21723090	COVER, THERMOSTAT BULB	2	3	4	5	6
29	21826512	MOUNT, TSTAT HDTG	2	3	4	5	6
30	21826646	TUBE, MANIFOLD/ORIFICE SHORT	1	2	3	4	5
31	21831348	TUBE, MANIFOLD/ORIFICE LONG	NA	1	1	1	1
32	8834910	DECAL, DIAL PLATE					
		THERMOSTATIC GRIDDLES	2	3	4	5	6
33	21825031	BRACE, LEG	2	2	2	2	2
34	21826134	CHANNEL, STIFFINER	NA	1			
	21826234	CHANNEL, STIFFINER			1		
	21826334	CHANNEL, STIFFINER				1	
	21826434	CHANNEL, STIFFINER					1
35	2067600	REGULATOR, 5" W.C. & 10" W.C.	1	1	1	1	1
36	21825012	SIDE, GREASE CHUTE	2	2	2	2	2
37	21826547	TUBE, MANIFOLD/T'STAT	2	3	4	5	6
38	2065847	NAMEPLATE, 8" BAKERS PRIDE	1	1	1	1	1
39	2092624	FITTING, 3/8C X 1/8 NPT MALE STRAIGHT	2	3	4	5	6
40	8861000	LABEL, SPEC	1	1	1	1	1
41	8809920	DECAL, IMPROPER INSTALLATION	1	1	1	1	1
42	8837134	LABEL, ORIFICE SIZE	1	1	1	1	1
43	8825300	DECAL, LEG	1	1	1	1	1
44	8837130	DECAL, OPERATING INSTRUCTIONS	1	1	1	1	1

ITEM	P/N	DESCRIPTION	HMG-2424	HMG-2436	HMG-2448	HMG-2460	HMG-2472
45	43813103	LABEL, HOT SURFACE	1	1	1	1	1
46	43813149	LABEL, HOT SURFACE(FR)	1	1	1	1	1
47	8839010	INST/OP MANUAL(N/S)	1	1	1	1	1
48	8633700	LEG, 2" DIA. HVY DTY	4	4	4	4	4
49	2065916	GASKET, BURNER	2	3	4	5	6
50	2065849	VENTURI, HVY DTY BP GRIDDLES	2	3	4	5	6
51	2065885	ELCTRODE, SPARK	1	2	2	3	3
52	2069700	VALVE, BALL 3/4" 90 DEG.	1	1	1	1	1
53	2092592	NIPPLE, 3/4 X CLOSE SCHD. 40 BLACK	1	1	1	1	1
54	2092626	PIPE, INLET	1	1	1	1	1
55	2092702	PILOT SAFETY VALVE	1	2	2	3	3
56	2092903	ORIFICE, PILOT NATURAL	1	2	2	3	3
57	2092904	ORIFICE, PILOT LP	1	2	2	3	3
58	2093200	THERMOCOUPLE, 18" HIGH MV OUTPUT	1	2	2	3	3
59	21831213	TUBE, PILOT SUPPLY CE	1				
60	21830813	TUBE, PILOT SUPPLY CE		1			
	21831512	TUBE, PILOT SUPPLY CE			1		1
	21831317	TUBE, PILOT SUPPLY CE		1			
	21831513	TUBE, PILOT SUPPLY CE			1		
	21832913	TUBE, PILOT SUPPLY CE				1	
61	21833017	TUBE, PILOT SUPPLY CE					1
	21833018	TUBE, PILOT SUPPLY CE					1
	21831316	STRAP, IGNITOR	1	2	2	3	3
	8832600	DECAL SERVICE HOTLINE	1	1	1	1	1
	8460900	NUT, PUSH	2	2	2	2	2





## APW WYOTT EQUIPMENT LIMITED WARRANTY

APW Wyott Food service Equipment Company warrants its equipment against defects in materials and workmanship, subject to the following conditions:

This warranty applies to the original owner only and is not assignable.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at the option of APW Wyott such product will be repaired or replaced by APW Wyott or its Authorized Service Agency. APW Wyott will only be responsible for charges incurred or service performed by its Authorized Service Agencies. The use of other than APW Wyott Authorized Service Agencies will void this warranty and APW Wyott will not be responsible for such work or any charges associated with same. The closest APW Wyott Authorized Service Agent must be used.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, metropolitan areas of Alaska and Canada. There will be no labor coverage for equipment located on any island not connected by roadway to the mainland.

Warranty coverage on products used outside the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada may vary. Contact the international APW Wyott distributor, dealer, or service agency for details.

### Time Period

One year for parts and one year for labor, effective from the date of purchase by the original owner. The Authorized Service Agency may, at their option, require proof of purchase. Parts replaced under this warranty are warranted for the un-expired portion of the original product warranty only.

### Exceptions

- \*Gas/Electric Cookline: Models HCB, HCRB, HMG, HTG, HHP, HHPs, GCB, GCRB, GF, GGM, GGT, CHP-H, EF, EG, EHP. Three (3) Year Warranty on all component parts, except switches and thermostats. (2 additional years on parts only. No labor on second or third year.)
- \*Broiler Briquettes, Rock Grates, Cooking Grates, Burner Shields, Fireboxes: 90 Day Material Only. No Labor.
- \*Heat Strips: Models FD, FDL, FDD, FDDL. Two (2) Year Warranty on element only. No labor second year.
- \*Glass Windows, Doors, Seals, Rubber Seals, Light Bulbs: 90 Day Material Only. No Labor.

In all cases, parts covered by extended warranty will be shipped FOB the factory after the first year.

### Portable Carry In Products

Equipment weighing over 70 pounds or permanently installed will be serviced on-site as per the terms of this warranty. Equipment weighing 70 pounds or under, and which is not permanently installed, i.e. with cord and plug, is considered portable and is subject to the following warranty handling limitations. If portable equipment fails to operate in its intended manner on the first day of connection, or use, at APW Wyott's option or its Authorized Service Agency, it will be serviced on site or replaced.

From day two through the conclusion of this warranty period, portable units must be taken to or sent prepaid to the APW Wyott Authorized Service Agency for in-warranty repairs. No mileage or travel charges are allowed on portable units after the first day of use. If the customer wants on-site service, they may receive same by paying the travel and mileage charges. Exceptions to this rule: (1) countertop warmers and cookers, which are covered under the Enhanced Warranty Program, and (2) toasters or rollergrills which have in store service.

### Exclusions

The following conditions are not covered by warranty:

- \*Equipment failure relating to improper installation, improper utility connection or supply and problems due to ventilation.
- \*Equipment that has not been properly maintained, calibration of controls, adjustments, damage from improper cleaning and water damage to controls.
- \*Equipment that has not been used in an appropriate manner, or has been subject to misuse or misapplication, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot or act of god.
- \*Equipment that has the model number or serial number removed or altered.

If the equipment has been changed, altered, modified or repaired by other than an Authorized Service Agency during or after the warranty period, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of the equipment thereafter.

This warranty does not cover services performed at overtime or premium labor rates. Should service be required at times which normally involve overtime or premium labor rates, the owner shall be charged for the difference between normal service rates and such premium rates. APW Wyott does not assume any liability for extended delays in replacing or repairing any items beyond its control.

In all cases, the use of other than APW Wyott Authorized OEM Replacement Parts will void this warranty.

This equipment is intended for commercial use only. Warranty is void if equipment is installed in other than commercial application.

### Water Quality Requirements

Water supply intended for a unit that has in excess of 3.0 grains of hardness per gallon (GPG) must be treated or softened before being used. Water containing over 3.0 GPG will decrease the efficiency and reduce the operation life of the unit.

**Note: Product failure caused by liming or sediment buildup is not covered under warranty.**

**"THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF APW WYOTT. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN."**

2/09



---

### **APW Wyott Foodservice Equipment Company**

#### **Dallas Plant**

729 Third Ave. Dallas, TX 75226  
Local: 1-(214) 421-7366  
Toll Free: 1-(800) 527-2100  
Parts/Service Fax: 1-(214) 565-0976

#### **Cheyenne Plant**

1938 Wyott Drive, Cheyenne, WY 82007  
Local: 1-(307) 634-5801  
Toll Free: 1-(800) 752-0863  
Parts/Service Fax: 1-(307) 772-0460

E-mail: [info@apwwyott.com](mailto:info@apwwyott.com)  
[www.apwwyott.com](http://www.apwwyott.com)