


# INSTALLATION AND OPERATING INSTRUCTIONS

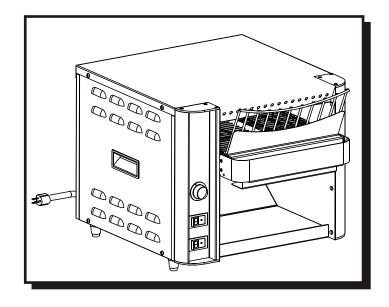

### XTRM-1 TOASTER

INTENDED FOR OTHER THAN HOUSEHOLD USE

Model: XTRM-1

## RETAIN THIS MANUAL FOR FUTURE REFERENCE APPLIANCE MUST BE KEPT CLEAR OF COMBUSTIBLES AT ALL TIMES



**FOR YOUR SAFETY:** Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.





**WARNING:** Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the Installation, Operating and Maintenance Instructions thoroughly before installing or servicing this equipment.



Initial heating of appliance may generate smoke or fumes and must be done in a well ventilated area. Overexposure to smoke or fumes may cause nausea or dizziness.

This equipment has been engineered to provide you with year-round dependable service when used according to the instructions in this manual and standard commercial kitchen practices.





P/N 93100174 12/08

Phone: +1 (214) 421-7366 Fax: +1 (214) 565-0976 Toll Free: +1 (800) 527-2100

Website: www.apwwyott.com E-mail: info@apwwyott.com (800) 733-2203 24 Hour Service Hotline **APW WYOTT** 729 Third Avenue Dallas, TX 75226

IMPORTANT FOR FUTURE REFERENCE Please complete this information and retain this manual for the life of the equipment. For Warranty Service and/or Parts, this information is required. Model Number Serial Number **Date Purchased** Notes:\_

**APW Wyott** takes pride in the design and quality of our products. When used as intended and with proper care and maintenance, you will experience years of reliable operation from this equipment. To ensure best results, it is important that you read and follow the instructions in this manual carefully.

Installation and start-up should be performed by a qualified installer who thoroughly read, understands and follows these instruction.

If you have questions concerning the installation, operation, maintenance or service of this product, contact APW Wyott Foodservice Equipment Company's "Technical Service Department".

#### **SAFETY PRECAUTIONS**

Before installing and operating this equipment be sure everyone involved in its operation are fully trained and are aware of all precautions. Accidents and problems can result by a failure to follow fundamental rules and precautions.

The following words and symbols, found in this manual, alert you to hazards to the operator, service personnel or the equipment. The words are defined as follows:



DANGER: This symbol warns of imminent hazard which will result in serious injury or death.





**WARNING:** This symbol refers to a potential hazard or unsafe practice, which could result in serious injury or death.





**CAUTION:** This symbol refers to a potential hazard or unsafe practice, which may result in minor or moderate injury or product or property damage.





**NOTICE:** This symbol refers to information that needs special attention or must be fully understood even though not dangerous.



#### **TABLE OF CONTENTS**

SECTION	ITEM	PAGE
1	Important Safety Instructions	3
2	General Information	5
3	Installation Instructions	5
4	Operation Instructions	5
5	Cleaning Instructions	6
6	Specifications	6
7	Troubleshooting	7
8	Parts List with Exploded View	8
9	Wiring Diagram	10
10	Warranty	11

#### 1. IMPORTANT SAFETY INSTRUCTIONS



IMPORTANT: Read the following important safety instructions to avoid personal injury or death, and to avoid damage to the equipment or property.





**WARNING:** APW Wyott toasters are designed, built, and sold for commercial use. If positioned where the general public can usethem, make sure that all cautions, warnings, and operating instructions are clearly posted near each unit to insureproper operation, reduce the chance of personal injury and/or equipment damage.





**WARNING:** Plug unit into a properly grounded electrical outlet of the correct voltage, size and plug configuration. If the plug and receptacle do not match, contact a qualified electrician to determine the proper voltage and size and install the proper electrical outlet.





**WARNING**: Unit is not waterproof. Do not submerge in water. Do not operate if it has been submerged in water. Do not clean the unit with a water jet.





**WARNING:** To avoid any injury, turn the power switch off at the fuse disconnect switch/circuit breaker or unplug the unit from the power source and allow to cool completely before performing any maintenance or cleaning.





**WARNING:** To avoid electrical shock, always unplug the unit before performing cleaning or maintenance.





**WARNING:** For safe and proper operation, the unit must be located a reasonable distance from combustible walls and materials. If safe distances are not maintained, discoloration or combustion could occur.





**WARNING:** An earthing cable must connect the appliance to all other units in the complete installation and from there to an independent earth connection.





**WARNING:** To avoid electrical shock or personal injury, do not steam clean or use excessive water on the unit.





**WARNING:** If service is required on this unit, contact your authorized APW Wyott Service Agent, or contact the APW Wyott Service Department directly at (214) 421-7366 or (800) 527-2100; fax (214) 565-0976.





**WARNING:** This product has no "user" serviceable parts. To avoid damage to the unit or injury to personnel, use only Authorized APW Wyott Service Agents and genuine APW Wyott Parts when service is required..





**WARNING:** Genuine APW Wyott Replacement Parts are specified to operate safely in the environments in which they are used. Some aftermarket or generic replacement parts do not have the characteristics that will allow them to operate safely in APW Wyott equipment. It is essential to use APW Wyott Replacement Parts when repairing APW Wyott equipment. Failure to use APW Wyott Replacement Parts may subject operators of the equipment to hazardous electrical voltage, resulting in electrical shock or burn.





**CAUTION:** Some exterior surfaces on the unit will get hot. Use caution when touching these areas to avoid injury.





**CAUTION:** Locate the unit at the proper counter height, in an area that is convenient for use. The location should be level to prevent the unit or it's contents from accidentally falling, and strong enough to support the weight of the unit and food.





**WARNING:** In Europe, appliance must be connected by an earthing cable to all other units in the complete installation and thence to an independent earth connection in compliance with EN 60335-1 and/or local codes





**CAUTION:** The National Sanitation Foundation (NSF) requires that units over 36" (91 cm) in length or weighing more than 80 lbs. (36 kg) to be either sealed or raised on the installation surface. If this unit cannot be sealed at the point of use, 4" (10 cm) legs are included to allow for proper cleaning access below unit.





**CAUTION:** Use only non-abrasive cleaners. Abrasive cleaners could scratch the finish of your unit, marring it's appearance and making it susceptible to dirt accumulation.





**WARNING**: Failure to provide clearances will cause unit failure and invalidate warranty claims (see installation instructions).





**NOTICE**: Do not use toppings (butter, etc.) on product as product is inverted during normal operation.





**NOTICE:** Operating toaster without legs invalidates any warranty claims.





**NOTICE:** Neglecting to keep fan opening clean could result in toaster failure.



#### 2. GENERAL INFORMATION


- 1. Overall Dimensions w/Wire Feeder 13.610"H (34.5cm) x 15.192"W (38.6cm) x 17.982"D (45.7cm)
- 2. Product Opening 1.50"H (3.8cm) x 10.50"W (26.7cm)
- 3. Electrical Requirements (Single phase):
  - A. 120 Volt, 1800 Watt, 15 Amp.
  - B. 208 Volt, 1800 Watt, 8.5 Amp.
  - C. 230/240 Volt, 1800 Watt, 7.8 Amp.
  - D. Cordset configuration
    - 1. Each toaster equipped with three wire grounded cordset and standard three-prong plug.
    - 2. In the U.S.: 120V uses NEMA 5-15P. 208, 230/240V uses NEMA 6-20P.
    - 3. In Canada: 120V uses NEMA 5-20P.
- 4. Net/Shipping Weight 28 lb.(12.7kg) / 33 lb.(14.97kg)

#### 3. INSTALLATION INSTRUCTIONS

- I. Check Contents refer to Figure 1, account for the following parts:
  - A. Wire Feeder inside Reflector Tray
  - B. Reflector Tray shipped in place
  - C. Toast Drawer shipped in place
  - D. Instruction Manual shipped loose
- 2. Position Wire Feeder
  - A. Pull out Reflector Tray
  - B. Rotate Wire Feeder
  - C. Slide Reflector Tray back
  - D. WARNING: Operating toaster without Reflector Tray reduces toasting capabilities.
- 3. Toaster Placement
  - A. Locate toaster near a grounded receptacle of the proper configuration (see below). Plug the cordset directly into receptacle (DO NOT USE AN EXTENSION CORD).
    - 1. In the U.S.: 120V uses NEMA 5-15R. 208, 230/240V uses NEMA 6-20R.
    - 2. In Canada: 120V uses NEMA 5-20R.
  - B. Place toaster on flat surface providing following minimum clearances:
    - 1. Base = one inch (provided with legs installed).
    - 2. Side and back walls = two inches
    - 3. Overhead = Enough space to allow adequate heat displacement.
  - C. Position toaster where customers will not contact any surface labeled "CAUTION HOT".

#### 4. OPERATION INSTRUCTIONS

- 1. Preparation
  - A. Clean toaster thoroughly before first use (See cleaning instructions).
  - B. Controls Familiarity
    - 1. Main Power Switch (located on very bottom of control panel): There are two rocker switches. The bottom switch powers the unit "ON". It also turns on the bottom element. The top switch is a standby switch (upper heat switch) that runs the top element. When the standby switch is in the "ON" position the unit is at full power. When the standby switch is in the "OFF" position the unit is running at 50%.
      - a) Full Power: Flip both rocker switches to the right.
      - b) Power Off: Flip both rocker switches to the left.
    - 2. Conveyor Speed Control: Set knob to the three (3) position for warm-up.
  - C. Warm-up time: Allow five (5) minutes.
- 2. Normal Use
  - A. Loading Product
    - 1. Place product on Wire Feeder. The conveyor will automatically draw product through the toaster at a speed determined by conveyor speed control.

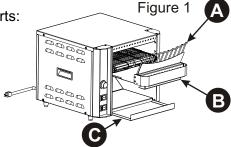


- B. Toasting Darkness: determined by conveyor speed.
  - 1. Darkest toasting set conveyor speed control to far left setting.
  - 2. Lightest toasting set conveyor speed control to far right setting.
  - 3. Other factors affecting toasting darkness.
    - a) Product moistness moister product requires slower speeds
    - b) Sugar content in product product with more sugar requires slower speeds
    - c) Product Temperature cooler product requires slower speeds
  - 4. For best results, use day old bread stored room temperature.

#### 5. CLEANING INSTRUCTIONS

#### 1. Daily Cleaning

- A. With toaster off and cool, turn toaster on and set conveyor speed to four.
- B. Using a plastic abrasive pad, wipe the conveyor belt in a back and forth motion (side-to-side) motion to remove baked-on product. Wipe the conveyor belt in the same manner with a hot, damp cloth.
- C. Turn off toaster.
- D. Slide the reflector/crumb tray out of toaster by pulling forward. Dispose of crumbs and wash tray in hot, soapy water. Dry tray and place back in toaster.
- E. Remove toast drawer from toaster by sliding out and lifting up. Dispose of crumbs and wash drawer in hot, soapy water. Wipe crumbs from inside the toaster with a hot, damp cloth. Dry drawer and place back in toaster.
- F. Wipe the exterior surfaces of the toaster with a hot, damp cloth.

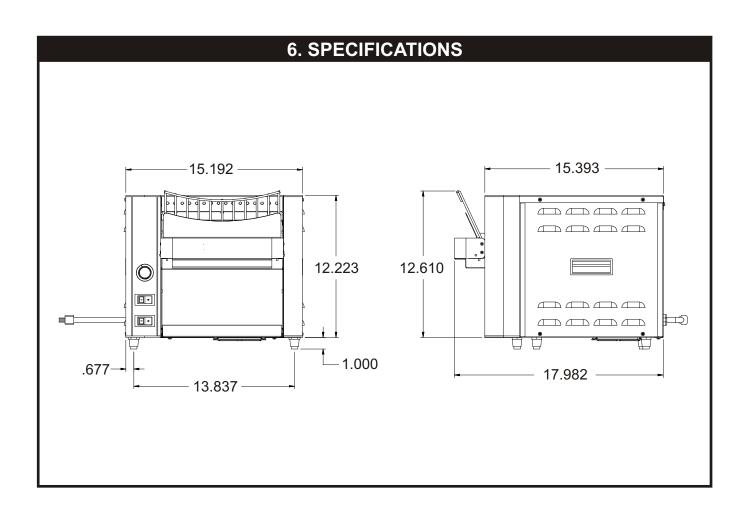


#### 7. TROUBLESHOOTING

- 1. Always ask and check the following:
  - A. Is the unit connected to a live power source?
  - B. Check the circuit breaker.
  - C. Is power switch on?
  - D. Is the unit operating on proper voltage?
- 2. If problems exist after checking the above, check the chart below.
- 3. If any service is needed (*italicized items*), call an APW Wyott authorized service agency. All service should be performed by an APW Wyott authorized service agency.

PROBLEM	CAUSE	SOLUTION
Won't toast	a. Toaster cold.	a. Allow five (5) minutes for warm up.
	b. Wrong power switch position.	b. Position power switch to full power.
	c. Wrong conveyor speed setting.	c. Reduce conveyor speed.
Toasts unevenly	d. Only part of product surface is	d. Reduce conveyor speed.
	toasted.	
	e. Product located to far to side of	e. Place product on conveyor between
	Conveyor.	End links.
Product sticks to	f. Butter or butter substitute used	f. Discontinue use of butter or butter
conveyor or slide	on product.	substitute.
	g. Conveyor surface has baked-on	g. Follow daily cleaning methods to
	oil residue.	remove & prevent residue.
	h. Very moist or doughy product.	h. Use different source or day old product.
	i. Product not defrosted or thawed.	i. Defrost/thaw product.
No power	j. No power to receptacle.	j. Check circuit breaker.
	k. Toaster unplugged.	k. Plug in toaster.
	I. Loose connections.	I. Check connections.
	m. Power switch.	m. Check that switch is on & operational.
Won't heat	n. Loose connections.	n. Check connections.
	o. Faulty power switch.	o. Replace power switch.
	p. Burnt out element.	p. Replace element.
Lighter toast under	q. Speed control setting.	q. Reduce speed control setting.
peak loads	r. Very moist product.	r. Use different source or day old
		product.
	s. Product too cold.	s. Allow product to warm to room
		temperature.
	t. Toaster cavity temperature being	t. Add 1" or more spacing between
	quenched.	product.
Conveyor won't	u. No power.	u. Check circuit breaker.
Move	v. Conveyor links are binding.	v. Check conveyor for bent links.
	w. Loose or bad connection between	w. Check for loose or bad connection.
	speed control and conveyor motor.	
	x. Conveyor motor burnt out.	x. Replace conveyor motor.
	y. Speed control burnt out.	Y. Replace speed control.

#### 8. PARTS LIST WITH EXPLODED VIEW

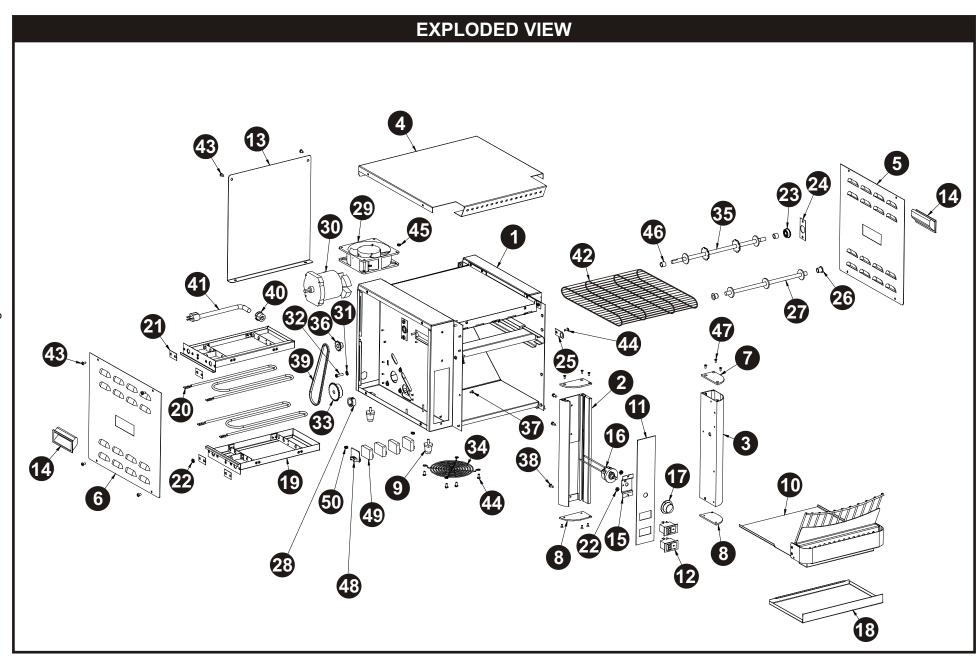

 $\infty$ 

PARTS LIST						
ITEM	PART NUMBER	DESCRIPTION	QUANTITY			
1	93100158	RIVET ASSY, XTRM-1 INNER CORE	1			
2	93100160	XTRM-1 CONTROL PANEL EXTRUSION	1			
3	93100162	XTRM-1 RIGHT SIDE EXTRUSION	1			
4	93100150	XTRM-1 TOP COVER LEFT	1			
5	93100061	XTRM-1 PANEL, LEFT OUTER	1			
6 7	93100060 9300067	XTRM-1 PANEL, RIGHT OUTER END CAP, F/L & B/R	1			
8	9300007	END CAP, B/L & B/R END CAP, B/L & F/R	2 2			
9	83267	LEG 1" PLASTIC W/CHROME	4			
10	93100058	ASSY, XTRM-1 FEEDER	1 1			
11	93100101	WELD ASSY, XTRM-1 CONTROL PANEL	1			
12	70444800	SWITCH, ROCKER ON-OFF	2			
13	93100069	XTRM-1 BACK COVER	1			
14	81600095	HANDLE, POCKET PULL SERIES	2			
15	93100063	XTRM-1 PLATE, CONTROL PANEL	1			
16	83221 83222	RHEOSTAT, MOTOR CONTROL 120V RHEOSTAT, MOTOR CONTROL 208, 230/240V	1 1			
17	88705	KNOB 039-266 8A BLACK	1 1			
18	38129	DRAWER TOAST	1			
19	93100033	ASSY, ELEMENT HOLDER				
20	54087	ELEMENT 120V 832W	2 2			
	54088	ELEMENT 208V	2			
	54089	ELEMENT 230/240V	2			
21	93100047	XTRM-1 ELEMENT END CAP	4			
22	89061	NUT, HEX 10-24	10			
23	83248	BEARING, SHAFT	2			
24 25	83821 38130	BRACKET, BEARING ASSY, CLIP BEARING	2 2			
26	38125	BEARING FLANGED POLYMER	2			
27	38122	W'ASSY IDLER SHAFT	1			
28	89184	BUSHING, .875 HEYCO 2126	1			
29	85286	FAN MOTOR COOLING 120V	1			
	85248	FAN MOTOR COOLING 208, 230/240V	1			
30	85152	MOTOR AT10 115V 60HZ	1			
	85149	MOTOR AT10 208/240V 60HZ	1			
24	85144 80076	MOTOR AT10 230V 60HZ	1			
31 32	89076 89030	WASHER, LOCK 1/4 INTERNAL SCREW, 10-32X3/4	4 4			
33	83209	SPROCKET, 23 TOOTH 1/4 PITCH 5/16 BORE	1			
34	85287	FAN GUARD	i			
35	83956	DRIVE SHAFT ASSY AT-10 SEGMENTED BELT	1			
36	83261	SPROCKET, 12 TOOTH 1/4 PITCH 3/8 BORE	1			
37	93100064	HEX MACHINE SCREW, #6-32 X 1/4	11			
38	89073	SCREW, #8 X 1/2 HEX TAPIT SHT MTL TYPE AB	10			
39 40	82902 89111	CHAIN, 1/4" DRIVE 67 PITCH	1 1			
40 41	85638	BUSHING, STRAIN RELIEF SR-7W-2 CORDSET 14/3 600V 5-20P (120V)	1			
"'	85640	CORDSET 14/3 600V 5-20P (120V)  CORDSET 14/3 600V 5-20P (230&240V)	1			
42	PS0018	BELT, WIRE 27x.05 3 SEG.	1 1			
43	89039	SCREW, 8-32X5/16 PH PAN SS	12			
44	81600087	SCREW, 8-32 x 3/8, PHILLIPS, PAN HEAD	6			
45	89063	NUT, HEX 8-32	4			
46	83868	SPACER, CONVEYOR SHAFT	2			
47	94000114	SCREW, COUNTERSINK, 6-32X5/16,Z,BLK	12			
48 49	34236 34236	TERMINAL BLOCK END MTG TERMINAL BLOCK END MTG	1			
49 50	89054	NUT, KEPS 6-32	4 2			
	30001	,				

## 9. WIRING DIAGRAM DRIVE MOTOR CORD SET $\bigcirc$ TOP ELEMENT 2 COOLING FAN STANDBY SWITCH 7 BOTTOM ELEMENT TERMINAL BLOCK ON/OFF SWITCH 6 5 RHEOSTAT BLACK BLUE

**IMPORTANT NOTICE:** The information contained in this section of the manual is intended for individuals possessing backgrounds of electrical and mechanical experience, such as an authorized APW Wyott service technician. APW or the seller cannot be responsible for the interpretation of this information, nor can it assume any liability in connection with its use.

#### 10. APW WYOTT EQUIPMENT LIMITED WARRANTY

APW Wyott Foodservice Equipment Company warrants it's equipment against defects in materials and workmanship, subject to the following conditions:

This warranty applies to the original owner only and is not assignable.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at the option of APW Wyott such product will be repaired or replaced by APW Wyott or its Authorized Service Agency. APW Wyott will only be responsible for charges incurred or service performed by its Authorized Service Agencies. The use of other than APW Wyott Authorized Service Agencies will void this warranty and APW Wyott will not be responsible for such work or any charges associated with same. The closest APW Wyott Authorized Service Agent must be used.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, metropolitan areas of Alaska and Canada. There will be no labor coverage for equipment located on any island not connected by roadway to the mainland.

Warranty coverage on products used outside the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada may vary. Contact the international APW Wyott distributor, dealer, or service agency for details.

One year for parts and one year for labor, effective from the date of purchase by the original owner. The Authorized Service Agency may, at their option, require proof of purchase. Parts replaced under this warranty are warranted for the un-expired portion of the original product warranty only.

#### Exceptions

- \*Gas/Electric Cookline: Models GCB, GCRB, GF, GGM, GGT, CHP-H, EF, EG, EHP. Three (3) Year Warranty on all component parts, except switches and thermostats. (2 additional years on parts only. No labor on second or third year.)
- \*Broiler Briquettes, Rock Grates, Cooking Grates, Burner Shields, Fireboxes: 90 Day Material Only. No Labor.
- \*Heat Strips: Models FD, FDL, FDD, FDDL. Two (2) Year Warranty on element only. No labor second year. \*Glass Windows, Doors, Seals, Rubber Seals, Light Bulbs: 90 Day Material Only. No Labor.

In all cases, parts covered by extended warranty will be shipped FOB the factory after the first year.

#### Portable Carry In Products

Equipment weighing over 70 pounds or permanently installed will be serviced on-site as per the terms of this warranty. Equipment weighing 70 pounds or under, and which is not permanently installed, i.e. with cord and plug, is considered portable and is subject to the following warranty handling limitations. If portable equipment fails to operate in its intended manner on the first day of connection, or use, at APW Wyott's option or its Authorized Service Agency, it will be serviced on site or replaced.

From day two through the conclusion of this warranty period, portable units must be taken to or sent prepaid to the APW Wyott Authorized Service Agency for in-warranty repairs. No mileage or travel charges are allowed on portable units after the first day of use. If the customer wants on-site service, they may receive same by paying the travel and mileage charges. Exceptions to this rule: (1) countertop warmers and cookers, which are covered under the Enhanced Warranty Program, and (2) toasters or rollergrills which have in store service.

#### Exclusions

The following conditions are not covered by warranty:

- \*Equipment failure relating to improper installation, improper utility connection or supply and problems due to
- \*Equipment that has not been properly maintained, calibration of controls, adjustments, damage from improper cleaning and water damage to controls.
- \*Equipment that has not been used in an appropriate manner, or has been subject to misuse or misapplication, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot or act of god.
- \*Equipment that has the model number or serial number removed or altered.

If the equipment has been changed, altered, modified or repaired by other than an Authorized Service Agency during or after the warranty period, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of the equipment thereafter.

This warranty does not cover services performed at overtime or premium labor rates. Should service be required at times which normally involve overtime or premium labor rates, the owner shall be charged for the difference between normal service rates and such premium rates. APW Wyott does not assume any liability for extended delays in replacing or repairing any items beyond its control.

In all cases, the use of other than APW Wyott Authorized OEM Replacement Parts will void this warranty.

This equipment is intended for commercial use only. Warranty is void if equipment is installed in other than commercial application.

#### Water Quality Requirements

Water supply intended for a unit that has in excess of 3.0 grains of hardness per gallon (GPG) must be treated or softened before being used. Water containing over 3.0 GPG will decrease the efficiency and reduce the operation life of the unit.

Note: Product failure caused by liming or sediment buildup is not covered under warranty.

"THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF APW WYOTT. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN."



Phone: +1 (214) 421-7366 Fax: +1 (214) 565-0976 Toll Free: +1 (800) 527-2100 Website: www.apwwyott.com E-mail: info@apwwyott.com

**APW WYOTT** 729 Third Avenue Dallas, TX 75226