SATELLITE DOCKING STATION BLOOMFIELD MODEL: 9342

BY

BLOOMFIELD

BLOOMFIELD INDUSTRIES
2 ERIK CIRCLE
P.O.BOX 280
VERDI, NV 89439
U.S.A.
FAX (775) 345-8232
PH (775) 345-0444
Email address:
service@wellsbloomfield.com

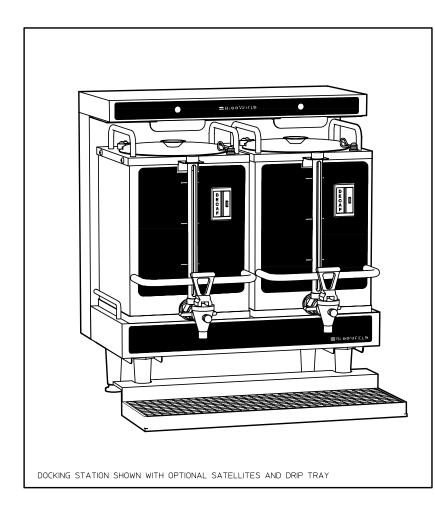


TABLE OF CONTENTS

OPERATING INSTRUCTIONS	PAGE	2
EXPLODED VIEW & PARTS LIST	PAGE	3
WIRING DIAGRAM	PAGE	4

OPERATING INSTRUCTIONS

WARNING: DO NOT plug in or energize this unit until instructions are read and followed.

Position Satellite to insure light is on (there may be a slight delay before light is on in some models) and bottom is in correct position. Unit will automatically maintain optimum holding temperature.

The light will start flashing after the preset time is reached, indicating if coffee has not been used — then it should be discarded and either brew a fresh batch or remove and clean satellite until ready to use.


TIMER ADJUSTMENT INSTRUCTIONS

Flashing light timer is preset from the factory for 30 minutes. If it is desirable to increase time:

- 1. Disconnect from power source.
- 2. Remove back panel.
- 3. Locate time control and turn to desired setting.
- 4. Reinstall back panel.
- 5. Connect power.


NOTE: When light is flashing, Satellite unit will maintain temperature until Satellite is removed from the Docking Station.


There is no power supplied to connector unless the Satellite is in place.

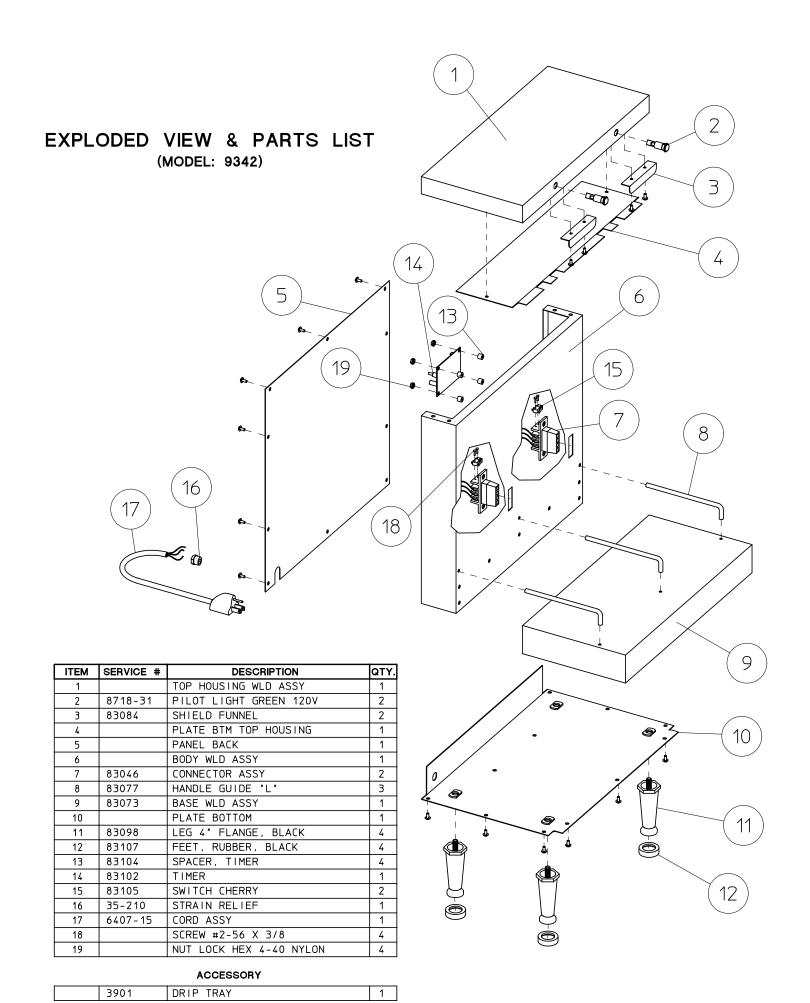

WIRING DIAGRAM & SCHEMATIC

(MODEL 9342)

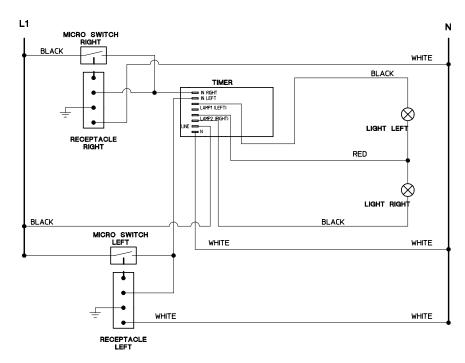

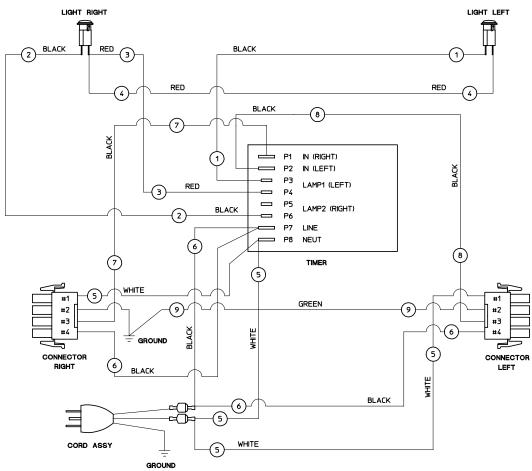

MODEL:	VOLTS:	WATTS:
9342	120	90 (WITH (2) SATELLITES)