

SOFT HEAT® BREWER & SERVER USE AND CARE INSTRUCTIONS

BREWING



Select desired brew side us-1. ing "LEFT" or "RIGHT" rocker switch.



Select desired batch size.



Insert a BUNN[®] filter into the 4. 3. funnel. If no grinder is being used, go to step #7.



Place funnel in grinder.



5. For two hopper grinders, select coffee type by pressing "RIGHT" or "LEFT" hopper. Skip this step for 1 hopper grinders.



Press and release the "START" switch to begin grinding. Once grind cycle is complete, remove funnel from grinder. Go to step #8.

6.



7. Pour in fresh coffee.



Shake funnel gently to level 8. grounds.



9. Slide funnel into the funnel rails of the brewer.



funnel.



10. Place an empty server under the 11. Place "ON/OFF" switch in lighted upper position.



12. Press and release the "START" switch.



13. When brewing is complete, discard the grounds and filter.

CLEANING



1. Clean and sanitize the funnel.



2. Use a clean damp cloth rinsed in mild, non-abrasive detergent to clean the sprayhead panel.



3. Remove the sprayhead.

BUNN[®] **CLEANING (Continued)**

SOFT HEAT® BREWER & SERVER USE AND CARE INSTRUCTIONS



Clean mineral deposits and 4. rinse. Make sure all holes are open. Replace Sprayhead.



8. Clean the airvent with the small brush provided (26367.0000) using a cleaning product and water solution. Clean the inlet tube with the medium-sized brush and the cleaning product solution.



5. Use a clean damp cloth rinsed in mild, non-abrasive detergent to clean all outer surfaces.



9. Rinse well. Reassemble the lid making sure to replace the ball and inlet tube assembly.



6. Tilt server forward and drain completely. Unlock and remove the lid assembly.



Remove the glass tube.



7. Unscrew the inlet cap.



10.Unscrew the sight gauge cap. 11.Clean the sight gauge with the large brush (00675.0000) and reassemble.



12. Turn the faucet in a counterclockwise direction and remove the faucet from the dispenser. Unscrew the faucet cap from the faucet body and disassemble all faucet parts.




13. Transfer these parts to a three compartment sink for cleaning. Fill the first sink with a soap solution using a mild detergent, the second sink with an *approved sanitizer solution and the third sink with clean water for rinsing.



14. Use a small brush (00674.0000) to thoroughly scrub the faucet body.



15. Allow the parts to soak in a sanitizer solution for a minimum of ten minutes. Remove the faucet parts from the sanitizer solution and rinse thoroughly. Allow parts to air-dry overnight.

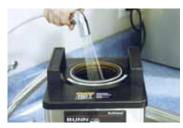

16. Fill SH server with hot water and *approved sanitizer. Let soak overnight. Using a non-abrasive nylon brush, clean inside of server. Thoroughly rinse the entire inside of the server. DO NOT submerge the server in water.



17. Use a clean damp cloth rinsed in mild, non-abrasive detergent to clean all surfaces.

CAUTION:

DO NOT submerge the server in water. Damage to internal components may result.

*Use a commercial sanitizer that has 50-100 ppm of available chlorine with a concentration level of at least 3% available chlorine (KAY-5 Sanitizer). Follow the mixing instructions to ensure 100 ppm of available chlorine. DO NOT use bleach.

NOTE - Bunn-O-Matic recommends CASCADE® dishwashing detergent for thorough cleaning.

CASCADE® is a registered trademark of Procter & Gamble Co., Cincinnati, Ohio.