



"Your Solutions Partner"

RUF – 48 REFRIGERATED UNIT



OPERATING / INSTALLATION INSTRUCTION MANUAL

TO HELP AVOID ANY INSTALLATION PROBLEMS AND TO HELP ASSURE TROUBLE-FREE PERFORMANCE OF YOUR NEW REFRIGERATOR, PLEASE READ THESE INSTRUCTIONS BEFORE INSTALLATION AND OPERATION OF YOUR NEW UNIT.

FOR YOUR OWN SAFETY:

ELECTRICITY AND WATER DO NOT MIX, UNPLUG THE UNIT BEFORE CLEANING.

IF REPAIRS ARE REQUIRED, USE A QUALIFIED SERVICE AGENT.

WHILE REPAIRS ARE BEING MADE, BE SURE THE UNIT IS NOT PLUGGED IN.

BE SURE THE COMPRESSOR COMPARTMENT HAS ADEQUATE VENTILATION.

IMPORTANT INSTALLATION INSTRUCTIONS

When installing the refrigerated unit, it is essential to insure proper air flow into and out of the cabinet surrounding the unit. Improper ventilation will cause your compressor to burn out and will void the warranty.

This unit ventilates from the front slotted kick plate. Do not block this kick plate and clean periodically.

To assure long life of your unit, please insure that the above instructions are followed.

INSTALLATION:

This unit was shipped from the factory assembled and requires only the necessary electrical connections.

ELECTRICAL CONNECTION:

The unit is designed to be operated on one (1) 15 amp dedicated circuit. The unit must be grounded. The receptacle, wired circuit and protection should meet the required local codes for proper operation.

GENERAL INSTRUCTIONS:

Prior to use, the unit should be turned on to lower the temperature before the product is set in place.

Cleaning should be done by wiping the unit out using a mild soap and water solution. Abrasive cleaners should not be used.

TO ADJUST THE THERMOSTAT

The thermostat is located inside the unit. It is a black knob with settings of 1 – 9, and Nine being the coldest setting.

Set the thermostat on 5 and cool the unit for 1 hour. Load unit with foods and after 1 hour check thermometer located on rack inside unit for 120V or digital display located in rear riser for 220V units. Temperature should be approximately 36° - 42° F/2° - 6° C. Adjust the thermostat accordingly.

PARTS: Contact the Duke Service Department at the number below.

219602
04/07/08

Duke Manufacturing Co.
2305 N. Broadway; St Louis, MO 63102
(800) 735-3853 / (314) 231-1130 / (314) 231-5074 fax

