



Henny Penny
Hand Breader/Sifter
Model HB-121



SERVICE MANUAL

Henny Penny Hand Breader/Sifter

Model HB-121



Product Numbers 03196, 03197

LIMITED WARRANTY FOR HENNY PENNY APPLIANCES

Subject to the following conditions, Henny Penny Corporation makes the following limited warranties to the original purchaser only for Henny Penny appliances and replacement parts:

NEW EQUIPMENT: Any part of a new appliance, except lamps and fuses, which proves to be defective in material or workmanship within two (2) years from date of original installation, will be repaired or replaced without charge F.O.B. factory, Eaton, Ohio, or F.O.B. authorized distributor. To validate this warranty, the registration card for the appliance must be mailed to Henny Penny within ten (10) days after installation.

REPLACEMENT PARTS: Any appliance replacement part, except lamps and fuses, which proves to be defective in material or workmanship within ninety (90) days from date of original installation will be repaired or replaced without charge F.O.B. factory, Eaton, Ohio, or F.O.B. authorized distributor.

The warranty for new equipment and replacement parts covers only the repair or replacement of the defective part and does not include any labor charges for the removal and installation of any parts, travel or other expenses incidental to the repair or replacement of a part.

EXTENDED FRYPOT WARRANTY: Henny Penny will replace any frypot that fails due to manufacturing or workmanship issues for a period of up to seven (7) years from date of manufacture. This warranty shall not cover any frypot that fails due to any misuse or abuse, such as heating of the frypot without shortening.

0 TO 3 YEARS: During this time, any frypot that fails due to manufacturing or workmanship issues will be replaced at no charge for parts, labor, or freight. Henny Penny will either install a new frypot at no cost or provide a new or reconditioned replacement fryer at no cost.

3 TO 7 YEARS: During this time, any frypot that fails due to manufacturing or workmanship issues will be replaced at no charge for the frypot only. Any freight charges and labor costs to install the new frypot as well as the cost of any other parts replaced, such as insulation, thermal sensors, high limits, fittings, and hardware, will be the responsibility of the owner.

Any claim must be represented to either Henny Penny or the distributor from whom the appliance was purchased. No allowance will be granted for repairs made by anyone else without Henny Penny's written consent. If damage occurs during shipping, notify the sender at once so that a claim may be filed.

THE ABOVE LIMITED WARRANTY SETS FORTH THE SOLE REMEDY AGAINST HENNY PENNY FOR ANY BREACH OF WARRANTY OR OTHER TERM. BUYER AGREES THAT NO OTHER REMEDY (INCLUDING CLAIMS FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES) SHALL BE AVAILABLE.

The above limited warranty does not apply (a) to damage resulting from accident, alteration, misuse, or abuse; (b) if the equipment's serial number is removed or defaced; or (c) for lamps and fuses. THE ABOVE LIMITED WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS, AND ALL OTHER WARRANTIES ARE EXCLUDED. HENNY PENNY NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY.

TABLE OF CONTENTS

Section

Section 1. INTRODUCTION	1-1
1-1. Hand Breader/Sifter	1-1
1-2. Proper Care	1-1
1-3. Features	1-1
1-4. Description	1-2
1-5. Assistance	1-2
1-6. Safety	1-2
Section 2. INSTALLATION AND OPERATION	2-1
2-1. Introduction	2-1
2-2. Unpacking and Assembly	2-1
2-3. Electrical Requirements	2-2
2-4. Cabinet Location	2-2
2-5. Principle of Operation and Controls	2-3
2-6. Cleaning Procedures	2-3
Section 3. MAINTENANCE	3-1
3-1. Introduction	3-1
3-2. Replacement of Belt	3-1
3-3. Replacement of Mandrel	3-1
3-4. Replacement of Motor	3-2
3-5. Replacement of Switch	3-3
3-6. Replacement of Rod End Bearing	3-4
3-7. Replacement of Push Rod Bearing	3-4
3-8. Replacement of Sifter Bearing	3-5
Section 4. PARTS INFORMATION	4-1
4-1. Introduction	4-1
4-2. Genuine Parts	4-1
4-3. How to Find Parts	4-1
4-4. How to Order Parts	4-1
4-5. Prices	4-1
4-6. Delivery	4-1
4-7. Warranty	4-1

SECTION 1. INTRODUCTION

1-1. HAND BREADER/SIFTER HB-121

The Henny Penny Hand Breader/Sifter is a compact breading table with a high speed sifter which save time, breading, and money by separating dough balls from the breading. The unit is available with various optional equipment making it adaptable to each store's individual needs.

1-2. PROPER CARE

As in any unit of food service equipment, the Hand Breader/Sifter does require care and maintenance. Suggestions for the proper care and maintenance are contained in this manual.

NOTE

Before using the HB-121 it should be thoroughly cleaned in accordance with the instructions contained in this manual.

1-3. FEATURES

- Powerful 1/4 hp totally enclosed motor gives fast, thorough sifting.
- Stainless steel sifting basket under breading lug gently separates dough balls from flour as it sifts uniformly and automatically into the bottom lug.
- Stainless steel unit is rugged and can be quickly disassembled for easy cleaning.
- Compact design requires little floor space, yet the work flow pattern contributes to high production capability.
- All moving parts are enclosed for greater safety.
- U.L., C.S.A. approved.
- Left to right flow of operation available.

1-4. DESCRIPTION

The HB-121 is a stainless steel table and cabinet containing a stainless steel sifting basket. The unit comes with two breading lugs, tray rack, pan support, dip pot, holder for dip container, plastic dip tray, and a back splash. It is equipped with dependable drive mechanism, adjustable casters, and an ON/OFF switch for customer convenience. Dimensions are 36-3/4" (93.35 cm) wide (top), 67-12" (171.45 cm) overall width from dip pot to fully extended tray rack, 16-3/4" (42.55 cm) deep (top), 26" (66.00 cm) overall depth from face of top to back of back splash, 35-1/2" (90.17 cm) high to top, and 46-1/2" (118.11 cm) to top of back splash. Shipping weight is 140 lbs. (63.5 kg.).

1-5. ASSISTANCE

Should you require outside assistance, contact your local independent distributor (refer to distributor list in rear of this manual). In addition, feel free to contact our corporate headquarters in Eaton, Ohio. Dial 800-417-8405 toll free, or 937-456-8405. It is our sincere desire that you obtain the maximum benefit from your Hand Breader/Sifter. If at any time you have questions or require assistance, please do not hesitate to contact us.

1-6. SAFETY

The only way to insure safe operation of the Henny Penny Hand Breader/Sifter is to fully understand the proper installation, operation, and maintenance procedures. The instructions in this manual have been prepared to aid you in learning the proper procedures. Where information is of particular importance or is safety related, the words **NOTE**, **CAUTION** or **WARNING** are used. Their usage is described below:

NOTE

The word **NOTE** is used to highlight especially important information.



The word **CAUTION** is used to alert you to a procedure that, if not performed properly, may damage the unit, or product.



The word **WARNING** is used to alert you to a procedure, that if not performed properly, might cause personal injury, such as burns and/or loss of sight, and damage to the unit.

SECTION 2. INSTALLATION AND OPERATION

2-1. INTRODUCTION

This section provides the installation and operation instructions for the Henny Penny Hand Breeder/Sifter.

NOTE

Installation of the unit should be performed by a qualified service technician.

WARNING

Do not puncture the Hand Breeder/Sifter with drills or screws as damage or electrical shock could result.

2-2. UNPACKING AND ASSEMBLY

The Henny Penny Hand Breeder/Sifter is shipped in a corrugated carton with sufficient padding to withstand normal shipping treatment.

NOTE

Any shipping damages should be noted in the presence of the delivery agent and signed prior to his or her departure.

To remove the HB-121 from the carton follow these instructions:

1. Carefully cut banding straps.
2. Remove carton from unit.
3. Remove unit from wooden skid.

WARNING

Care should be taken when lifting unit to prevent personal injury.

4. Remove all accessories from unit for assembly.

The Hand Breeder/Sifter unit is completely assembled and tested at the factory. However, to make shipping easier, some parts are separated from the unit. These parts should be assembled and installed at this time as follows. Refer to exploded view in rear of this manual.

1. Assemble gussets (32) to back splash using four 10-24 wing nuts (31) found in plastic bag taped to the breeding table.

2. Holding back splash (33) horizontal with gasket hanger hooks (35) facing you, hook back splash lip into larger opening in top (28) of breading table and rotate it back until gussets rest against back of unit.
3. Holding dip pot holder (21) with ring up, insert ends into holes in side of unit top (28) (switch end) and rotate down to horizontal position. Slide dip pot holder (21) into unit top until vertical bend is against top.
4. Insert ends of tray rack (29) into side of unit top (28) opposite switch end and rotate to horizontal position, allowing swinging leg to rest on top of leg cross brace.
5. Pan support (30) sets on tray rack (29).
6. One breading lug (25) sets in the large opening in unit top (28) and the other breading lug (25) slides into a pair of channels under the bin.

2-3. ELECTRICAL REQUIREMENTS

The Hand Breader/Sifter is available from the factory as a 120 VAC, single phase, 60 hertz, 4.2 amp unit. The unit is also equipped with a nine foot grounded cord and plug. The unit requires a grounded 15 amp receptacle with a separate electrical line protected by a fuse or a circuit breaker of the proper rating.

WARNING

The cabinet must be adequately and safely grounded according to local electrical codes to prevent the possibility of electrical shock.

Duty cycle approved for five minutes on then five minutes off with a constant load of eighteen pounds.

Cycle d'operation approve' pour cinq minute et ap' res ferme pour cinq minute avec une charge de dixhuit livres.

2-4. BREADER LOCATION

Your Hand Breader/Sifter should be placed so that the product flow from breading to cooking is handled in the most efficient manner. For this reason, Henny Penny produces units designed for left to right operation, as well as right to left operation.

CAUTION

For best performance, your HB-121 should be level. Leveling feet have been installed to compensate for uneven floors.

2-5. PRINCIPLE OF OPERATION AND CONTROLS

Your Hand Breader/Sifter should be completely assembled before beginning operation. To prepare for operation, place breading in top lug and "dip solution" in the dip pot. Dip product (chicken, ribs, etc.) in dip solution, letting excess solution drain back into the dip pot. Place product in breading and tumble until completely coated. Shake excess breading from product and place it on a pan equipped with a grid or place it in a basket. The product is now ready for the frying process. For sifting, the HB-121 is operated by an ON/OFF switch. Remove the plug from the bottom of top breading lug and push breading into the sifter basket. Start sifter by moving the switch lever to the ON position. When all breading has been sifted, (2 minutes or less) and only dough balls remain, move the switch lever to the OFF position. Remove the top breading lug. Remove the sifter basket and dump the dough balls. Replace the sifter basket and remove the lug with the sifted breading from underneath bin and place it on top of the table. Put empty lug under the sifter bin.

CAUTION

Be sure the lug plug is in place.

2-6. CLEANING PROCEDURES

The Hand Breader/Sifter was designed to completely disassemble for easy cleaning. For cleaning, proceed as follows:

WARNING

Disconnect the power cord from the wall receptacle or shut off power at the fuse or breaker box before following these procedures.

1. Remove breading lugs (25), back splash (33), dip pot (20), dip pot holder (21), dip basket (55), pan support (30), tray rack (29), sifter basket (40), basket bottom

(removable from side walls), spring clip (38), basket holder (39), and unit top (28). These items can all be taken to a sink for a thorough cleaning.

2. After brushing away all excess breading material from the sifter bin, the entire interior of the bin can be thoroughly cleaned with soap, water, and a soft sponge.

CAUTION

Avoid excess water around motor compartment.

3. Clean the exterior of the unit in the same manner.

SECTION 3. MAINTENANCE

3-1. INTRODUCTION

Electrical and mechanical components which may require servicing are contained beneath the cover plate assembly. Outlined below are step by step procedures when replacing parts becomes necessary. Refer to exploded drawing in this manual.

WARNING

Disconnect the power cord from the wall receptacle or power at the fuse or breaker box. Failure to do so could result in electrical shock.

3-2. REPLACEMENT OF BELT

1. Remove all equipment (breeding lugs, back splash, dip pot, etc.) from top of unit.
2. Remove top (28) by lifting from unit.
3. Using a #2 Phillips screwdriver, remove two screws (17) from cover plate assembly (16), and slide cover plate assembly out towards the sifter basket.
4. Using a 1/2" wrench, loosen the hex nuts on the adjustable foot (10) so that the motor (8) can be moved to loosen the belt (1).
5. Replace belt and adjust tension.

NOTE

Proper tension is achieved when belt deflects approximately 1/2".

3-3. REPLACEMENT OF MANDREL

WARNING

Disconnect the power cord from the wall receptacle or power at the fuse or breaker box. Failure to do so could result in personal injury.

1. Remove all equipment from top of unit.
2. Remove top (28) by lifting from unit.
3. Remove two screws (17) from cover plate assembly (16) and slide assembly out towards the sifter basket.

**3-3. REPLACEMENT OF
MANDREL (Continued)**

4. Loosen hex nuts on the adjustable foot (10), move motor, and loosen belt. Remove belt.
5. Using a 5/16" Allen wrench, remove set screw (62) from driven pulley and remove pulley (53).
6. Turn mandrel shaft (52) until the eccentric (49) and rod end bearing (46) are accessible.
7. Remove shoulder screw (51) and washers (48-43) and allow rod end bearing (46) and push rod assembly (44) to fall free.
8. Remove four bolts (50) holding mandrel to mounting bracket and remove.
9. Remove eccentric (49) and eccentric spacer (57) by moving eccentric clockwise.

CAUTION

The eccentric has left hand threads. Move the eccentric clockwise or threads of eccentric could be damaged.

**3-4. REPLACEMENT OF
MOTOR****WARNING**

Disconnect the power cord from the wall receptacle or power at the fuse or breaker box. Failure to do so could result in electrical shock.

1. Remove all equipment from top of unit.
2. Remove top (28) by lifting from unit.
3. Remove two screws (17) from cover plate assembly (16) and slide assembly out towards the sifter basket.
4. Remove nut (50) from cord clamp (26), and pull cord from clamp.

3-4. REPLACEMENT OF MOTOR (Continued)

5. Loosen the hex nuts on the adjustable foot (10), loosen belt, and then remove belt.
6. Remove the hinge pin from hinge (7) and remove motor (8).
7. Remove the wiring cover plate from the motor and disconnect wires from motor.

CAUTION

When wiring new motor leads, refer to the wiring diagram in this manual. **The motor must rotate in a counterclockwise direction.**

8. Transfer bolts (5), nuts (2), lockwashers (3), and hinge to new motor and install.
9. Reassemble in reverse order of above procedures.

CAUTION

Wire nut connections must be secure and tight. Secure wire nuts with electrical tape.

3-5. REPLACEMENT OF SWITCH

WARNING

Disconnect the power cord from the wall receptacle or power at the fuse or breaker box. Failure to do so could result in electrical shock.

1. Remove all equipment from top of unit.
2. Remove top (28) by lifting from unit.
3. Remove two screws (17) from cover plate assembly.
4. Remove the switch mounting nut, switch on/off plate and switch guard.
5. Place wires on new switch exactly as on old switch.
6. Replace switch nut, on/off plate, and switch guard, and tighten.

3-6. REPLACEMENT OF ROD END BEARING

WARNING

Disconnect the power cord from the wall receptacle or power at the fuse or breaker box. Failure to do so could result in electrical shock.

1. Remove all equipment from top of unit.
2. Remove top (28) by lifting from unit.
3. Remove two screws (17) from cover plate assembly (16) and slide assembly out towards the sifter basket.
4. Turn mandrel shaft (52) until eccentric (49) and rod end bearing (46) are accessible.
5. Remove shoulder screw (51), nut and washers (48-43), and allow rod end bearing (46) and push rod assembly (44) to fall free.
6. Remove spring retainer (38) and lift push rod (44) off basket holder (39).
7. Remove push rod assembly from unit and measure the distance from the end of the rod end bearing (46) to the locking nut (45).
8. Using two 9/16" wrenches, loosen locking nut (45) and unthread rod end bearing from push rod (44).
9. Install locking nut (45) to new rod end bearing in same position as old rod end bearing.
10. Snug locking nut and install push rod assembly to basket holder (39) and eccentric (49), and tighten with 9/16" wrench.

3-7. REPLACEMENT OF PUSH ROD BEARING

WARNING

Disconnect the power cord from the wall receptacle or power at the fuse or breaker box. Failure to do so could result in electrical shock.

1. Remove all equipment from top of unit.
2. Remove spring retainer (38) from basket holder (39).
3. Lift end of push rod (44) from basket holder.
4. Replace push rod bearing (42).


3-8. REPLACEMENT OF SIFTER BEARING

WARNING

Disconnect the power cord from the wall receptacle or power at the fuse or breaker box. Failure to do so could result in electrical shock.


1. Remove all equipment from top of unit.
2. Remove spring retainer (38) from basket holder (39).
3. Lift end of push rod (44) from basket holder.
4. Remove basket (40-41) and basket holder (39) from unit.
5. Replace sifter bearing (37).

INSTRUCTIONS:
WIRE AS SHOWN FOR 120V,
CCW ROTATION (FACING PULLEY END)

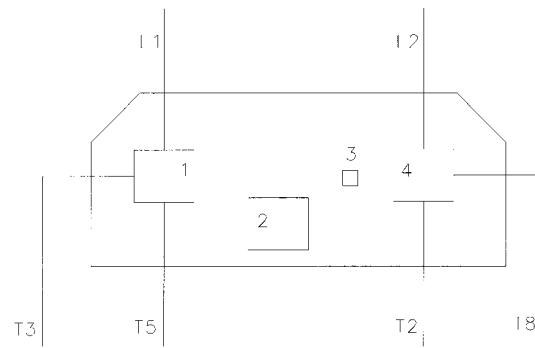

SWITCH


MOTOR

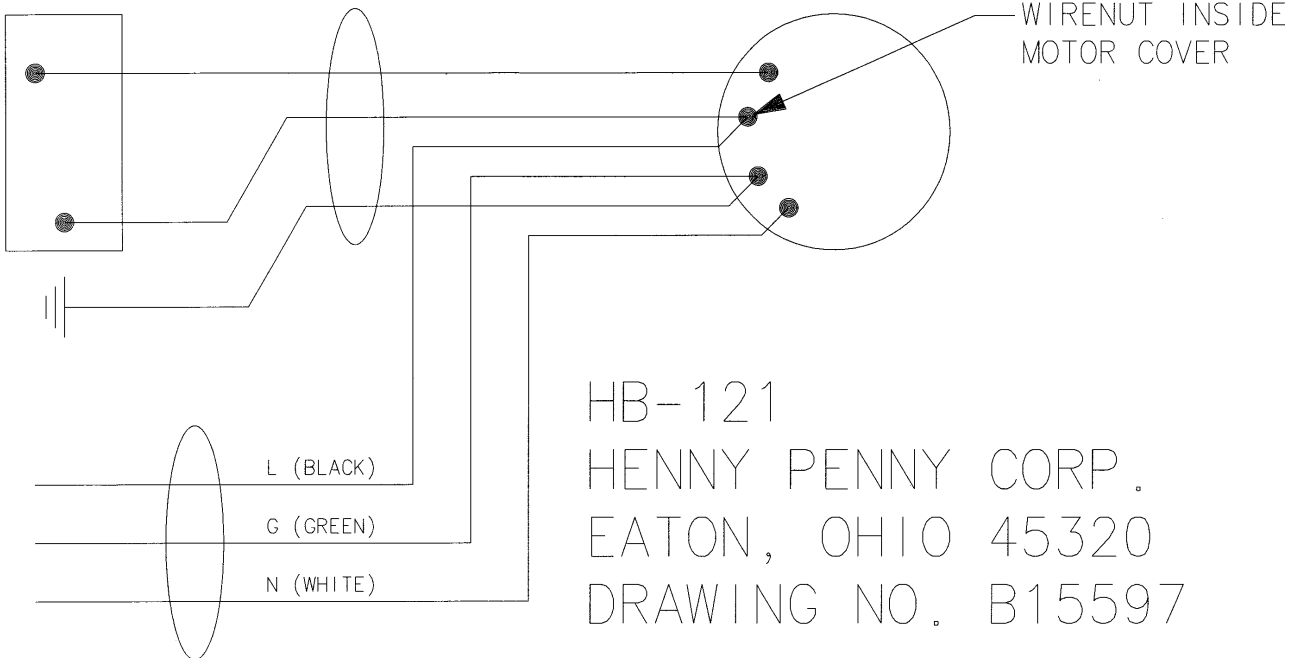

HB-121
HENNY PENNY CORP.
EATON, OHIO 45320
DRAWING NO. B15597

POWER
SUPPLY

INSTRUCTIONS:
WIRE AS SHOWN FOR 220 240V,
CCW ROTATION (FACING PULLEY END)

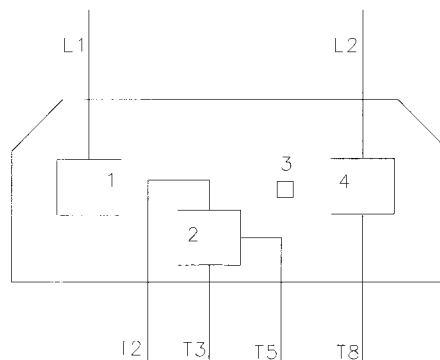

LIMITED WARRANTY FOR HENNY PENNY APPLIANCES

Subject to the following conditions, Henny Penny Corporation makes the following limited warranties to the original purchaser only for Henny Penny appliances and replacement parts:

NEW EQUIPMENT: Any part of a new appliance, except lamps and fuses, which proves to be defective in material or workmanship within two (2) years from date of original installation, will be repaired or replaced without charge F.O.B. factory, Eaton, Ohio, or F.O.B. authorized distributor. To validate this warranty, the registration card for the appliance must be mailed to Henny Penny within ten (10) days after installation.

REPLACEMENT PARTS: Any appliance replacement part, except lamps and fuses, which proves to be defective in material or workmanship within ninety (90) days from date of original installation will be repaired or replaced without charge F.O.B. factory, Eaton, Ohio, or F.O.B. authorized distributor.

The warranty for new equipment and replacement parts covers only the repair or replacement of the defective part and does not include any labor charges for the removal and installation of any parts, travel or other expenses incidental to the repair or replacement of a part.

EXTENDED FRYPOT WARRANTY: Henny Penny will replace any frypot that fails due to manufacturing or workmanship issues for a period of up to seven (7) years from date of manufacture. This warranty shall not cover any frypot that fails due to any misuse or abuse, such as heating of the frypot without shortening.

0 TO 3 YEARS: During this time, any frypot that fails due to manufacturing or workmanship issues will be replaced at no charge for parts, labor, or freight. Henny Penny will either install a new frypot at no cost or provide a new or reconditioned replacement fryer at no cost.

3 TO 7 YEARS: During this time, any frypot that fails due to manufacturing or workmanship issues will be replaced at no charge for the frypot only. Any freight charges and labor costs to install the new frypot as well as the cost of any other parts replaced, such as insulation, thermal sensors, high limits, fittings, and hardware, will be the responsibility of the owner.


Any claim must be represented to either Henny Penny or the distributor from whom the appliance was purchased. No allowance will be granted for repairs made by anyone else without Henny Penny's written consent. If damage occurs during shipping, notify the sender at once so that a claim may be filed.

THE ABOVE LIMITED WARRANTY SETS FORTH THE SOLE REMEDY AGAINST HENNY PENNY FOR ANY BREACH OF WARRANTY OR OTHER TERM. BUYER AGREES THAT NO OTHER REMEDY (INCLUDING CLAIMS FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES) SHALL BE AVAILABLE.

The above limited warranty does not apply (a) to damage resulting from accident, alteration, misuse, or abuse; (b) if the equipment's serial number is removed or defaced; or (c) for lamps and fuses. THE ABOVE LIMITED WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS, AND ALL OTHER WARRANTIES ARE EXCLUDED. HENNY PENNY NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY.

SECTION 4. PARTS INFORMATION

4-1. INTRODUCTION	This section identifies and lists the replaceable parts of the Henny Penny HB-121 Hand Breader/Sifter.
4-2. GENUINE PARTS	Use only genuine Henny Penny parts in your unit. Using a part of lesser quality or substitute design may result in unit damage or personal injury.
4-3. HOW TO FIND PARTS	<p>To find items you want to order from the Parts List, proceed as follows:</p> <ol style="list-style-type: none"> 1. Refer to the exploded drawing in this section to identify the part needed. 2. Use the item number from the exploded drawing to locate the corresponding part in the parts list in this section. In this list will be the Henny Penny part number and a description of the part.
4-4. HOW TO ORDER	<p>Once the part you want to order has been found in the Parts List, write down the following information:</p> <ol style="list-style-type: none"> 1. From the exploded drawing and Parts List (Sample) <div style="margin-left: 20px;"> Item Number <u> 37 </u> Part Number <u> 15232 </u> Description <u> Sifter Bearing </u> </div> 2. From the data plate (Sample) <div style="margin-left: 20px;"> Product Number <u> 03196 </u> Serial Number <u> 00100 </u> Voltage <u> 120 V </u> </div>
4-5. PRICES	Your distributor has a price parts list and will be glad to inform you of the cost of yours parts order.
4-6. DELIVERY	Commonly replaced items are stocked by your distributor and will be sent out when your order is received. Other parts will be ordered by your distributor from Henny Penny Corporation. Normally, these will be sent to your distributor within three working days.
4-7. WARRANTY	All replacement parts (except lamps and fuses) are covered under warranty for 90 days against manufacturing defects and workmanship. If damage occurs during shipping, notify the carrier at once so that a claim may be properly filed. Refer to the warranty in this manual for other rights and limitations.

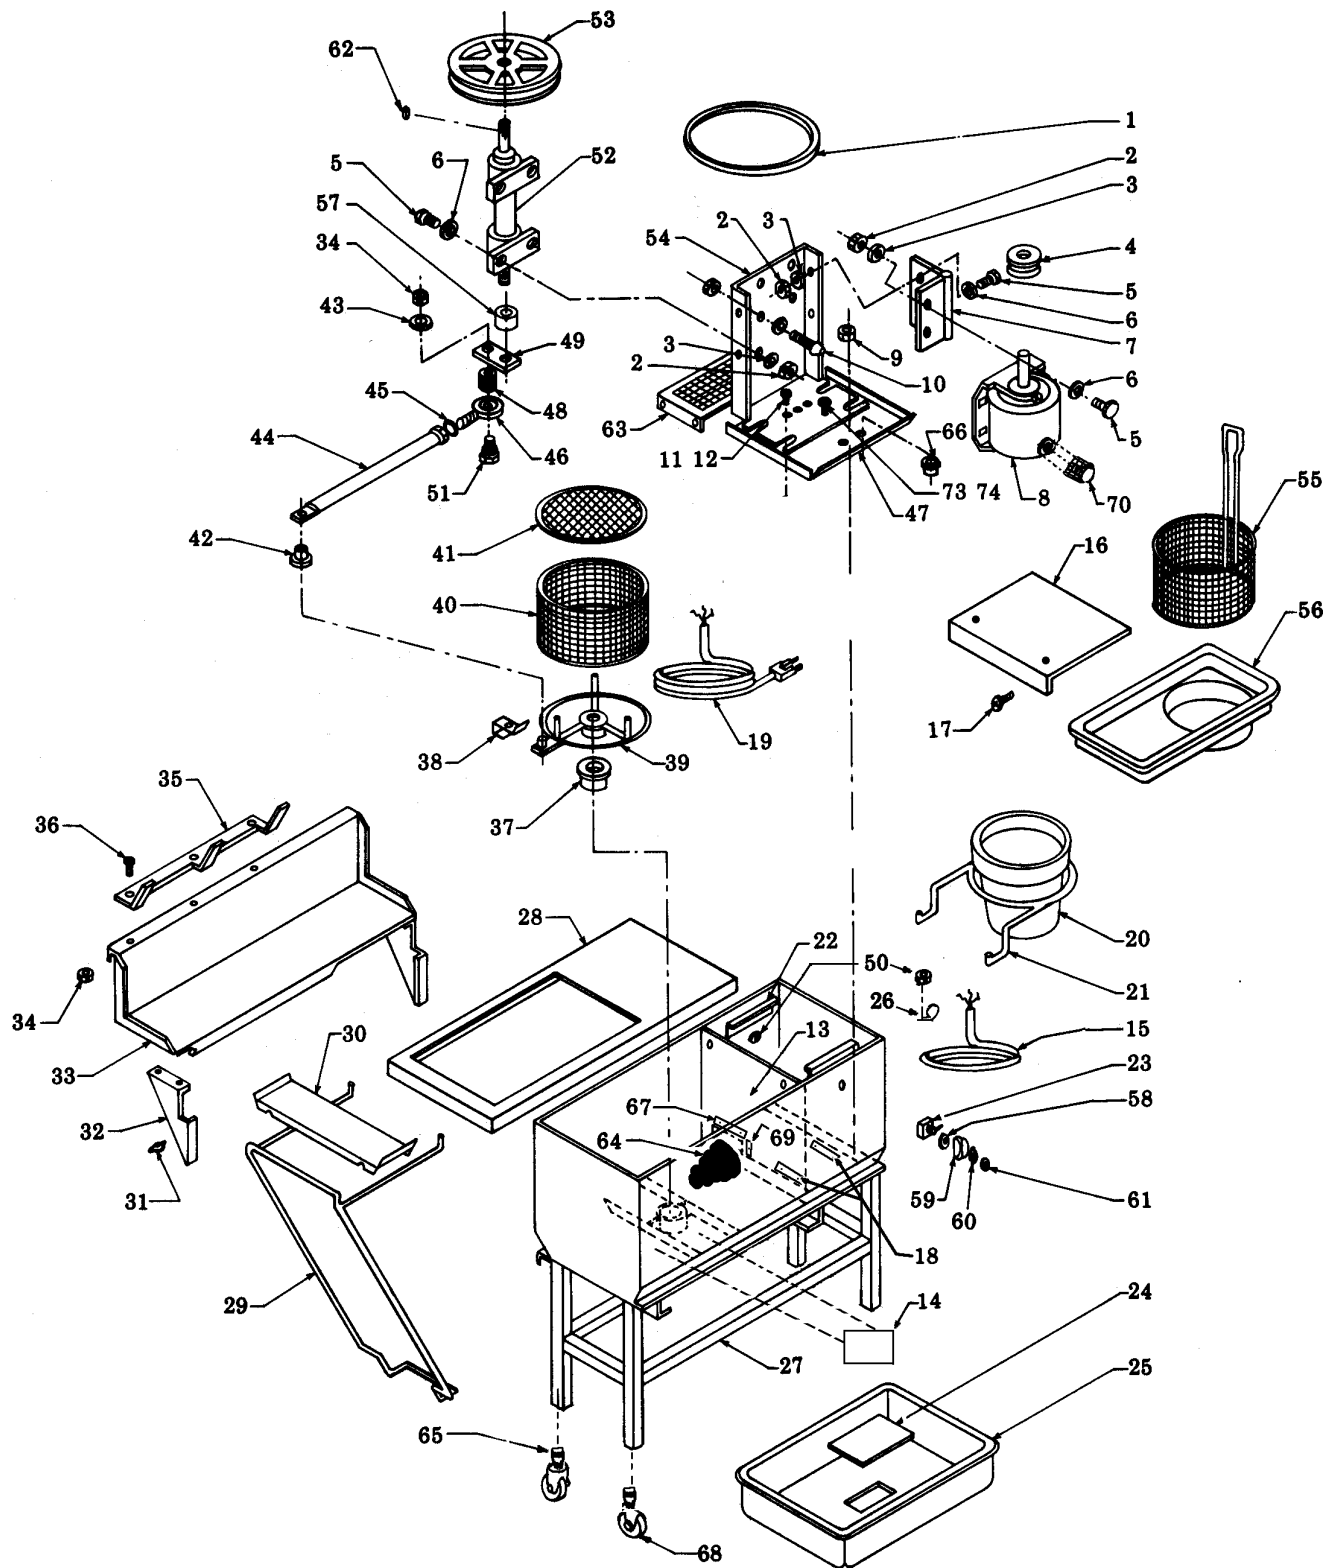


**EXPLODED VIEW OF
HB-121 HAND BREADER/SIFTER**

HAND BREADER/SIFTER HB-121

No.	Part No.	Description	Qty.
1	15254	Belt	1
2	NS01-003	Nut (5/16-18)	8
3	LW01-004	Lockwasher (5/16)	8
4	15261	Sheave Driver Pulley (1.75 OD-1/2" Bore) - 120 V units	1
4	63108	Sheave Driver Pulley (2.00 OD-1/2" Bore) - 240 V units	1
5	SC01-026	Screw (5/16-18 x 3/4)	8
6	WA01-001	Washer (5/16 Flat)	8
7	15269	Hinge	1
8	63106	Motor - 120 V-60 Hz (1/4 hp - CW rotation)	1
8	63107	Motor - 240 V-50 Hz (1/4 hp - CW rotation)	1
8	14300	Motor And Hinge Kit (240 volt units built before 10-13-00)	1
	63105	Motor - 120/240 V-50/60 Hz	1
	63108	Sheave, Driver	1
	15269	Hinge	1
9	NS02-002	Nut (1/4-20 Hex Keps)	10
10	15256	Adjustment Foot Assembly	1
11	SC01-002	Screw (#10-32 x 1/2" Truss Head)	2
12	NS02-001	Nut (#10-32 Hex Keps)	2
13	15884	Partition	1
14	15230	Instructions Decal	1
15	15700	Switch Cord Assembly	1
16	15889	Cover Plate Assembly	1
	15597	Wiring Diagram Decal	1
17	SC04-003	Screw (#8-32 x 3/8 PH Pan Head)	2
18	15349	Motor Spacers	2
19	15701	Cord w/Plug (7'long, Type 16/3 SJ)	1
20	15300	Dip Pot	1
21	15252	Dip Pot Holder	1
22	15560	Slide - Cover	2
23	22195	Switch	1
24	15115	Lug Plug	2
25	15716	Breeding Lug	2
26	EF02-032	Clamp - Cord	1
27	15880	Bin and Frame - Right Hand	1
27	15881	Bin and Frame - Left Hand	1
27	15944	Bin and Frame-K-Mart - Left Hand	1
28	15900	Top	1
29	15253	Tray Rack	1
30	15241	Pan Support	1
31	NS03-003	Nut, Wing (#10-24)	4
32	15227	Gusset - Left	1
32	15352	Gusset - Right	1
33	15875	Back Splash - Left	1
33	15876	Back Splash - Right	1
34	NS02-006	Nut (# 10-24 Hex Keps)	3
35	15228	Basket Hanger	1
36	SC01-015	Carriage Bolt (#10-24 x 1/2)	3
37	15232	Sifter Bearing	1
38	15233	Spring - Retainer	1
39	15284	Basket Holder	1

HAND BREADER/SIFTER HB-121


No.	Part No.	Description	Qty.
40	15247	Basket Wall	1
41	15281	Basket Bottom	1
42	15231	Bearing Push Rod	1
43	LW01-001	Lockwasher - 3/8"	1
44	15260	Push Rod	1
45	NS01-020	Nut (3/8-24)	1
46	15346	Rod End - Bearing	1
47	15702	Guard - Drive	1
48	15924	Bearing Spacer	1
49	15172	Eccentric	1
50	NS02-006	Nut - Clamp/Ground	6
51	SC01-069	Bolt - Hex (3/8-16 x 1-1/2")	1
52	15164	Mandrel	1
	21176	Shaft	1
	21180	Pillow Block Assembly	2
53	15170	Sheave - Driven (Pulley, 8.00 O.D. x 1/2' Bore)	1
54	15246	Drive Mounting Bracket	1
55	12140	Dip Basket	1
56	12176	Plastic Drip Tray	1
57	21177	Eccentric - Spacer	1
58	EF02-009	Nut - Hex Switch	1
59	15302	Guard - Switch	1
60	22197	Plate On/Off Switch	1
61	EF02-010	Nut - Switch	1
62	15163	Key - 3/16" x 1"	1
63	15439	Panel - Access - Bottom	1
64	15888	Boot	1
65	26534	Caster Unit (without brake)	2
66	EF02-047	Bushing - Strain Relief	1
67	15891	Boot Clamp - 2 Hole	2
68	26533	Caster Unit (Brake)	2
69	15887	Boot Clamp - 1 Hole	2
70	EF02-016	Strain Relief	1
71	15624	Microswitch (Canada Only) (Not Shown)	2
72	05019	Bun Pan (Not Shown)	1
73	15895	Bin Corners (Not Shown)	4

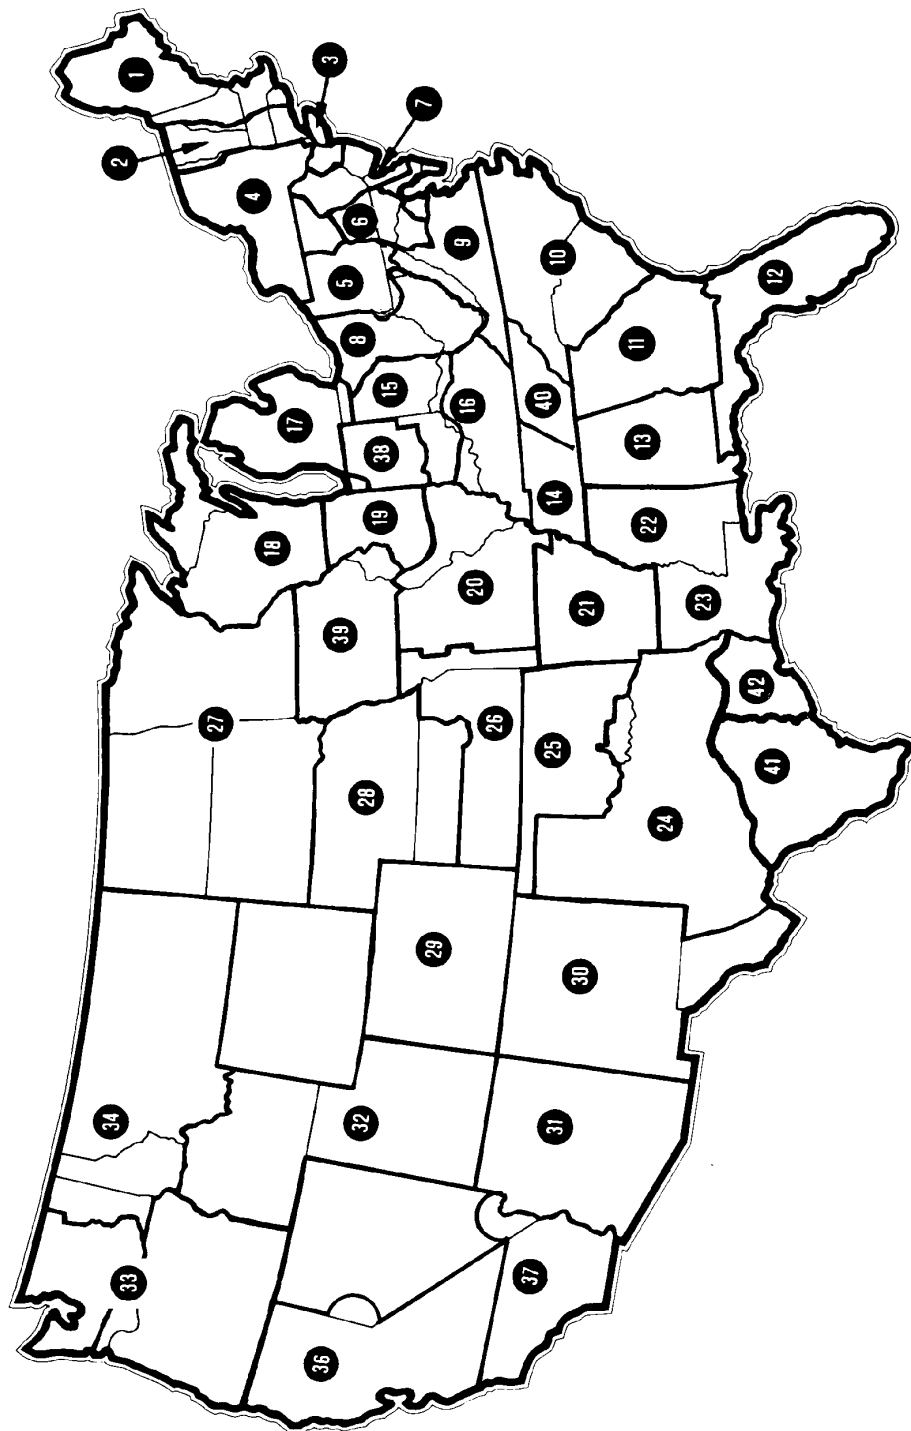

**For Sales or Service Please Contact
The Nearest Henny Penny Distributor**

- | | | | |
|--|--|--|--|
| <p>1. General Services
100 Hicks Ave.
Medford, MA 02155
(800) 233-1033</p> <p>2. Art Cole Associates
Golden Street
Industrial Park
Meriden, CT 06450
(203) 237-7177</p> <p>3. Globe-Monte Metro, Inc.
47-02 Metropolitan Avenue
Ridgewood, NY 11385
(718) 786-5760</p> <p>4. Guertin Dist. Inc.
5 Technology Drive
East Syracuse, NY 13057-9713
(315) 437-4928
(800) 468-6336</p> <p>5. Kreiser Distributing Co.
13800 Lincoln Highway
N. Huntingdon, PA 16652
(724) 863-3360</p> <p>6. AFS Equipment Company
9130-X Red Branch Road
Columbia, MD 21045
(410) 964-3770
(800) 969-3770</p> <p>7. HP Sales & Service Co.
200 Rittenhouse Circle, 4-East
Bristol, PA 19007
(215) 785-3250
NJ Watts (800) 477-4379</p> <p>8. Astro Food Equipment
7901 Old Rockside Rd.)
Independence, OH 44131
(216) 619-8821
(800) 367-4237</p> <p>9. Carlisle Food Systems, Inc.
11020 Lakeridge Pkwy.
Ashland, VA 23005
(804) 550-2169</p> <p>10. Price-Davis, Inc.
Route 1, Highway 27
Iron Station, NC 28080
(509) 928-8815
(704) 732-2236
(800) 456-1014</p> <p>11. Big A Distributors, Inc.
P.O. Box 1283
Forest Park, GA 30051
(404) 366-6510
(800) 222-0298</p> <p>12. W.H. Reynolds Distributors, Inc.
4817 Westshore Blvd.
Tampa, FL 33609
(813) 873-2402
Miami-(954) 845-0841
Jacksonville-(904) 781-9054
FL Watts (800) 282-2733</p> <p>13. Ber-Vel Distributing Co. Inc.
P.O. Box 9943
Birmingham, AL 35220
(205) 681-1855</p> | <p>14. Barnett Supply
2089 York Ave.
Memphis, TN 38104
(901) 278-0440
Nashville, TN
(615) 242-6451</p> <p>Scotsman Supply
516 5th Ave., South
Nashville, TN 37203
(615) 242-6451</p> <p>15. St. Clair Supply Company
231 East Main Street
Eaton, OH 45320
(937) 456-5500
(800) 762-2968</p> <p>16. Dine Equipment Co.
3110 Preston Hwy.
P.O. Box 34038 zip 40232
Louisville, KY 40213
(502) 637-3232
FAX (502) 637-5177</p> <p>17. United Marketing Assoc.
11877 Belden Court
Livonia, MI 48150
(734) 261-5380</p> <p>18. T&H Distributors
1235 Parkview
Green Bay, WI 54304
(920) 339-9838</p> <p>19. Food Service Solutions, Inc.
1682 Barclay Blvd.
Buffalo Grove, IL 60089
(847) 459-8040
(847) 459-7942</p> <p>20. MEC
2511 Cassens Dr.
Fenton, MO 63026-2547
(636) 343-0664
(800) 397-1515</p> <p>21. Delta Supply Co., Inc.
3315 W. Roosevelt Rd.
Little Rock, AR 72204
(501) 664-4326</p> <p>22. Dixie Supply
490 Julianne St.
Bldg. A-2
Jackson, MS 39201
(601) 354-3025</p> <p>23. Beaulieu Refrigeration Inc.
200 North Luke St.
Lafayette, LA 70506
(337) 235-9755</p> <p>24. S.L.E. Corporation
1110 Avenue "H" East
Arlington, TX 76011
(817) 640-7999</p> <p>25. Brooks Industries
4420 S.W. 29th St.
Oklahoma City, OK 73119
(405) 685-7200</p> <p>26. B & D Dist.
19915 W. 161st St.
Suite D
Olathe, KS 66062
(913) 768-8588
FAX 913-768-8855</p> | <p>27. PHT Systems
1801 Highway 8
Suite 120
New Brighton, MN 55112
(651) 639-0368</p> <p>28. Mid-Nebraska Restaurant Supply Co.
1415 S. Webb Road
Grand Island, NE 68802
(308) 384-5780</p> <p>29. Robert G. Wood & Co.
2080 W. Cornell Ave.
Englewood, CO 80110
(303) 761-0500
(800) 358-3061</p> <p>30. Open Territory</p> <p>31. CPE-USALCO
1310 West Drivers Way
Tempe, AZ 85284
(480) 496-6995</p> <p>32. National Equipment Corp.
242 West-3680 South
Salt Lake City, UT 84115
(800) 266-5824
(800) 955-9202</p> <p>33. The Nicewonger Co.
19219 West Valley Hwy
Suite M103
Kent, WA 98032
(800) 426-5972
(425) 656-0907 FAX</p> <p>34. Tri-State Market Supply
11115 E. Montgomery, Suite A
Spokane, WA 99206
(509) 928-8815
(877) 828-4268</p> <p>36. Western Pacific Distributors, Inc.
19422 Cabot Boulevard
Haywood, CA 94545
(510) 732-0100</p> <p>37. Don Walters Company
2121 S. Susan Street
Suite A
Santa Ana, CA 92704
(714) 979-5863</p> <p>38. Troyer Foods, Inc.
17141 State Route 4
Goshen, IN 46526
(219) 533-0302</p> <p>39. Tri-City HP, Inc.
527 West Fourth St.
Davenport, IA 52801
(319) 322-5382</p> <p>40. Certified Commercial Service & Equipment (CCSE)
6031-A Industrial Heights Drive
Knoxville, TN 37909
(865)-546-8778</p> <p>41. Gower Distributors, Inc.
P.O. Box 4804
Box 216K Rt. -4
Victoria, TX 77903
(361) 573-9777</p> | <p>42. Top-Line Distributors
1501 College Ave.
Houston, TX 77585
(713) 946-6008</p> <p>43. DSL Inc., Canada
14520 128th Ave.
Edmonton, Alberta
Canada T5L3H6
(403) 452-7580
(Alberta, British Columbia, Manitoba, Saskatchewan, Yukon, & N.W. Territories)</p> <p>44. Taylor Freezers, Inc.
52 Armthorpe Rd.
Brampton, Ontario
Canada L6T5M4
(905) 790-2211
(Ontario, Montreal, and Maritime Provinces)</p> <p>45. Bazinet Taylor Ltee.
4750 Rue Bourg
Ville St. Laurent
Quebec, Canada H5T 1J2
(514) 735-3627
(Quebec only)</p> |
|--|--|--|--|

If Further Assistance Is Needed Please Contact: **Henny Penny Corporation**
1219 U. S. Route 35 West
Eaton, Ohio 45320
1-800-417-8417
Fax 1-800-417-8402

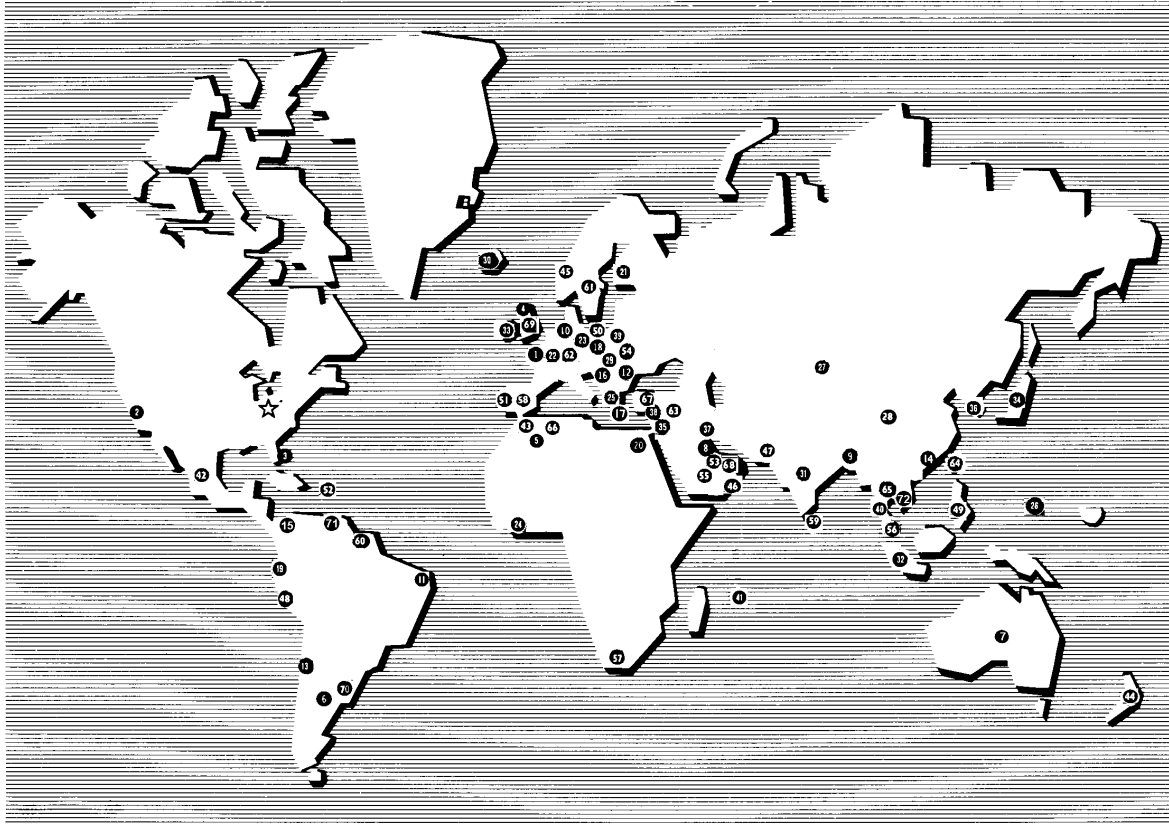

Henny Penny International Distributor Network

Revised 3/00

Henny Penny International Distributor Network

- | | | | |
|--|--|--|--|
| <p>U.S. Headquarters
Henny Penny Corporation
1219 U.S. Route 35 West
Eaton, OH 45320 USA
Telephone: 937-456-8417
Fax: 937-456-1860</p> <p>Representative Office
1. Henny Penny Corporation
Representative Office
Parc d'Entreprises de
l'Esplanade
2bis Rue Paul Henri Speak
Saint Thibault des Vignes
77462 Lagny sur Mame Cedex,
France
Telephone: 33 (1) 60075600
Fax: 33 (1) 60071489</p> <p>U.S. Export Centers
2. Feco International Company
20 North San Mateo Drive,
Suite 9
San Mateo, CA 94401 USA
Telephone: 415-348-3499
Fax: 415-348-3575</p> <p>Caribbean Islands & Central America (excluding Puerto Rico)
Total Equipment Suppliers
9550 NW 41st St.
Miami, FL 33178
Telephone: 305-718-9550
Fax: 305-718-9505</p> <p>Algeria
4. SOMAB
Y1 Rue Mahmoud Boudjatit
(Oasis) Ager, Algeria
Tel: 213-21-23-3051/3052
Fax: 213-21-23-3161</p> <p>Argentina
5. Oditec S.A.
Augustin Alvarez 2128
1602 Florida
Buenos Aires, Argentina
Telephone: (541) 796-0820
Fax: (541) 796-2009</p> <p>Australia
6. J.L. Lennard Pty. Ltd.
937-941 Victoria Rd.
West Ryde NSW 2114
Sydney, Australia
Telephone: 617-3272-4744
Fax: 617-3272-4799</p> <p>Bahrain
7. Mohammed Jalal Catering
Old Palace Road
P.O. Box 1335
Manama, State of Bahrain
Telephone: 973-53-45-39
Fax: 973 53-14-78</p> <p>Bangladesh
8. Puffin International Ltd.
3691B Elephant Rd.
Swarankika Plaza
4th Floor-Dhaka 1205
Dhaka, Bangladesh
Telephone: 8802-863117
Fax: 880-2-867563</p> <p>Belgium
9. Engelen-Heere N.V.
Industriepark Terbekehof
Fotografielaan 14
B-2610 Antwerpen (Wilrijk)
Telephone: 323-825-5577
Fax: 323-825-3702</p> | <p>Brazil
10. Pesin Equipment Food Service
R. Olavo Bilac 188/198
Sao Caetano Do Sul - SP
Brazil
Telephone: 55-11-7690-1470
Fax: 55-11-7690-1466</p> <p>Bulgaria
11. E.C.E. - CAIX
23A Rue Oborichte
Sofia 1604, Bulgaria
Telephone: 19-359-2-946-1479
Fax: 19-359-2-946-1669</p> <p>Chile
12. IMAHE
Manuel Montt 1154 Providencia
Santiago, Chile
Tel: 562-341-4953/5707
Fax: 562-274-8567</p> <p>China
13. Bonny Foodservice Products
Flat C, 8/F, Yeung Yiu Chung
Industrial Bldg., No. 20
Wang Hoi Rd.
Kowloon Bay, Kowloon Hong Kong
Telephone: 852-796-5616
Fax: 852-799-8490</p> <p>Colombia
14. Industrial Taylor Ltda.
Transversal 93, Numero 64-24
Apartado Aereo 95075
Bogota D.E., Colombia
Telephone: 57 (1) 4340016
Fax: 571-223-2642</p> <p>Croatia
15. New Rok
Opatija M. Tita 15
51410 Opatija, Croatia
Telephone: 385-51-701-251
Fax: 385-51-701-251</p> <p>Cyprus
16. AMF Chistofides Ltd.
104A Prodomos Str.
P.O. Box 25100
Nicosia, Cyprus
Telephone: 357-2-454-380
Fax: 357-2-454-088</p> <p>Czech Republic
17. Citus
Argentinska 20
CZ 4170 00 Pragues 7
CZECH REPUBLIC
Telephone: 420-2-667-10-561
Fax: 420-2-667-10-557</p> <p>Denmark
18. Inter-Gastro A.S.
Midtager 18
2605 Brondby
Denmark DK2605
Telephone: 45-43292000
Fax: 45-43292001</p> <p>Ecuador
19. Equindeca Cia. Ltda.
Hotel El Conquistador
Gran Colombia 6-65
Cuenca, Ecuador
Telephone: 593-7-831788
Fax: 593-7-843221</p> <p>Egypt
20. Con Trade Centre
3A Ramsis Street
Maarof Building #83 & #62
Cairo, Egypt
Telephone: 20 (2) 770642/762551
Fax: 20 (2) 756258</p> | <p>Estonia
21. Sisustaja As
Tihniku 5
11625 Tallinn, Estonia
Telephone: 372-6502300
Fax: 372-6502301</p> <p>Finland
22. Monilaite Oy
P.O. Box 27
Salpakuja 6
SF-01200 Vantaa, Finland
Telephone: 358-9-877-0100
Fax: 358-9-877-01099</p> <p>France
23. Diffusion International de
Materiel (DIM)
Parc d'activite Clemenceau
Chemin du Chateau d'Eau
B.P. 4009
59704 Marcq-En-Baroeuil
Cedex, France
Telephone: (33) 20890000
Fax: (33) 20727355</p> <p>Germany
24. Sesjak KG
Wullener Feld 9a
D-58454 Witten
Germany
Telephone: 49-2302-697077
Fax: 49-2302-698451</p> <p>Ghana
25. DRT Ghana
E6619 Ablade Road
Kanda Estate
P.O. Box C2074
Accra-Cantonments, Ghana
Telephone: 233-2123-3949
Fax: 233-2123-1380</p> <p>Greece
26. Domestica S.A.
65 Stournara Str.
Athens 10432, Greece
Telephone: 30-15-24-30-14/15
Fax: 30-15-22-91-58</p> <p>Guam
27. Pacific Technical Service, Inc.
New Commercial Building
#979 Rt. 16, Suite B-3
Barrigada, Guam 96913
Telephone: 6710632-5000
Fax: 671-632-3333</p> <p>Holland
28. Englelen-Heere B.V.
Straatveg 85, Postbus 35020
3005 DA Rotterdam, Holland
Telephone: 311-042-23077
Fax: 311-042-23435</p> <p>Hong Kong
29. Bonny Foodservice Products
Flat C, 8/F, Yeung Yiu Chung
Industrial Building #20
Wang Hoi Road
Kowloon Bay, Kowloon,
Hong Kong
Telephone: 852-796-5616
Fax: 852-799-8490</p> <p>Hungary
30. Hotex Service
H-2094 Nagykovacsi
Kossith Lajos u. 1.
Hungary
Telephone: 36-263-56653/89463
Fax: 36-26389463</p> | <p>Iceland
31. A. Karlsson H. F.
Brautarholt 28
105 Reykjavik, PO Box 167
Iceland
Telephone: 354-560-0900
Fax: 354-560-0901</p> <p>India
32. AISHWARYA
Trust Complex, 10 OVG Rd
Basavanagudi
Bangalore 560004, India
Telephone: 91-80-667-7576
Fax: 91-80-667-7576</p> <p><u>Int'l. Refrigeration Corp</u>
7 Netaji Subhash Marg
Darya Ganj
New Delhi 110002, India
Telephone: 91-11-3275651
Fax: 91-11-6221827</p> <p>Indonesia
33. P.T. Gema
JL. Raya Boulevard Raya
Block IOA 2 No. 27
Kelapa Gading Permai
Jakarta 14240, Indonesia
Telephone: 62-21-4532077
62-21-4508910
Fax: 62-21-4532586/4530777</p> <p>Ireland
34. Martin Food Equipment Ltd.
Gaskin Business Park
Coes Road
Dundalk, Louth County
Ireland
Telephone: 353-42-30366
Fax: 353-42-30370</p> <p>Italy
35. Allegra SRL
Corso Matteotti, 5 - 10121
Torino, Italy
Telephone: 39-011-540264
Fax: 39-011-533779</p> <p>Japan
36. Toei Kogyo Co. Ltd.
4F, Nissay Nishi-Gotanda
Building 24-5
Nishi-Gatanda 7-Chome
Shinagawa-ku, Tokyo 141-0031
Japan
Telephone: 813-3779-1081
Fax: 813-3779-1638</p> <p>Jordan
37. Awar Trading Est
PO Box 962227
Amman 11196, Jordan
Telephone: 962-6-55-19-610
Fax: 962-6-55-19-605</p> <p>Korea
38. Ohjin Corporation
3rd Floor, Hee Jung Building
1635-0 Seocho-dong
Seocho-ku
C.P.O. Box 3252
Seoul 137-070, Korea
Telephone: 82-2-5850441
Fax: 82-2-5874197</p> <p>Kuwait
39. Mabrook Hotel Supplies Co.
PO Box 43832 Hawalli
32053 Kuwait
Telephone: 965-481-8242
965-483-01648
Fax: 965-483-4314</p> |
|--|--|--|--|

40. **Lebanon**
Pro Kitchen
Cahlfoun Building
Kaslik - Main Road
PO Box 1066 Jounieh
Lebanon
Telephone: 961-9-635-077
Fax: 961-9-635-059
41. **Lithuania**
Master Group Baltic Master
Dariaus Ir Girena 175
2038 Vilnius, Lithuania
Telephone: 3702-306-528/529
Fax: 3702-306-533
42. **Malaysia**
SCC Corp. Sdn. Bhd.
19-21 Jalan Hujan
Taman Overseas Union
58200 Kuala Lumpur,
Malaysia
Telephone: 60-3-77828384
Fax: 60-3-77818561
43. **Malta**
C & H Bartoli Ltd.
232 The Strand
Gzira Gzros, Malta
Telephone: 356-342-584
Fax: 356-342-569
44. **Mauritius Island**
(Mauritius, Reunion Island,
Seychelles)
Hassam Moussa Rawat
10 Bourbon Street
P.O. Box 492
Port Louis, Mauritius Island
Telephone: 160 (230) 2080024
Fax: 160-230-2080147
45. **Mexico**
Central Mexico Metro Mexico City
Cavimex S.A. de C.V.
Revillagigedo No. 61 Col Centro
Mexico, D.F. 06070
Mexico
Telephone: 525-521-4200
Fax: 525-510-2791
- Pacific
Micro Herros De Occidente,
S.A. de C.V.
Av. Juan Palamar y Arias
#83 Col. Jardines Vallarta
Zapopan, Jalisco, Mexico
C.P.45020
Mexico: 52-3-629-54-05
Fax: 52-3-673-29-43
- Southeast
Equipo Para El Mercado
S.A. de C.V.
Calle 55 No. 501-B por 60 y 62
Merida, Yucatan,
Mexico C.P. 97000
Telephone: 52-99-236500
Fax: 52-99-286649
46. **Morocco**
Electra
Boulevard AHL Lghlam
BP 25698
Sidi Bernoussi - Ain-Sebaa
Casablanca Morocco
Telephone: 212-22-753-531
Fax: 212-22-753-554
47. **New Zealand**
Taylor Equipment Limited
4 Ponuz Place
Mt. Wellington
Auckland, New Zealand
Telephone: 64 (9) 5733377
Fax: 64 (9) 5730841
48. **Norway**
Grillfagmannen A.S.
Ostensjoveien 44
N-0667 Oslo 6, Norway
Telephone: 47 (2) 651410
Fax: 47 (2) 720017
49. **Oman**
Mohsin Haider Darwish LLC
P.O. Box 880
Ruwi, Code 112
SULTANATE OF OMAN
Telephone: 968-703411
Fax: (968) 789927
50. **Pakistan**
The Equipment Company
Ground Floor, Dadabhoy Centre
Sharea Faisai, Karachi 75530
Pakistan
Telephone: 922-1-778-1778/2778
Fax: 922-1-587-0456/778-2777
51. **Peru**
Importadora Tecnica
Comercial C.R. Ltda.
Jr. Marcos de Aramburu #595
Lima 17, Peru
Telephone: 51-1-226-2124
Fax: 51-1-275-2689
52. **Philippines**
HKR Equipment Corp.
2nd Floor, THC Bldg.
2176 Primo Rivera St.
La Paz, Makati City, Philippines
Telephone: 632-899-4511
Fax: 632-899-4541
53. **Poland**
I. F. E.
Rydygiera 12
01 793 Warsaw, Poland
Telephone: 48-3912-3373
42-22-663-4820/4069
Fax: 48-3912-3373
54. **Portugal**
Restauratel
AV Da Republica
83 C 1050
243 Lisboa
Portugal
Telephone: 351 7967116/7/8/9
FAX: 351 7933982
55. **Puerto Rico**
Progressive Sales and Service
PO Box 10876
Caparra Heights Station
San Juan, Puerto Rico 00922-0876
Telephone: 787-782-7474
Fax: 787-793-6479
56. **Qatar**
Tristar Group
C.R. No. 6778
P.O. Box 4746
Doha, Qatar
Telephone: 974-4664433
Fax: 974-4365365
57. **Romania**
Delta Technologies Romani S.A.
Sector 6, 20 Constructorilor Blvd.
Bloc 20 A, sc. B 7th Floor
Apt. 64
Bucharest, D599 Romania
Telephone: 401-220-4261
Fax: 401-220-3990
US Address:
115 Main St.
Mishawaka, In. 46544
Telephone: 219-256-3783
Fax: 219-256-7130
58. **Saudi Arabia**
Commercial Center
Development & Economy
P.O. Box 1210
Jeddah 21431, Saudi Arabia
Telephone: 966 (2) 629-1857
Fax: 966 (2) 629-1860
59. **Senegal**
Breeding Systems Co.
C/ Ripoche, 14
35007 Las Palmas
Spain
Telephone: 34-9-28-22-43-86
Fax: 34-9-28-27-56-90
60. **Singapore**
Simplex Pte. Ltd.
Block 1, Lorong 8
Toa Payoh Industrial Park 01-1383
Singapore 319053
Telephone: 65-251-6241
Fax: 65-253-8814
- Shopfit (S) Pte. Ltd.
Blk 623 Aljunied Industrial Complex
Unit 02-09
Singapore 389835
Telephone: 65-7410911
Fax: 65-7438911
61. **South Africa**
Foodserv "CC"
PO Box 55269
Northlands 2116,
Republic of South Africa
Telephone: 27 (11) 616-5183,
Fax: 27 (11) 616-8287
62. **Spain**
Adisa
Tuset, 8-10
08006 Barcelona, Spain
Telephone: 34-93-415-0018
Fax: 34-93-218-1782
63. **Sri Lanka**
Sperrys Commercial Equipment
1014 Parliament Road
Etul Kotte
Kotte/Colombo, Sri Lanka
Telephone: 941-873-0561
Fax: 941-863-8361
64. **Suriname**
Tessco N.V.
Oude Charlesburgweg #47
Paramaribo Suriname
Telephone: 597-473366/477388
Fax: 597-473366
65. **Sweden**
Eurospice AB
Box 5050
Hejargatan 6
632 29 Eskilstuna, Sweden
Telephone: 46 (16) 125600
Fax: 46 (16) 131390
66. **Switzerland**
Stuppen Fast Food GmbH
Oberneuhofstrasse 8
CH-6340 Baar, Switzerland
Telephone: 41-41-761-5052
Fax: 41-41 761-7210
67. **Syria**
Lahham Trading & Contracting
Hamra Str. Omyad Building
P.O. Box 2960
Damascus Syria
Telephone: 963-11-331-2251
Fax: 963-11-331-2252
68. **Taiwan**
Feco Corporation
420, 11 F Keelung Rd.
Sec. 1 Postal Code 110
Taipei, Taiwan
Republic of China
Telephone: 886-2-2758-2288
Fax: 886 (2) 2758-2297
69. **Thailand**
Fieco Company Ltd.
43/524-526 Amarinnivej 1
Anusaovari Laksi
Phaholoyothin Road
Bangkok 10220
Thailand
Telephone: 66-2-521-3824/3878
Fax: 66-2-552-0833
70. **Tunisia**
Semi
16, Rue Aziz Taj
1101 Tunis RP, Tunisia
Telephone: 216 -133-1501
Fax: 216-133-0698
71. **Turkey**
Klimatek
Inonu Caddesi, Opera Palas 73/5
80090 Gumussuyu
Istanbul, Turkey
Telephone: 90-212-245-1812
90-212-293-7892
Fax: 90-212-293-3903
72. **United Arab Emirates**
Habtoor International
P.O. Box 55332
Dubai, United Arab Emirates
Telephone: 971-4-272-1212
Fax: 971-4-272-2255
73. **United Kingdom**
Servequip Products Ltd.
214 Purley Way
GB-Croyden CRO 4XG, England
Telephone: 44-208-6868855
Fax: 44-208-6817509
74. **Uruguay**
Tecnoland S.A.
Dr. José Scorseria 2740
CP 11300 Montevideo, Uruguay
Telephone: 598-2-7105900
Fax: 598-2-7105900
75. **Venezuela**
Prefer, C.A.
Avenida Presidente Medina
Edificio Prefer, Local No. 44
Entre Calles Chile y Progreso
urb. Los Acacias
Caracas 1040, Venezuela
Telephone: 58-212-633-6933/2801
Fax: 58-212-632-6711
76. **Vietnam**
Cao Sinh Pte
Block 1, Lorong 8
Toa Payoh Industrial
Estate #01-1383
Singapore 319053
Telephone: 65-2516241
Fax: 84-2538814
77. **Yemen**
Mukiriani Sana'a
PO Box 8150 Sana'a
Yemen
Telephone: 967-1-230-675
Fax: 967-1-230-929