

## SECTION 2. INSTALLATION

### 2-1. INTRODUCTION

This section provides the installation instructions for the Henny Penny Heated Holding Cabinet.

#### NOTICE

Installation of this unit should be performed only by a qualified service technician.



**Do not puncture the skin of the unit with drills or screws as component damage or electrical shock could result.**

### 2-2. UNPACKING

The Henny Penny Heated Holding Cabinet has been tested, inspected, and expertly packed to ensure arrival at its destination in the best possible condition. The cabinet rests on cardboard pads that sit on a wooden skid. The racks inside the cabinet are secured with cardboard packing. The unit is then packed inside a heavy cardboard carton with sufficient padding to withstand normal shipping treatment.

#### NOTICE

Any shipping damages should be noted in the presence of the delivery agent and signed prior to his or her departure.

To remove the Henny Penny Heated Holding Cabinet from the carton, you should:

1. Carefully cut banding straps.
2. Lift the carton off the unit.
3. Lift the unit off the cardboard padding and skid.



**Take care when moving the unit to prevent personal injury. The unit can weigh up to 500 lbs. (227 kg).**

4. Open doors and remove packing from behind racks.
5. Peel off any protective covering from exterior of the cabinet.
6. The unit is now ready for location and set up.

### **2-3. LOCATION**

The unit should be placed in an area where the doors can be opened without interruption and loading and unloading of product is easy. For proper operation, the cabinet must be level.

## **CAUTION**

*To avoid damage to the unit, do not set anything on top of the cabinet that might close the vent holes.*

### **2-4. ELECTRICAL CONNECTION**

The heated holding cabinet is available from the factory as a 120 VAC or 240 VAC unit for domestic use and as a 240 VAC unit for foreign use. The data plate, located on the side of the module, will specify the correct electrical supply. The unit requires a grounded receptacle with a separate electrical line protected by a fuse or circuit breaker of the proper rating. For European markets, verify the electrical plug meets the proper electrical rating and country type. See local authorities for proper standards.



**To avoid electrical shock, the cabinet must be adequately and safely grounded (earthed) according to local electrical codes.**

#### **(FOR EQUIPMENT WITH CE MARK ONLY!)**


**To prevent electric shock hazard this appliance must be bonded to other appliances or touchable metal surfaces in close proximity to this appliance with an equipotential bonding conductor. This appliance is equipped with an equipotential lug for this purpose. The equipotential lug is marked with the following symbol**




Refer to the table below for electrical ratings for the HHC-900.

<b>Product Number</b>	<b>Volts</b>	<b>Watts</b>	<b>Amps</b>
HHC-900 120		2086	17.5
HHC-903 120		1586	13.0
HHC-900 240		3086	13.0
HHC-900 240		2086	9.0
HHC-903 240		3086	13.0
HHC-903 240		2086	9.0
HHC-902 stackable	120	1586	13.0
HHC-906 120		2086	17.5
HHC-908 120		2086	17.5
HC-15	240	2086	9.0
HC-5	240	2086	9.0

## **2-4. ELECTRICAL CONNECTION** **(Continued)**

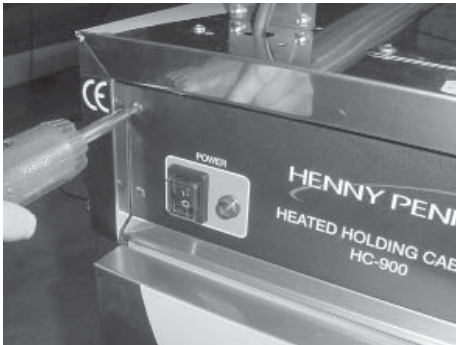

**Figure 1**

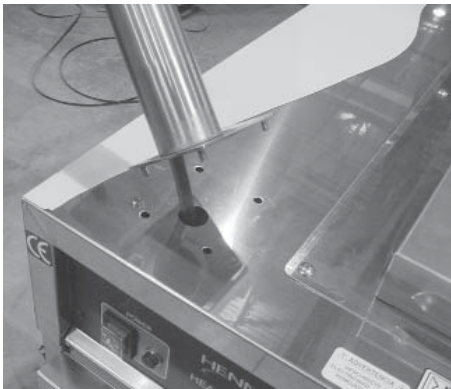

**Figure 2**



**Figure 3**

### **Optional Wireway Channel (“Chimney”) Mounting Instructions**

For units with the electrical supply exiting the top of the module and running to the ceiling of the store, round, stainless steel channels are available to cover and protect the cord.

1. Using a Phillip’s-head screwdriver, remove the screws securing the front panel and pull panel down to access the holes in the top of the module. Figure 1.
2. Pull the cord through the channel to take the slack out of the cord and then match-up the studs on the channel to the holes in the top of the module and set the channel on the module.
3. Using the 4 nuts, shipped inside the unit, secure the channel to the module top.
4. Reattach the front panel. Figure 3.

## 2-5. CABINET DIMENSIONS



**Model HHC-900 &  
Model HC-15**




**Model HHC-902**




**Model HHC-903 &  
Model HC-5**

**2.5 CABINET DIMENSIONS**  
**(Continued)**

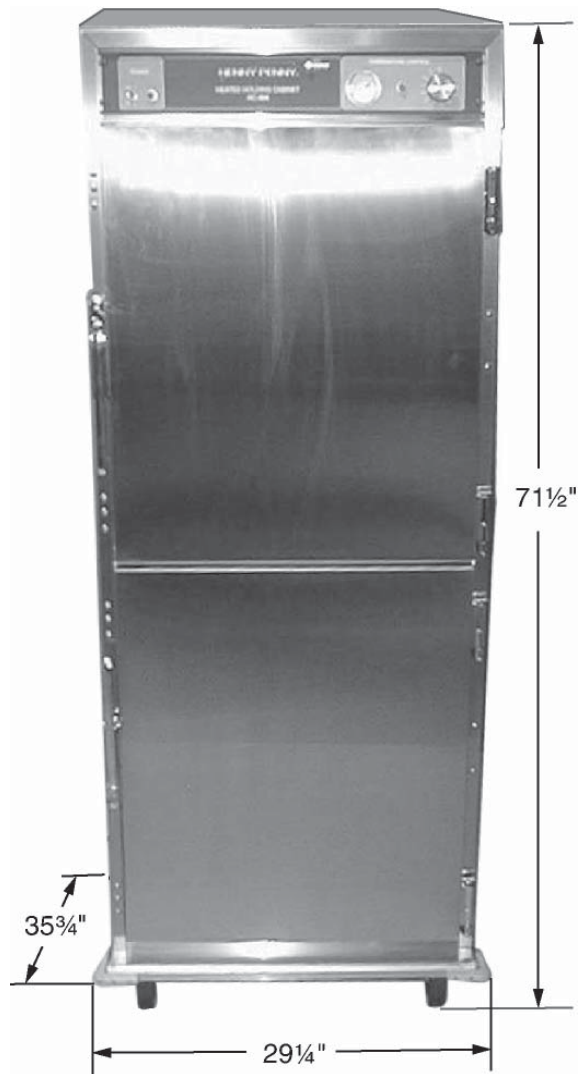

**Model HHC-906**

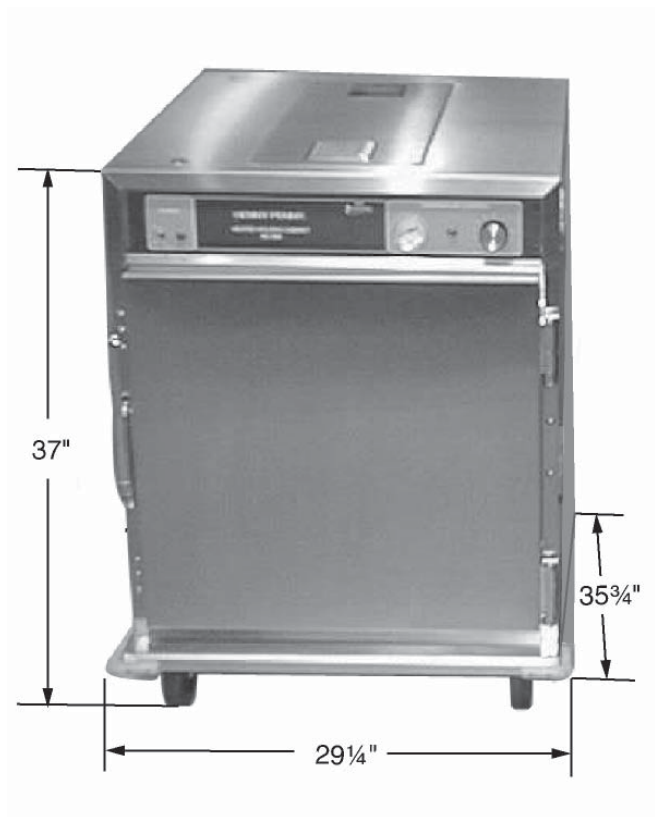

**Model HHC-908**