

### **SECTION 2. INSTALLATION**

### 2-1. INTRODUCTION

This section provides the installation instructions for the Henny Penny Display Counter Warmer.



Installation of this unit should be performed only by a qualified service technician.



Do not puncture the skin of the unit with drills or screws as component damage or electrical shock could result.

#### 2-2. UNPACKING

The Henny Penny Display Counter Warmer is tested, inspected, and expertly packed to insure arrival at its destination in the best possible condition. The cabinet has been bolted to a wooden skid. All glass items have been packed in cartons and taped inside the unit. The unit is then packed inside a triple wall corrugated carton with sufficient padding to withstand normal shipping treatment.





Any shipping damages should be noted in presence of delivery agent and signed prior to his or her departure.


To remove the Henny Penny Display Counter Warmer from the carton, you should:

1. Carefully cut banding straps.


1105 2-1



### 2-2. UNPACKING (Continued)

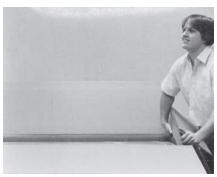


 Step 2





Step 3

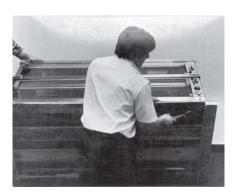

Step 4

3. Lift carton off skid.

4. Remove four bolts from under skid.

2-2 203



#### 2-3. LOCATION

Place the unit on a table, preferably with a cut-out opening below the cabinet to allow easy service connections and serviceability. When setting up the Henny Penny Display Counter Warmer, be sure to level the table.



The unit has built-in draining capabilities, but this becomes ineffective when set on an unlevel table.

After the Henny Penny Display Counter Warmer has been leveled on the table, run a bead of silicone rubber (or equivalent sealant) around the perimeter of the unit, sealing it to the table top. You are now ready to make the electrical and drain connections to the unit.

### 2-4. REMOVE CONTROL END PANEL



Step 2

- 1. Remove the seven screws fastening the end panel to the cabinet.
- 2. Slide bottom of end panel out first allowing top to drop below shelf edge.

203 2-3



#### 2-5. DRAIN CONNECTION

The drain can be connected to a 1 inch N.P.T. directly below the water well or to a 3/4 inch N.P.T. from the operator's side. We recommend the 1 inch N.P.T. connection as this allows straight down draining of the water.

#### 2-6. ELECTRIC CONNECTION

The display counter warmer is available from the factory wired for 208 or 230 volts, single phase 3-wire (includes neutral) or three phase 4-wire (includes neutral) 60 Hertz service. The proper power service cable must be provided at installation. Check the data plate on the side panel of the control end to determine the correct power supply.



This unit must be adequately and safely grounded. Refer to local electrical codes for correct grounding procedures. If unit is not adequately grounded, electrical shock could result.

#### (FOR EQUIPMENT WITH CE MARK ONLY!)


To prevent electric shock hazard this appliance must be bonded to other appliances or touchable metal surfaces in close proximity to this appliance with an equipotential bonding conductor. This appliance is equipped with an equipotential lug for this purpose. The equipotential lug is marked with the following symbol

A separate disconnect switch with proper capacity fuses or breakers must be installed at a convenient location between the cabinet and the power source. The field supply wiring to the cabinet should be an insulated copper conductor rated for 600 volts and 90°C.

2-4 1004



### 2-6. ELECTRIC CONNECTION (Continued)

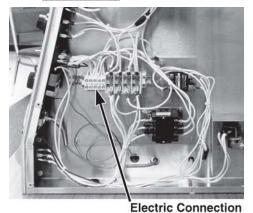

The electrical power can be connected from the bottom or from the operator's side. There is a 1-3/32 inch diameter hole from either connection. Again, we recommend the bottom connection as this will give a cleaner appearance to the unit. Please observe the electrical connection information on the data plate located on the side panel of the control end.


## CAUTION

To avoid damage to unit, voltage potential of  $L_1$  and  $L_2$  to ground cannot exceed 125 volts.

### 2-7. ELECTRIC DATA TABLE

Model Volts		Phase	Watts	Amps	Products No.
CW-114	230	3	3400	13.2	05089
CW-114	230	1	3400	16.3	05089
CW-114	208	3	3400	13.8	05089
CW-114	208	1	3400	17.6	05089
CW-216	230	3	4160	14.4	05070
CW-216	230	1	4160	21.0	05070
CW-216	208	3	4160	15.3	05070
CW-216	208	1	4160	22.5	05070

### 2-8. WATER SUPPLY CONNECTION

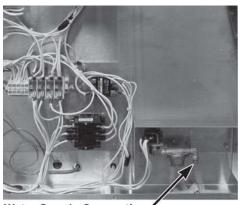

Water Supply Connection

The automatic water system has a 1/4 inch compression fitting for copper tubing. Hot water would be preferred. We recommend using the automatic water system as this will allow the unit to maintain a more even water temperature and help ensure that the unit never runs dry of water.

A straight-through bulkhead fitting is furnished with the unit for 1/4 inch copper tubing to protect the water line where it passes through the sheet metal.

Reinstall the end panel.

203 2-5




# 2-8. WATER SUPPLY CONNECTION (Continued)

# NOTICE

This unit as manufactured requires the installation of an appropriate back-siphoning device (as per National Plumbing Code ASA-A40:8-1955) to be connected to the water inlet line. This device to be connected in accordance with basic plumbing code of the Building Officials and Code Administrators International, Inc. (BOCA), and the Food Service Sanitation Manual of the Food and Drug Administration (FDA).

Install a water shut-off valve in a convenient location.

### 2-9. LIGHT BULBS AND GLASS PANELS

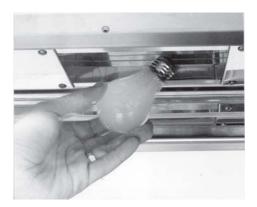

Step 2

- 1. Cut the tape holding the doors shut and remove all boxes and boxes and packing. One carton contains the glass panels and the other contains the light bulbs.
- 2. Install the light bulbs and glass panels.
- 3. The unit is now ready to be cleaned per instructions in the Operations Section of this manual.

### **Replacing Light Bulbs**



Light bulbs and glass may be hot. Severe burns could result.

- 1. Remove the glass panel by carefully pushing up on back of panel and sliding away from you. The panel will fall into your hand. See photo at left.
- 2. Remove the light bulb.
- 3. Replace the light bulb with a Westinghouse #60A19/35, 130 Volt bulb.

If this bulb is not available, a standard 60 watt bulb will work until a long life bulb can be obtained.

4. Replace the glass panel.



Step 1

2-6 203



### 2-10. CABINET DIMENSIONS

