

SECTION 2. INSTALLATION

2-1. INTRODUCTION

This section provides the installation instructions for the Henny Penny Island Warmer.

NOTICE

Installation of this unit should be performed only by a qualified service technician.



Do not puncture the skin of the unit with drills or screws as component damage or electrical shock could result.

2-2. UNPACKING

The Henny Penny Island Warmer is tested, inspected and expertly packed to insure arrival at its destination in the best possible condition. The unit has been bolted to a wooden skid. All items have been packed and taped inside of the unit. The warmer is then packed inside a triple wall corrugated carton with sufficient padding to withstand normal shipping treatment. Any shipping damages should be noted in presence of delivery agent and signed prior to his or her departure.

To remove the unit from the carton, you should:

1. Carefully cut banding straps.
2. Open flaps of carton and remove packing.
3. Lift carton from unit.
4. Remove four bolts mounting the warmer to the skid.
5. If installing the unit to a base, use the bolts provided to mount the unit to the base.
6. Unpack doors and pan supports and install.
7. The unit is now ready for location and set-up.

2-3. ELECTRICAL CONNECTION

The island warmer is available from the factory wired for 120/208-240 volts (domestic), or 230 volt and 400 volt (international), single or three phase, 3 or 4 wire plus ground (includes neutral). The proper power service cable is provided with domestic units, but not on international units.



This unit must be adequately and safely grounded. Refer to local electrical codes for correct grounding procedures. If unit is not adequately grounded, electrical shock could result.

A separate disconnect switch with proper capacity fuses or breakers must be installed at a convenient location between the unit and the power source.

2-4. ELECTRICAL DATA TABLE

<u>Model</u>	<u>Volts</u>	<u>Phase</u>	<u>Watts</u>	<u>Amps</u>	<u>Wires</u>
HMI-103	120/208	1	2400	11.0	3+G
HMI-103	120/208	3	2400	8.0	4+G
HMI-103	120/240	1	2600	11.0	3+G
HMI-103	120/240	3	2600	7.5	4+G
HMI-105	120/208	1	3900	18.0	3+G
HMI-105	120/208	3	3900	13.0	4+G
HMI-105	120/240	1	4200	17.5	3+G
HMI-105	120/240	3	4200	12.0	4+G
HMI-103	230	1	2600	11.3	4+G
HMI-105	400	3	4200	7.8	4+G