


- 14176** AS-101K-1 = 120 Volt / 1/2-2 HP / 1 Phase
- 14176A** AS-101K-2 = 208-230 Volt / 1/2-2 HP / 1 Phase
- 14176B** AS-101K-3 = 208-230 Volt / 1/2-10 HP / 3 Phase
- 14176C** AS-101K-4 = 380-460 Volt / 1/2-10 HP / 3 Phase

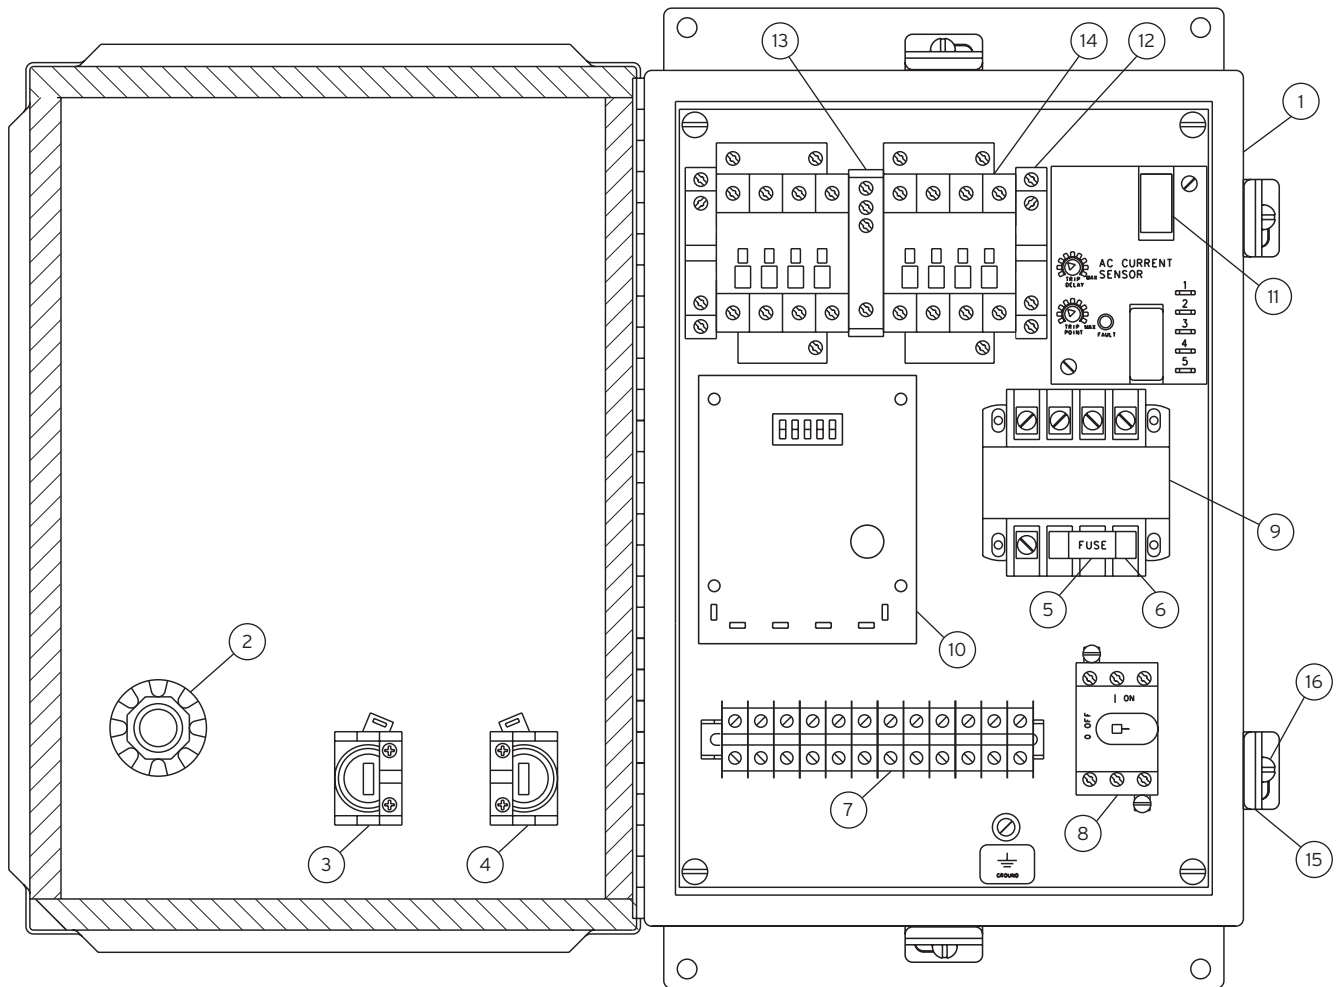

Order By Part Number, Not Code Number

CODE #	PART #	QTY	DESCRIPTION
1	N/A	1	Stainless Steel Enclosure
2	14397	1	Door Disconnect Knob
3	14158	1	Pushbutton Stop (N.C. Red)
4	14159	1	Pushbutton Start (N.O. Black)
5	13466	1	Fuse (2 Amp - 125 Volts) (FNA-2 or FNM-2)
6	14165	2	Fuse Holder
7	14166	4	Terminal Block - 3 Phase
		5	Terminal Block - 1 Phase
8	14167	1	Door Disconnect Switch
9	14185	1	Transformer - 3 Phase
	14161	1	Transformer - 1 Phase
10	14395	1	Circuit Board, Printed

CODE #	PART #	QTY	DESCRIPTION
11	13930	1	Current Sensor - 2-20 Amp (AS-101K-1)
	14413	1	Current Sensor - .5-10 Amp (AS-101K-2, 3 & 4)
12	14163	2	Auxiliary Contact Block (Used On 1 Phase Units Only)
13	14169	1	Mechanical Interlock
14	14160	1	Reversing Contactor - 3 Phase
	14162	1	Reversing Contactor - 1 Phase* *(Includes Code 6)
15	13935	4	Top Cover Retainer
16	13942	4	Screw
	13625	4	Tamperproof Screw (Not Shown)
	14494	2	Solenoid Valve - 24 Volt Coil (Not Shown)