


# **Lang**<sup>TM</sup>

A Division of Star Mfg. Int'l, Inc.

## **ELECTRIC HALF SIZE COMPUTERIZED CONVECTION OVEN**

ECOH-PT, RCOH-PT

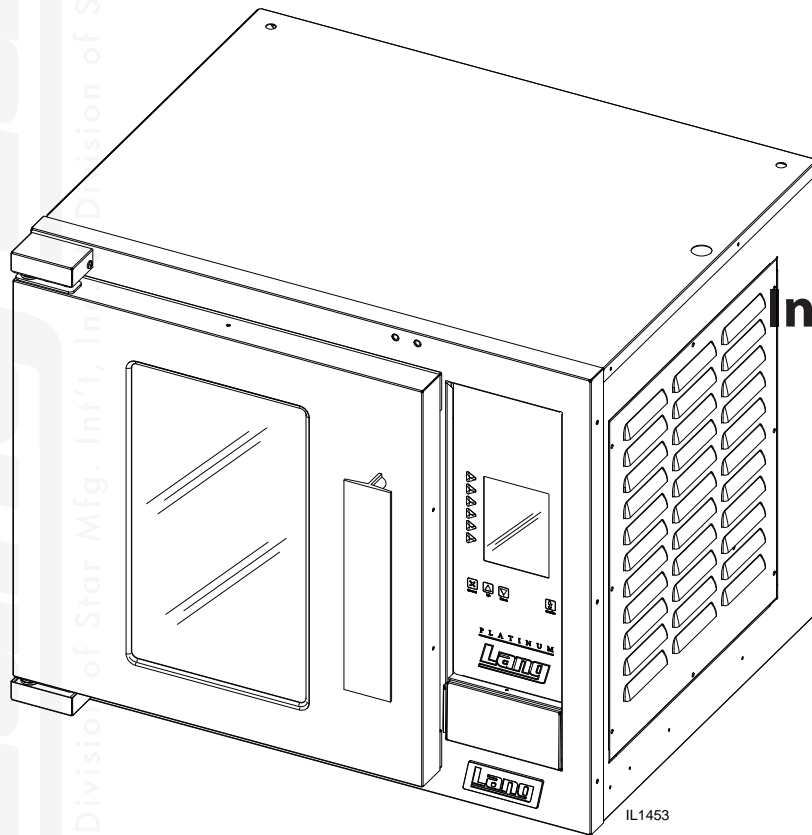

### **Installation and Operation Instructions**

2M-W495 Rev.C 2/26/08

ECOH-PT



## SAFETY SYMBOL



These symbols are intended to alert the user to the presence of important operating and maintenance instructions in the manual accompanying the appliance.

### FOR YOUR SAFETY

**DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINTY OF THIS OR ANY OTHER APPLIANCE.**

### POST IN PROMINENT LOCATION

**INSTRUCTIONS TO BE FOLLOWED IN THE EVENT USER SMELLS GAS. THIS INFORMATION SHALL BE OBTAINED BY CONSULTING YOUR LOCAL GAS SUPPLIER. AS A MINIMUM, TURN OFF THE GAS AND CALL YOUR GAS COMPANY AND YOUR AUTHORIZED SERVICE AGENT. EVACUATE ALL PERSONNEL FROM THE AREA.**

### WARNING

**IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.**



### WARNING

**RISK OF FIRE OR ELECTRIC SHOCK  
DO NOT OPEN**



**WARNING, TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE CONTROL PANEL. NO USER-SERVICABLE PARTS INSIDE. REPAIRS SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.**

### NOTICE

Using any part other than genuine Lang factory supplied parts relieves the manufacturer of all liability.

Star reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.

Due to periodic changes in designs, methods, procedures, policies and regulations, the specifications contained in this sheet are subject to change without notice. While Star Manufacturing exercises good faith efforts to provide information that is accurate, we are not responsible for errors or omissions in information provided or conclusions reached as a result of using the specifications. By using the information provided, the user assumes all risks in connection with such use.

## MAINTENANCE AND REPAIRS

Contact your local dealer for service or required maintenance. Please record the model number, serial number, voltage and purchase & Installation Information in the area below and have it ready when you call to ensure a faster service.

Model No.: \_\_\_\_\_

Purchased From: \_\_\_\_\_

Serial No.: \_\_\_\_\_

Location: \_\_\_\_\_

Voltage: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

1-Phase or 3 Phase: \_\_\_\_\_

Installed Date: \_\_\_\_\_



## PROBLEMS, QUESTIONS or CONCERNS

Before you proceed consult you authorized Lang service agent directory  
or  
Call the Lang Technical Service & Parts Department at 1-800-807-9054.

### TABLE OF CONTENTS


Specifications . . . . .	4
Equipment Description . . . . .	5
Unpacking . . . . .	6
Installation	
Leg Installation . . . . .	7
Stacking the Oven. . . . .	7
Vent Cap Installation . . . . .	8
Ventilation & Clearance . . . . .	9
Electrical Connection . . . . .	9
Oven Voltage . . . . .	9
Reversing the door . . . . .	10
Initial Start-Up	
Pre-Power On . . . . .	11
Power On . . . . .	11
General Operation & Programming	
Control Panel . . . . .	12
Status Display . . . . .	13
Control Panel Buttons . . . . .	13
Loading . . . . .	13
Pace Timers . . . . .	14
Program Enable Buttons . . . . .	14
Shelf Position Buttons. . . . .	14
Cleaning . . . . .	14
Troubleshooting	
Symptoms & Possible Causes . . . . .	15
Wiring Diagram . . . . .	20
Exploded View & Parts List . . . . .	18-25

#### NOTICE

**Service on this or any other Lang appliance must be performed by qualified personnel only. Consult your Lang Authorized Service Agent Directory. You can call our toll free number 1-800-807-9054 or visit our website [WWW.STAR-MFG.COM](http://WWW.STAR-MFG.COM) for the service agent nearest you.**

## SPECIFICATIONS

Model	Height x Width x Depth (without optional stand)	Clearance from combustible surface	Weight Installed	Shipping	Freight Class
ECOH	25.3" x 30.2" x 25.3" 642mm x 766mm x 643mm	Side:6", Back: 6", Floor: 6"	185 lbs. (84 kg)	225lbs (102 kg)	85

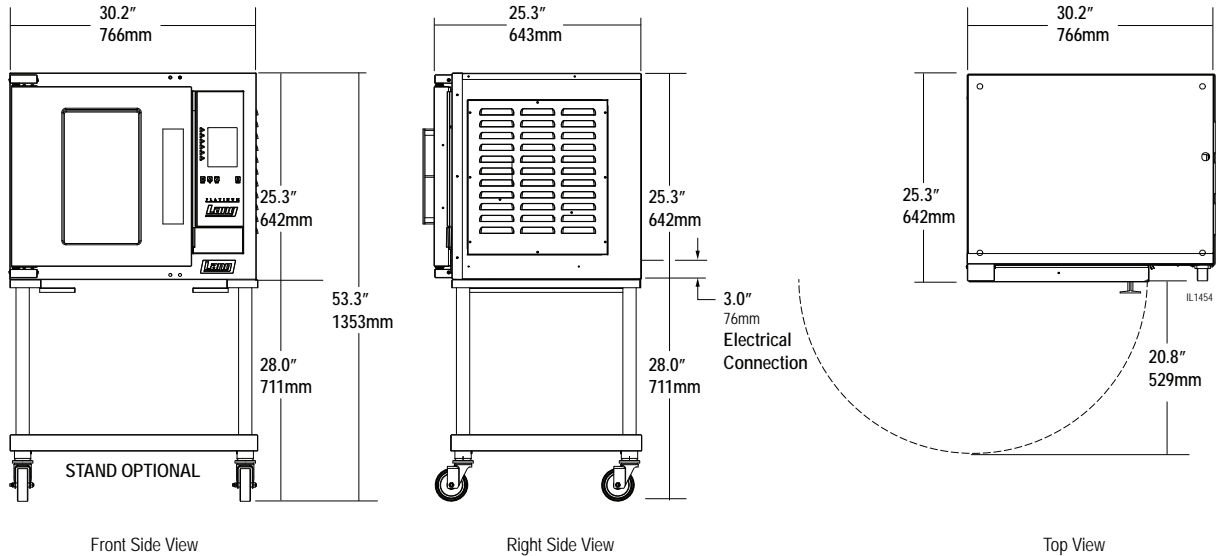

## SPECIFICATIONS

Star Number	Previous Model	VOLTS AC	Hz.	MOTOR AMPS	PHASE	AMPS 3PH/ NTRAL	KW TOT.	AMPS 1 PH	WIRE 1 PH	L1	L2	L3	WIRE 3 PH
ECOHPT208CF	EHS-PT-ACFAO	208	60	3.3	3		5.3	25.5	10	25.5	25.5	-	10
ECOH-PT208CF	EHS-PT-ACFA	208	60	3.3	3		5.3	25.5	10	25.5	25.5	-	10
ECOHPT208CFC	EHS-PT-ACFA	208	60	3.3	3		5.3	25.5	10	25.5	25.5	-	10
ECOHPT208CFR	EHS-PT-ACF	208	60	3.3	3		5.3	25.5	10	25.5	25.5	-	10
ECOH-PT208MF	EHS-PT-AF	208	60	3.3	1/3		7.8	38	8	23	21	23	10
ECOH-PT208NT	EHS-PT-ANE	208	60	3.3	1/3		7.8	38	8	23	21	23	10
ECOH-PT208RF	EHS-PT-ARF	208	60	3.3	1/3		7.8	38	8	23	21	23	10
ECOH-PT208SZ	EHS-PT-ASHTZ	208	60	3.3	1/3		7.8	38	8	23	21	23	10
ECOH-PT-208V	EHS-PT-A	208	60	3.3	1/3		7.8	38	8	23	21	23	10
ECOH-PT208V7	EHS-PT-A	208	60	3.3	1/3		7.8	38	8	23	21	23	10
ECOH-PT208WA	EHS-PT-AWA	208	60	3.3	1/3		7.8	38	8	23	21	23	10
ECOH-PT208WD	EHS-PT-AWD	208	60	3.3	1/3		7.8	38	8	23	21	23	10
ECOH-PT240SZ	EHS-PT-ISHTZ	240	60	2.6	1/3		7.8	33	8	20	18	20	12
ECOH-PT-240V	#N/A!	240	60	2.6	1/3		7.8	33	8	20	18	20	12
ECOH-PT240WA	EHS-PT-IWA	240	60	2.6	1/3		7.8	33	8	20	18	20	12
ECOH-PT480CF	EHS-PT-UCF	480	60	3.3	3		5.3			11	11	-	12
ECOH-PT480MF	#N/A!	480	60	1.0	3		7.8			10	9	10	12
ECOH-PT-480V	EHS-PT-U	480	60	1.0	3		7.8			10	9	10	12
RCOHPT-208CF	EHS-PT-ACF	208	60	3.3	3		5.3	25.5	10	25.5	25.5	-	10
RCOHPT-208V	#N/A!	208	60	3	1/3		7.8	37.5	8	22	20.7	22	12
RCOHPT-240CF	#N/A!	240	60	2.6	1/3		5.3	22.1	10	22.1	22.1	-	10
RCOHPT-440VM	#N/A!	440	60	1.4	3		6.6			8.8	8.3	8.8	12
RCOHPT-480CF	EHS-PT-UCF	480	60	3.3	3		5.3			11	11	-	12

## EQUIPMENT DESCRIPTION

### Exterior Construction

The Top, Front, Back, and Sides are constructed of stainless steel with an aluminized bottom.

The oven exterior dimensions are:

30" (76.2 cm) Wide,  
25.25" (74.3 cm) High,  
26.5" (67.31 cm) Deep.

The oven door comes standard with a high temperature insulated window equipped with a polycarbonate handle.


The oven cavity is insulated with high temperature insulation for efficiency and reduced heat loss.

### Interior Construction

The oven is designed for five shelves and comes with five Chrome Plated Racks.

The interior cooking chamber is constructed of stainless steel with dimensions of:

15" (38.1 cm) Wide,  
20" (50.84 cm) High,  
21" (53.38 cm) Deep.

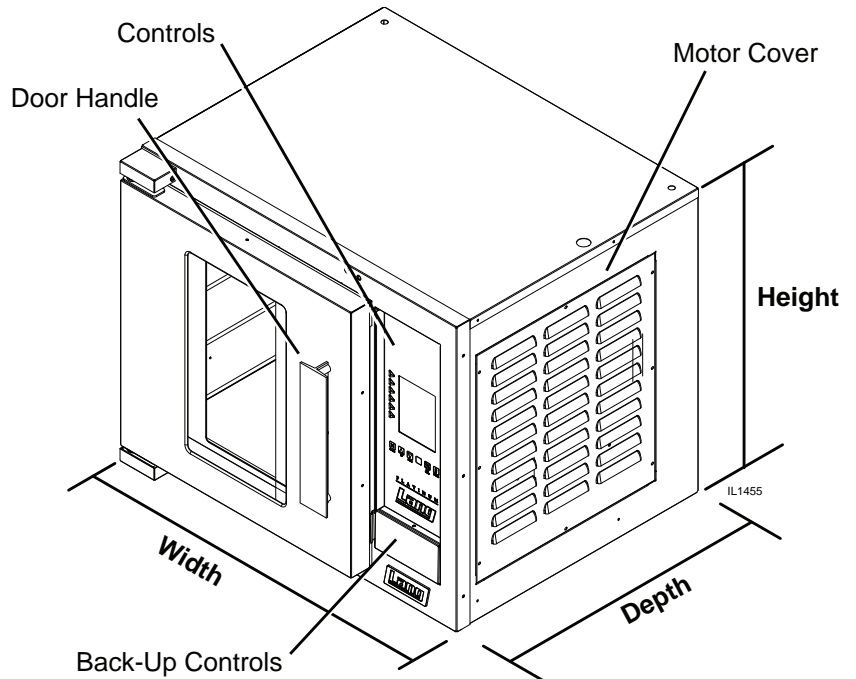

### Operation

The ECOH oven is a forced air convection oven with a vented oven cavity.

The air is driven by a 1/3 HP fan motor.

### Controls

Pre-Programmable Product Selections

Independent Shelf Timers for each Shelf.

Shelf Compensation Timing for uniform baking.

### Technical

Oven operates as shipped on either 208 or 240-volt (single or three phase), or 480-volt (three phase).

The oven can be shipped with a Power Cord and Plug attached, but must be specified upon ordering (*part number is listed in the Parts portion of this manual*).

Floor space required is 42" (106.68cm) Wide, 32.5" (82.55cm) Deep.

The oven weighs approximately 225 lb. (102.5 Kilograms).

The ovens are stackable, stacking kit available upon request.

**NOTICE** The data plate is on the back side of the oven above the power cord. The oven voltage, wattage, serial number, wire size, and clearance specifications are on the data plate. This information should be carefully read and understood before proceeding with the installation.

## UNPACKING

### Receiving the Oven

Upon receipt, check for freight damage, both visible and concealed. Visible damage should be noted on the freight bill at the time of delivery and signed by the carrier's agent. Concealed loss or damage means it does not become apparent until the merchandise has been unpacked. If concealed loss or damage is discovered upon unpacking, make a written request for inspection by the carrier's agent within 15 days of delivery. All packing material should be kept for inspection. Do not return damaged merchandise to Star Manufacturing Company. File your claim with the carrier.



### Location

Prior to un-crating, move the oven as near to its intended location as practical. The crating will help protect the unit from the physical damage normally associated with moving it through hallways and doorways.

### Un-crating

The oven will arrive completely assembled inside a wood frame and strapped to a skid. Cut the straps and remove the wood frame.

The oven can now be removed from the skid.




**CAUTION**

**THE UNIT IS EXTREMELY HEAVY. FOR SAFE HANDLING, INSTALLER SHOULD OBTAIN HELP AS NEEDED, OR EMPLOY APPROPRIATE MATERIALS HANDLING EQUIPMENT (SUCH AS A FORKLIFT, DOLLY, OR PALLET JACK) TO REMOVE THE UNIT FROM THE SKID AND MOVE IT TO THE PLACE OF INSTALLATION.**

**ANY STAND, COUNTER OR OTHER DEVICE ON WHICH OVEN WILL BE LOCATED MUST BE DESIGNED TO SUPPORT THE WEIGHT OF THE OVEN.**

**SHIPPING STRAPS ARE UNDER TENSION AND CAN SNAP BACK WHEN CUT.**

# INSTALLATION

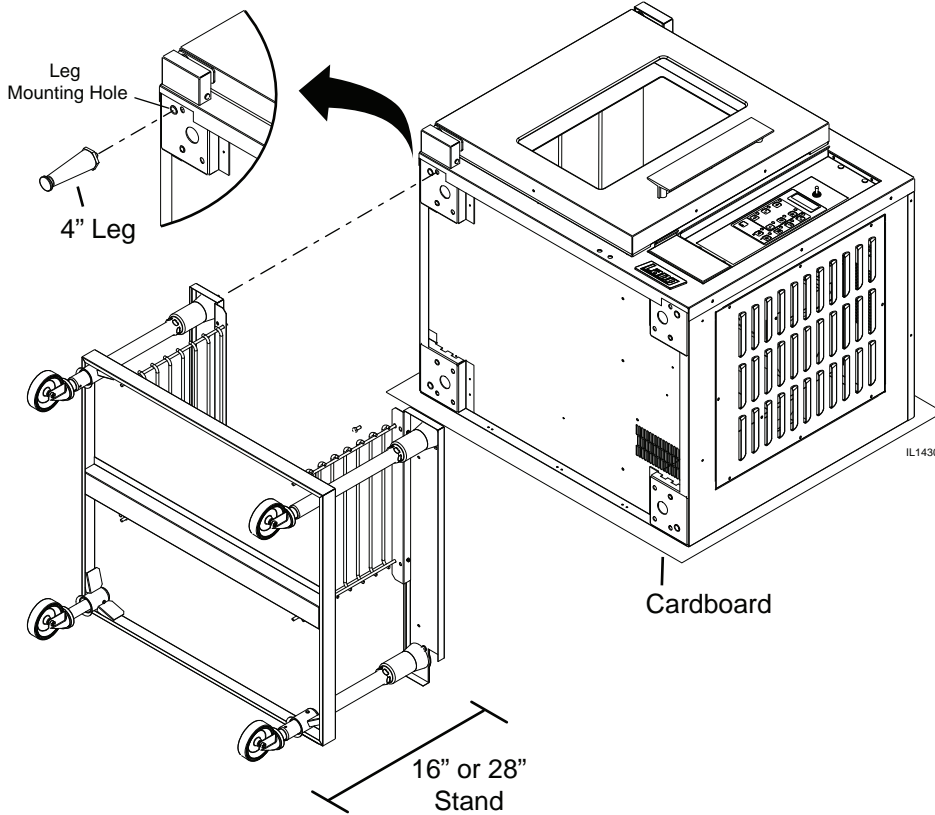

## Leg Installation

4" legs are available for single countertop installations. Single and double deck installations require 16" or 28" stand installation, casters may also be used in certain situations.

To install the 4" legs, place some cardboard on the floor and gently tip the unit onto its back. Fasten the four, 4" legs into the threaded holes located on the bottom of the unit. Gently lift the oven into its operating position.

16" & 28" stand installation, after following the assembly instructions that were provided with the stand, gently lower unit on to some cardboard as shown here. Align the stand with the bottom of the unit and secure with the hardware provided. With the assistance of carefully raise the unit to its vertical position.

## Stacking the Ovens


Two alignment pins (pn:2C-20108-11) are needed if you intend on stacking two ECOH-C on each other as shown. These pins must be requested at the time of purchase, or call your Lang authorized service agent, or Lang parts department at 1-800-807-9054.

Having completed the previous step remove any and all button plugs from the lower unit, so the upper unit will lay properly.

Lay the upper unit on its back and screw the alignment pins into the two rear holes.

With assistance lift the upper unit onto the lower unit, being certain that the alignment pins go into the alignment holes, as shown here.

**NOTE: Each unit must have separate electrical connections**

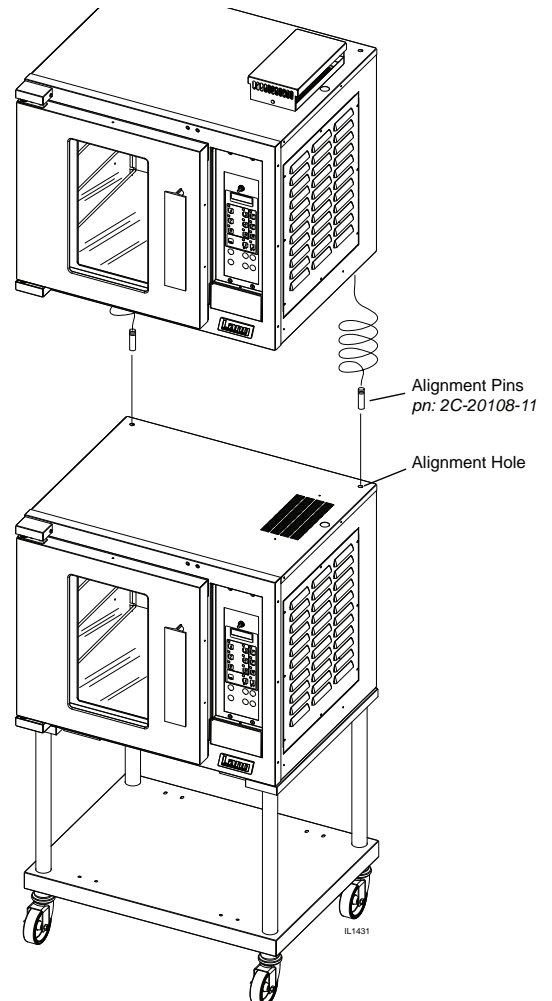

## INSTALLATION continued

### Ventilation and Clearances

Standard minimum clearance from combustible construction is as follows.

4" from side

4" from back

6" from floor

- These ovens may be set directly, without legs, on a curbed base or non-combustible floor.
- If the oven is set without legs on a non-combustible floor or a curbed base, maintain a 4-inch back clearance.
- If the oven is set directly against a non-combustible back wall, maintain a 6-inch clearance to the floor.
- Do not install the oven closer than 4 inches from another oven on the right hand side (control panel side).
- Do not install the oven closer than 12 inches from an uncontrolled heat source (char broiler etc.) on the right side.
- Keep the area free & clear of combustible material, and do not obstruct the flow of combustion or ventilation air.
- The installation of any components such as a vent hood, grease extractors, and/or fire extinguisher systems, must conform to the applicable nationally recognized installation standards.

**NOTICE**      **The installation of any components such as a vent hood, grease extractors, fire extinguisher systems, must conform to their applicable National, State and locally recognized installation standards.**

### Electrical Connection

The electrical connection must be made in accordance with local codes or in the absence of local codes with NFPA No. 70 latest edition (in Canada use: CSA STD. C22.1).

The electrical service entrance is provided by a 1 1/4-inch knockout at the oven back directly behind the control compartment. A grounding lug is provided at the rear service entrance.

Certain units are provided with or can be purchased with a Cord & Plug kit (*Part number 9Q-ECOH-CK*). This kit includes a 48" cord with a NEMA L15-30P plug and is for 3 Phase units ONLY. In stacked situations each unit needs to have separate cord & plug assemblies.

### Oven Voltage

The Lang Model ECOH ovens can be operated on 208, 240-volt (single or three phase), or 480-volt (three phase only) source. The Amp draw, KW rating, and phasing can be found in specification section of this manual.



**WARNING**

**THIS APPLIANCE MUST BE GROUNDED AT THE TERMINAL PROVIDED. FAILURE TO GROUND THE APPLIANCE COULD RESULT IN ELECTROCUTION AND DEATH.**




**WARNING**

**INSTALLATION OF THE UNIT MUST BE DONE BY PERSONNEL QUALIFIED TO WORK WITH ELECTRICITY AND PLUMBING. IMPROPER INSTALLATION CAN CAUSE INJURY TO PERSONNEL AND/OR DAMAGE TO EQUIPMENT. UNIT MUST BE INSTALLED IN ACCORDANCE WITH ALL APPLICABLE CODES.**



## Reversing the door

1. Disconnect oven from power.
2. Remove the top and bottom door hinge covers (4) by removing the two 10-32 Phillip head screws (8).
3. Remove the top door hinge bracket (1) from the oven by removing the two ¼-20 Phillip head screws (7). The hinge should now slide off of the door pin (this will now be your right hand lower hinge)
4. Lift the door off the bottom pin and set aside.
5. Remove the bottom door hinge bracket (2) by removing the two ¼-20 Phillip head screws (7) (this will now be your upper right hand hinge).
6. Remove the lower hinge mounting plate (9) by pulling it from behind the leg pad adapter on the bottom of the oven.
7. Remove the two Phillips head screws in the bottom right corner of the oven, where the new hinge will be placed.
8. Slide the hinge mounting plate (9) into place and mount the hinge bracket (this should be your old upper hinge) using two ¼-20 (7) Phillips head screws.
9. Remove the two Phillips head screws in the upper right corner of the oven where the new hinge will be placed.
10. Rotate the door 180° and slide the door pin into the bottom hinge bracket.
11. Slide the upper door hinge (1) onto the upper door pin and then screw into place using two ¼-20 Phillip head screws.
12. Place the top and bottom door hinge covers (4) back on the oven using two 10-32 Phillip head screws (8).

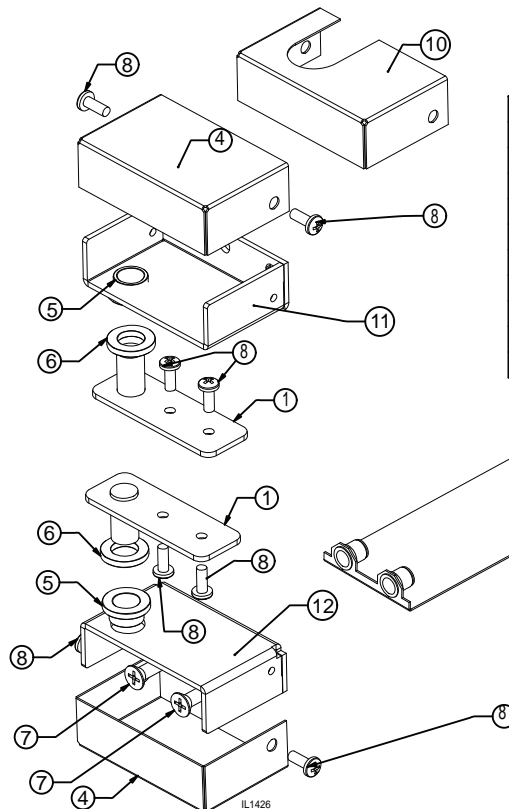

### ECOH HINGE RELPACEMENT KIT

pn: Q9-50313-030

ITEM NO.	QTY.	PART NO.	DESCRIPTION
3	2	50313-031	HINGE PIN WELDMENT
4	2	EH-267	EH HINGE COVER
5	2	70201-19	
6	2	70201-01	
7	2	20109-43	
8	8	20109-15	
9	1	eh-198-1	BOTTOM HINGE PLATE ASSY
10	1	CR30-148	UPPER HINGE COVER FOR EH
11	1	EH-265-1	EH HINGE - TOP - FOR SVC KIT
12	1	EH-266-1	EH HINGE - BOTTOM - FOR SVC KIT

INSERT BEARINGS (ITEMS "5") INTO THE HINGES (ITEMS "1" & "2") AS SHOWN THEN REAM WITH A .508 REAMER.

## INITIAL START UP

### Pre-Power On

After the oven is installed and connected to power, prior to turning on, verify the following


- The door opens and closes freely
- All racks are in the oven correctly
- All packing materials have been removed from the inside of the oven

### Power On

Once the oven has been turned on verify that the blower wheel is spinning freely in a clockwise position and that the elements are heating properly.

Switch the back-up controls on and make certain it can run the unit,

Confirm that the thermostat knob in the back-up controls is move freely.

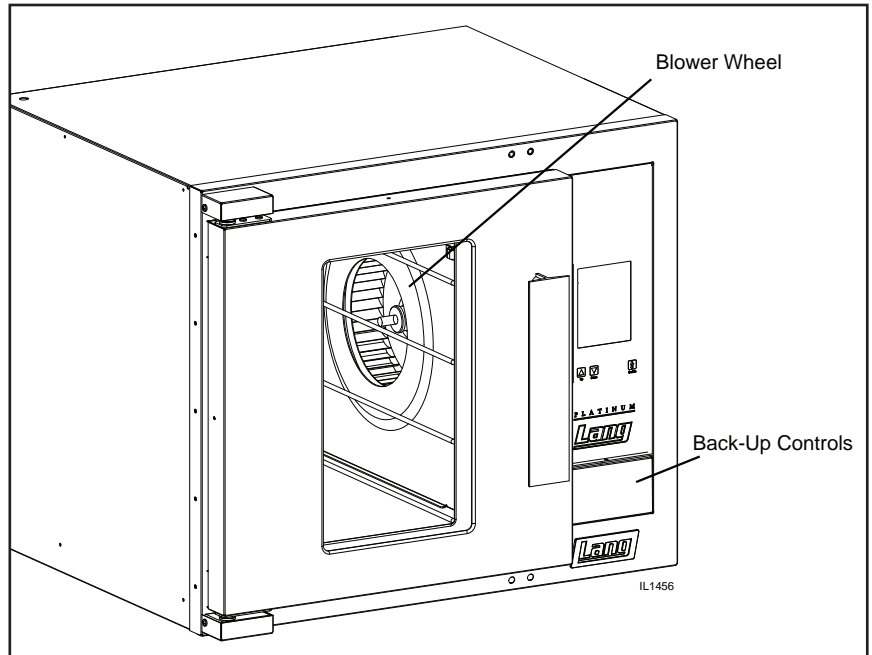

### NOTICE

**During the first few hours of operation you may notice a small amount of smoke coming from the oven, and a faint odor from the smoke. This is normal for a new unit and will disappear after the first few hours of use.**

## General Operation & Programming

Convection ovens constantly circulate air over and around the product. This strips away the thin layer of moisture and cool air from around the product allowing heat to penetrate more quickly.

Always weigh your product. This will give you a more consistent size, color and quality.

To convert standard deck oven recipes, reduce the temperature 50 degrees and the time by 25%. Make minor adjustments as necessary.

The lower the oven temperature the more even the bake.

Check the product near the end of the initial cooking.

Do not open the oven door during baking, as this will change the baking characteristics of the oven and make it difficult to determine a final program.

If the product is overdone on the outside and underdone on the inside, reduce the baking temperature.

If the product is pulling away from the edge of the pan, the temperature is too high or the cooking time too long.

A convection oven is a mechanical piece of equipment. The same control settings will always give the same results. If the results vary, problems may be because of changes in the product preparation.

### ECOH-PT Control Panel

The control panel consists of the following items.  
Detailed operational descriptions are given later this section.

**Power Switch:** Turns the oven on and off

**Function Keys:** Keys are active when a program option is displayed on the display adjacent to that key.

**Up & Down Buttons:** Allows you to scroll through the programming selections.


**Cancel:** When scrolling through menus this will allow you to back up to the previous menu. In program mode this will allow you to back up to the previous step.

**Alpha Numeric Display:** Visual interface.

### Typical Operation Sequence

ACTION	RESULT
Press the on switch.	Control panel comes on; display says "LANG, Run Oven, Time Date Program".
Select "Run Oven".	Display will show a list of product to choose.
Select Product button next to Icon desired.	Display says "Preheating to XXXF".
Beeper sounds briefly.	Display says "Ready"
Select Product to start.	Display shows possible product selection for that temperature.
Select Product to start..	Display says, "Select shelf"
Press Product button next to desired shelf.	Display will show icon chosen and begin to count down.
Beeper sounds continuously.	Display shows "DONE", press button and remove product from that shelf.
Oven is ready for another product.	

P L A T I N U M

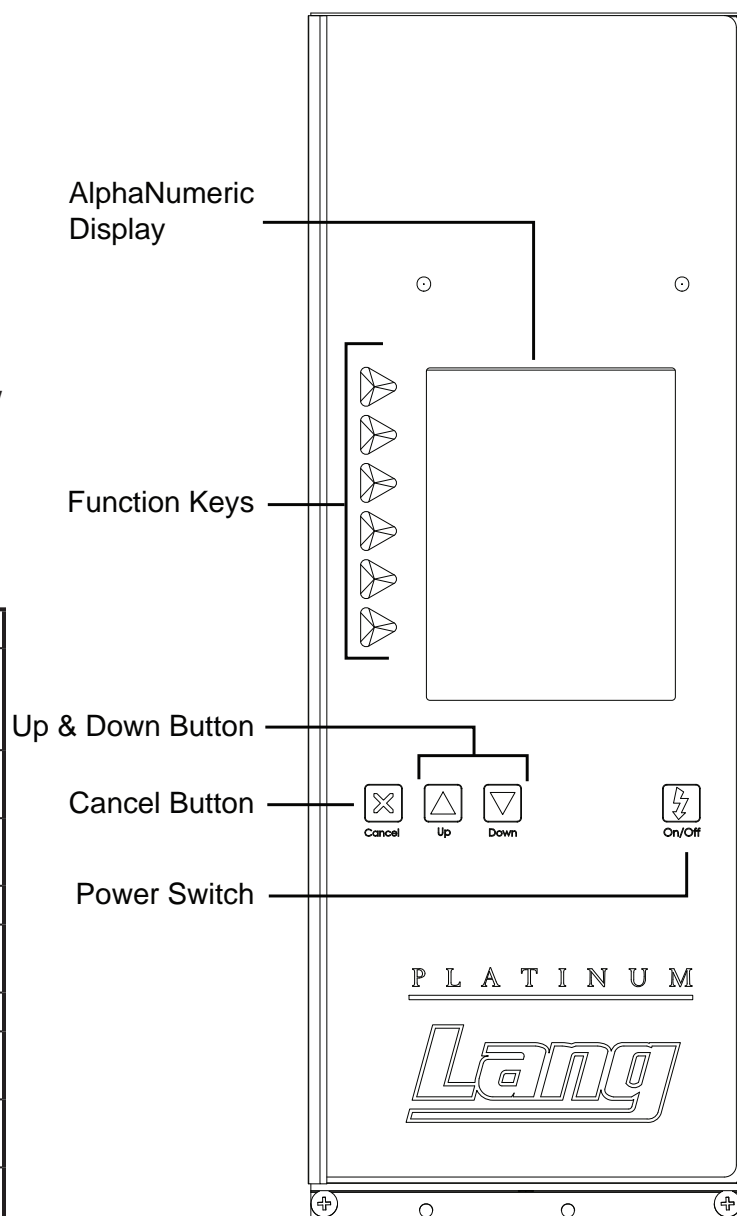

IL1476

## General Operation & Programming cont.

### Loading

Here are some things to remember when loading your oven.

- When loading and unloading the oven, stage products and racks so the oven door is opened for the least amount of time.
- Be sure that racks are level within the oven.
- Bent or warped pans can greatly affect the evenness of the cook or bake.
- If using baker's parchment, be sure the parchment does not blow over the product. That will create an uneven bake.
- Load each shelf evenly. Spaces should be maintained equally between the pan and oven walls, front and back.
- Do not overload pan's this will create an uneven bake.
- For best baking results, load the oven from the center out during random loading.



**ALWAYS KEEP THE AREA NEAR THE APPLIANCE FREE FROM COMBUSTIBLE MATERIALS.**

**CAUTION KEEP FLOOR IN FRONT OF EQUIPMENT CLEAN AND DRY. IF SPILLS OCCUR, CLEAN IMMEDIATELY, TO AVOID THE DANGER OF SLIPS OR FALLS.**

**Record Your Menus Here Before Entering Your Program.**

Record your specific menu items using the table below, prior to entering them into your units program. Keep for your records.

[illegible]

**Product Icons:** This list shows the icons available for your menu programs, they appear in the same order as shown here.

Icon		Icon		Icon		Icon			
No.	Description	No.	Description	No.	Description	No.	Description		
1	Appetizer A	21	Casserole	41	Fish, Option 2	61	Pie C	80	Sandwich on Hoagie, Option 2
2	Appetizer B	22	Cheese Stick	42	Flag	62	Pie D	81	Sausage
3	Appetizer C	23	Cheese Cake	43	French Fries	63	Pie Cherry	82	Scone
4	Appetizer C, Option 2	24	Cheery	44	Ham	64	Pizza A	83	Sealood
5	Apple	25	Chicken	45	Hash browns	65	Pizza B	84	Square
6	Bagel A	26	Chicken Strips	46	Hash browns, Option 2	66	Pizza Cheese	85	Star
7	Bagel B	27	Cinnamon Roll	47	Hoagie	67	Pizza Pepperoni	86	Triangle
8	Bagel C	28	Cinnamon Roll, Option 2	48	Hot Dog	68	Pork Chop	87	Vegetable
9	Baked Potato	29	Cookie A	49	Lasagna	69	Pot Pie	88	
10	Banana	30	Cookie A, Option 2	50	Lemon	70	Potatoes	89	Vegetable
11	Biscuit	31	Cookie B	51	Muffin A	71	Pretzel	90	Birthday Cake
12	Bread French	32	Cookie C	52	Muffin B	72	Quiche		
13	Bread French Option 2	33	Cookie Chocolate Chip	53	Muffin C	73	Quiche, Option 2		
14	Bread Loaf	34	Cookie D	54	Onion Rings	74	Ribs		
15	Bread Sourdough Round	35	Cornbread	55	Onion Rings, Option 2	75	Roast Beef		
16	Bread Stick	36	Doughnut	56	Pastry	76	Roll		
17	Brownies	37	Doughnut, Option 2	57	Peanut	77	Roll, Option 2		
18	Cake A Chocolate	38	Egg Dish	58	Pear	78	Sandwich A		
19	Cake B White	39	Egg Roll	59	Pie A	79	Sandwich on Hoagie		
20	Calzone	40	Fish	60	Pie B				

## Platinum PROGRAMMING

When using the Platinum Control Panel follow these simple steps.


**Function Keys:** Are active when selecting an option that is displayed on the LCD Screen.

### Function Buttons:

**Cancel:** During Program Mode it will take you to the next step, otherwise it will take you back to the previous menu.

**Up & Down:** Will move you through the selections/settings displayed on the LCD Screen which will be used when programming your specific requirements. (Example: access codes, temperature settings, cooking time, curve, fan speed etc.)

**On/Off:** Main Power Switch

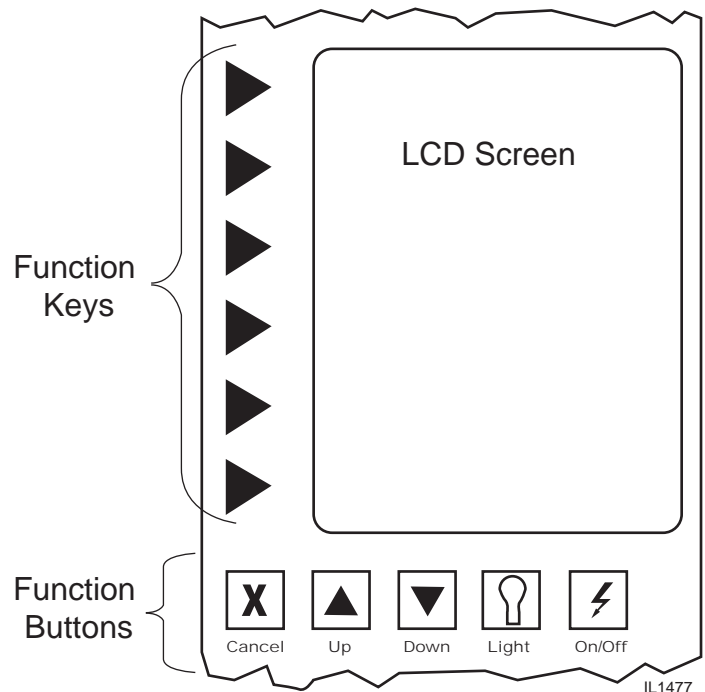

### Programming Step Contents:

- Step 7 Select Product Icon,
- Step 8 Select Product Name,
- Step 9 Select Product Temperature,
- Step 10 Select Tier Cook Time,
- Step 11 Select Cooking Curve,
- Step 12 Select Fan Speed,
- Step 15 Continue To Next Tier

**Cooking Curve:** Cooking curve is a programmable function that adjusts the cooking time to compensate for planned times when the oven temperature would be lower than the programmed temperature. (i.e. temperature losses during loading and unloading). Cooking Curve 40%, is the most commonly used. Cooking Curve settings from 0% (no time adjustment) to 100% (max time adjustment) are available. As a general rule the longer the cooking time the lower the cooking curve, the shorter the cooking time the higher the cooking curve.

**Pulse Fan Function:** A Fan Pulse Rate setting allows the fan to be programmed to cycle on and off at regular intervals during the period in the cooking cycle when there is no heat applied. (The computer will not allow the fan to be OFF whenever the heat is ON).


**Tier Cooking:** "Tiered" programming is the ability to change the cooking temperature or fan function while cooking. (i.e. some products may require high heat and the fan to be LO for the first half of the cooking cycle. Tier 1 would be programmed with the Heat up and the fan LO and Tier 2 would then be programmed with the heat lowered and the fan HI for the remainder of the cycle.) Multiple shelf baking function is disabled when using Tier Baking programs.

## Platinum PROGRAMMING




Step 1. Turn power switch on. If the oven is on, press cancel until the above screen is displayed.


Step 2. Select **TIME/DATE/PROGRAM**

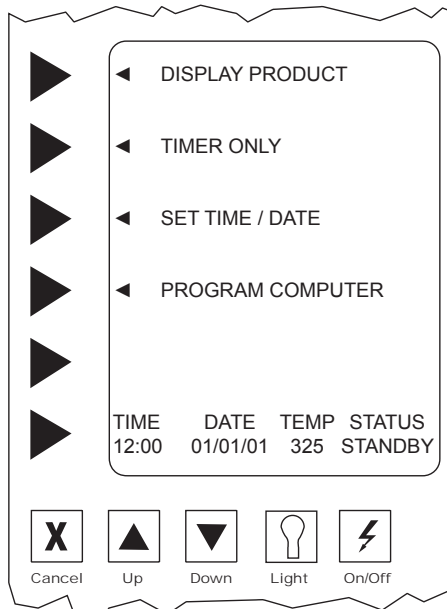

Step 3 Select **PROGRAM COMPUTER**

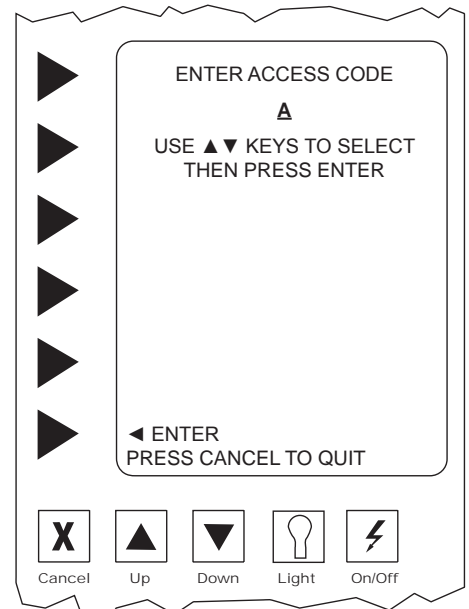


Step 4 Using the ▲▼ arrows, enter access code "**A B C D E F**" hitting **ENTER** after each letter.

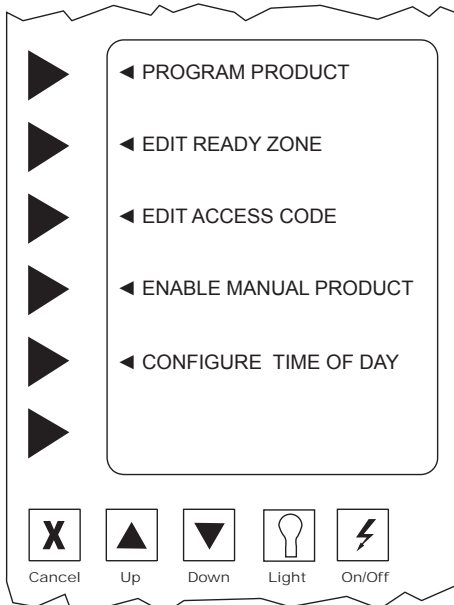

Step 5 Select **PROGRAM PRODUCTS** then


Step 6 Select **CREATE NEW PRODUCTS**

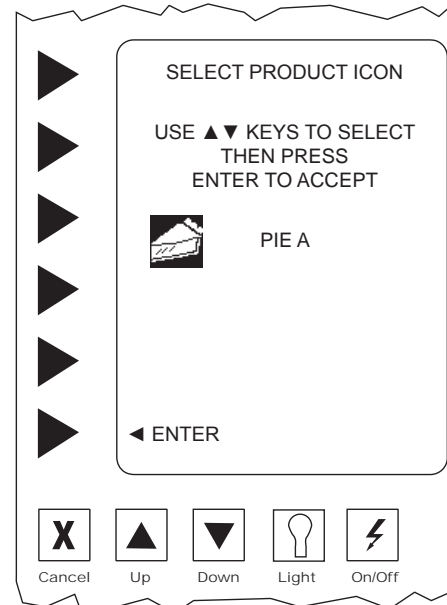

Step 7 **Select Product Icon,**  
This is the first screen in creating a product program. Press ▲▼ until you find a icon which resembles your product.

Select **ENTER** to accept the icon and move to the next screen.


**Note:** Refer to the Chart on page 13 for a selection of icons available.

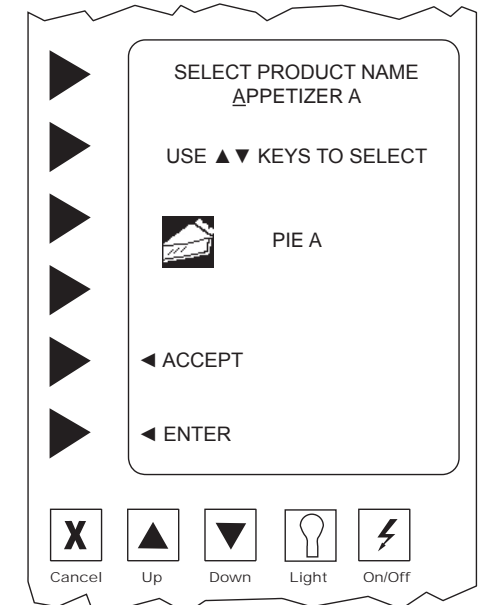


Step 8 **Select Product Name,**  
This is where you enter the name of the product into the computer. Using the ▲▼ keys type over the default name, blank space is before the A and after the 9.

Select **ACCEPT** to continue.


**Note:** Curser must be moved past the last digit to save the entire entry.

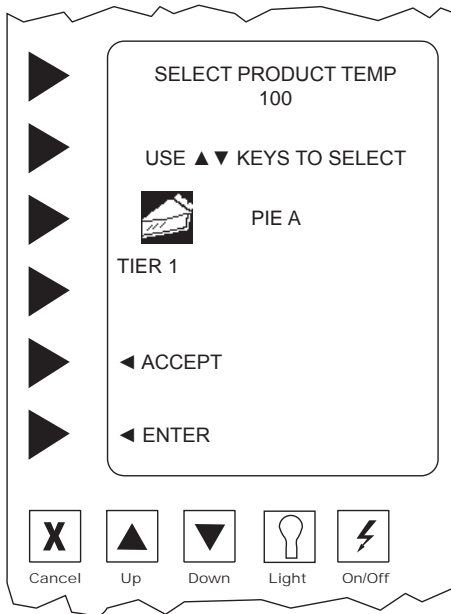


**Step 9 Select Product Temperature,**  
Press the ▲▼ to select the first digit, then press **ENTER** to move to the next digit. It will automatically move to the next screen after the third digit.

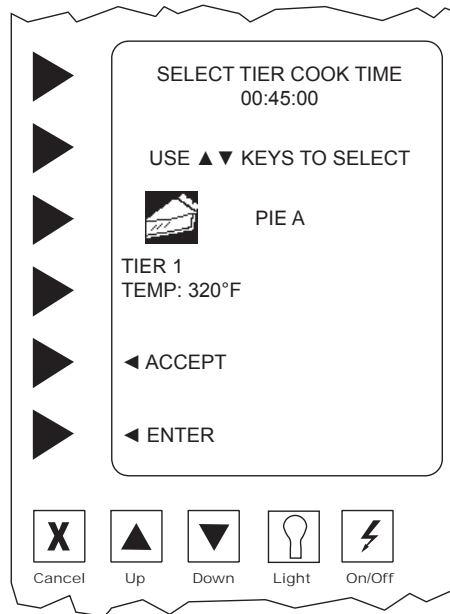


**Step 10 Select Tier Cook Time,**  
Time is entered in hours:minutes:seconds.  
The maximum is 12:59:59.  
Select **ENTER** to move the cursor to the place you want to enter the number.  
Select **ACCEPT** to continue.

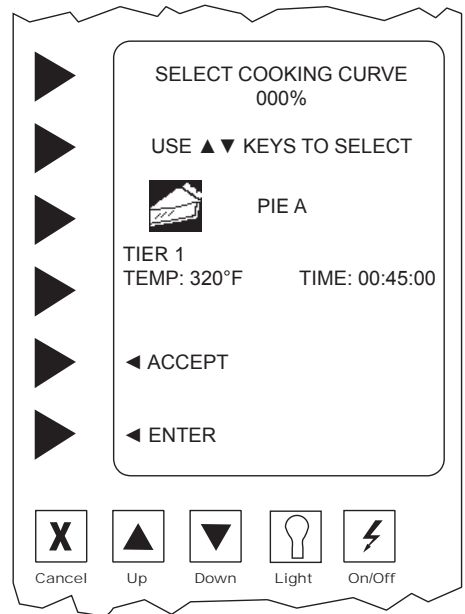

**Step 11 Select Cooking Curve,**  
press ▲▼ to select the numbers, press the **ENTER** to move the cursor to the next space.  
Cooking Curve may be any number between 0% and 100%.  
Select **ACCEPT** to continue.

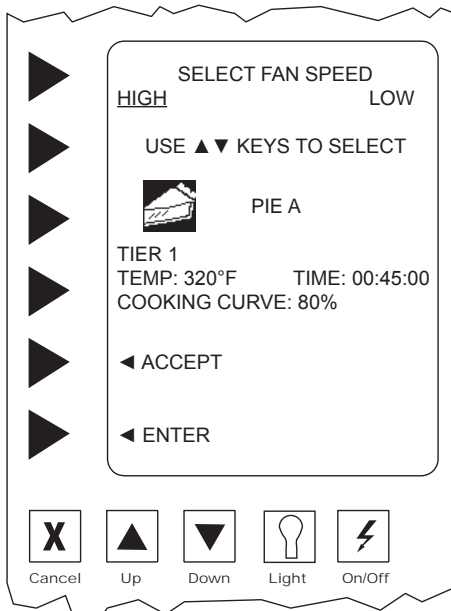


**Step 12 Select Fan Speed,**  
Press the ▲▼ to move the cursor between the HIGH and LO settings.  
Press **ENTER** to make your selection and move to the next screen.

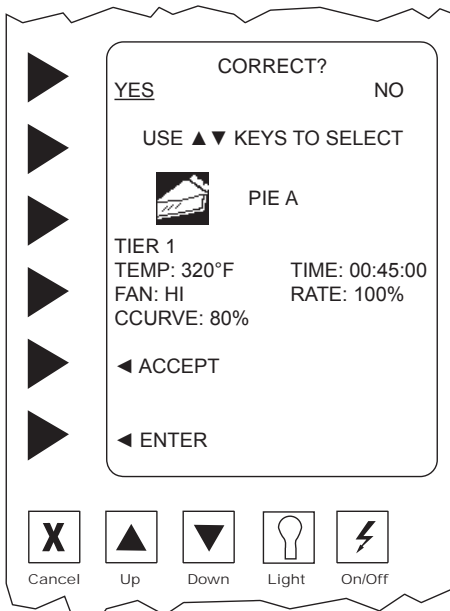

**Step 13 Correct**  
The computer is asking if the display is correct. If any part of the program is incorrect press ▲▼ **NO**, and you will be taken back to Step 7.  
Selecting **YES** will advance the screen.




## Platinum PROGRAMMING

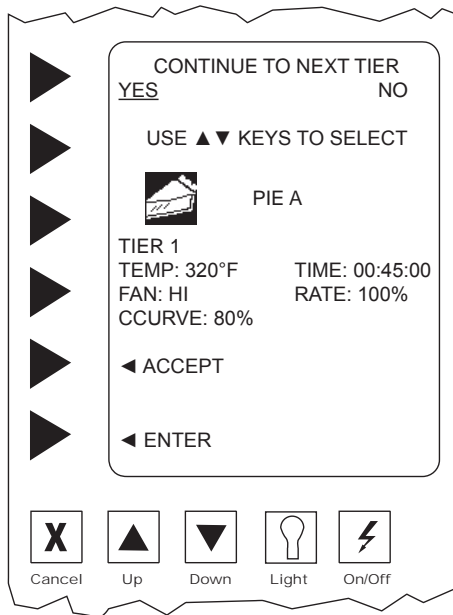


### Step 15 Continue To Next Tier

The cursor automatically appears on **NO**. Select **ENTER** or **ACCEPT** to end programming or

move the cursor ▲▼ to **YES**. This will allow you to enter another tier to this program, repeating steps 6 - 14 to program second tier.

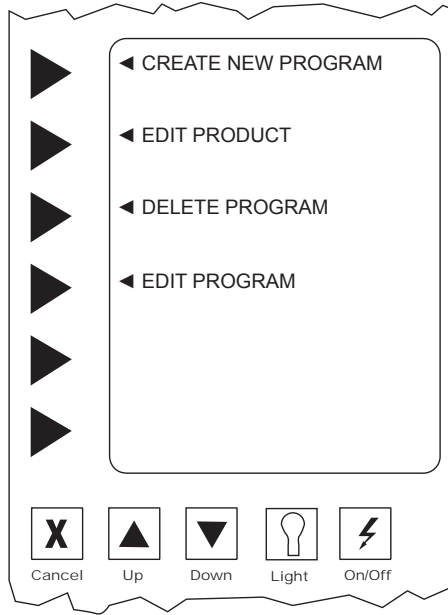

Step 16 After programming the last tier, the computer will automatically advance the screen to program more products. If no other products need to be programmed, select **CANCEL** three times to advance screen to the boot up screen.

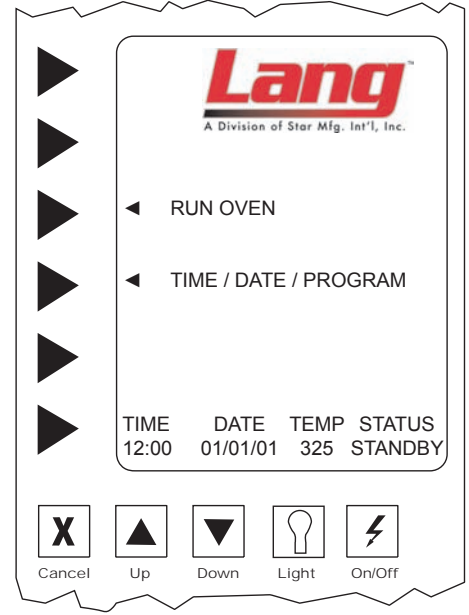

### Step 17 Boot-up Screen

You may now preheat the oven for any product you have programmed.

### Step 18 Select RUN OVEN

## MAINTENANCE

- Oven interiors should be wiped down daily and thoroughly cleaned weekly using warm water and mild detergent. **DO NOT use caustic cleaners.**
- The appliance should be thoroughly checked at six-monthly intervals by a qualified technician (heating unit, mechanical stability, corrosion...) with particular emphasis on all control and safety devices.

## CLEANING

- Always start with a cold oven.
- The stainless exterior can easily be cleaned using stainless steel cleaner.
- Always follow the cleaner manufacturer's instructions when using any cleaner.
- Care should be taken to prevent caustic cleaning compounds from coming in contact with the fan wheel.
- The oven racks, rack slides, may be cleaned outside the oven cavity using oven cleaner.
- Using any harsh chemicals will result in the removal of the ETC coating and etching of the porcelain below it. The oven interior should only be cleaned using a mild soap and a non metal scouring pad. **DO NOT use caustic cleaners.**
- Always apply stainless steel cleaners when the oven is cold and rub in the direction of the metal's grain.



### WARNING

**KEEP WATER AND SOLUTIONS OUT OF CONTROLS. NEVER SPRAY OR HOSE CONTROL CONSOLE, ELECTRICAL CONNECTIONS, ETC.**



### CAUTION

**MOST CLEANERS ARE HARMFUL TO THE SKIN, EYES, MUCOUS MEMBRANES AND CLOTHING. PRECAUTIONS SHOULD BE TAKEN TO WEAR RUBBER GLOVES, GOGGLES OR FACE SHIELD AND PROTECTIVE CLOTHING.**

**CAREFULLY READ THE WARNING AND FOLLOW THE DIRECTIONS ON THE LABEL OF THE CLEANER TO BE USED.**

**NEVER LEAVE A CHLORINE SANITIZER IN CONTACT WITH STAINLESS STEEL SURFACES LONGER THAN 10 MINUTES. LONGER CONTACT CAN CAUSE CORROSION.**

## Troubleshooting

### Symptoms & Possible Causes

The following are charts of Symptoms and Possible Causes to aid in diagnosing faults with your unit.

Refer to the symptoms column to locate the type of failure then to the Possible Cause for the items to be checked.

To test for a possible cause refer to test to identify test procedures. Test indicated with an “\*” should be done by a Lang factory authorized service representative.

Symptoms	Possible Cause	Possible Cause	Test
Power indicator is not lit	No power to cord outlet	Product is cooked too long	No test available, operational condition
	Oven unplugged from outlet	Failed Probe	Check probe for proper resistance*
	Failed Power cord or plug	Failed Circuit board	Confirm that Circuit board is getting correct voltage and putting out correct voltage*
	Failed power switch	Failed Transformer	Check both Primary and Secondary coils for correct voltage*
	Failed indicator light	Failed Contactor	Remove the wires from the contactor coil and check for continuity across the contactor coil connection*
Oven will not heat	Power Switch is not “ON”		Ensure the contactor moveable points move freely up and down*
	Failed Transformer	Failed Motor	Confirm that motor is getting correct voltage*
	Failed Probe	Failed or disconnected safety thermostat	Check across the thermostat connectors for continuity*
	Failed Circuit board	Failed Element	Confirm that Elements are getting correct voltage and have continuity*
	Failed Contactor		
	Failed Over-temperature Thermostat		
Oven motor will not run	Failed Element		
	Power Switch is not “ON”		
	Failed Transformer		
	Failed Contactor		
Product burning	Failed Motor		
	Product is cooked too long		
	Failed Probe		
Product is under done	Failed Circuit board		
	Product is not cooked long enough		
	Failed Probe		
	Failed Circuit board		

#### NOTICE

If an item on the list is followed by an asterisk (\*), the work should be done by a Lang factory authorized service representative.



#### CAUTION

**USE OF ANY REPLACEMENT PARTS OTHER THAN THOSE SUPPLIED BY LANG OR THEIR AUTHORIZED DISTRIBUTORS CAN CAUSE BODILY INJURY TO THE OPERATOR AND DAMAGE TO THE EQUIPMENT AND WILL VOID ALL WARRANTIES.**


#### NOTICE

Service on this or any other Lang appliance must be performed by qualified personnel only. Consult your Lang Authorized Service Agent Directory. You can call our toll free number 1-800-807-9054 or visit our website [WWW.STAR-MFG.COM](http://WWW.STAR-MFG.COM) for the service agent nearest you.



#### WARNING

**BOTH HIGH AND LOW VOLTAGES ARE PRESENT INSIDE THIS APPLIANCE WHEN THE UNIT IS PLUGGED/WIRED INTO A LIVE RECEPTACLE. BEFORE REPLACING ANY PARTS, DISCONNECT THE UNIT FROM THE ELECTRIC POWER SUPPLY.**

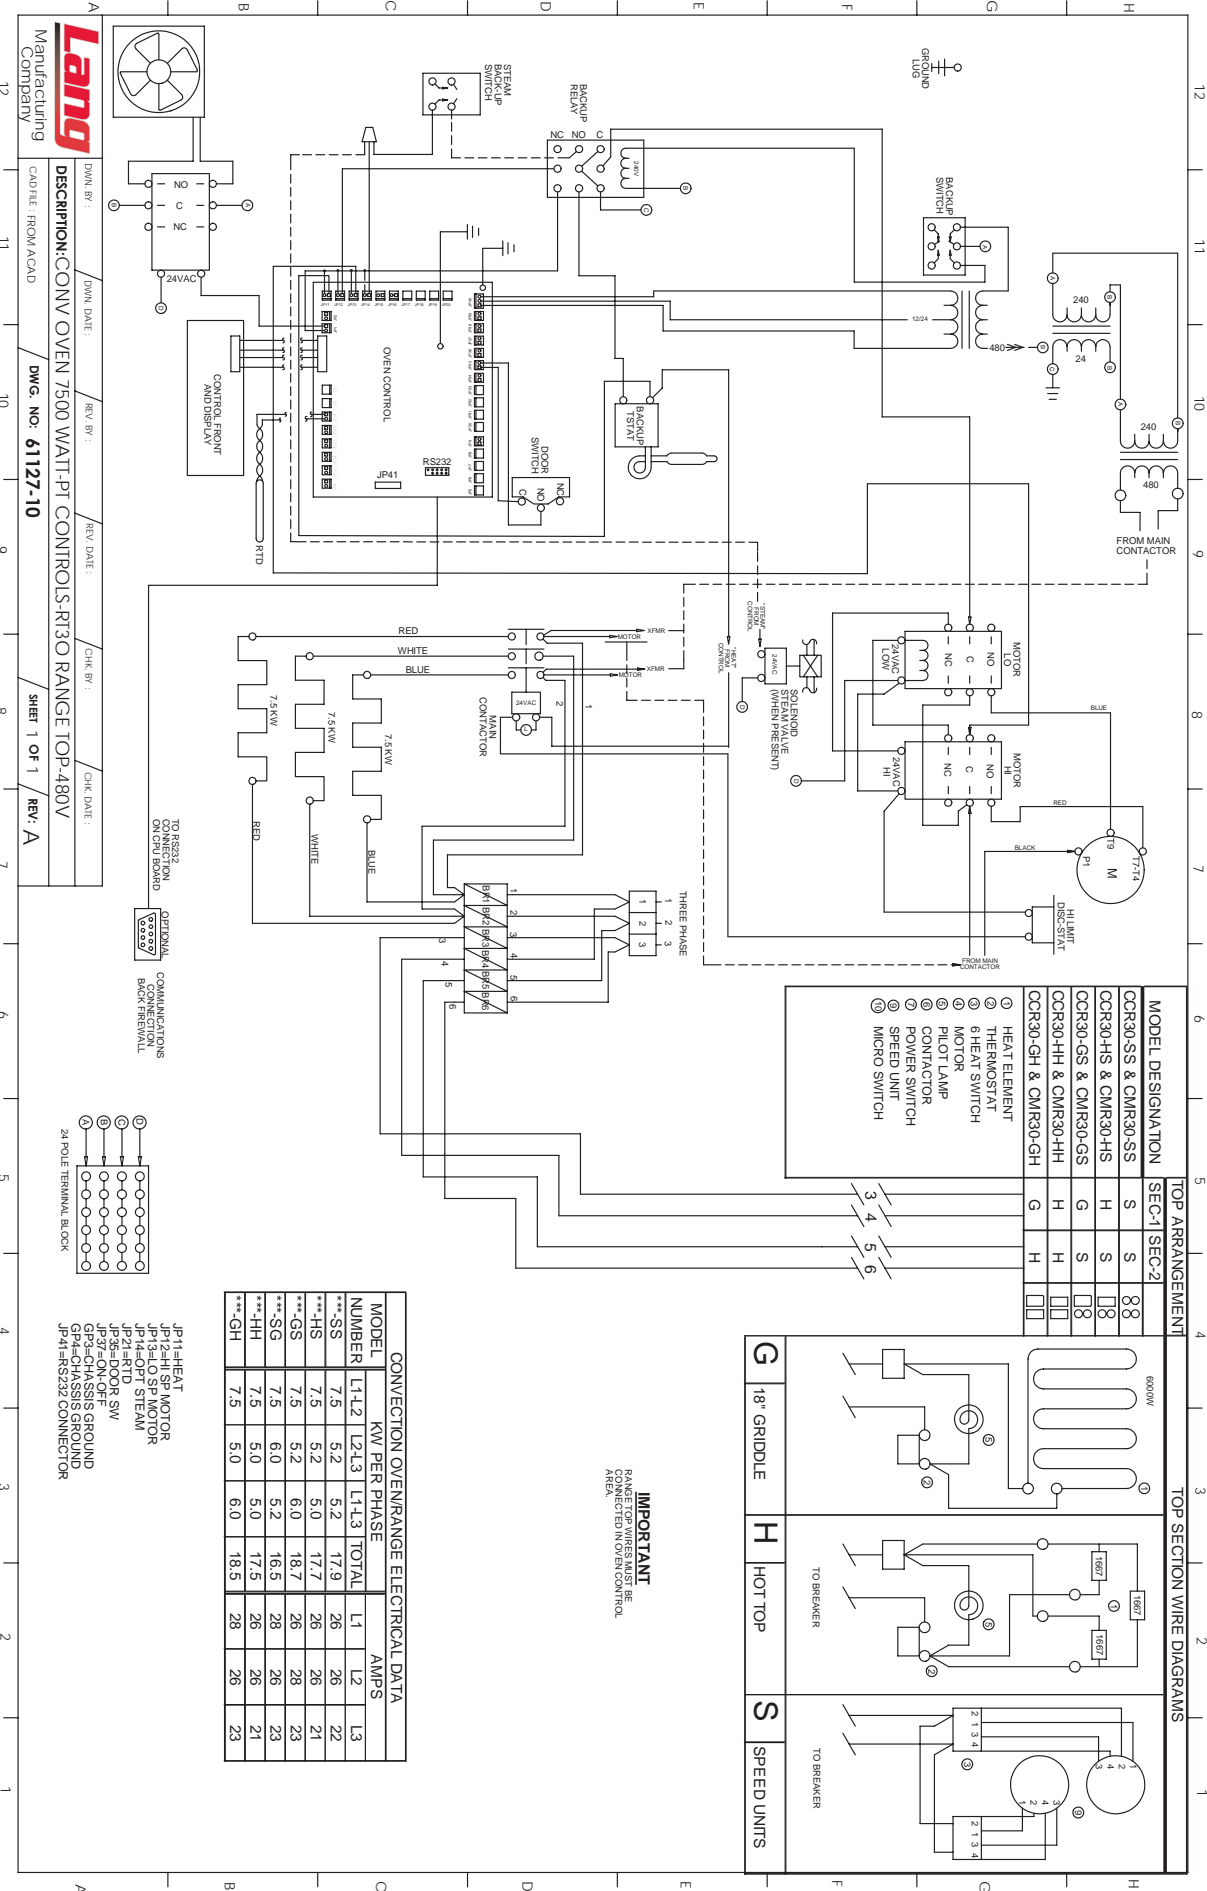

**Lang** Manufacturing Company


DESCRIPTION: CONVECTION 7500 WATT-PT CONTROLS-RT30 RANGE TOP-480V

DATE: FROM ACAD

DWG. NO: 61127-10

SHEET 1 OF 1

REV. A

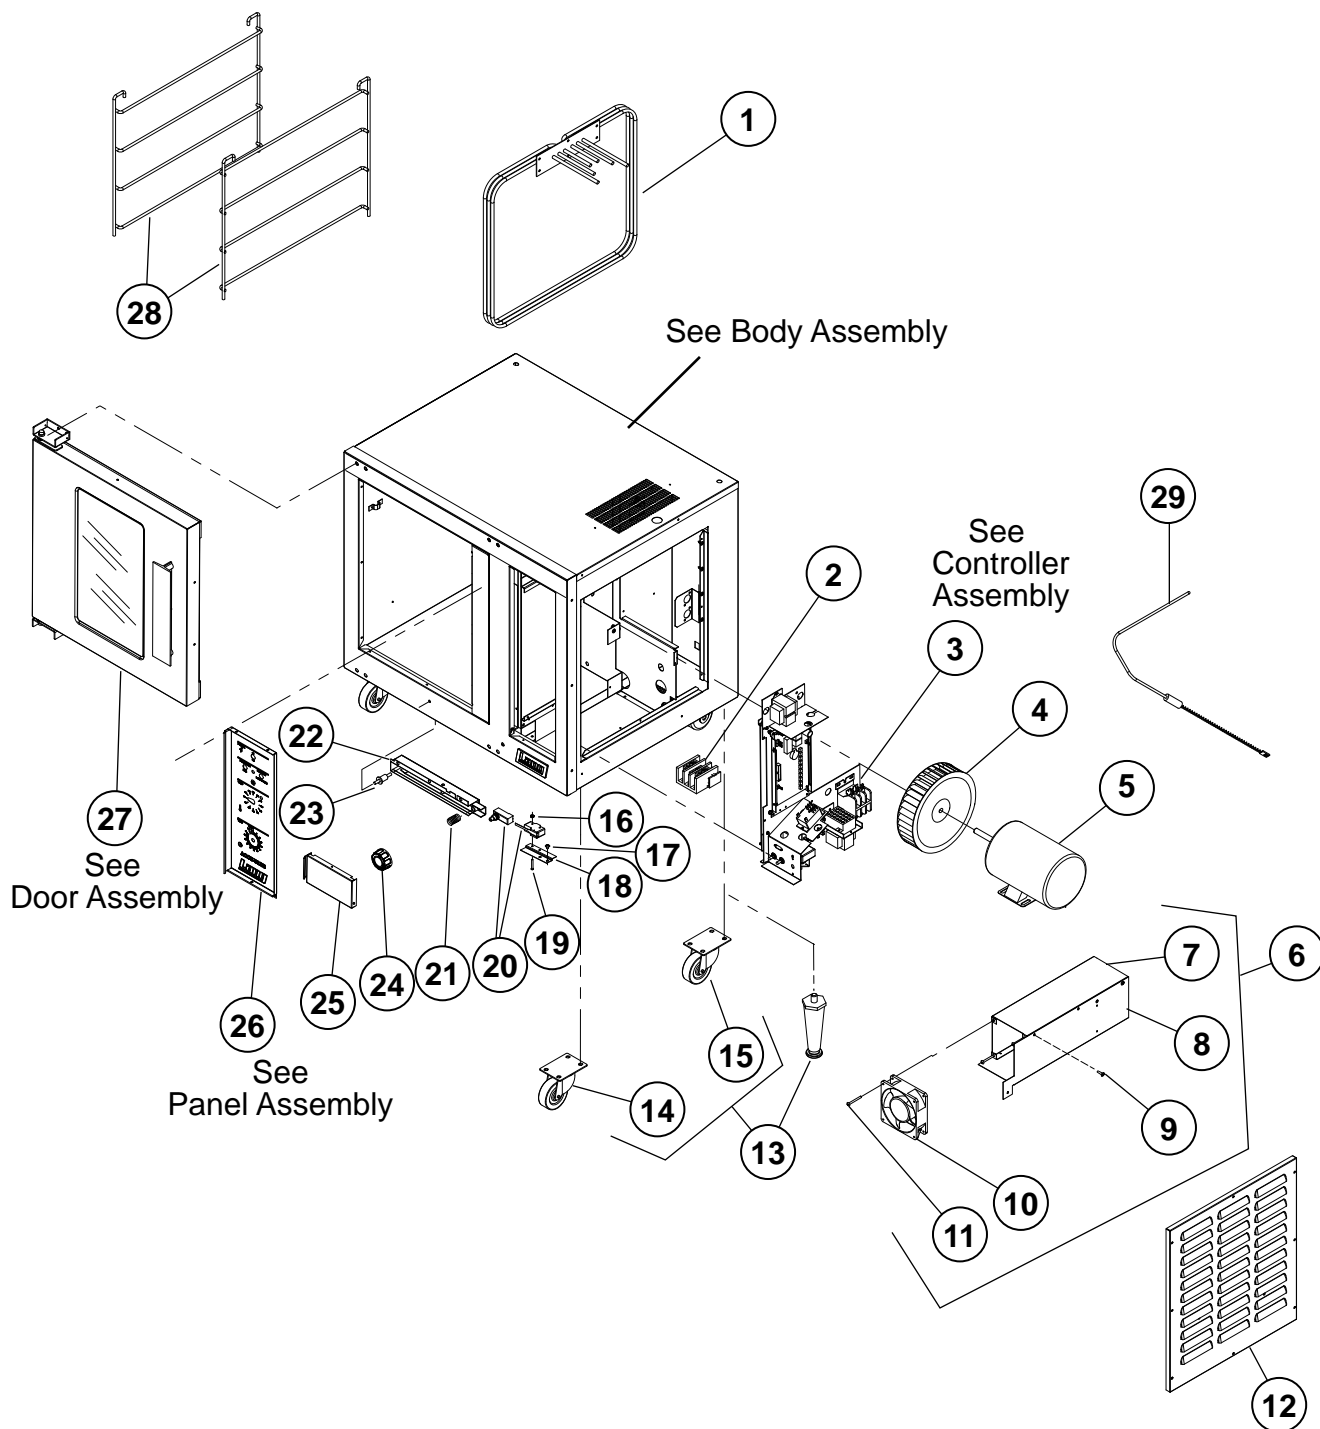

ECOH Complete Assembly

**Lang**<sup>TM</sup>  
A Division of Star Mfg. Int'l, Inc.

SK2320

Rev. A

1/8/2008

# PARTS LIST

December 18, 2008 Rev D

## Model No: ECOH & RCOH, AP, PP & PT CONTROLS Commercial & Marine Half Size Economy Convection Oven

Key Number	Part Number	Qty Per	Description
1	2N-11090-20	1	ELMNT EHS 208V 7.5KW 208V
	2N-11090-21	1	ELMNT EHS 240V 7.5KW 240V, ECOH-AP208FA, ECOH-AP2/3FA
	2N-11090-22	1	ELMNT EHS OVEN 480VAC 7.5KW 440VM, 480V, 480VM
	2N-11090-23	1	ELMNT EHS OVEN 208VAC 5.0 KW RCOHAP-208KR, RCOHAP-208CF, RCOHRAP208KR, RCOHPT-208CF
2	2E-30500-07	1	TRM BLOCK 3PLELRGE 125AMP ECOHPT208CFR, RCOHPT-208CF, RCOHPT-240CF
	2E-30500-09	1	TRM BLOCK 3 POLE SMALL 95 ECOH-AP-208V/208M/240V/208DR, ECOH-AP-480V480/M, RCOHAP-208V, RCOHAP-480V, RCOHAP-480VM, RCOHAP-480V/480M, RCOHRAP-480V/480M, RCOHPT-440VM
3	Q9-EHPPT-C	1	PANEL ASSY EHS-PT 208/240/480V ECOH-PT, RCOHPT
	Q9-60101-767	1	PANEL EH 208/240V ECOH-AP-208, 208M, 240V, 208DR
	Q9-EHPAP-GFA	1	PANEL EH 220/380V ACCU-PLUS FA ECOH-AP208FA, ECOH-AP2/3FA
	Q9-EHPAPRT-C	1	PANEL EH 208/240V AP W/RT30 RCOHAP-208KR, RCOHAP-208V, RCOHRAP208KR
	Q9-EHPAP-U	1	PANEL EH 480 VOLT ACCU-PLUS ECOH-AP-480M, 480V, RCOHAP-480V, 480VM, RCOHRAP-480M, 480V
	Q9-EHPPP-C	1	PANEL EH 208/240V PURPLE w/COOLING FAN ASSY ECOH-PP-208V, 208BK, 208WB, 240BK, 240WB
	Q9-EHPPP-C-S	1	PANEL EH 208/240V PURPLE w/o COOLING FAN ASSY ECOH-PP-208V, 208BK, 208WB, 240BK, 240WB
4	2U-71500-06	1	BLOWER WHEEL EHS OVEN ALL
5	2U-30200-16	1	MOTOR 1/3HP 460V/1/60HZ 2SP ECOH-AP-480V, ECOH-AP-480M, ECOH-PT-480V, ECOH-PT480CF, ECOH-PT480MF, RCOHAP-480V, RCOHAP-480M, RCOHRAP-480M, RCOHRAP-480V, RCOHPT-440VM, RCOHPT-480CF
	2U-30200-17	1	MTR 1/3HP208/240V1PH2SPD ECOH-AP-208M, ECOHAP-208V, ECOH-AP-240V, ECOH-AP208DR, ECOH-PP-208V, ECOH-PP208BK, ECOH-PP208WB, ECOH-PP240BK, ECOH-PP240WB, ECOH-PT-208V, ECOH-PT-240V, ECOH-PT208CF, ECOH-PT208MF, ECOH-PT208NT, ECOH-PT208RF, ECOH-PT208SZ, ECOH-PT208V7, ECOH-PT208WA, ECOH-PT208WD, ECOH-PT240SZ, ECOH-PT240WD, ECOHPT208CF, ECOHPT208CFC, ECOHPT208CFR, RCOHAP-208KR, RCOHAP-208V, RCOHPT-208CF, RCOHPT-208V, RCOHPT-240CF, RCOHRAP208KR, ECOH-AP208FA, ECOH-AP2/3FA
6	2U-30200-53	1	MOTOR 1/3HP 240/254V 50HZ 2 SP ECOH-PP-208/240V, ECOH-PT-208/240/480V, RCOHPT-208/240CF/480CF
	Q9-EH-268	AR	EH COOLING FAN ASSY
7	Q9-EH-268-2	1	AIR DUCT BACK ECOH-PP-208/240V, ECOH-PT-208/240/480V, RCOHPT-208/240CF/480CF
8	Q9-EH-268-1	1	AIR DUCT FRONT ECOH-PP-208/240V, ECOH-PT-208/240/480V, RCOHPT-208/240CF/480CF
9	2C-20103-02	6	SCRW SM PLT 10 X .5 PHLSL ECOH-PP-208/240V, ECOH-PT-208/240/480V, RCOHPT-208/240CF/480CF

**IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED  
INCLUDE MODEL AND SERIAL NUMBER**

PAGE 1  
OF 2

Some items are included for illustrative purposes only and in certain instances may not be available.



**Star Manufacturing International, Inc.**

# PARTS LIST

December 18, 2008 Rev D

## Model No: ECOH & RCOH, AP, PP & PT CONTROLS Commercial & Marine Half Size Economy Convection Oven

Key Number	Part Number	Qty Per	Description
10	2U-30200-46	1	MTR W/FAN AXIAL 220VAC70C ECOH-PP-208/240V, ECOH-PT-208/240/480V, RCOHPT-208/240CF/480CF
11	2C-20109-31	4	SCRW S/S 8-32 X 1-3/4 T/H PHIL ECOH-PP-208/240V, ECOH-PT-208/240/480V, RCOHPT-208/240CF/480CF
12	Q9-60102-1368	4	MOTOR COVER EH (EH-141) & HRDW ALL
13	2A-72500-02		LEG 4 SS MM ECOH-AP208DR, ECOH-PT208V7
	9Q-ECOH-C4		CASTERS (SET OF 4) sold as an accessory with most units
	Q9-EHS-4C		CASTERS (SET OF 4) RCOHAP-208KR, RCOHAP-208V, RCOHAP-480V, RCOHPT-208CF, RCOHPT-208V, RCOHPT=240CF, RCOHPT-480CF
	2A-72500-05	4	LEG 4 W/BOLT DOWN ADJ ECOH-AP-208M, RCOHAP-480VM, RCOHRAP-480VM
14	2P-72901-17	2	CSRT SWVL W/BRK 35/16TRD RCOHAP-208KR, RCOHAP-480V, RCOHPT-208CF
15	2P-72900-04	2	CSTER RIGID 3,5/16WTRD RCOHAP-208KR, RCOHAP-480V, RCOHPT-208CF
16	2C-20301-10	2	NUT HEX 6-32 PLTD ECOH, RCOH
17	2C-20101-65	2	SCRW MS PLT 10-32 X .25 THD ECOH, RCOH
18	Q9-EH-356	1	SWITCH BRACKET ECOH, RCOH
19	2C-20101-17	2	SCRW RND MS 6-32X1 PLTD ECOH, RCOH
20	2E-30301-17	1	SWT MICRO PLUNGER XLH V-27971 & W-48418,
	Q9-EH-363	1	SWITCH ARM, MICRO ECOH, RCOH
21	2P-51001-12	1	SPRING COMPRSN.665ID X 1.4 LONG ECOH, RCOH
22	Q9-EH-250	1	WELD SWITCH ARM ECOH, RCOH
23	Q9-EH-350	1	SWITCH PLUNGER - ASSY ECOH, RCOH
24	Y9-70701-18	1	KNOB ASSY 450° ECOH-AP, ECOH-PT, ECOH-PP, RCOH-AP, RCOH-PT
25	Q9-60102-112	1	SWITCH DOOR - ASSY EH ECOH-PP-208V
26	Q9-60101-765	1	ECOH-PT / EHS-PT CONTROL FRONT ECOH-PT, RCOH-PT
	Q9-60101-766	1	ECOH-PP / EHS-PP CONTROL FRONT ECOH-PP
27	Q9-51100-53	1	COMP DOOR ASSY EHS/GHS WINDOW ALL
28	2B-50200-83	2	RACK SLIDE EHS ECOH-AP, ECOH-PT, ECOH-PP, RCOH-AP, RCOH-PT
29	2E-41100-12	1	SENSOR EHS OVEN 450 DEG ALL
NI	2B-50200-34	5	RACK HALF SIZE OVENS ECOH-AP, ECOH-PT, ECOH-PP, RCOH-AP, RCOH-PT
NI	2E-31800-01	6	CB 250V50A 1 POLE CRLNGSW RCOHAP-208KR, RCOHAP-208V, RCOHPT-208CF
NI	2E-31800-04	1	CB 480V 50A 3 POLE RCOHPT-440VM
NI	2E-31800-04	2	CB 480V 50A 3 POLE RCOHAP-480V
NI	2E-60101-75	1	EHS CORD KIT 3-PHASE ECOH-AP208DR, -PP208BK, -PP240BK, -PT208CF, -PT208WD, -PT208CFC
NI	2K-70801-03	1	SNAP BUSH 3/8 SB375-4 BLK ECOH-PP-208V
NI	2K-70801-04	AR	SNAP BUSH 3/4 SB750-10 ECOH
NI	2M-61111-135	1	WD EHS-AP 208V-240VAC ECOH-AP-208V
NI	2M-61111-148	1	WD EHS-PP 208-240VAC 2SPD ECOH-PP-208V
NI	2M-61111-163	1	WD EHS-AP 480V ECOH-AP-480M
NI	Q9-60102-97	1	DOOR SEAL EH w/ mounting hardware
NI	2C-20108-01	2	STACKING PINS ALL
NI	Q9-EH-550	1	WIRING HARN, ELEMENT ALL
NI	Q9-EH-551	1	WIRING HARN, HIGH VOLT CONTROL ALL
NI	Q9-EH-553	1	WIRING HARN, LOW VOLT CONTROL ALL
NI	Q9-EH-554	1	WIRING HARN, POWER SWITCH ALL
NI	2E-31200-02	1	LUG GROUNDING UL APPROVED ALL


**IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED  
INCLUDE MODEL AND SERIAL NUMBER**

PAGE 2  
OF 2

Some items are included for illustrative purposes only and in certain instances may not be available.



**Star Manufacturing International, Inc.**

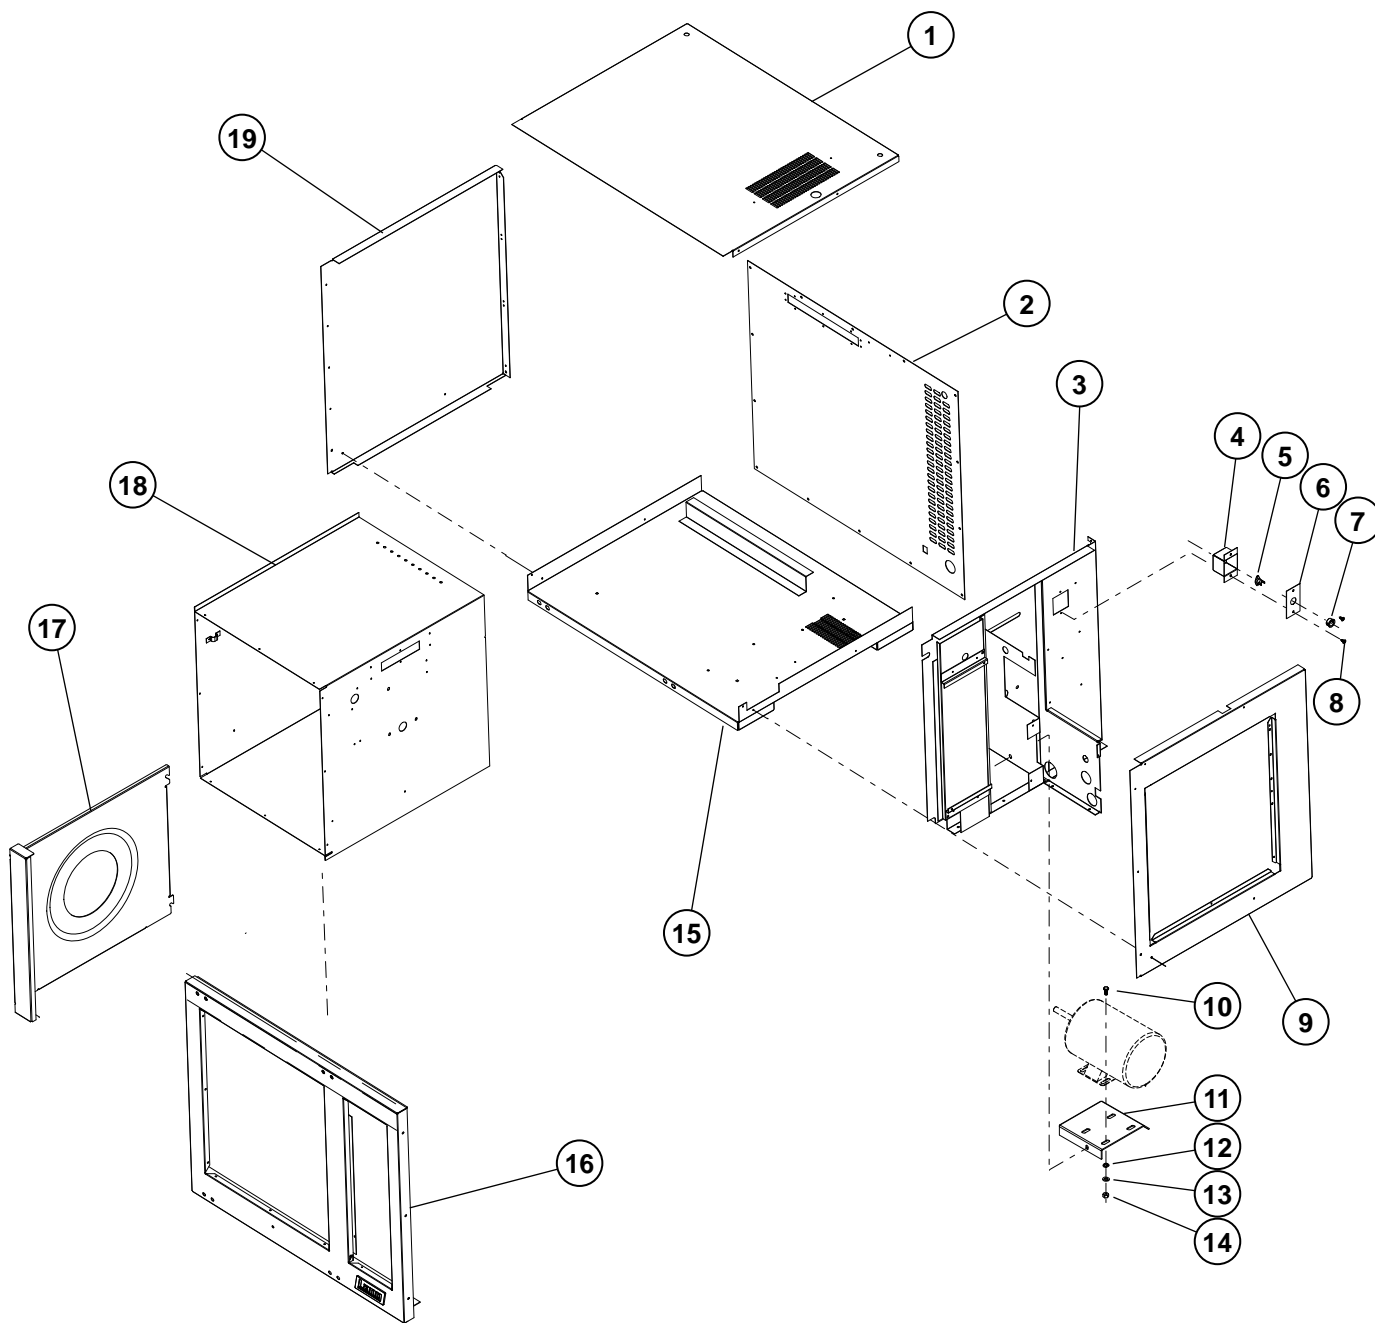

ECOH Body Assembly



# PARTS LIST

December 18, 2008 Rev D


**Model No: ECOH & RCOH, AP, PP & PT BODY PANELS  
Commercial & Marine Half Size Economy Convection Oven**

Key Number	Part Number	Qty Per	Description
1	Q9-60102-136	1	BODY TOP EH & HRDW ALL
2	Q9-60102-1361	1	BODY BACK EH & HRDW ALL
3	Q9-EH-119-2	1	FIREWALL - ASSY ALL
4	Q9-EH-135	1	SAFETY STAT BOX ALL
5	2T-30401-09	1	STAT FXD 500° DEG OPEN ALL
6	Q9-EH-136	1	SAFETY STAT COVER ALL
7	2K-70801-04	1	SNAP BUSH 3/4 SB750-10 BLK ALL
8	2C-20103-02	2	SCRW SM PLT 10 X .5 PHLSL ALL
9	Q9-60102-1364	1	BODY R/H SIDE EH & HRDW ALL
10	2C-20104-41	4	SCRW MACH 1/4-20X5/8 H/H ALL
11	Q9-EH-209	1	MOTOR MOUNT ALL
12	2C-20202-08	4	WSHR PLT 5/16 LOCK SPLIT ALL
13	2C-20201-09	4	WSHR PLT 5/16 FLAT SAE ALL
14	2C-20301-06	4	NUT HEX 5/16-18 PLTD ALL
15	Q9-EH-104-2	1	BOTTOM SPOT WELD ALL
16	Q9-EH-215-2	1	FRONT - ASSY REVERSIBLE ALL
17	Q9-EH-452-2	1	BAFFLE STD ALL
17	Q9-EH-452-3	1	BAFFLE ASSY STEAM STEAM
18	Q9-EH-374-3	1	CAN ASSY STD -[NEW RACK ALL
19	Q9-60102-1365	1	BODY L/H SIDE EH & HRDW ALL
<p><b>IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER</b></p> <p>Some items are included for illustrative purposes only and in certain instances may not be available.</p>			

PAGE 1  
OF 1



**Star Manufacturing International, Inc.**

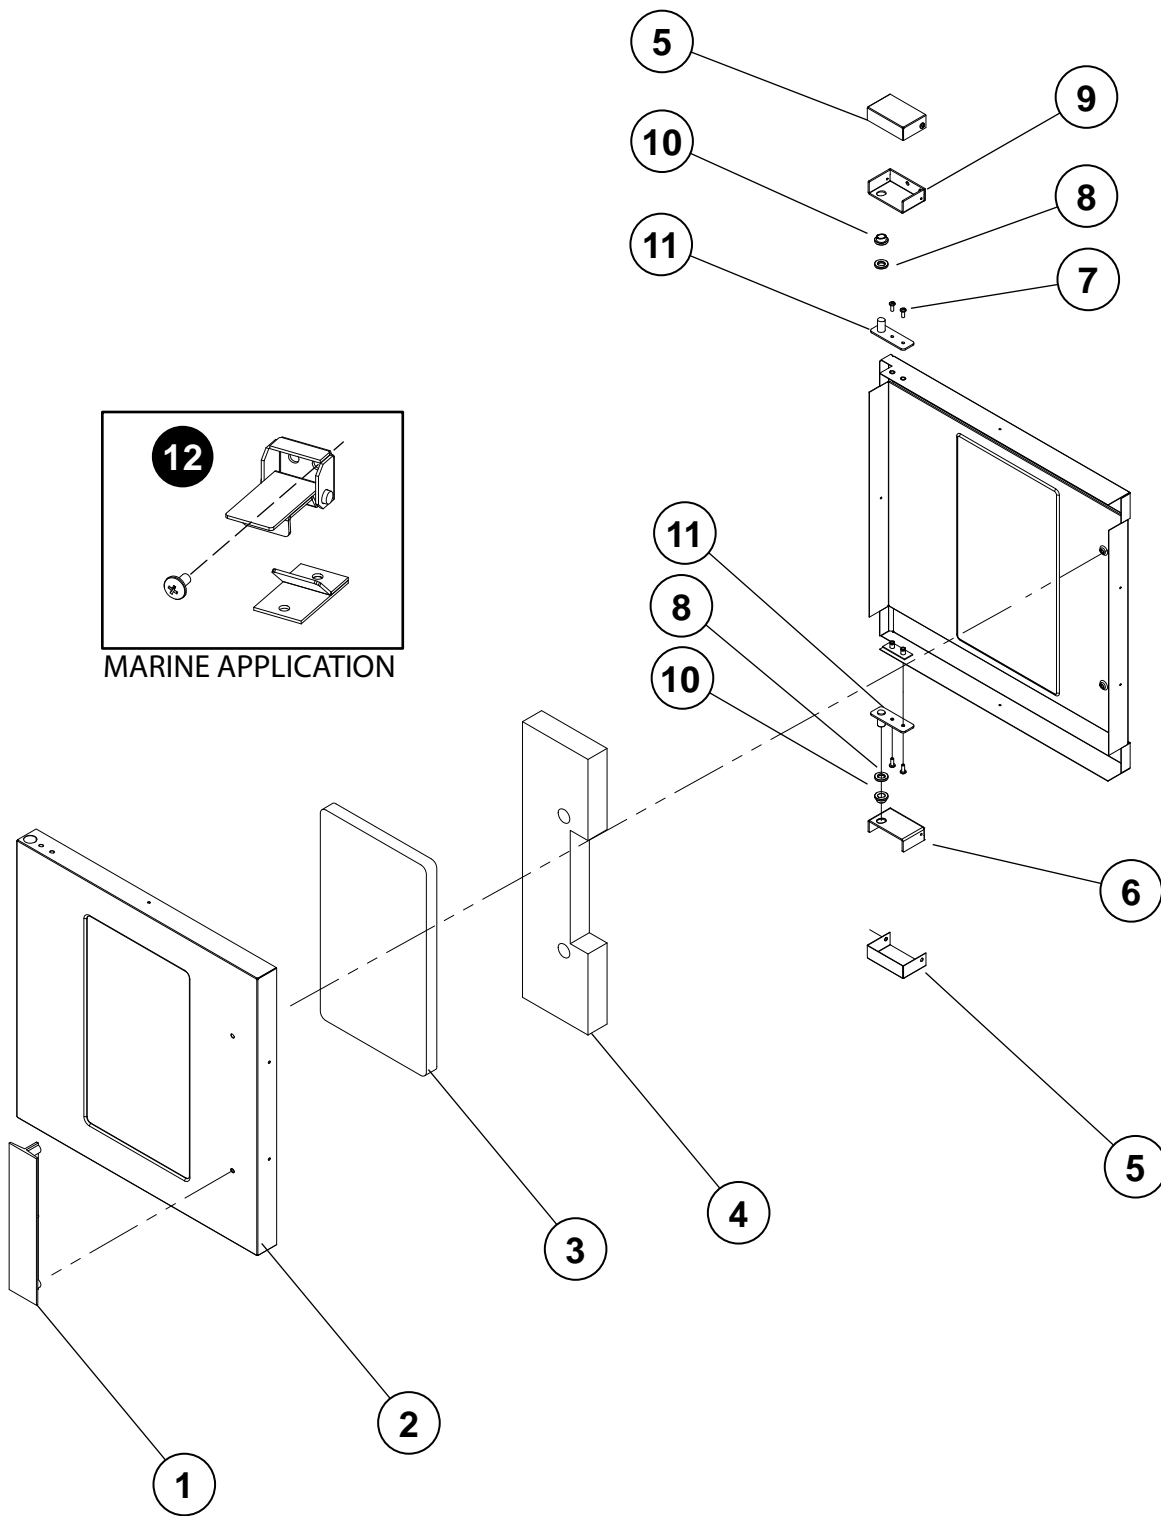

ECOH, RCOH Door Assembly

# PARTS LIST

December 18, 2008 Rev D


**Model No: ECOH & RCOH, AP, PP & PT DOOR ASSEMBLY  
Commercial & Marine Half Size Economy Convection Oven**

Key Number	Part Number	Qty Per	Description
1	2R-50800-12	1	DOOR T HANDLE 11 1/2 LNG ALL
2	Q9-60102-1362	1	OUTER DOOR EH NO/LOGO ALL
3	2Q-71301-04	1	WINDOW ASSY 9-5/8X16-5/8 ALL
4	2H-60106-17	1	INSULATION KIT EHS DOOR - ALL
5	Q9-EH-267	2	HINGE COVER ALL
6	Q9-EH-266	1	HINGE BOTTOM ALL
7	2C-20109-15	4	SCRW PHD MS SS 10-32X1/2 ALL
8	2P-70201-01	2	BRNZBR.505IDX.8750DX.175 ALL
9	Q9-EH-265	1	HINGE TOP ALL
10	2P-70201-19	2	BRNZBRFLN1/2IDX5/8ODX3/8 ALL
11	Q9-50313-031	2	HINGE PIN - WELD ALL
12	Q9-60102-370	1	DOOR LATCH ASSY MARINE MODELS

**IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED  
INCLUDE MODEL AND SERIAL NUMBER**

PAGE 1  
OF 1

Some items are included for illustrative purposes only and in certain instances may not be available.

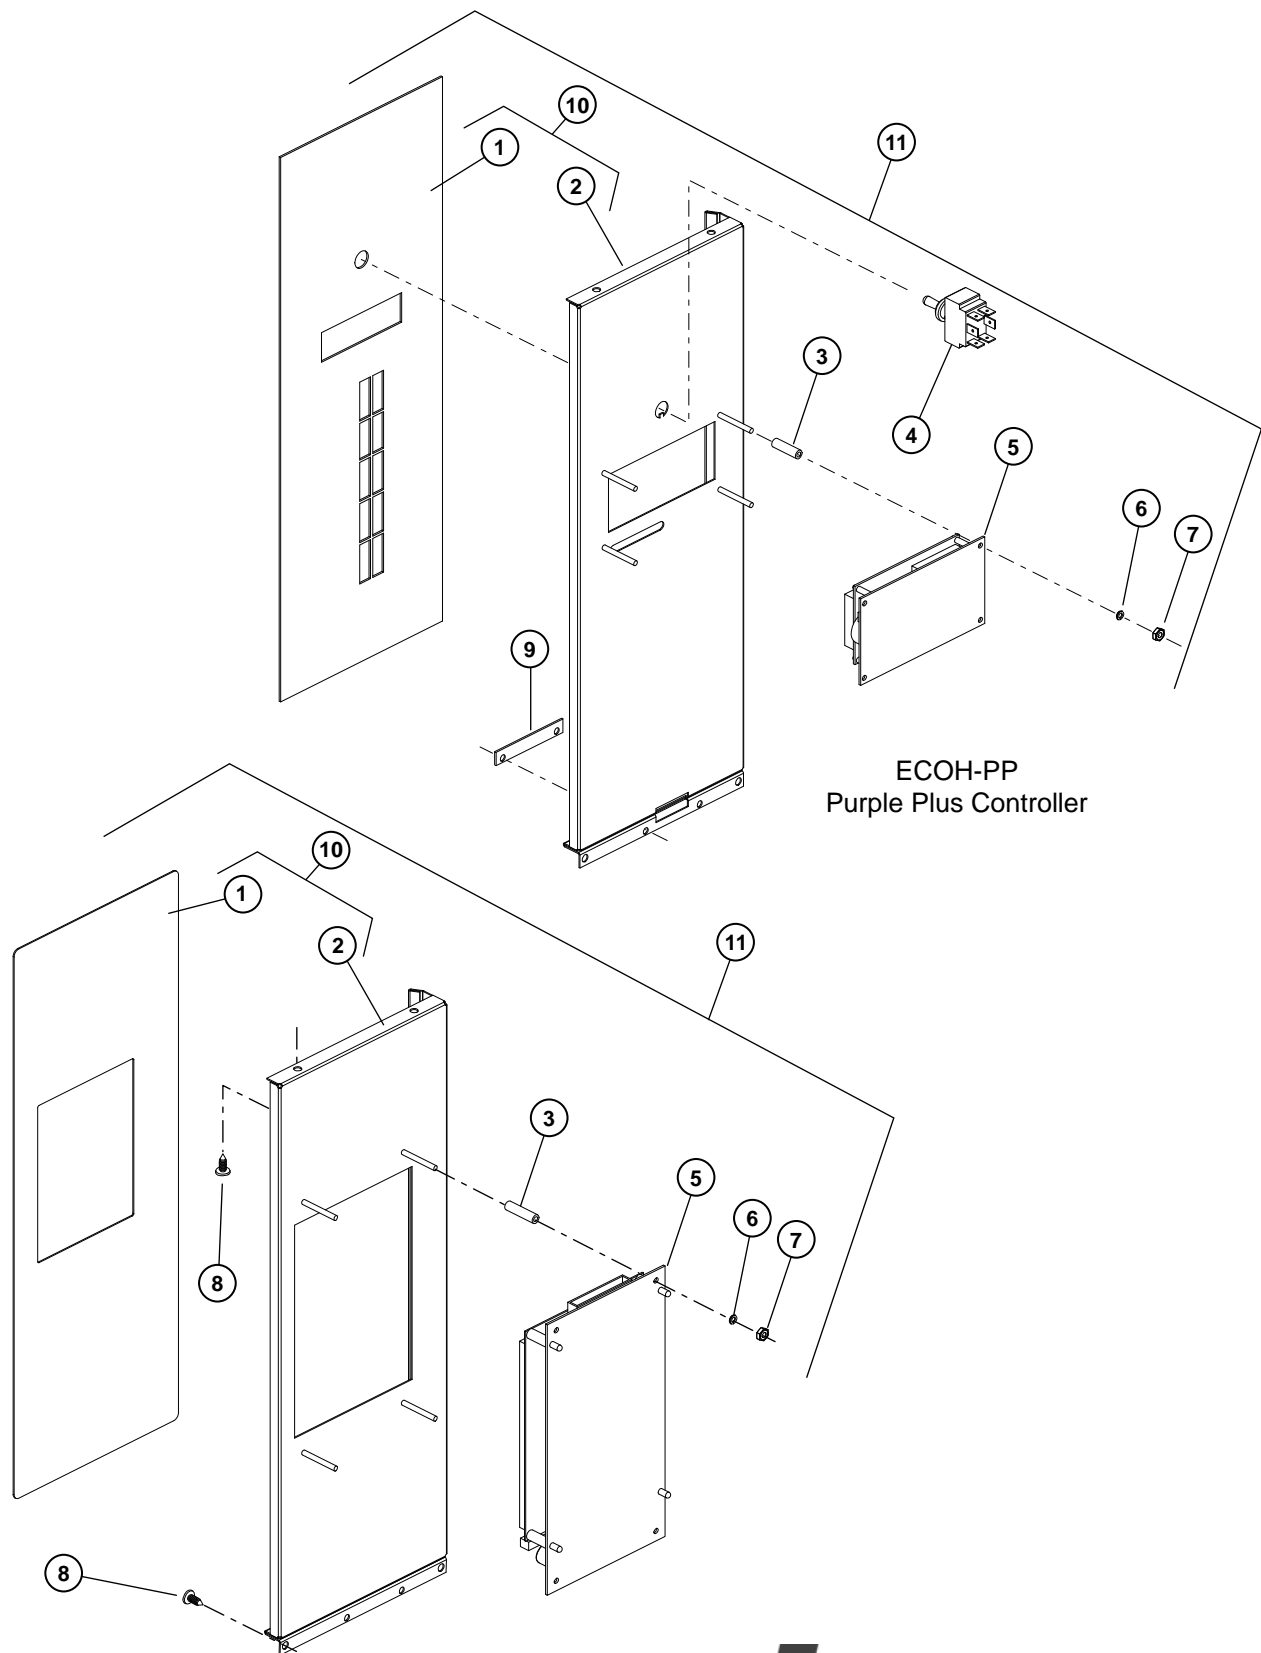

ECOH-PP  
Purple Plus Controller

ECOH-PT & RCOH-PT  
Platinum Controller

# PARTS LIST

December 18, 2008 Rev D


**Model No: ECOH & RCOH, PP & PT CONTROL ASSEMBLY  
Commercial & Marine Half Size Economy Convection Oven**

Key Number	Part Number	Qty Per	Description
1	2M-60301-117	1	SWITCH LBL EH 4X20 ECOH-PP
	2M-60301-118	1	SWITCH LBL EH PLATINUM ECOH-PT, RCOHPT
2	Q9-60101-7665	1	ECOH-PP / EHS-PP CNTRL FRNT W/PROTO ECOH-PP
	Q9-EH-516-1	1	CONTORL PANEL - EH-PT ECOH-PT-208V
3	2A-20504-01	4	SPACER NYLON #6 1/4 X 7/8 ECOH-PP
	2A-20504-02	4	SPACER NYLON #6 1/4 X 1" ECOH-PT, RCOHPT
4	2E-30303-06	1	SWT TOG ON-ON DPDT BLK ECOH-PP, ECOH-PT, RCOH-PT
5	2J-40102-24	1	DSPLY 4X20 MDL.DA170-001 ECOH-PP
	2J-40102-25	1	DSPLY 320X240 DB170-001 ECOH-PT, RCOHPT
6	2C-20205-02	4	.140#6IDX.2500DX.032 ALL
7	2C-20301-10	2	NUT HEX 6-32 PLTD ECOH-PP
	2C-20301-10	4	NUT HEX 6-32 PLTD ECOH-PT, RCOHPT
8	2C-20103-02	4	SCRW SM PLT 10 X .5 PHLSL TP A ALL
9	Q9-EH-519	1	COMPUTER STRIP HOLDER ECOH-PP
10	Q9-60101-7661	1	ECOH-PP / EHS-PP FRNT W/LABEL ECOH-PP
	Q9-60101-7662	1	ECOH-PT / EHS-PT FRNT W/LABEL ECOH-PT, RCOHPT
11	Q9-60101-765	1	ECOH-PT / EHS-PT CONTROL FRONT ECOH-PT, RCOHPT
	Q9-60101-766	1	ECOH-PP / EHS-PP CONTROL FRONT ECOH-PP
NI	2M-60301-128	1	PRODUCT STRIP PURP COMP ECOH-PP
NI	OB-60301-46	1	OBS PRDCT STRIP-BLU/PURP COMPH ECOH-PP

**IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED  
INCLUDE MODEL AND SERIAL NUMBER**

PAGE 1  
OF 1

Some items are included for illustrative purposes only and in certain instances may not be available.

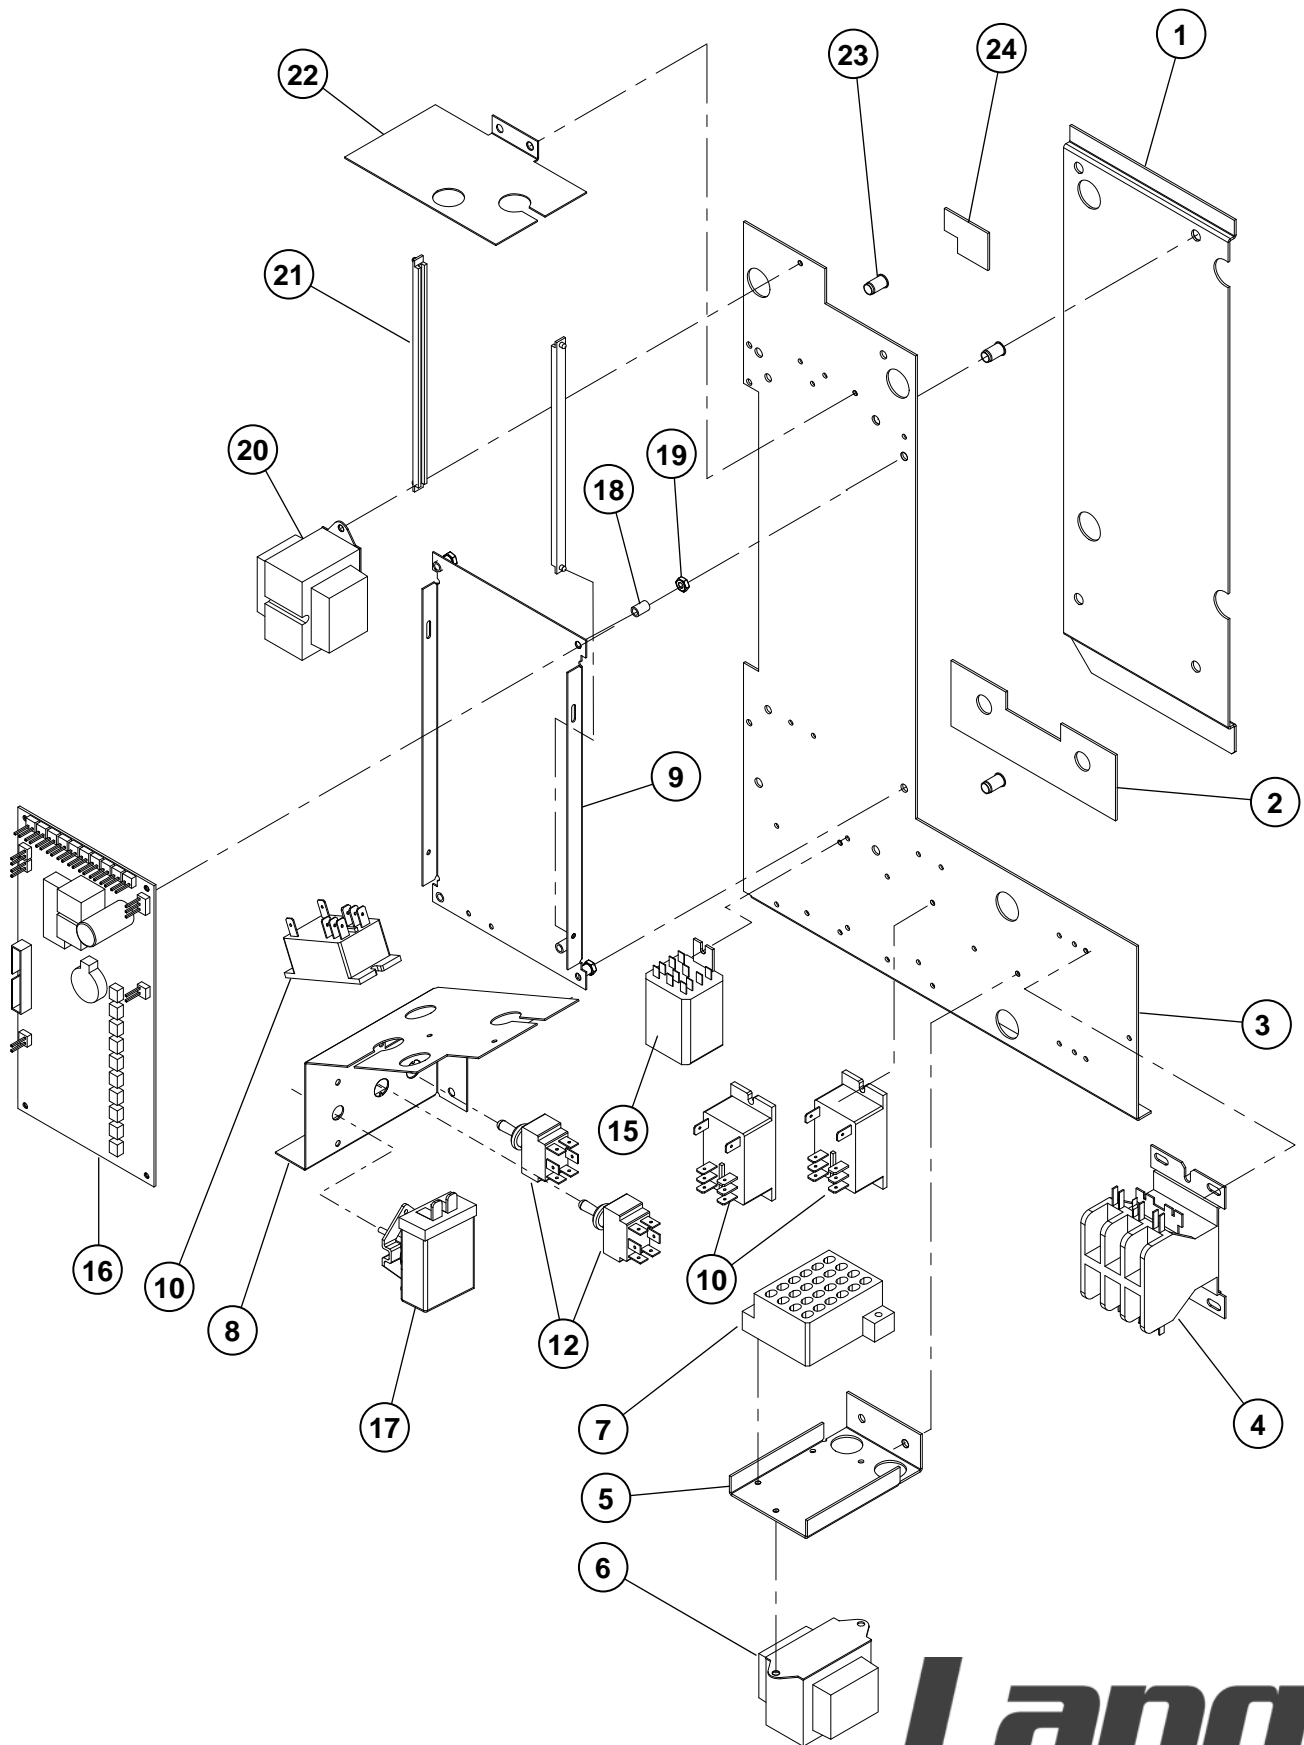

ECOH Controller Panel

# PARTS LIST

December 18, 2008 Rev D

## Model No: ECOH & RCOH, PP & PT CONTROL PANEL ASSEMBLY Commercial & Marine Half Size Economy Convection Oven

Key Number	Part Number	Qty Per	Description
1	Q9-EH-495	1	COMPUTER CONTROL SLIDE
2	Q9-EH-495-1	1	SLIDE CLIP A
3	Q9-EH-505	1	COMPONENT MOUNT C,P,PP
4	2E-30700-06	1	CONTC3POLE35A24VAC50/60HZ
5	Q9-EH-507	1	TERMINAL BLOCK MOUNT
6	2E-31400-04	1	XFRMR 480/240VAC 100VA
	2E-31400-07	1	XFORMR120-208-240/24V40VA
7	2E-30503-01	1	TRM BLOCK 24 POS QK CON
8	Q9-EH-509	1	SWITCH BRACKET
9	Q9-50307-47	1	CPU MOUNT
10	2E-30701-05	3	CONTC 2POLE 30A 24VAC P &
12	2E-30303-06	2	SWT TOG ON-ON DPDT BLK
15	2E-30600-02	1	RELAY 240VAC 3FORMC FLNG
16	2J-40102-26	1	MAIN BOARD, MDL.CA170-001
17	2T-30402-27	1	STAT ADJ 450 DEG 48 PILOT
18	2A-20501-01	5	SPCR FBR 1/4 OD #8 ID 3/8
19	2C-20301-10	2	NUT HEX 6-32 PLTD
20	Y9-31400-26-1	1	XFORMR 208-240/24-12 40VA
21	2E-41800-02	2	PCB GUIDE 6.675 LG
22	Q9-EH-513	1	24V TRANSFORMER SHIELD
23	2C-20306-03	4	AVK CAD 10-32 1ST GRP
24	Q9-EH-495-2	1	SLIDE CLIP B
NI	Q9-40102-51-1	1	FILTER BOARD PHANTOM -
NI	Q9-ECCOPPP-C	1	PANEL ECCO 208/240V
NI	Q9-ECCOPPT-C	1	PANEL ECCO 208/240V
NI	Q9-ECCOPPT-U	1	PANEL ECCO 480V PLATINUM

**IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED  
INCLUDE MODEL AND SERIAL NUMBER**

PAGE 1  
OF 1

Some items are included for illustrative purposes only and in certain instances may not be available.



**Star Manufacturing International, Inc.**

**STAR MANUFACTURING**

10 Sunnen Drive, St. Louis, MO 63143 U.S.A.

(800) 807-9054    (314) 781-2777

Parts & Service (800) 807-9054

[www.star-mfg.com](http://www.star-mfg.com)