

Operating Instructions:



1. Plug unit in.



2. Insert arm of machine into bowl, up to 2/3 of the mixer arm's length. Do not let the foot of the machine touch the bottom of the bowl.



3. To prevent food getting inside the motor, **DO NOT** incline machine more than 30°.



4. Press Start button and Safety button at the same time. Releasing the Start button will cause the machine to stop operating.



5. While the machine is running, press the Lock button. After the Lock button is depressed, the Start button may be released and the machine will continue to operate.



6. Pressing the Start button again will shut off machine.

Cleaning Instructions:



1. Immediately after use, place 2/3 of the mixer arm into hot water and switch on for a few seconds.



2. To remove mixer arm, turn the mixer clockwise until the arm separates from the motor set.



3. The mixer blade must be cleaned with hot water and mild detergent, leaving the blade submerged for 30 minutes.



4. Rinse the mixer arm and blade with warm water to remove any residue.



5. Allow mixer arm and blade to air dry.



6. Motor must only be cleaned with a damp cloth.

UNDER NO CIRCUMSTANCES MUST WATER ENTER THE MOTOR SET!
TECHNICAL SERVICE HOTLINE: (800) 678-9511