
JetStar® COUNTER POPCORN POPPER

MODEL 39 & 86 Series

Installation and Operation Instructions

2M-Y8397 Rev. O 4/28/11

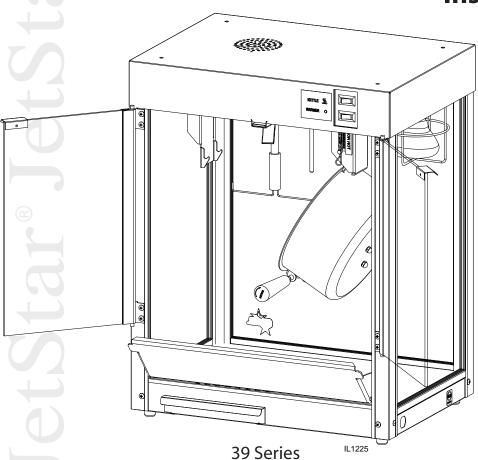











These symbols are intended to alert the user to the presence of important operating and maintenance instructions in the manual accompanying the appliance.

RETAIN THIS MANUAL FOR FUTURE REFERENCE NOTICE

Using any part other than genuine Star factory supplied parts relieves the manufacturer of all liability.

Star reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.

Due to periodic changes in designs, methods, procedures, policies and regulations, the specifications contained in this sheet are subject to change without notice. While Star International Holdings Inc., Company exercises good faith efforts to provide information that is accurate, we are not responsible for errors or omissions in information provided or conclusions reached as a result of using the specifications. By using the information provided, the user assumes all risks in connection with such use.


MAINTENANCE AND REPAIRS

Contact your local authorized service agent for service or required maintenance.

Please record the model number, serial number, voltage and purchase date in the area below and have it ready when you call to ensure a faster service.


Authorized Service Agent Listing

Model No.	Reference th	e listing provided with the unit		
Serial No.	or			
Voltage	for an updated listing go to:			
Purchase Date	Website: E-mail	www.star-mfg.com Service@star-mfg.com		
T dionase Date	Service Help Desk			
	Business Hours:	8:00 am to 4:30 p.m. Central Standard Time		
	Telephone:	(314) 678-6303		
	Fax:	(314) 781-2714		
	E-mail	Parts@star-mfg.com Service@star-mfg.com Warranty@star-mfg.com		
	Website:	www.star-mfg.com		
	Mailing Address:	Star International Holdings Inc., Company 10 Sunnen Drive St. Louis, MO 63143 U.S.A		

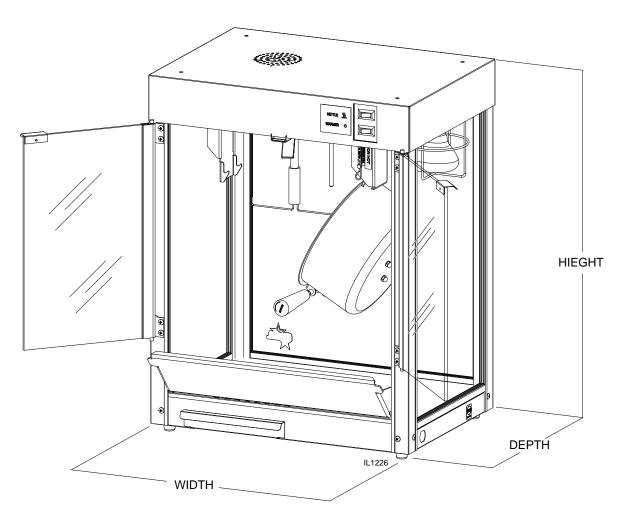

SPECIFICATIONS											
Model	Electrical			Cord	Size			Weight			
	Voltage	Amps	Watts	Cord	Width	Depth	Height	Installed	Shipped		
				39 SERIES							
8C-39-A-120V	120V	10	1197	NEMA 5-15P	19.5"						
8C-39-A-240V	240V	4.8	1147	NEMA 6-15P	49.5 cm						
8C-39-A-240VE	230V	4.8	1100	CEE7/VII	17.0 0111						
8C-39D-A-120V	120V	10	1197	NEMA 5-15P							
8C-39D-A-230CE	230V	4.8	1100	CEE7/VII	21"						
8C-39D-A-240V	240V	4.8	1147	NEMA 6-15P	53.3 cm						
8C-39D-A-240VE	230V	4.8	1100	CEE7/VII		14.25"	25.125"		56 lbs 25.4 kg		
8C-39R-A-120V	120V	10	1197	NEMA 5-15P			63.8 cm				
8C-39R-A-230CE	230V	4.8	1100	CEE7/VII	10 5"						
8C-39S-A-120V	120V	10	1197	NEMA 5-15P							
8C-39S-A-240V	240V	4.8	1147	NEMA 6-15P	19.5" 49.5 cm						
8C-39S-A-240VE	230V	4.8	1100	CEE7/VII	47.5 (111						
8C-39S-AS-120V	120V	10	1197	NEMA 5-15P							
8C-39S-GWP-120V	120V	10	1197								
86 SERIES											
8C-86S-120V	120V	10	1197	NEMA 5-15P							
8C-86SS-120V	1201	10	1171	INCINIA 3-13F	INCINIA 3-13F	19.5"	14.25	30.5"	54 lbs	65 lbs	
86S-230CE	230V	4.8	1100	1100	1100	CEE7/VII	49.5 cm	36.2 cm	77.5 cm	24.5 kg	29.5 kg
86SS-230CE	23UV	4.0		CEE//VII	CEE//VII						

FEATURES

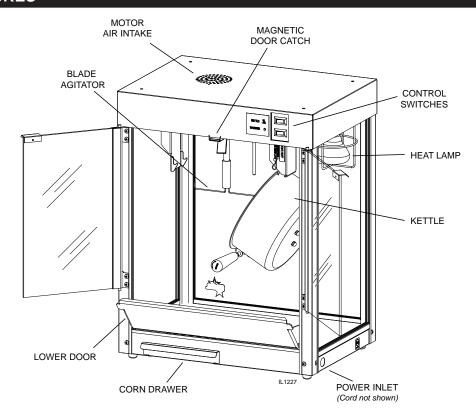




This equipment is designed and sold for commercial use only by personnel trained and experienced in its operation and is not sold for consumer use in and around the home nor for use directly by the general public in food service locations. For equipment to be used by the general public, please contact the factory.

Before using your new equipment, read and understand all the instructions & labels associated with the unit prior to putting it into operation. Make sure all people associated with its use understand the units operation & safety before they use the unit.

All shipping containers should be checked for freight damage both visible and concealed. This unit has been tested and carefully packaged to insure delivery of your unit in perfect condition. If equipment is received in damaged condition, either apparent or concealed, a claim must be made with the delivering carrier.

Concealed damage or loss - if damage or loss is not apparent until after equipment is unpacked, a request for inspection of concealed damage must be made with carrier within 15 days. Be certain to retain all contents plus external and internal packaging materials for inspection. The carrier will make an inspection and will supply necessary claim forms.

GENERAL INSTALLATION INSTRUCTIONS

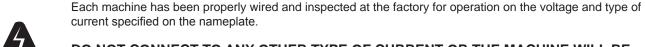



DO NOT CONNECT TO ANY OTHER TYPE OF CURRENT OR THE MACHINE WILL BE SERIOUSLY DAMAGED.

120 VOLT MACHINES

Machines with a nameplate stamped 120V are equipped for operation on 120 volt 60 hertz AC single phase service and must be connected to a 3 wire grounded, polarized receptacle.

230 VOLT MACHINES

Machines with a nameplate stamped 230CE are equipped for operation on 230 volt 50 hertz AC single phase service and must be connected to a 3 wire grounded receptacle.

DISPLAY SIGN

The display sign is shipped inside the cabinet. It can be located on the front glass or on the rear doors. If installed on the rear doors, cut the sign after installation to allow the doors to open.

GENERAL OPERATING INSTRUCTIONS



The motor air intake hole located on top of the machine must be clear of any obstructions.

DO NOT COVER THIS AIR VENT HOLE AS SERIOUS MOTOR DAMAGE WILL RESULT.

Make sure the corn drawer is in place on the machine before starting the popping cycle. With all switches in the **CAUTION** "OFF" (0) position, proceed in the following sequence to pop corn:

- 1. Turn "ON" (1) the corn warming switch / lamp.
- 2. Turn "ON" (1) the kettle / motor switch. Allow six or seven minutes to pre-heat the kettle. Thermostat adjustments should not be necessary as it has been preset at the factory for the correct popping temperature.
- 3. Corn and oil measuring cups are supplied with your machine. Pour a level measuring cup of oil (two ounces) in kettle. Add 6 ounces of raw corn for the 39 Series models or 8 ounces of raw corn for the 86S Series models and 1/2 teaspoon of popcorn salt. Vary the amount of salt and oil to suit taste. If desired, salt may be added after the corn is popped.
- 4. When the corn stops popping (about 2 1/2 minutes), dump the kettle immediately by turning the handle clockwise approximately 90 degrees to release latch. Recharge as quickly as possible. Screen out unpopped kernels over the perforated section of the corn pan.
- 5. Turn the kettle switch off (0) when the desired amount of popping is completed.



DO NOT LEAVE THE KETTLE SWITCH "ON" (1) WHEN THE MACHINE IS NOT IN USE.

DO NOT IMMERSE KETTLE IN WATER OR ALLOW WATER TO COME IN CONTACT WITH THE HEATING ELEMENT.

POPPING CORN IN DRY KETTLE IS NOT RECOMMENDED.

KEEPING THE POPPING UNIT CLEAN

After each popping period, wipe the inside and outside of the kettle while it is warm (not hot) with a clean cloth. This is important to keep salt, seasoning, oil from forming a carbonized material which not only lowers popping efficiency but can cause excessive smoking or damage the kettle. For retaining the high luster on the stainless steel kettle shell and lids, use a non-abrasive standard stainless steel cleaner when the kettle is cold. Use a damp cloth and a warm mild soap solution to clean the clear glass and plastic surfaces.

TO REMOVE KETTLE:

Allow kettle to cool or use heat insulated gloves to remove a hot kettle. Turn off the kettle switch. Disconnect the twist lock cap at the end of the kettle conduit, turn kettle handle clockwise 90 degrees to unlatch the kettle. Remove the hitch pin clip from the kettle hinge pin, hold the kettle and pull out the hinge pin. The kettle can now be removed from the unit. Do not place the kettle in water as this will damage the electrical assembly.

MAINTENANCE AND REPAIRS

Contact the factory, a service representative or a local service company for service or required maintenance.

THOROUGHLY INSPECT YOUR UNIT ON ARRIVAL

This unit has been tested for proper operation before leaving our plant to insure delivery of your unit in perfect condition. However, there are instances in which the unit may be damaged in transit. In the event you discover any type of damage to your product upon receipt, you must immediately contact the transportation company who delivered the item to you and initiate your claim with same. If this procedure is not followed, it may affect the warranty status of

LIMITED EQUIPMENT WARRANTY

All workmanship and material in Star products have a one (1) year limited warranty on parts & labor in the United States and Canada. Such warranty is limited to the original purchaser only and shall be effective from the date the equipment is placed in service. Star's obligation under this warranty is limited to the repair of defects without charge, by the factory authorized service agency or one of its sub-agencies. Models that are considered portable (see below) should be taken to the closest Star service agency, transportation prepaid.

- > Star will not assume any responsibility for loss of revenue.
- > On all shipments outside the United States and Canada, see International Warranty.
- * The warranty period for the JetStar six (6) ounce & Super JetStar eight (8) ounce series popcorn machines is two (2) years.
- * The warranty period for the Chrome-Max Griddles is five (5) years on the griddle surface. See detailed warranty provided with unit.
- * The warranty period for Teflon/Dura-Tec coatings is one year under normal use and reasonable care. This warranty does not apply if damage occurs to Teflon/Dura-Tec coatings from improper cleaning, maintenance, use of metallic utensils, or abrasive cleaners, abrasive pads, product identifiers and point-of-sale attachments, or any other non-food object tha comes in continuous contact with the roller coating. This warranty does not apply to the "non-stick" properties of such materials.
- > This warranty does not apply to "Special Products" but to regular catalog items only. Star's warranty on "Special Products" is six (6) months on parts and ninety (90) days on labor.
- > This warranty does not apply to any item that is disassembled or tampered with for any purpose other than repair by a Star Authorized Service Center or the Service Center's sub-agency.
- > This warranty does not apply if damage occurs from improper installation, misuse, wrong voltage, wrong gas or operated contrary to the Installation and Operating instructions.
- > This warranty is not valid on Conveyor Ovens unless a "start-up/check-out" has been performed by a Factory Authorized Technician.

PARTS WARRANTY

Parts that are sold to repair out of warranty equipment are warranted for ninety (90) days. The part only is warranted. Labor to replace the part is chargeable to the customer.

SERVICES NOT COVERED BY WARRANTY

- Travel time and mileage rendered beyond the 50 mile radius limit
- Mileage and travel time on portable equipment (see below)
- Labor to replace such items that can be replaced easily during a daily cleaning routine, ie; removable kettles on fryers, knobs, grease drawers on griddles, etc.
- 4 Installation of equipment
- Damages due to improper installation
- Damages from abuse or misuse
- Operated contrary to the Operating and Installation Instructions
- Cleaning of equipment 8.
- Seasoning of griddle plates

- 10. Voltage conversions
- 11. Gas conversions
- Pilot light adjustment Miscellaneous adjustments
- Thermostat calibration and by-pass adjustment
- Resetting of circuit breakers or safety controls or reset buttons
- Replacement of bulbs
- 17. Replacement of fuses
- Repair of damage created during transit, delivery, & installation OR created by acts of God

PORTABLE EQUIPMENT

Star will not honor service bills that include travel time and mileage charges for servicing any products considered "Portable" including items listed below. These products should be taken to the Service Agency for repair:

- * The Model 510FD Fryer.
- * The Model 526TOA Toaster Oven.
- * The Model J4R, 4 oz. Popcorn Machine.
- * The Model 518CMA & 526CMA Cheese Melter.
- * The Model 12MC & 15MC & 18MCP Hot Food Merchandisers.
- * The Model 12NCPW & 15NCPW Nacho Chip/Popcorn Warmer.
- * All Hot Dog Equipment except Roller Grills & Drawer Bun Warmers.
- * All Nacho Cheese Warmers except Model 11WLA Series Nacho Cheese Warmer.
- * All Condiment Dispensers except the Model HPD & SPD Series Dispenser.
- * All Specialty Food Warmers except Model 130R, 11RW Series, and 11WSA Series.
- * All QCS/RCS Series Toasters except Model QCS3 & RCS3 Series.
- * All Fast Steamer Models except Direct Connect Series.

- ALL:
- * Pop-Up Toasters
- * Butter Dispensers
- * Pretzel Merchandisers (Model 16PD-A Only)

Email: service@star-mfg.com


- * Pastry Display Cabinets
- * Nacho Chip Merchandisers
- * Accessories of any kind
- * Sneeze Guards
- * Pizza Ovens
- (Model PO12 Only) * Heat Lamps
- * Pumps-Manual

The foregoing warranty is in lieu of any and all other warranties expressed or implied and constitutes the entire warranty.

FOR ASSISTANCE

Should you need any assistance regarding the Operation or Maintenance of any Star equipment; write, phone, fax or email our Service Department. In all correspondence mention the Model number and the Serial number of your unit, and the voltage or type of gas you are using.

2M-4497-2 10/2010

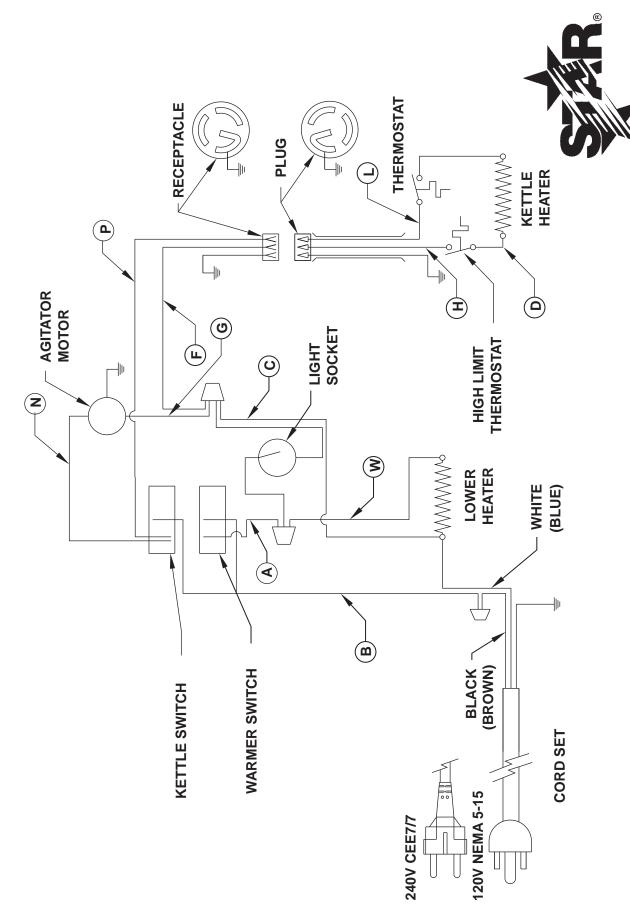


MODEL: WIRE DIAGRAM, 39A, 86S

THIS DRAWING CONTAINS INFORMATION CONFIDENTIAL TO STAR MFG. INT'L. INC. NO REPRODUCTION OR DISCLOSURE OF ITS CONTENTS IS PERMITTED.

STAR MANUFACTURING INTERNATIONAL INC. SK1148 Rev C 02/28/2005

02/28/2005

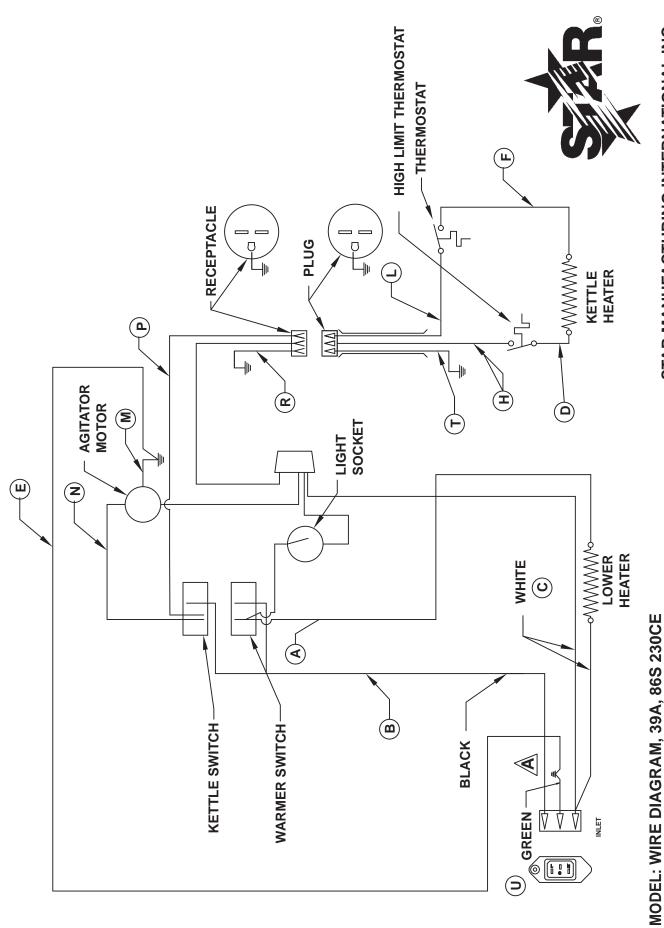


STAR MANUFACTURING INTERNATIONAL INC. SK1317 Rev B 01/04/1996

01/04/1996


THIS DRAWING CONTAINS INFORMATION CONFIDENTIAL TO STAR MFG. INT'L. INC.

NO REPRODUCTION OR DISCLOSURE OF ITS CONTENTS IS PERMITTED.

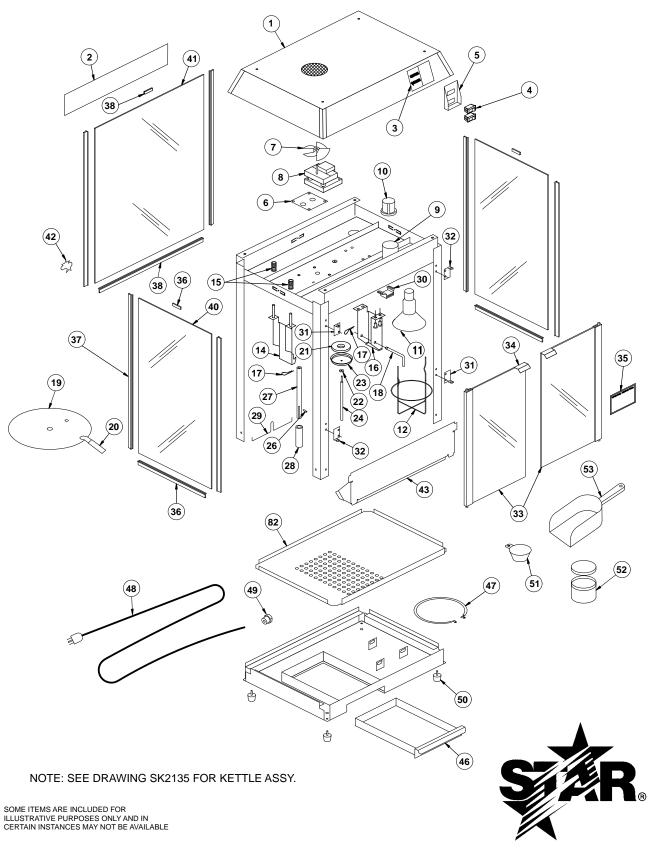

MODEL - 39-A & 86S, 120V/230CE

STAR MANUFACTURING INTERNATIONAL, INC.

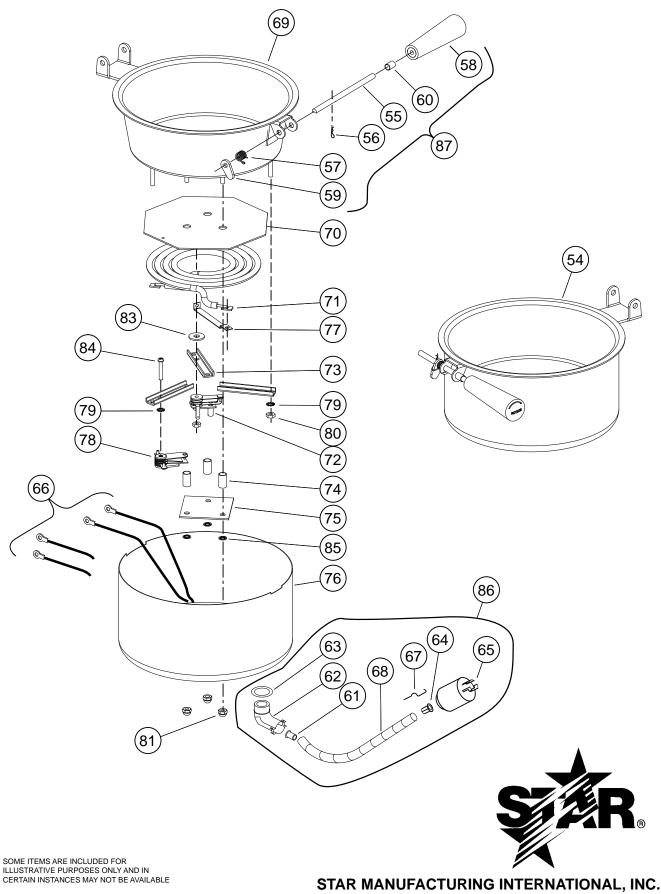

SK2135

PAGE <u>1</u> OF <u>3</u>

39A, 39D-A, 39S-A, 39S-AS 39R-A, 39S-GWP 6 oz. Popcorn Popper

MODEL 86S, 86SS 8 oz. Popcorn Popper

Key	Part	Number Per		
Number	Number	Unit	Description and Model De	esignation
1	C3-T1085	1	TOP - YELLOW	39-A
	C3-T1086	1	TOP - SPOTWELDED, STAINLESS STEEL	39S-A, 39S-AS, 86S, 86SS
	C3-T1087	1	TOP - WOODGRAIN	39D-A
	C3-T1093	1 1	TOP - RED	39R-A
2	2M-Y7447	1 1	SIGN DISPLAY-OLD STYLE	39D-A
_	2M-Y9641	2	SIGN DISPLAY	39S-GWP
	2M-Z0355	1	SIGN DISPLAY	39A, 39S-A, 86S, 86SS
	2M-Y8642	1	SIGN DISPLAY	39R-A
3	2M-Z0090	1	LABEL-SWITCHES	
4	2E-Y6144	3	SWITCH- (3967003 : BELOW)	
.	2E-Z0091	3	SWITCH- (3967004 : ABOVE)	
	2E-Z0091	2	SWITCH - "1"/"0"	
5	C3-Z0265	1	PLATE, SWITCH	
6	2I-Y6709	i 1	CUSHION-MOTOR	
7	2R-Y4810		FAN-BLADE (OLD STYLE, NON-MERKLE-KOI	REE MOTORS)
8	PS-39408		2U-Y6914, 39&86 RPL. MOTOR KIT	mfg before 6-9-10
0	2U-Z12380		MOTOR, GEAR 120V, FAN INCLUDED	mfg after 6-9-10
	PS-39411		2U-Y6926, 39&86 RPL. MOTOR KIT (230CE)	illig alter 0-9-10
9	2E-T1042		RECEPTACLE T/L (120V)	
9	2E-71042 2E-Z0089		RECEPTACLE, STRAIGHT BLADE (230CE)	
10	2E-20069 2E-Y5921		LAMP SOCKET (120V)	
10			LAMP SOCKET (120V)	
11	2E-Y9433		,	
11	2S-Y4584		LAMP (220CF ONLY) 75W	
10	2S-Y8091		LAMP (230CE ONLY) SHIELD-LAMP	
12 14	2B-Y7619		KETTLE LATCH ASSEMBLY	
	2D-4P1004	I I		
15 16	2P-Y6918	2 1	SPRING LATCH	
17	2V-Y7486	2	BRACKET KETTLE CLIP-SHAFT	
	2A-Y6694	1 1		
18	2A-Y4595		KETTLE COVER ASSEMBLY	
19	C3-39214		KETTLE COVER ASSEMBLY	
20	2R-Y7571		COVER TAB	
21	2R-Y7229	1 1	MAGNET	
22	2A-Y7460	1 1	SPACER-MAGNET CUP	
23	C3-Y7230	1 1	CUP-MAGNET	
24	2A-z4466	1 1	GUIDE-COVER	
26	2C-T1008	1 1	GROOVE PIN	
27	2A-Y6919	1 1	SHAFT 6 11/16"	
28	2A-Y6916	1 1	COLLAR-AGITATOR (2-1/2")	
29	2B-Y6206	1 1	BLADE-AGITATOR (6-1/2")	
30	2C-9788	1 1	MAGNET CATCH	ALL EVOEDT COD A
31	C3-Y7446	2	BRACKET HINGE RIGHT	ALL EXCEPT 39D-A
	C3-Y7459	2	BRACKET HINGE RIGHT	39D-A
32	C3-Y7377	2	BRACKET HINGE LEFT	ALL EXCEPT 39D-A
	C3-Y7458	2	BRACKET HINGE LEFT	39D-A
33	C3-39207	2	DOOR AND HINGE ASSEMBLY	39R-A
	C3-39211	2	DOOR AND HINGE ASSEMBLY	39A, 39S-A, 39S-GWP, 86S
	C3-39401	2	DOOR AND HINGE ASSEMBLY	39D-A
	C3-39245	1	DOOR & HINGE ASSY - SELF SERVE RIGHT	
	C3-39238	1	DOOR & HINGE ASSY - SELF SERVE LEFT	86SS
34	C3-Y7475	2	PULL DOOR	
35	2M-Y1755	1	SIGN-OPERATING INSTRUCTIONS	
36	2I-Y7393	4	CHANNEL GLASS (SIDE-TOP & BOTTOM)	39D-A



IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED

INCLUDE MODEL AND SERIAL NUMBER

MODEL 86S, 86SS 8 oz. Popcorn Popper

Key	Part	Number Per	Description and Madel De	oignotion
Number	Number	Unit	Description and Model De	esignation
	2I-Y7442	4	CHANNEL GLASS (SIDE-TOP & BOTTOM)	ALL EXCEPT 39D-A
37	2I-Y7394	6	CHANNEL GLASS (UPRIGHT)	39D-A
	2I-Y7443	6	CHANNEL GLASS (UPRIGHT)	39R-A, 39A, 39S-A,
	2I-Z0160	6	CHANNEL GLASS (UPRIGHT)	86S, 86SS
38	2I-Y7395	2	CHANNEL GLASS (FRONT-TOP & BOTTOM)	39D-A
	2I-Y7444	2	CHANNEL GLASS (FRONT-TOP & BOTTOM)	ALL EXCEPT 39D-A
39	C3-8260	3	RETAINER-GLASS	
40	2Q-Y7372	2	GLASS-SIDE (1/8" x 11-5/8" x 20-3/8")	39S-A, 39A, 39R-A, 39D-A
	2Q-Z0161	2	GLASS-SIDE (1/8" x 11-3/8" x 25-3/8")	86S, 86SS
41	2Q-Y7373	1	GLASS-FRONT (1/8" x 17-3/8" x 20-3/8")	39S-A, 39A, 39R-A, 39D-A
	2Q-Z0162	1	GLASS-FRONT (1/8" x 17-3/8" x 25-3/8")	86S, 86SS
42	2M-Y7480	1 1	LABEL-STAR EMBLEM	
43	C3-Y8218	1 1	LOWER DOOR (3966461:BELOW)	39S-A, 39A, 39R-A, 39D-A
	ALSO NEED			
	C3-39222	1	ASSY POST FILLER RIGHT SIDE	
.	C3-39223	1	ASSY POST FILLER LEFT SIDE	
	C3-Y8218	1	LOWER DOOR (3966462:ABOVE)	39S-A, 39A, 39R-A, 39D-A
	C3-Z0171	1	LOWER DOOR	86S, 86SS
46	C3-Y7483	1	CORN DRAWER	
47	2N-Y4306	1 1	ELEMENT (120V ONLY) 50W	
	2N-Y8077	1	ELEMENT (230CE ONLY)	
48	C3-39111	1	LEAD IN CORD 120V	
	2E-Z0512	1	LEAD IN CORD 230CE	
49	2K-Y2967	1	BUSHING HEYCO 120V	
	2E-Y9227	1	INLET 240VE	
50	2I-H7685	4	BUMPER	
51	2L-Y4639	1	CUP-MEASURE 1/4 CUP OIL (not included in a	
52	2L-Y4640	1	CUP-MEASURE 3/4 CUP CORN (not included	in all models)
53	2L-Y4916	1	SCOOP-CORN	
54-79, 82-85		1 1	KETTLE ASSEMBLY COMPLETE 120V	7 LBS SHIPPING
	C3-39219	1	KETTLE ASSEMBLY COMPLETE 240V	7 LBS SHIPPING
	C3-39235	1 1	KETTLE ASSEMBLY COMPLETE 230CE	7 LBS SHIPPING
55	2A-Z4525	1 1	ROD-HANDLE	
56	2B-Y6139	1	CLIP-HANDLE	
57	2P-Y6141	1	SPRING-HANDLE	
58	2R-Y7381	1	HANDLE-KETTLE	
59	C3-Y5378	1	CAM	
60	2A-Y6142	1	SLEEVE-HANDLE	
61	2A-Y6627	1	BUSHING	
62	2E-1177	1	CONNECTOR	
63	2E-Y4967	1	WASHER	
64	2K-1057	1	BUSHING ANTI-SHORT	
65	2P-8354	1 1	CAP T/L 120V	
	2P-Z0017	1	PLUG, STRAIGHT BLADE 230CE	
66	2E-Z4458	1	WIRE KIT KETTLE ASSEMBLY (120V)	
	2E-Z4461	1	WIRE KIT KETTLE ASSEMBLY (230CE)	
67	C3-Y3045	1	GROUND STRAP (120V)	
	C3-39234	1	WIRE ASSEMBLY - GROUND (230CE)	
68	C3-Y6634	1	CONDUIT	
69	C3-39208-PS	1	KETTLE ASSEMBLY-LINER	
	C3-39179	1 1	PLATE HEAT SINK ASSEMBLY	
70 71	2N-Y7413		ELEMENT 1000W 120V	14.41 ohms

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER

 $\begin{array}{cc} \text{PAGE} & \underline{2} \\ \text{OF} & \underline{3} \end{array}$

Some items are included for illustrative purposes only and in certain instances may not be available.



MODEL 86S, 86SS 8 oz. Popcorn Popper

Key	Part	Number	Description
Number	Number	Per	
72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87	2N-Y7414 2T-Y7422 2T-Y9453 C3-Y7361 C3-Y7482 2H-Y7693 C3-Y7362 PS-G1499 2T-Z10182 2C-1827 2C-2560 2C-2559 C3-Y7386 2C-6334 2C-H1559 2C-6260 PS-39217 PS-39216	Unit 1 1 3 3 1 1 1 6 6 3 1 1 1 1 1	ELEMENT 1000W 230CE THERMOSTAT 230CE CHANNEL-HOLDER ELEMENT SPACER INSULATION PAD KETTLE SHELL LUG (120V) HIGH LIMIT PARTS KIT, 39/86 RESETTABLE THERMOSTAT HIGH LIMIT 120V, mfg. after 9/2007 WASHER #10 EXT STL NUT 10-24 HEX STL ACORN NUTS 10-24 PAN - CORN WAHSER #16 FL BR NP SCREW 8-32 X 1.25 ST RH NP WASHER #10 INT STL NP KETTLE CONDUIT COMPLETE (120V) KETTLE HANDLE ASSEMBLY COMPLETE

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER

 $\begin{array}{c} \text{PAGE} \, \frac{3}{3} \\ \text{OF} \, \, \underline{3} \end{array}$

Some items are included for illustrative purposes only and in certain instances may not be available.



Star - Holman - Lang - Wells - Bloomfield - Toastmaster 10 Sunnen Drive, St. Louis, MO 63143 U.S.A. (314) 678-6303 www.star-mfg.com