


MODEL SPDE1ARB, SPDE2ARB SPDE1HP

> Installation and Operation Instructions

2M-Z7537 Rev. L 9/3/2010

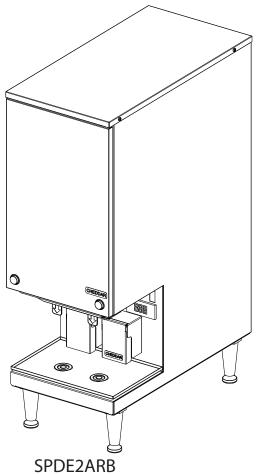



SAFETY SYMBOL



These symbols are intended to alert the user to the presence of important operating and maintenance instructions in the manual accompanying the appliance.

RETAIN THIS MANUAL FOR FUTURE REFERENCE NOTICE

Using any part other than genuine Star factory supplied parts relieves the manufacturer of all liability.

Star reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.

Due to periodic changes in designs, methods, procedures, policies and regulations, the specifications contained in this sheet are subject to change without notice. While Star International Holdings Inc., Company exercises good faith efforts to provide information that is accurate, we are not responsible for errors or omissions in information provided or conclusions reached as a result of using the specifications. By using the information provided, the user assumes all risks in connection with such use.

MAINTENANCE AND REPAIRS

Contact your local authorized service agent for service or required maintenance. Please record the model number, serial number, voltage and purchase date in the area below and have it ready when you call to ensure a faster service.

Model No.		Authorized Service Agent Listing Reference the listing provided with the unit	
Serial No.	or		
Voltage	for an update	ed listing go to:	
Purchase Date	Website: E-mail Telephone:	www.star-mfg.com Service@star-mfg.com (800) 807-9054 Local (314) 781-2777	
	Service Hel	o Desk	
	Business Hours:	8:00 am to 4:30 p.m. Central Standard Time	
	Telephone:	(800) 264-7827 Local (314) 781-2777	
	Fax:	(800) 396-2677 Local (314) 781-2714	
	E-mail	Parts@star-mfg.com Service@star-mfg.com Warranty@star-mfg.com	
	Website:	www.star-mfg.com	
	Mailing Address:	Star International Holdings Inc., Company 10 Sunnen Drive St. Louis, MO 63143	

U.S.A

SPECIFICATIONS

SPDE1ARB-120V

Capacity:	One 160 ounce pouch
Electrical:	120V, 60 hertz, single phase, 820 Watts, 7 amps
Cord:	6 ft. length
Plug:	120V - ŇEMA 5-15P
Dimensions:	9-7/16" W x 19-9/16" D x 30-5/16" H (23.97 W x 49.69 D x 77.0 H cm)
Net Weight:	42 lbs. (19.1 kg)

SPDE1ARB-230V

Capacity:	One 160 ounce pouch
Electrical:	230V, 60 hertz, single phase, 820 Watts, 3.5 amps
Cord:	8 ft. length
Plug:	250V 10 amp NEMA-CEE7-7 Euro
Dimensions:	9-7/16" W x 19-9/16" D x 30-5/16" H (23.97 W x 49.69 D x 77.0 H cm)
Net Weight:	42 lbs. (19.1 kg)

SPDE1HP

Capacity:	One 160 ounce pouch
Electrical:	120V, 60 hertz, single phase, 820 Watts, 7 amps
Cord:	6 ft. length
Plug:	120V - NEMA 5-15P
Dimensions:	9-7/16" W x 19-9/16" D x 27-5/16" H (23.97 W x 49.69 D x 69.4 H cm)
Net Weight:	42 lbs. (19.1 kg)0V

SPDE2ARB-120V

Capacity:	Two 128 ounce pouches
Electrical:	120V, 60 hertz, single phase, 1000 Watts, 8.5 amps
Cord:	6 ft. length
Plug:	120V - ŇEMA 5-15P
Dimensions:	10 29/32" W x 21 15/32" D x 32 1/4" H (27.8 W x 54.5 D x 81.9 H cm)
Net Weight:	60 lbs. (27.2 kg)

SPDE2ARB-230V

Capacity:	Two 128 ounce pouches
Electrical:	230V, 50 hertz, single phase, 1000 Watts, 4.3 amps
Cord:	6 ft. length
Plug:	250V 10 amp NEMA-CEE7-7 Euro
Dimensions:	10 29/32" W x 21 15/32" D x 32 1/4" H (27.8 W x 54.5 D x 81.9 H cm)
Net Weight:	60 lbs. (27.2 kg)



This equipment is designed and sold for commercial use only by personnel trained and experienced in its operation and is not sold for consumer use in and around the home nor for use directly by the general public in food service locations.

Before using your new equipment, read and understand all the instructions & labels associated with the unit prior to putting it into operation. Make sure all people associated with its use understand the units operation & safety before they use the unit.

All shipping containers should be checked for freight damage both visible and concealed. This unit has been tested and carefully packaged to insure delivery of your unit in perfect condition. If equipment is received in damaged condition, either apparent or concealed, a claim must be made with the delivering carrier.

Concealed damage or loss - if damage or loss is not apparent until after equipment is unpacked, a request for inspection of concealed damage must be made with carrier within 15 days. Be certain to retain all contents plus external and internal packaging materials for inspection. The carrier will make an inspection and will supply necessary claim forms.

GENERAL INSTALLATION DATA


This peristaltic dispenser is equipped for the voltage and wattage indicated on the nameplate mounted on the back of the unit and is designed for use on alternating current (AC) only.

NOTE: The peristaltic dispenser should not be installed without the legs provided with the machine. The legs screw into the nuts on the bottom of the dispenser.




DO NOT CONNECT TO DIRECT CURRENT (DC).

GENERAL OPERATING INSTRUCTIONS

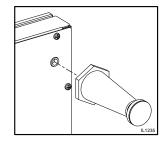

The SPDE1 heated dispenser is designed to be used with a 9" x 18" (22.8 x 45.7cm) poly bag with a 1 inch (2.5cm) outlet fitment. The peristaltic dispenser is designed to be used with 1/4 inch ID (.6cm) to 1/2 inch id. (1.3cm) tubing with 1/16 inch (.16cm) wall thickness. SPDE2 slightly smaller.

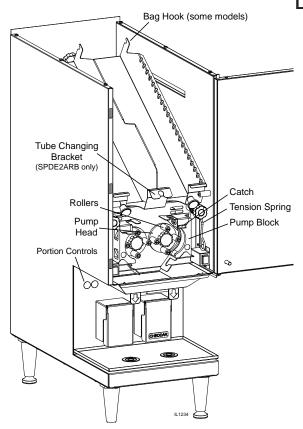

Loading Product:

- 1. Turn the dispenser OFF.
- 2. Unhook the tension spring from the catch.
- 3. Slide the pump block away from the pump head.
- The product should be preheated according to the manufacturer's instructions and should be a minimum of 140°F (60°C) before dispensing.
- 5. Insert the new bag into the tray making sure the fitment rests on the block track and route the tube around the rollers.

SPDE2ARB models have a Tube Changing Bracket, when loading only one bag, clip the tube of the second bag in the bracket, to prevent product from leaking.

(NOTE: Make sure tube is not twisted.)

- 6. Hook the top of the bag on the bag hooks, some models.
- 7. Place the end of the tube in the slot of the bottom bracket.
- 8. Slide the pump block toward the pump head.
- 9. Hook the tension spring onto the catch.
- 10. Route the tube through the hole in the tube cover leaving 1/2" of the tube below the cover.
- 11. Dispense a small amount of product to insure the tube is seated correctly and the product is flowing.

PORTION CONTROL

This dispenser is supplied with a portion control timer. This portion control is based on a time setting. Variations in product temperature and consistency will affect the dispensed amount. To insure a consistent portion, use product that is at the correct temperature (145°F to 160°).

SPDE2 models have a Portion Control Label showing approximate settings for portion size in oz, see *Fig 1*. The units are pre-set at the factory for 0.75oz, this is a general guideline, and following procedures still need to be followed to complete calibration.

To set portion:

- 1. Load preheated product bag into dispenser.
- 2. Dispense product until there is a steady flow.
- 3. Dispense the product into a clean container and measure the product to verify the dispensed amount.
- 4. Using a small screwdriver, remove the round plug covering the adjustment knob located on the front of the unit below the tube cover.
- 5. Turn the control dial clockwise for more product and counterclockwise for less product.
- 6. Repeat steps 3 and 5 until the desired amount is reached.

1.25 7.5 7 25 .5 •*P*S Ś 'n ю'n 2.25 25 S. A, ් 4 5°52°5 APPROXIMATE PORTION SIZE (OZ IL1268

Figure 1, Portion Control Label, SPDE2 models only.

OPERATION NOTES

The product should be preheated according to the manufacturer's instructions. The product should be a minimum of 140°F before dispensing.

The digital temperature readout displays the cabinet air temperature and will fluctuate during normal operation. The product temperature should be close to the temperature set point, but the actual product temperature should be checked periodically to ensure proper operation.

The dispenser will not function correctly if the product is not at the correct temperature.

CHECKING PRODUCT TEMPERATURE

The dispenser should be plugged in and turned on with product in the dispenser for a least 5 hours.

- 1. Dispense at least 3 inches of product into an insulated cup.
- 2. Without hesitation, insert the thermometer to the bottom of the cup and stir the product gently with the stem of the thermometer.
- 3. Position the tip of the thermometer in the center of the product mass.
- 4. The temperature should read between 140°F and 160°F.

The dispenser is designed to operate 24 hours a day. Once the product is placed in the dispenser it should not be removed until the bag is empty or the holding period of the product has expired.

NOTE: To increase the evacuation, open the dispenser and pull the product toward the outlet 3 or 4 times during operation, *see Fig 2*.

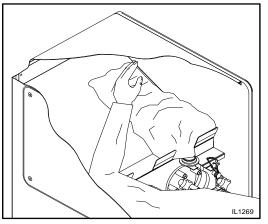


Figure 2, Pull product down once or twice during operation.

CHANGING TEMPERATURE SET-POINT

The dispenser is preset at the factory for a temperature of 145°F. If a different temperature is required, the set point can be changed in a range from 140°F to 160°F. To change the temperature:

- 1. Press SET. "SP" will appear in the display.
- 2. Press SET again. The temperature set point will now be displayed.
- 3. Using the UP or DOWN buttons, set the temperature to the desired value.
- 4. Press SET again to save the setting.
- 5. Press the SET and DOWN buttons together to exit the programming mode.

If the pump dies or does not dispense product, check to make sure the tube is routed correctly and the spring is latched onto the catch.

NOTE: The tube cover must be in place for proper operation.

GENERAL CLEANING INSTRUCTIONS

To clean the peristaltic dispenser:


The stainless steel body is corrosion resistant, but may corrode if not cleaned properly. The dispenser should be cleaned with a soft cloth with mild soap and water and wiped dry. Do not use detergents, strong abrasives, or metal scouring pads on the stainless steel panels.

The pump mechanism should not need cleaning during normal use. If product should spill onto the pump head, it can be removed for easy cleaning. Clean the parts in a solution of mild soap and water using a soft cloth. Dry parts before reassembling. Be certain to turn the power off to the unit prior to cleaning the pump assembly.

The spring can also be removed for cleaning by removing the knob and retaining washer.

To remove and clean the pump head:

- 1. Turn unit **OFF** or unplug from the wall outlet.
- 2. Open the door.
- 3. Remove the bag according to the instructions.
- 4. Unscrew the knob from the pump head.
- 5. Remove the pump head.
- 6. Slide the pump block out of the track.
- 7. If needed the rollers can also be disassembled for cleaning.

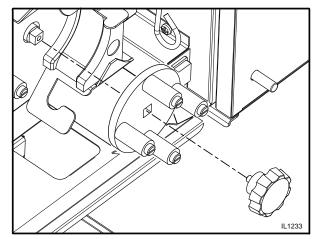



NOTE: When installing the pump head onto the drive shaft, make sure the pump head is fully seated onto the square end of the drive shaft before installing the knob.

WARNING The drive shaft and pump head could be damaged if the pump head is installed incorrectly.

Visit our Website at: www.star-mfg.com

Email: service@star-mfg.com

THOROUGHLY INSPECT YOUR UNIT ON ARRIVAL

This unit has been tested for proper operation before leaving our plant to insure delivery of your unit in perfect condition. However, there are instances in which the unit may be damaged in transit. In the event you discover any type of damage to your product upon receipt, you must immediately contact the transportation company who delivered the item to you and initiate your claim with same. If this procedure is not followed, it may affect the warranty status of the unit.

LIMITED EQUIPMENT WARRANTY

All workmanship and material in Star products have a one (1) year limited warranty on parts & labor in the United States and Canada. Such warranty is limited to the original purchaser only and shall be effective from the date the equipment is placed in service. Star's obligation under this warranty is limited to the repair of defects without charge, by the factory authorized service agency or one of its sub-agencies. Models that are considered portable (see below) should be taken to the closest Star service agency, transportation prepaid.

- > Star will not assume any responsibility for loss of revenue.
- > On all shipments outside the United States and Canada, see International Warranty.
- * The warranty period for the JetStar six (6) ounce & Super JetStar eight (8) ounce series popcorn machines is two (2) years.
- * The warranty period for the Chrome-Max Griddles is five (5) years on the griddle surface. See detailed warranty provided with unit.
- The warranty period for Teflon/Dura-Tec coatings is one year under normal use and reasonable care. This warranty does not apply if damage occurs to Teflon/Dura-Tec coatings from improper cleaning, maintenance, use of metallic utensils, or abrasive cleaners, abrasive pads, product identifiers and point-of-sale attachments, or any other non-food object tha comes in continuous contact with the roller coating. This warranty does not apply to the "non-stick" properties of such materials.
- > This warranty does not apply to "Special Products" but to regular catalog items only. Star's warranty on "Special Products" is six (6) months on parts and ninety (90) days on labor.
- > This warranty does not apply to any item that is disassembled or tampered with for any purpose other than repair by a Star Authorized Service Center or the Service Center's sub-agency
- > This warranty does not apply if damage occurs from improper installation, misuse, wrong voltage, wrong gas or operated contrary to the Installation and Operating instructions
- > This warranty is not valid on Conveyor Ovens unless a "start-up/check-out" has been performed by a Factory Authorized Technician.

PARTS WARRANTY

Parts that are sold to repair out of warranty equipment are warranted for ninety (90) days. The part only is warranted. Labor to replace the part is chargeable to the customer.

SERVICES NOT COVERED BY WARRANTY

- Travel time and mileage rendered beyond the 50 mile radius limit 1 Mileage and travel time on portable equipment (see below) 2.
- Labor to replace such items that can be replaced easily during a daily cleaning 3.
- routine, ie; removable kettles on fryers, knobs, grease drawers on griddles, etc. 4. Installation of equipment
- Damages due to improper installation 5
- Damages from abuse or misuse 6.
- Operated contrary to the Operating and Installation Instructions 7.
- 8 Cleaning of equipment
- Seasoning of griddle plates 9.

- 10. Voltage conversions Gas conversions 11.
- 12. Pilot light adjustment
- Miscellaneous adjustments 13
- 14. Thermostat calibration and by-pass adjustment
- Resetting of circuit breakers or safety controls or reset buttons 15
- 16. Replacement of bulbs
- 17. Replacement of fuses
- Repair of damage created during transit, delivery, & 18. installation OR created by acts of God

PORTABLE EQUIPMENT

Star will not honor service bills that include travel time and mileage charges for servicing any products considered "Portable" including items listed below. These products should be taken to the Service Agency for repair:


- * The Model 510FD Fryer.
- * The Model 526TOA Toaster Oven.
- * The Model J4R, 4 oz. Popcorn Machine.
- * The Model 518CMA & 526CMA Cheese Melter.
- * The Model 12MC & 15MC & 18MCP Hot Food Merchandisers.
- * The Model 12NCPW & 15NCPW Nacho Chip/Popcorn Warmer.
- * All Hot Dog Equipment except Roller Grills & Drawer Bun Warmers.
- * All Nacho Cheese Warmers except Model 11WLA Series Nacho Cheese Warmer.
- * All Condiment Dispensers except the Model HPD & SPD Series Dispenser.
- * All Specialty Food Warmers except Model 130R, 11RW Series, and 11WSA Series.
- * All QCS/RCS Series Toasters except Model QCS3 & RCS3 Series.


- ALL:
- * Pop-Up Toasters
- * Butter Dispensers
- * Pretzel Merchandisers (Model 16PD-A Only)
- * Pastry Display Cabinets
- * Nacho Chip Merchandisers
- * Accessories of any kind
- * Sneeze Guards
- * Pizza Ovens
- (Model PO12 Only)
- * Heat Lamps
- * Pumps-Manual


The foregoing warranty is in lieu of any and all other warranties expressed or implied and constitutes the entire warranty.


FOR ASSISTANCE

Should you need any assistance regarding the Operation or Maintenance of any Star equipment; write, phone, fax or email our Service Department. In all correspondence mention the Model number and the Serial number of your unit, and the voltage or type of gas you are using.

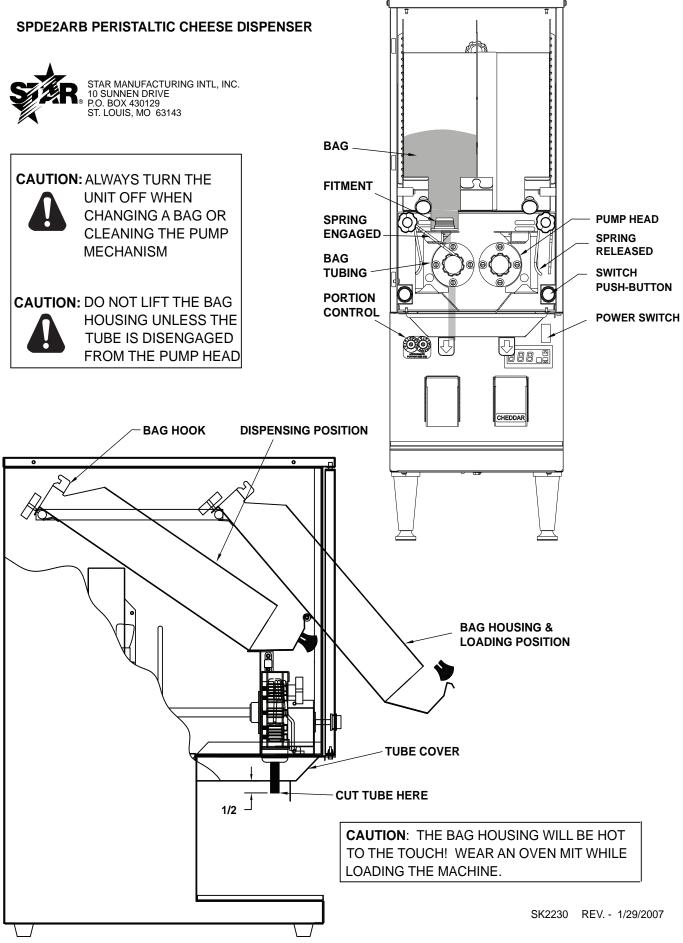

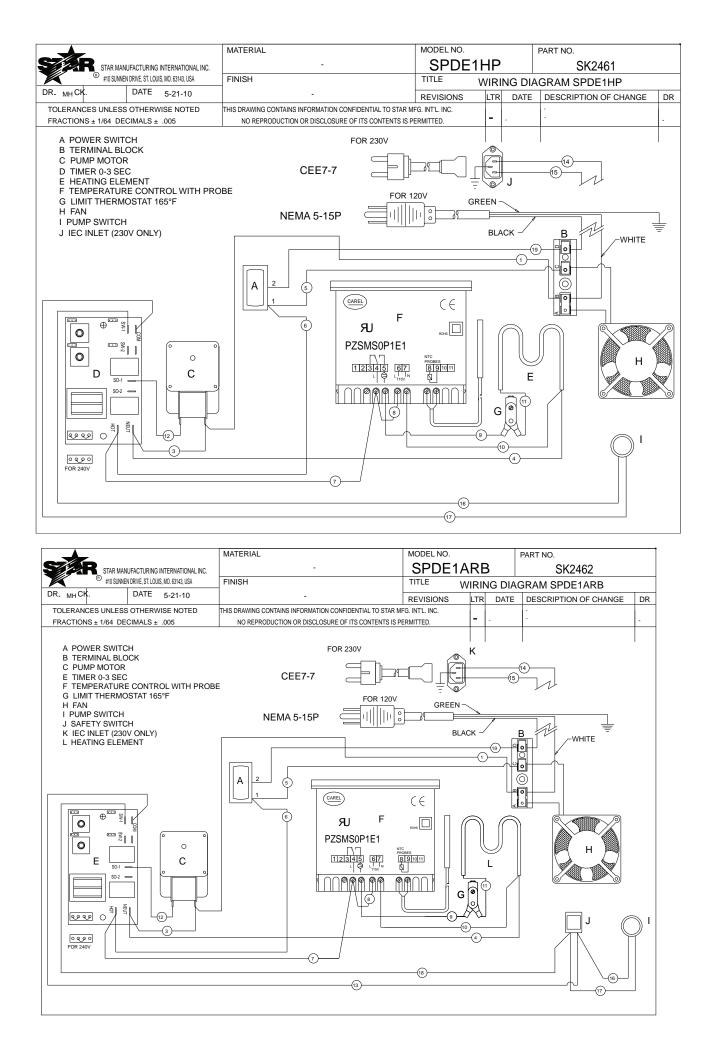

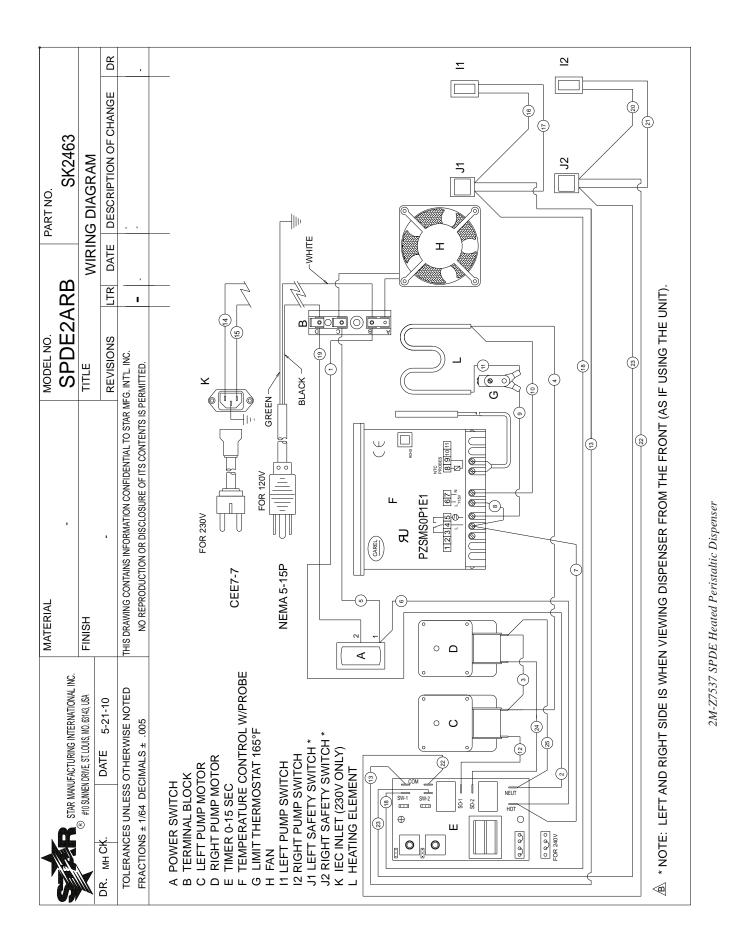

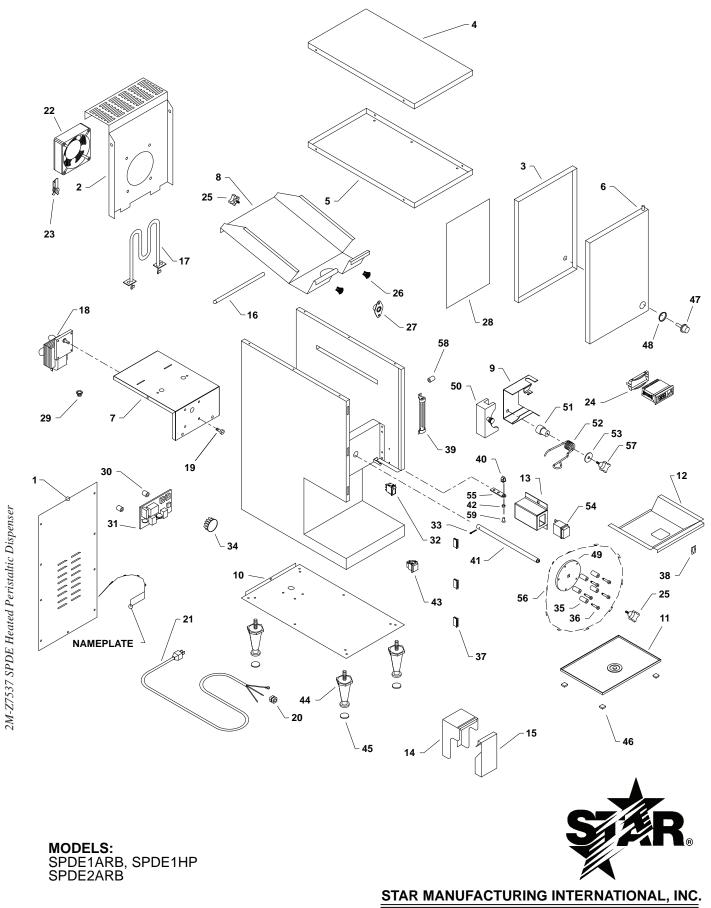

SK2071 REV D 1-10-07

	HE	ATED	PERISTALTIC DISPENSER, SPDE1HP, SP	PDE1ARB, SPDE2ARB
Fig No	Part No	Qty	Description	Application
1	M2-Z5592	1	ВАСК	SPDE1ARB, SPDE1HP
I	M2-Z9689	1	ВАСК	SPDE2ARB
2	M2-PD1018	1	ASSEMBLY FAN WALL	SPDE1ARB, SPDE1HP
2	M2-PD2033		ASY, FAN WALL	SPDE2ARB
2	M2-Z3595	1	DOOR LINER	SPDE1ARB, SPDE1HP
3	M2-Z9684	1	LINER, DOOR	SPDE2ARB
4	M2-Z2865	1	TOP CSD-1	SPDE1ARB, SPDE1HP
4	M2-Z9687	1	ТОР	SPDE2ARB
-	M2-Z2866	1	LINER TOP-CSD-1	SPDE1ARB, SPDE1HP
5	M2-Z9688	1	LINER, TOP	SPDE2ARB
,	M2-22097	1	DOOR STUD ASSEMBLY	SPDE1ARB, SPDE1HP
6	M2-PD2039	1	ASY, DOOR STUD	SPDE2ARB
7	M2-Z7532	1	WALL-MOTOR	SPDE1ARB, SPDE1HP
7	M2-Z9690	1	WALL, MOTOR	SPDE2ARB
8	M2-22073	1	BAG HOUSING WELD ASSEMBLY	SPDE1ARB, SPDE1HP
Ö	M2-PD2034] '	ASSEMBLY, BAG HSG-WELD	SPDE2ARB
	M2-PD2006		LEFT BLOCK TRACK ASSEMBLY	SPDE1ARB, SPDE1HP
9	M2-PD2036] 1	ASY, TRACK - LEFT	SPDE2ARB
	M2-PD2037		ASY, TRACK - RIGHT	SPDE2ARB
10	M2-PD1012	1	ASSEMPLY POTTOM	SPDE1ARB, SPDE1HP
10	M2-PD2045 1		ASSEMBLY BOTTOM	SPDE2ARB
11	M2-Z2889	1	DRIP TRAY CSD-1N	SPDE1ARB, SPDE1HP
	M2-Z9692		TRAY, DRIP	SPDE2ARB
12	M2-22041	1	TUBE COVER ASSEMBLY	SPDE1ARB, SPDE1HP
ΙZ	M2-PD2038		ASSEMBLY, TUBE COVER	SPDE2ARB
13	M2-Z2703	1	COVER-SWITCH	SPDE1ARB, SPDE1HP
15	M2-Z9691	2		SPDE2ARB
14	M2-Z5596	1	PADDLE BODY	SPDE1ARB
14	M2-Z10176	2		SPDE2ARB
15	M2-PD1013	1	ASSEMBLY PADDLE	SPDE1ARB
15	M2-PD2043	2		SPDE2ARB
16	2A-Z2999	1	ROD	SPDE1ARB, SPDE1HP
10	2A-Z9797			SPDE2ARB
17	2N-Z4603	- 1	ELEMENT 120V/650W	
	2N-Z5044		ELEMENT 230V/650W	SPDE1ARB-230V, SPDE2ARB-230V
	2U-Z11917	- 1	MOTOR-CCW 165 RPM 120V	SPDE1ARB, SPDE1HP, manuf. After 10/2006
	PS-Z10009		MOTOR CCW 165 RPM 120V, KIT	SPDE1ARB, SPDE1HP, manuf. Before 10/2006
18	2U-Z11921		MOTOR CCW 230 RPM 120V	SPDE2ARB
-	2U-Z11922		MOTOR CW 230 RPM 120V	
	2U-Z13716		MOTOR CCW 230 RPM 230V	SPDE2ARB-230V
	2U-Z13717		MOTOR CW 230 RPM 230V	
19	2C-1508	4 per	SCREW 10-32X3/4" STL RHN, DRIVE MOTOR	used with 2U-Z9696, 2U-Z10040

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER

PAGE <u>1</u> OF <u>3</u>

Some items are included for illustrative purposes only and in certain instances may not be available.



	HE	ATED	PERISTALTIC DISPENSER, SPDE1HP, SP	DE1ARB, SPDE2ARB
Fig No	Part No	Qty	Description	Application
20	2K-7889	1	BUSHING HEYCO SR-11-2	
21	A3-ST3006	1	CORDSET ASSEMBLY	
	2E-Z0512	1	CORDSET, EUR 10A	SPDE1ARB-230V, SPDE2ARB-230V
22	2U-Z4600	1	FAN A/C 110CFM 120V	
22	2U-Z5041	1	FAN A/C 110CFM 230V	SPDE1ARB-230V, SPDE2ARB-230V
23	2T-Z4666	1	THERMOSTAT 165F	
	M2-Z11877	1	CONTROL - SET TO 150°F	SPDE1ARB,
24	2E-Z7235	1	CONTROL W/SENSOR 230V (includes probe)	SPDE2ARB-230V
	M2-Z10046	1	CONTROLLER, PROGRAMMED	SPDE2ARB
25	2R-Z6774	2	KNOB, DAVIES 4200 10-24 x 1/4	
26	2R-Z0872	2	KNOB, DAVIES #3004-S	
27		1		
27	2P-9615	2	BEARING-SELF ALIGN	SPDE2ARB
20	2M-Z3607	1		SPDE1ARB
28	2M-Z10311	1	LABEL-OPERATING	SPDE2ARB
30	2A-Z3429	2	SPACER-NYLON .175X.375X.5	
	M2-Z10302		TIMER 0-15 SECONDS	SPDE1HP
01	M2-Z10131	1	TIMER PROGRAMMED	SPDE1ARB, SPDE2ARB
31	M2-Z10303	1	TIMER PROGRAMMED 230V	SPDE1ARB-230V
	M2-Z13719	1	TIMER PROGRAMMED 230V	SPDE2ARB-230V
	2E-Z0091	1	SWITCH-ON/OFF NON-LIGHTED	
32	PS-PD2046		HPD SWITCH SERVICE KIT, LIGHTED SWT REPL	BEFORE 12/2009
	0.0.711010	1	1	SPDE1HP, SPDE1ARB
33	2C-Z11912	2	HAIR PIN .091 DIA. X 1.625	SPDE2ARB
	2P-Z1735	1	PLUG CAP 3/4	SPDE1HP, SPDE1ARB
34	2P-09-WB-0003	2	PLUG CAP	SPDE2ARB
05	0.1.71/01	5		SPDE1HP, SPDE1ARB
35			SPDE2ARB	
27	20 71/20	5		SPDE1HP, SPDE1ARB
36	2C-Z1620	8	SHOULDER SCREW 8-32X1/4	SPDE2ARB
37	2R-Z2883	3	MAG CATCH SOUTHCO 300	
20	014 71/00	1		SPDE1HP, SPDE1ARB
38	2M-Z1688	2	GRAPHIC ARROW	SPDE2ARB
39	2T-Z0613	1	THERMOMETER-SPIRIT	
40	2I-Z1894	1	HINGE-INSERT	
14	04 74505	1		SPDE1HP, SPDE1ARB
41	2A-Z4595	2	DRIVE SHAFT	SPDE2ARB
42	2A-Z2233	1	SLEEVE-HINGE	
		1		
43	2E-Z1622	2	SWITCH, MOMENTARY	SPDE2ARB
4.4	2R-Y5092	4	FOOT BLACK PLASTIC 4"	SPDE1ARB, SPDE2ARB
44	2R-Z5846	4	FOOT 1"	SPDE1HP
45	2I-Z1914	4	RUBBER PAD	SPDE1ARB, SPDE2ARB

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER

PAGE	2
OF	3

Some items are included for illustrative purposes only and in certain instances may not be available.



Star International Holding Inc. Company

HEATED PERISTALTIC DISPENSER, SPDE1HP, SPDE1ARB, SPDE2ARB				
Fig No	Part No	Qty	Description	Application
46	2A-H7804	4	BUMP ON 1/4" X 1/2 SQ.	
47	2R-Z2848	1		
47	2R-Z2848	2	PUSH BUTTON (Dispensing)	SPDE2ARB
48	2K-Z0714	1	SHORTY-BUSHING	
49	2A-Z5564	1	PUMP HEAD	SPDE1ARB, SPDE1HP
50	го М2-22049 1	1	ASSEMBLY BLOCK RIGHT	SPDE1ARB, SPDE1HP
50	M2-PD2040	2	ASSEMBLY - BLOCK	SPDE2ARB
51	2A-Z1616	1	BUSHING	SPDE1ARB, SPDE1HP
51	2A-Z9697	2	BUSHING, SPRING	SPDE2ARB
	2P-Z4598		SPRING LEFT HPD	SPDE1ARB, SPDE1HP
52	2P-Z10267	1	SPRING, LH	SPDE2ARB
	2P-Z10268		SPRING, RH	SPDE2ARB
53	2C-Z1689	1	WASHER 1.25 OD x 9/32 ID	SPDE1ARB, SPDE1HP
54	2E-Z2680	1	SWITCH-PUSH BUTTON	SPDE1ARB, SPDE1HP
-04	2E-Z9698	2		SPDE2ARB
55	M2-Z3601	1	HINGE BRACKET	
56	2A-Z5564	1	PUMP HEAD ASSEMBLY	SPDE1ARB, SPDE1HP
50	2A-Z9681	2	ASY, PUMP HEAD - COMPLETE	SPDE2ARB
57	2R-Z6774	1	KNOB, DAVIES 4200 10-24 x 1/4	
57	2R-Z9686	2	KNOB, DAVIES 2860AP 1/4-20	SPDE2ARB
58	2A-Z3429	2	SPACER-NYLON .175X.375X.5	SPDE1ARB, SPDE1HP
00	2A-Z1621		ROLLER #10X1/2X1 NYLON	SPDE2ARB
59	2C-2853	1	SCREW #8X5/8 A THP STL NP	

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER PAGE <u>3</u> OF <u>3</u>

Some items are included for illustrative purposes only and in certain instances may not be available.



Star International Holding Inc. Company

2M-Z7537 SPDE Heated Peristaltic Dispenser

STAR INTERNATIONAL HOLDINGS INC. COMPANY

Star - Holman - Lang - Wells - Bloomfield - Toastmaster 10 Sunnen Drive, St. Louis, MO 63143 U.S.A. (314) 781-2777 www.star-mfg.com