



A Division of Star Mfg. Int'l, Inc.


THERMOSTATIC ELECTRIC GRIDDLE

Commercial & Marine

124T, 124TC, 124THE, 124TSS
136T, 136TC, 136TNTS, 136THE
148T, 148TC, 148TSS
160T, 160TC, 160TSS
172T, 172TC, 172TSS

Installation and Operation Instructions

2M-W352 Rev.G 4/09/2009

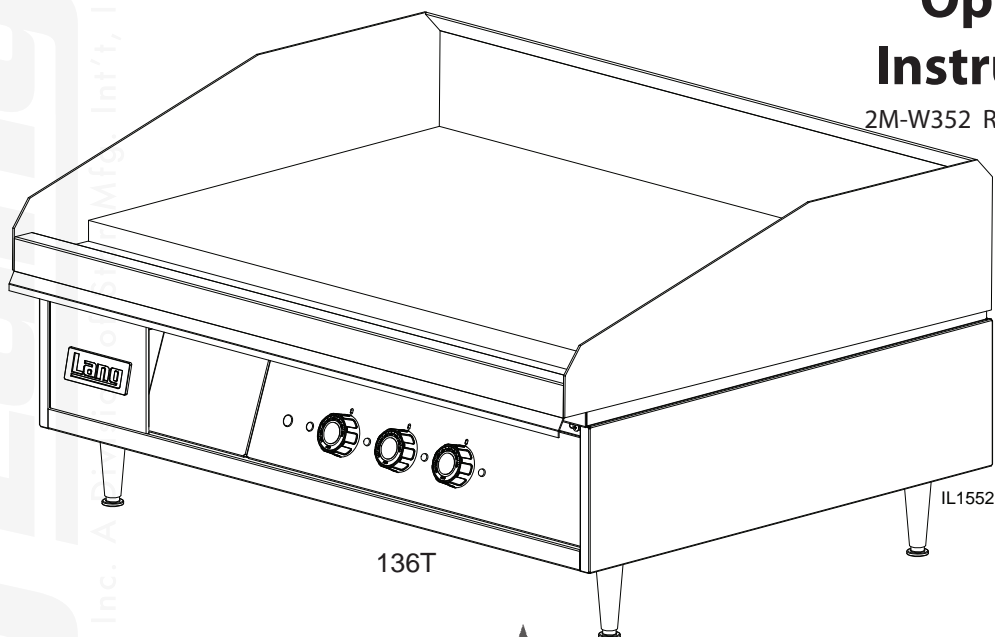

SAFETY SYMBOL



These symbols are intended to alert the user to the presence of important operating and maintenance instructions in the manual accompanying the appliance.

FOR YOUR SAFETY

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINTIY OF THIS OR ANY OTHER APPLIANCE.

POST IN PROMINENT LOCATION

INSTRUCTIONS TO BE FOLLOWED IN THE EVENT USER SMELLS GAS. THIS INFORMATION SHALL BE OBTAINED BY CONSULTING YOUR LOCAL GAS SUPPLIER. AS A MINIMUM, TURN OFF THE GAS AND CALL YOUR GAS COMPANY AND YOUR AUTHORIZED SERVICE AGENT. EVACUATE ALL PERSONNEL FROM THE AREA.

WARNING

IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.



WARNING

**RISK OF FIRE OR ELECTRIC SHOCK
DO NOT OPEN**



WARNING, TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE CONTROL PANEL. NO USER-SERVICABLE PARTS INSIDE. REPAIRS SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.

NOTICE

Using any part other than genuine Lang factory supplied parts relieves the manufacturer of all liability.

Star reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.

Due to periodic changes in designs, methods, procedures, policies and regulations, the specifications contained in this sheet are subject to change without notice. While Star Manufacturing exercises good faith efforts to provide information that is accurate, we are not responsible for errors or omissions in information provided or conclusions reached as a result of using the specifications. By using the information provided, the user assumes all risks in connection with such use.

MAINTENANCE AND REPAIRS

Contact your local dealer for service or required maintenance. Please record the model number, serial number, voltage and purchase & Installation Information in the area below and have it ready when you call to ensure a faster service.

Model No.: _____

Purchased From: _____

Serial No.: _____

Location: _____

Voltage: _____

Purchase Date: _____

1-Phase or 3 Phase: _____

Installed Date: _____



PROBLEMS, QUESTIONS or CONCERNS

Before you proceed consult you authorized Lang service agent directory
or
Call the Lang Technical Service & Parts Department at 1-800-807-9054.


TABLE OF CONTENTS

Specifications	4 - 5
Equipment Description	6
Unpacking	7
Installation	
Leg Installation	8
Ventilation & Clearence	9
Electrical Connection	9
Technical Data.	9
Phasing	9
Initial Start-Up	
Pre-Power On	10
Power On	10
Seasoning Cooking Surface.	10
Operation	
General	11
Loading the Griddle	11
Suggested Times and Temperatures	11
Maintenance	
Cleaning	12
Crome Surface Griddle Care	13
Troubleshooting	
Symptoms / Possible Causes	14
Possible Causes / Test	14
Wiring Diagram	
208/240VAC	16
480VAC	17
Exploded View & Parts List	18-23

NOTICE Service on this or any other Lang appliance must be performed by qualified personnel only. Consult your Lang Authorized Service Agent Directory. You can call our toll free number 1-800-807-9054 or visit our website WWW.STAR-MFG.COM for the service agent nearest you.

EQUIPMENT SPECIFICATIONS

Model	Height x Width x Depth (Not including legs)	Clearance from combustible surface	Weight		Freight Class
			Actual	Shipping	
124	15.0" x 24.0" x 28.2" 381mm x 610mm x 717mm	Sides: 2" Back: 2"	243 lbs. 110 kg	280 lbs. 127 kg	85
136	15.0" x 36.0" x 28.2" 381mm x 914mm x 717mm		368 lbs. 167 kg	410 lbs. 186 kg	
148	15.0" x 48.0" x 28.2" 381mm x 1219mm x 717mm		483 lbs. 220 kg	515 lbs. 234 kg	
160	15.0" x 60.0" x 28.2" 381mm x 1524mm x 717mm		621 lbs. 282 kg	665 lbs. 302 kg	
172	15.0" x 72.0" x 28.2" 381mm x 1830mm x 717mm		724 lbs. 329 kg	800 lbs. 364 kg	

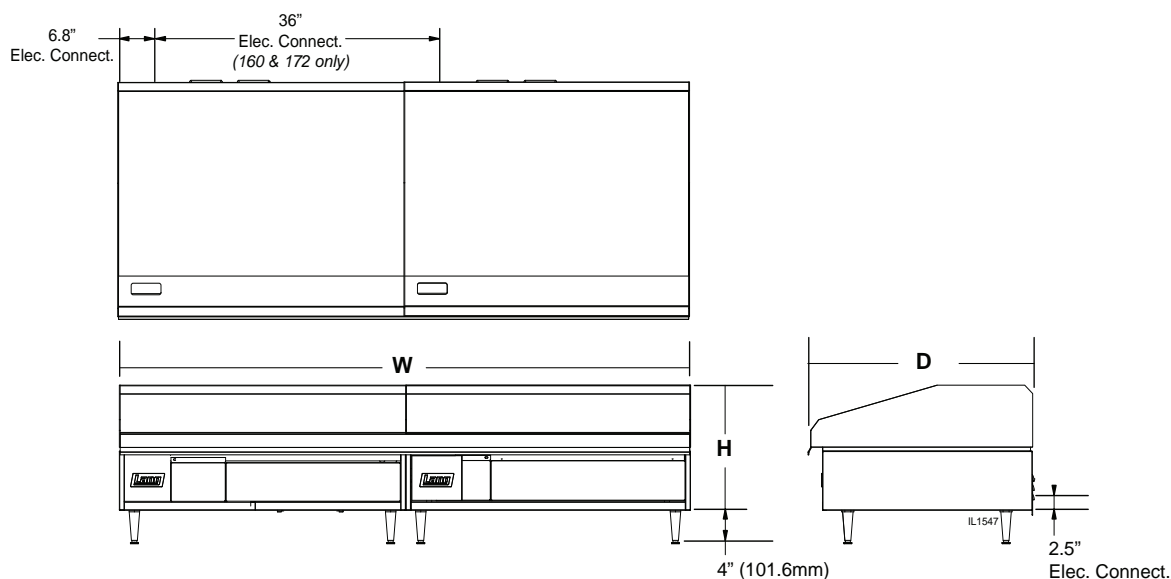

SPECIFICATIONS MARINE


Current Model	Volts AC	Hz.	PH.	Kw TOT.	Amp 1PH.	Supply Wire 1 PH	Amp 3 Ph				Kw TOT.	Amp 1PH.	Supply Wire 1 PH	Amp 3 Ph			Supply Wire 3 PH
							L1	L2	L3					L1	L2	L3	
124T-380VM	380V	50/60	3	12			27.3	15.7	15.7	10							
124T-440VM	440V	50/60	3	12			23.6	13.6	13.6	10							
124T-480VM	480V	60	3	12			22	13	13	12							
124T-M	208/240V	60	1/3	12	58	4	50	29	29	6							
136T-440VM	440V	60	3	18			23.6	23.6	23.6	12							
136T-480VM	480V	60	3	18			22	22	22	12							
136T-M	208/240V	60	1/3	18	87	2	50	50	50	6							
148T-440VM	208/240	60	1/3	18	87	2	50	50	50	6							
148T-480VM	480V	60	3	24			33	33	22	8							
148T-M	208/240V	60	1/3	24	116	1	75	75	50	3							
160T-M	208/240V	60	1/3	12	58	2	50	29	29	6	18	87	2	50	50	50	6
172T-440VM	440V	60	3	18			23.6	23.6	23.6	12	18			23.6	23.6	23.6	12
172T-480VM	480V	60	3	18			22	22	22	12	18			22	22	22	12
172T-M	208/240V	60	1/3	18	87	2	50	50	50	6	18	87	2	50	50	50	6

EQUIPMENT SPECIFICATIONS

SPECIFICATIONS

Current Model	Volts AC	Hz.	PH	Kw TOT.	Amp 1PH.	Supply Wire 1 PH	Amp 3 Ph			Sply Wire 3 PH	Kw TOT.	Amp 1PH.	Sply Wire 1 PH	Amp 3 Ph			Sply Wire 3 PH
							L1	L2	L3					L1	L2	L3	
124T	208/240V	60	1/3	12	58	4	50	29	29	6							
124T-220V	220V	50/60	1/3	10	45.5	6	39.4	22.7	22.7	8							
124T-220VCW	220V	50/60	1/3	10	45.5	6	39.4	22.7	22.7	8							
124T-380V	380V	60	3	12			27.3	15.7	15.7	10							
124T-480V	480V	60	3	12			22	13	13	12							
124T-480VSJ	480V	60	3	12			22	13	13	12							
124T-BK	208/240V	60	1/3	12	58	4	50	29	29	6							
124TC	208/240V	60	1/3	12	58	4	50	29	29	6							
124TC-TE	208/240V	60	1/3	12	58	4	50	29	29	6							
124THE	208/240V	60	1/3	12	58	4	50	29	29	6							
124THE2L	208/240V	60	1/3	12	58	4	50	29	29	6							
124T-PE	208/240V	60	1/3	12	58	4	50	29	29	6							
124T-PE-480V	480V	60	3	12			22	13	13	12							
124TSS	208/240V	60	1/3	12	58	4	50	29	29	6							
124TSS-480V	480V	60	3	12			22	13	13	12							
136T	208/240V	60	1/3	18	87	2	50	50	50	6							
136T-380V	380V	60	3	18			27.3	27.3	27.3	10							
136T-480V	480V	60	3	18			22	22	22	12							
136TC	208/240	60	3	18	87	2	50	50	50	6							
136TC-TE	208/240	60	1/3	18	87	2	50	50	50	6							
136TC-TE-380	380V	50	3	18			27	27	27	10							
136TNTS	208/240V	60	1/3	18	87	2	50	50	50	6							
136THE-240V	208/240V	60	1/3	18	87/75	2	50/43	50/43	50/43	6							
148T	208/240V	60	1/3	24	116	1	75	75	50	3							
148T-480V	480V	60	3	24			33	33	22	8							
148TC	208/240V	60	1/3	24	116	1	75	75	50	3							
148TC-TE	208/240V	60	1/3	24	116	1	75	75	50	3							
148TC-TE-380	380V	50	3	24			41	41	27	6							
148T-SJ	208/240V	60	1/3	24	116	1	75	75	50	3							
148TSS	208/240V	60	1/3	24	116	1	75	75	50	3							
148TSS-480V	480V	60	3	24			33	33	22	8							
160T	208/240V	60	1/3	12	58	2	50	29	29	6	18	87	2	50	50	50	6
160T-480V	480V	60	3	12			22	13	13	12	18			22	22	22	12
160T-480VCP	480V	60	3	12			22	13	13	12	18			22	22	22	12
160TC-TE	208/240V	60	1/3	12	58	4	50	29	29	6	18	87	2	50	50	50	6
160TSS	208/240V	60	1/3	12	58	2	50	29	29	6	18	87	6	50	50	50	6
160TSS-480V	480V	60	3	12			22	13	13	12				22	22	22	12
172T	208/240V	60	1/3	18	87	2	50	50	50	6	18	87	2	50	50	50	6
172T-480V	480V	60	3	18			22	22	22	12	18			22	22	22	12
172T-480VSJ	480V	60	3	18			22	22	22	12	18			22	22	22	12
172T-480V-CP	480V	60	3	18			22	22	22	12	18			22	22	22	12
172TC	208/240V	60	1/3	18	87	2	50	50	50	6	18	87	2	50	50	50	6
172TC-TE	208/240V	60	1/3	18	87	2	50	50	50	6	18	87	2	50	50	50	6
172T-PE	208/240V	60	1/3	18	87	2	50	50	50	6	18	87	2	50	50	50	6
172T-PE-480V	480V	60	3	18			22	22	22	12	18			22	22	22	12
172T-SJ	208/240V	60	1/3	18	87	2	50	50	50	6	18	87	2	50	50	50	6
172TSS	208/240V	60	1/3	18	87	2	50	50	50	6	18	87	2	50	50	50	6
172TSS-480V	480V	60	3	18			22	22	22	12	18			22	22	22	12

EQUIPMENT DESCRIPTION

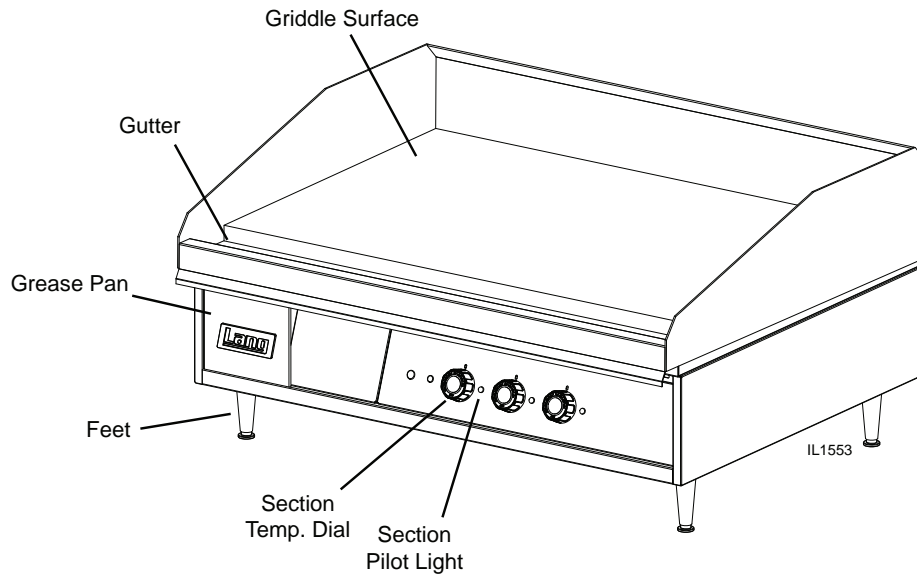

Exterior Construction

The griddle dimensions are 17" (43.18cm) High, 30" (76.20cm) Deep, and width is dependent on the actual model number.

The Sides, Bottom, and Rear wall are constructed of double wall stainless steel, which allows closer installation to combustible surfaces.

The griddle surface is made of 1" thick, highly polished steel to reduce hot and cold spots, recovery problems, warping, and ensure even heat to the edges of the griddle.

Controls

Each twelve-inch section has its own temperature selector switch that snaps into place to lock in any temperature from 175°F to 450°F (79°C to 232°C) in 25° increments.

Each twelve-inch section of the griddle is controlled by an area sensitive RTD probe, which can sense and react to a temperature change of +/- 4°F.

Each twelve-inch section has a set of 6 K.W. elements for high efficiency, quick recovery and outstanding performance

Technical

The 100 series thermostat griddle operates on either 208, 220, 240, 380 or 480V, are shipped three phase, (unless in specific specifications). 208, 220, 240V can be field converted to single phase.


Minimum clearances: 2" from side and back

NOTICE The data plate is on the right side of the griddle. The griddle voltage, wattage, serial number, wire size, and clearance specifications are on the data plate. This information should be carefully read and understood before proceeding with the installation.

UNPACKING

Receiving the Griddle

Upon receipt, check for freight damage, both visible and concealed. Visible damage should be noted on the freight bill at the time of delivery and signed by the carrier's agent. Concealed loss or damage means it does not become apparent until the merchandise has been unpacked. If concealed loss or damage is discovered upon unpacking, make a written request for inspection by the carrier's agent within 15 days of delivery. All packing material should be kept for inspection. **Do not return damaged merchandise to Star Manufacturing Company. File your claim with the carrier.**

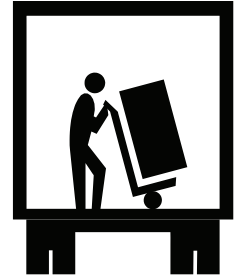

Location

Prior to un-crating, move the griddle as near to its intended location as practical. The crating will help protect the unit from the physical damage normally associated with moving it through hallways and doorways.

Un-crating

The griddle will arrive completely assembled inside a wood frame and strapped to a skid. Cut the straps and remove the wood frame.

The griddle can now be removed from the skid.




CAUTION

THE UNIT IS EXTREMELY HEAVY. FOR SAFE HANDLING, INSTALLER SHOULD OBTAIN HELP AS NEEDED, OR EMPLOY APPROPRIATE MATERIALS HANDLING EQUIPMENT (SUCH AS A FORKLIFT, DOLLY, OR PALLET JACK) TO REMOVE THE UNIT FROM THE SKID AND MOVE IT TO THE PLACE OF INSTALLATION.

ANY STAND, COUNTER OR OTHER DEVICE ON WHICH GRIDDLE WILL BE LOCATED MUST BE DESIGNED TO SUPPORT THE WEIGHT OF THE GRIDDLE. SHIPPING STRAPS ARE UNDER TENSION AND CAN SNAP BACK WHEN CUT.

INSTALLATION

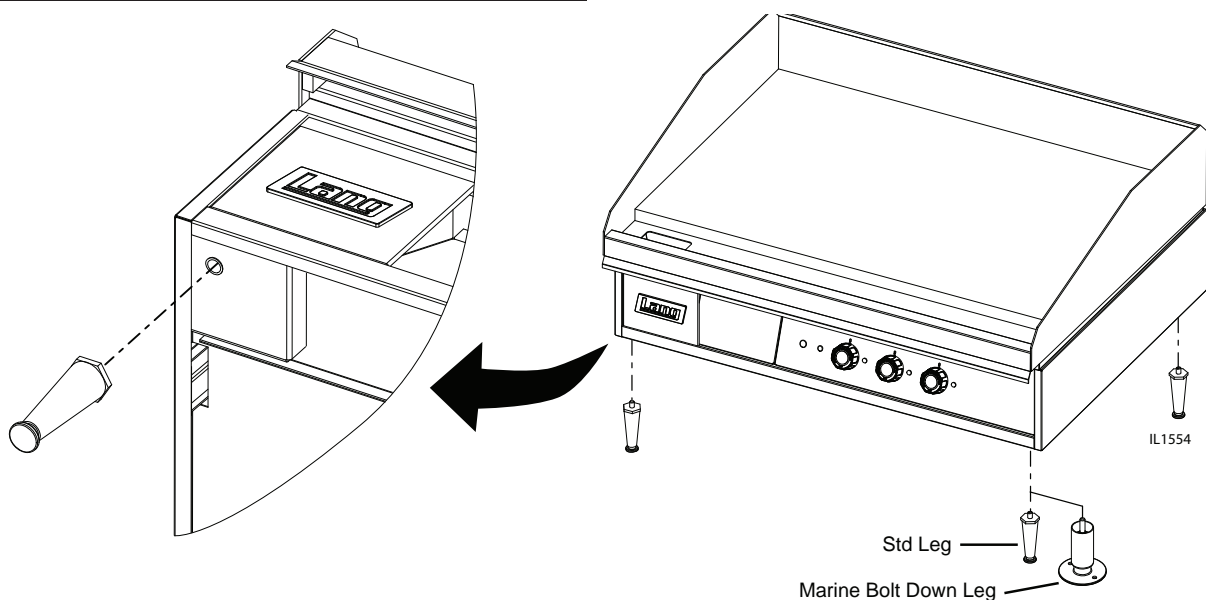

Above: typical leg installation.


Leg Installation

There are four, 4" legs provided for 2, 3 and 4 foot griddles.

There are eight 4" legs provided for 5 and 6 foot griddles.

The legs are shipped in the grease drawers of the griddle. Install them into the threaded holes on the underside of the griddle body.

Leveling adjustment may be done by screwing the bottom portion of the leg in and out.

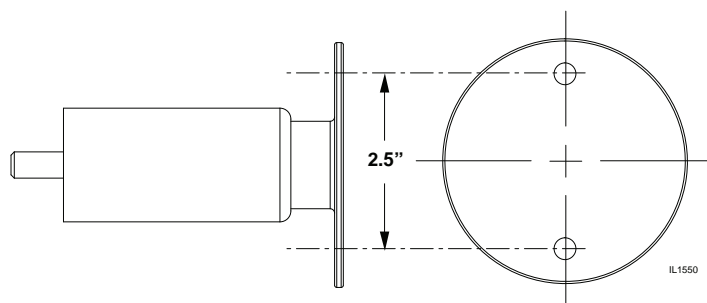

For bolt down legs see above illustration for dimensions.

DANGER: THIS APPLIANCE MUST BE GROUNDED AT THE TERMINAL PROVIDED. FAILURE TO GROUND THE APPLIANCE COULD RESULT IN ELECTROCUTION AND DEATH.



INSTALLATION OF THE UNIT MUST BE DONE BY PERSONNEL QUALIFIED TO WORK WITH ELECTRICITY AND PLUMBING. IMPROPER INSTALLATION CAN CAUSE INJURY TO PERSONNEL AND/OR DAMAGE TO EQUIPMENT. UNIT MUST BE INSTALLED IN ACCORDANCE WITH ALL APPLICABLE CODES.

NOTICE: The data plate is located on the right side of the griddle. The grill voltage, wattage, serial number, wire size, and clearance specifications are on the data plate. This information should be carefully read and understood before proceeding with the installation.

NOTICE: The installation of any components such as a vent hood, grease extractors, fire extinguisher systems, must conform to their applicable National, State and locally recognized installation standards.



ALWAYS KEEP THE AREA NEAR THE APPLIANCE FREE FROM COMBUSTIBLE MATERIALS.

KEEP FLOOR IN FRONT OF EQUIPMENT CLEAN AND DRY. IF SPILLS OCCUR, CLEAN IMMEDIATELY, TO AVOID THE DANGER OF SLIPS OR FALLS.

INSTALLATION cont.

Ventilation and Clearances

Standard minimum clearance from combustible construction is as follows.

- 2" from side
- 2" from back

These griddles may be set directly, without legs, on a curbed base or **non-combustible** surface.

If the griddle is set without legs on a **non-combustible** floor or a curbed base, maintain a 4-inch back clearance.

Do not install the griddle directly against a **non-combustible** back wall or surface.

Do not install the griddle closer than 12 inches from an uncontrolled heat source (char broiler etc.).

Keep the appliance area free and clear of combustible material and do not obstruct the flow of combustion or ventilation air.

Electrical Connection

Detach cover on junction box at rear of unit. There is one power supply connection on the 2, 3, and 4-foot griddles. There are two power supply connections on 5 and 6-foot griddles. Refer to the power supply chart in the Technical Specification Data portion of this manual (pg 4 & 5), for proper power supply size.

There is (1) one 1 1/4-inch conduit knockout on 2, 3 and 4-foot griddles located at the rear of the griddle, through the back and the bottom of the griddle body. There are (2) two 1 1/4-inch conduit knockouts provided on the 5 and 6-foot griddles. Use a supply wire suitable for at least 90°C/194°F.

This griddle is shipped from the factory set up for a three phase service. On 208V, 220V & 240V the wiring can be changed in the supply terminal junction box to convert the griddle to single phase.

Technical Data

MODEL NUMBER		TOTAL K.W.	NOMINAL AMPS PER LINE									SINGLE PHASE	
			THREE PHASE										
			208 Volt			240 Volt			480 Volt			208V	240V
			L1	L2	L3	L1	L2	L3	L1	L2	L3		
24"		12	50	28.8	28.8	43.3	25	25	21.7	12.5	12.5	57.7	50
36"		18	50	50	50	43.3	43.3	43.3	21.7	21.7	21.7	86.5	75
48"		24	75	75	50	65	65	43.3	32.5	32.5	21.7	115.5	100
60"	#1	18	50	50	50	43.3	43.3	43.3	21.7	21.7	21.7	86.5	75
	#2	12	50	28.8	28.8	43.3	25	25	21.7	12.5	12.5	57.7	50
72"	#1	18	50	50	50	43.3	43.3	43.3	21.7	21.7	21.7	86.5	75
	#2	18	50	50	50	43.3	43.3	43.3	21.7	21.7	21.7	86.5	75

Phasing

All griddles are shipped from the factory set up for a three-phase service. Rearrange the wires in the power supply terminal block to convert the griddle to single phase. Re-phasing the griddle is not chargeable to Lang Manufacturing Company as warranty. To convert to single-phase have a Lang Authorized Service Agent, follow this chart.

PHASING BY WIRE NUMBER					
MODEL NUMBER	THREE PHASE			SINGLE PHASE	
	LINE 1	LINE 2	LINE 3	LINE 1	LINE 2
124T	1,4	2	3	1,3	2,4
136T	1,4	2,5	3,6	1,3,5	2,4,6
148T	1,4,7	2,5,8	3,6	1,3,5,7	2,4,6,8
160T #1	1,4	2,5	3,6	1,3,5	2,4,6
160T #2	1,4	2	3	1,3	2,4
172T #1	1,4	2,5	3,6	1,3,5	2,4,6
172T #2	1,4	2,5	3,6	1,3,5	2,4,6

INITIAL START UP

Pre-Power On

Before starting the griddle for the first time, clean the griddle body and cooking surface.

Use a mild soap and water solution, then rinse with clear water and dry.

Power On

Set the temperature dials to 200°F (93°C).

Heat the griddle at 200°F (93°C) for 2 hours to evaporate any moisture that may be in the elements.

After 2 hours at 200°F (93°C), turn the temperature up to 350°F (176°C) for ½ hour.

After the griddle reaches 350°F (176°C) for ½ hour, turn the griddle up another 50°F (10°C) for another ½ hour and repeat this until it is at 450°F (232°C) for ½ hour.

The unit may emit a small amount of smoke as the cooking surface passes the 300°F (148°C) point.

Do not be alarmed as the smoke is caused by oils associated with the manufacturing process and will stop when the griddle reaches 350°F (176°C).

Seasoning Cooking Surface

The cooking surface must be “seasoned” in order to eliminate product sticking during cooking.

To season, heat the griddle to 250°F (121°C).

Once at 250°F (121°C), coat the cooking surface with non-salted vegetable oil.

Allow the griddle to stand at 250°F (121°C) until the cooking surface looks dry then coat it again.

Heat the griddle to 350°F (176°C) and repeat the procedure.

NOTICE: During the first few hours of operation you may notice a small amount of smoke coming off the griddle, and a faint odor from the smoke. This is normal for a new griddle and will disappear after the first few hours of use.

OPERATION

General

The suggested time and temperature chart (below) is provided as a guide for the products listed only.

If different temperature settings are to be used, select one side of the griddle and operate at the lowest temperature. Adjoining sections should be set at progressively higher temperatures. Do not try to operate the end sections hot and the center sections cool.



ALWAYS KEEP THE AREA NEAR THE APPLIANCE FREE FROM COMBUSTIBLE MATERIALS.

CAUTION KEEP FLOOR IN FRONT OF EQUIPMENT CLEAN AND DRY. IF SPILLS OCCUR, CLEAN IMMEDIATELY, TO AVOID THE DANGER OF SLIPS OR FALLS.

Loading the Griddle

An understanding of how the griddle sections are controlled will be a valuable aid in loading product on your unit.

Each 12-inch section of your griddle is independently controlled by a temperature controller.

The temperature control sensor is mounted in the center of each cooking section under the griddle plate.

If the product is loaded directly over the temperature sensor, that section will turn on and the burner will heat the entire cooking section. If the product is loaded to the side, front or back of the temperature sensor, the thermostat will react to the temperature change much slower.

SUGGESTED TIMES AND TEMPERATURES

PRODUCTS	TEMPERATURE F / C	TIME (MIN)
HAMBURGER	350°F / 176°C	
2 patties per LB		6 to 8
4 patties per LB		4 to 6
6 patties per LB		3 to 4
STEAKS		
1/2 to 3/4 inch thick, cooked medium	375°F / 190°C	5 to 7
3/4 to 1 inch thick, cooked medium		8 to 10
Lamb Chops	350°F / 176°C	6 to 8
Pork Chops		6 to 8
Salmon	350°F / 176°C	6 to 8
Halibut	325°F / 162°C	6 to 8
Snapper		6 to 8
Hash Brown Potatoes	375°F / 190°C	3 to 4
Bacon	350°F / 176°C	3 to 4
Sausage Links or Patties		3 to 4
Ham (Pre-cooked)	375°F / 190°C	2
Eggs	275°F / 135°C	2 to 4
Note: The times and temperatures in this chart are intended as a general guide and starting point. Your actual times and temperatures may vary from this chart.		

During slow periods with minimal loads, do not load directly over the thermostat sensors as this will unnecessarily turn the burners on and overheat the remainder of the section not being utilized.

Turn the product and continue cooking until it has reached its desired degree of doneness.

Remove the product from the griddle.

When reloading the griddle, first use the griddle surface on which a previous load was not placed. This will help insure the proper griddle temperature.

MAINTENANCE & CLEANING

Cleaning

- Always start with a cold griddle.
- The stainless exterior can easily be cleaned using a good non-abrasive cleaner.
- Always follow the cleaner manufacturer's instructions when using any cleaner.
- Always apply these cleaners when the griddle is cold and rub in the direction of the metal's grain.

Griddle Surface Care (non-chromium surfaces)

It takes very little time and effort to keep the griddle attractive and performing at top efficiency. If grease is permitted to accumulate, it will form a gummy cake and then carbonize into a hard substance which is extremely difficult to remove. To prevent this condition, the following suggestions for cleanliness should be followed:

- After each use, scrape the griddle with a scraper or flexible spatula to remove excess grease and food. A waste drawer is provided for the scrapings. If there is an accumulation of burned on grease and food, the griddle should be thoroughly scoured and re-seasoned. Use pumice or griddle stone while the griddle is warm.

Do not use steel wool because of the danger of steel slivers getting into the food.

Daily Cleaning

Empty the grease drawer or whenever it is 3/4 full. It is easily removed for washing.



CAUTION USE CAUTION WHEN REMOVING THE RELEASE DRAWER AS IT CONTAINS HOT GREASE.

Clean the exterior of the appliance with hot water and mild detergent to maintain a gleaming appearance.

Keep the griddle surface clean. After each cooking load scrape the griddle surface to remove any carbonized grease.

Weekly Cleaning

Once a week or when necessary the griddle surface should be cleaned and seasoned. Use a griddle stone, griddle pad, or liquid cleaner. Rub with the grain of the metal, being careful not to scrape the splash guard.

A mild detergent with water or one of the many commercial griddle cleaners may be used.

Be sure to rinse thoroughly and coat the cooking surface with a thin film of oil to prevent rusting.

Season the griddle plate after each cleaning.

GRIDDLE CARE (CHROME SURFACES)

(Chrome surface griddles are marked with "CHS" at the end of the model number designation on the nameplate.) It takes very little time and effort to keep this Industrial Chrome griddle surface sparkling clean and performing at top efficiency. DO NOT allow grease to accumulate as it will carbonize and become difficult to remove. To prevent this condition, the following cleaning suggestions should be followed:

1. Remove excess oil and food regularly with a 4" (100mm) wide razor sharp type scraper and wipe surface with a damp cloth if desired.
2. Following the scraping, for end of the day cleaning, a damp cloth and a non-silicated, non-abrasive, non-chlorinated cleaner such as Bon-Ami may be used to wipe surface clean, followed by wiping with clean wet cloth.
3. Follow daily cleaning steps for Non-Chrome Surfaces.

CAUTION

ON CROME SURFACES:

1. Never use pumice, griddle stones, or abrasives on the surface.
2. Never strike the griddle surface with a sharp instrument or spatula edge.
3. Never use steel wool.
4. Never use commercial liquid grill cleaner on the griddle surface.
5. Abusing the surface voids the warranty.



KEEP WATER AND SOLUTIONS OUT OF CONTROLS. NEVER SPRAY OR HOSE CONTROL CONSOLE.

CAUTION

MOST CLEANERS ARE HARMFUL TO THE SKIN, EYES, MUCOUS MEMBRANES AND CLOTHING. PRECAUTIONS SHOULD BE TAKEN TO WEAR RUBBER GLOVES, GOGGLES OR FACE SHIELD AND PROTECTIVE CLOTHING. CAREFULLY READ THE WARNING AND FOLLOW THE DIRECTIONS ON THE LABEL OF THE CLEANER TO BE USED.

NOTICE: Never leave a chlorine sanitizer in contact with stainless steel surfaces longer than 10 minutes. Longer contact can cause corrosion.

TROUBLESHOOTING

Symptoms

What follows is a chart of Symptoms and Possible Causes to aid in diagnosing faults with the griddle.

Refer to the Symptoms column to locate the type of failure then to the Possible Cause for the items to be checked.

To test for a possible causes refer to the TEST section and locate the Possible Cause then refer to test to identify test procedures.

SYMPTOM	POSSIBLE CAUSE
Whole Griddle will not heat	<ul style="list-style-type: none"> No Power to Griddle
One Section will not heat	<ul style="list-style-type: none"> Failed contactor Failed Element.
Product Burning	<ul style="list-style-type: none"> Product left on griddle too long Out of Calibration
Product Under cooked	<ul style="list-style-type: none"> Product removed too soon Out of Calibration

POSSIBLE CAUSE	TEST
Product is cooked too long	<ul style="list-style-type: none"> No test available, operational condition
Failed Contactor	<ul style="list-style-type: none"> Remove the wires from the contactor coil and check for continuity across the contactor coil connection* Ensure the contactor moveable points move freely up and down*
Failed Element	<ul style="list-style-type: none"> Confirm that Elements are getting correct voltage and have continuity*

NOTICE: Service on this, or any other, LANG appliance must be performed by qualified personnel only. Consult your Lang Authorized Service Agent Directory or call the factory at 1-800-807-9054, or WWW.STAR-MFG.COM For the service agent nearest you.



BOTH HIGH AND LOW VOLTAGES ARE PRESENT INSIDE THIS APPLIANCE WHEN THE UNIT IS PLUGGED/WIRED INTO A LIVE RECEPTACLE. BEFORE REPLACING ANY PARTS, DISCONNECT THE UNIT FROM THE ELECTRIC POWER SUPPLY.


If an item on the list is followed by an asterisk (*), the work should be done by a factory authorized service representative.

TROUBLESHOOTING continued



CAUTION

USE OF ANY REPLACEMENT PARTS OTHER THAN THOSE SUPPLIED BY LANG OR THEIR AUTHORIZED DISTRIBUTORS CAN CAUSE BODILY INJURY TO THE OPERATOR AND DAMAGE TO THE EQUIPMENT AND WILL VOID ALL WARRANTIES.

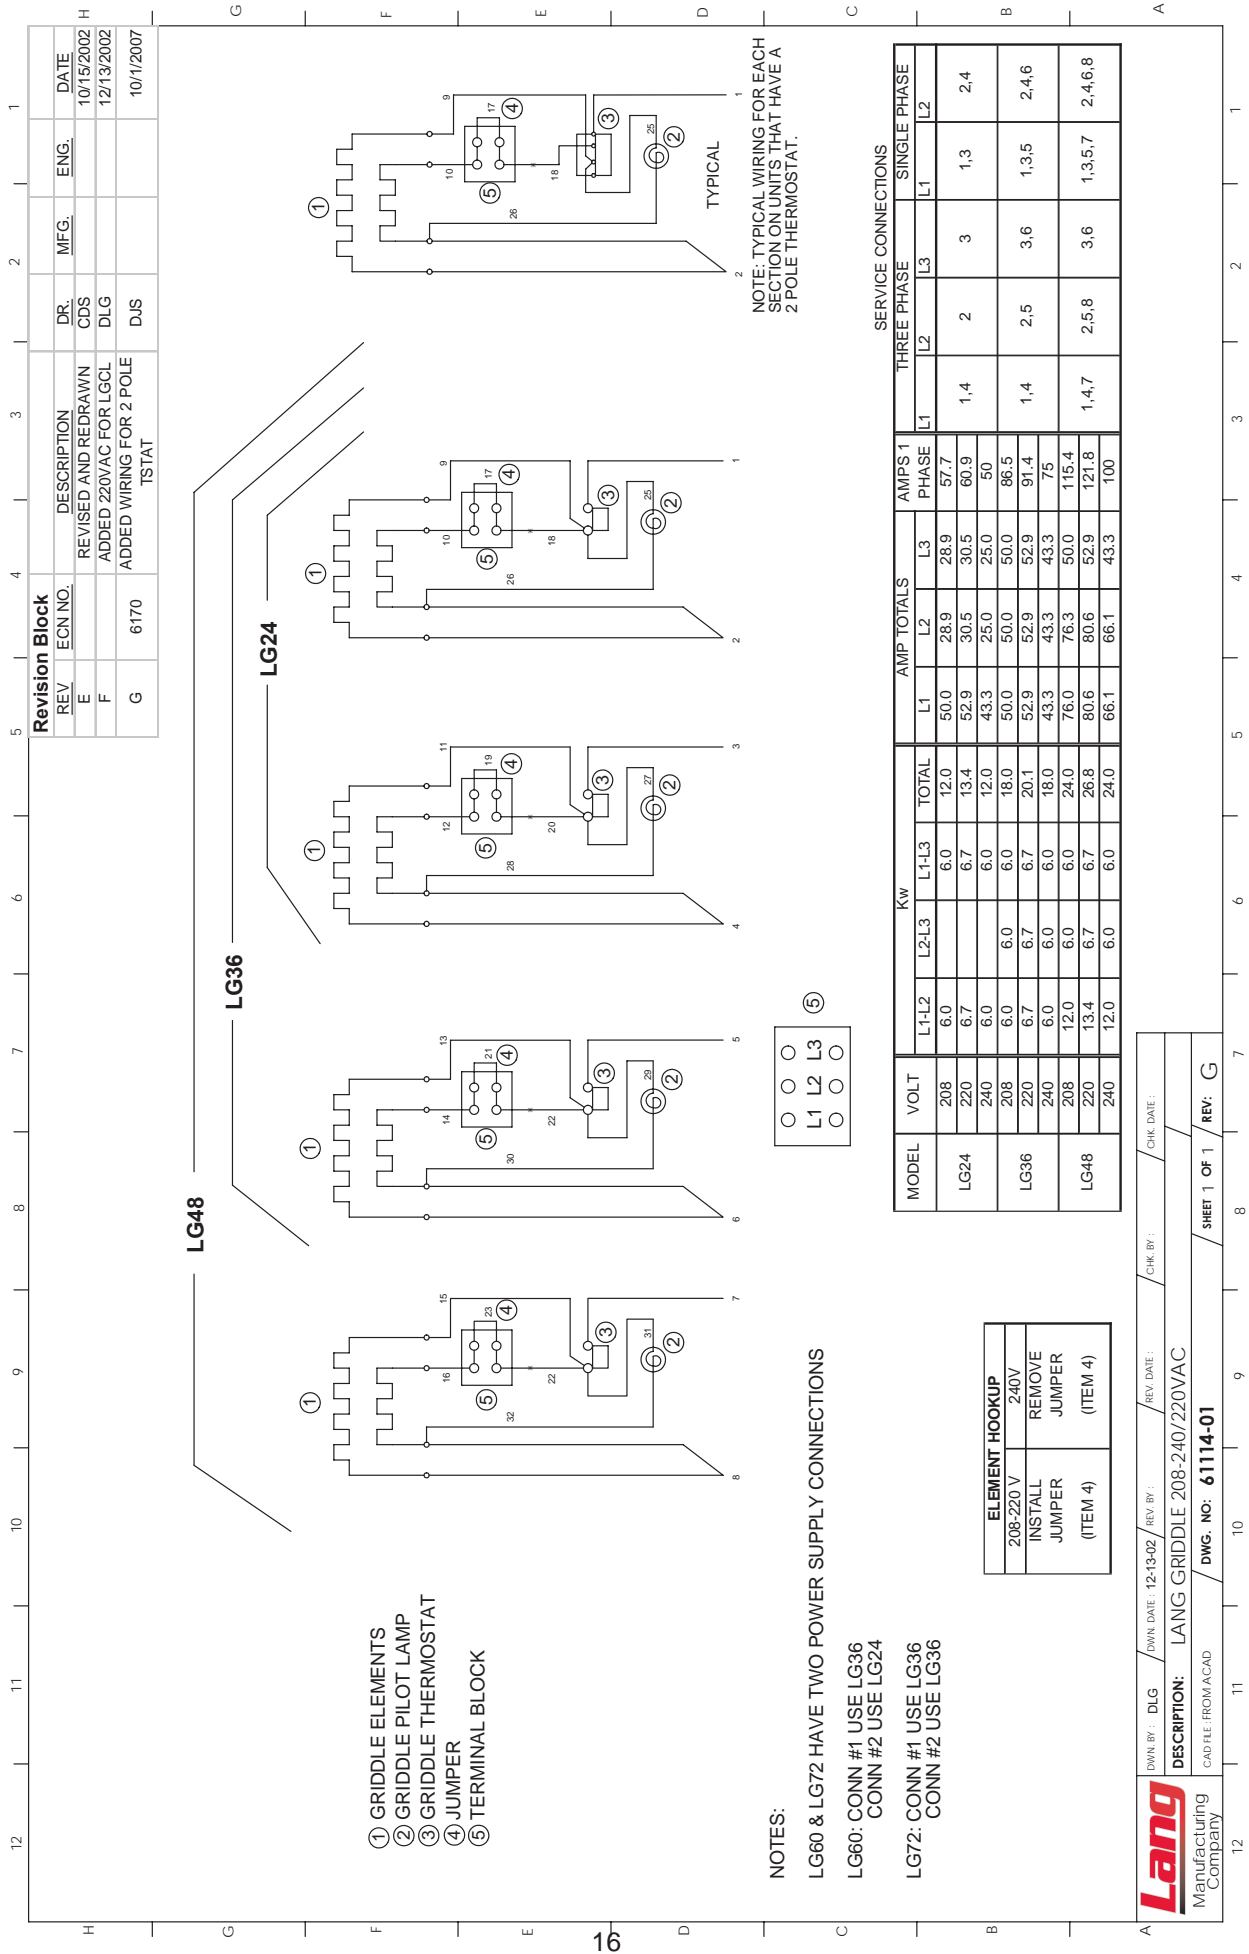

Revision Block

REV	ECN NO.	DESCRIPTION	DR.	MFG.	ENG.	DATE
E		REVISED AND REDRAWN	CDS			10/15/2002
F		ADDED 220VAC FOR LGCL	DLG			12/13/2002
G	6170	ADDED WIRING FOR 2 POLE TSTAT	DJS			10/1/2007

- 1 GRIDDLE ELEMENTS
2 GRIDDLE PILOT LAMP
3 GRIDDLE THERMOSTAT
4 JUMPER
5 TERMINAL BLOCK

NOTES:

LG60 & LG72 HAVE TWO POWER SUPPLY CONNECTIONS

LG60: CONN #1 USE LG36
CONN #2 USE LG24

LG72: CONN #1 USE LG36
CONN #2 USE LG36

ELEMENT HOOKUP	
208-220 V	240V
INSTALL JUMPER (ITEM 4)	REMOVE JUMPER (ITEM 4)


MODEL	VOLT	Kw			AMP TOTALS			AMPS 1		THREE PHASE			SINGLE PHASE	
		L1-L2	L2-L3	L1-L3	TOTAL	L1	L2	L3	PHASE	L1	L2	L3	L1	L2
LG24	208	6.0		6.0	12.0	50.0	28.9	28.9	57.7					
	220	6.7		6.7	13.4	52.9	30.5	30.5	60.9	1.4	2	3	1.3	2.4
	240	6.0		6.0	12.0	43.3	25.0	25.0	50					
LG36	208	6.0	6.0	6.0	18.0	50.0	50.0	50.0	86.5					
	220	6.7	6.7	6.7	20.1	52.9	52.9	52.9	91.4	1.4	2.5	3.6	1.3,5	2.4,6
	240	6.0	6.0	6.0	18.0	43.3	43.3	43.3	75					
LG48	208	12.0	6.0	6.0	24.0	76.0	76.3	50.0	115.4					
	220	13.4	6.7	6.7	26.8	80.6	80.6	52.9	121.8	1.4,7	2.5,8	3.6	1.3,5,7	2.4,6,8
	240	12.0	6.0	6.0	24.0	66.1	66.1	43.3	100					

OWN BY: DLG / OWN DATE: 12-13-02 / REV BY: / REV DATE: / CHK BY: / CHK DATE: /

DESCRIPTION: LANG GRIDDLE 208-240/220VAC

CAD FILE FROM ACAD / DWG. NO: 61114-01

SHEET 1 OF 1 / REV: G

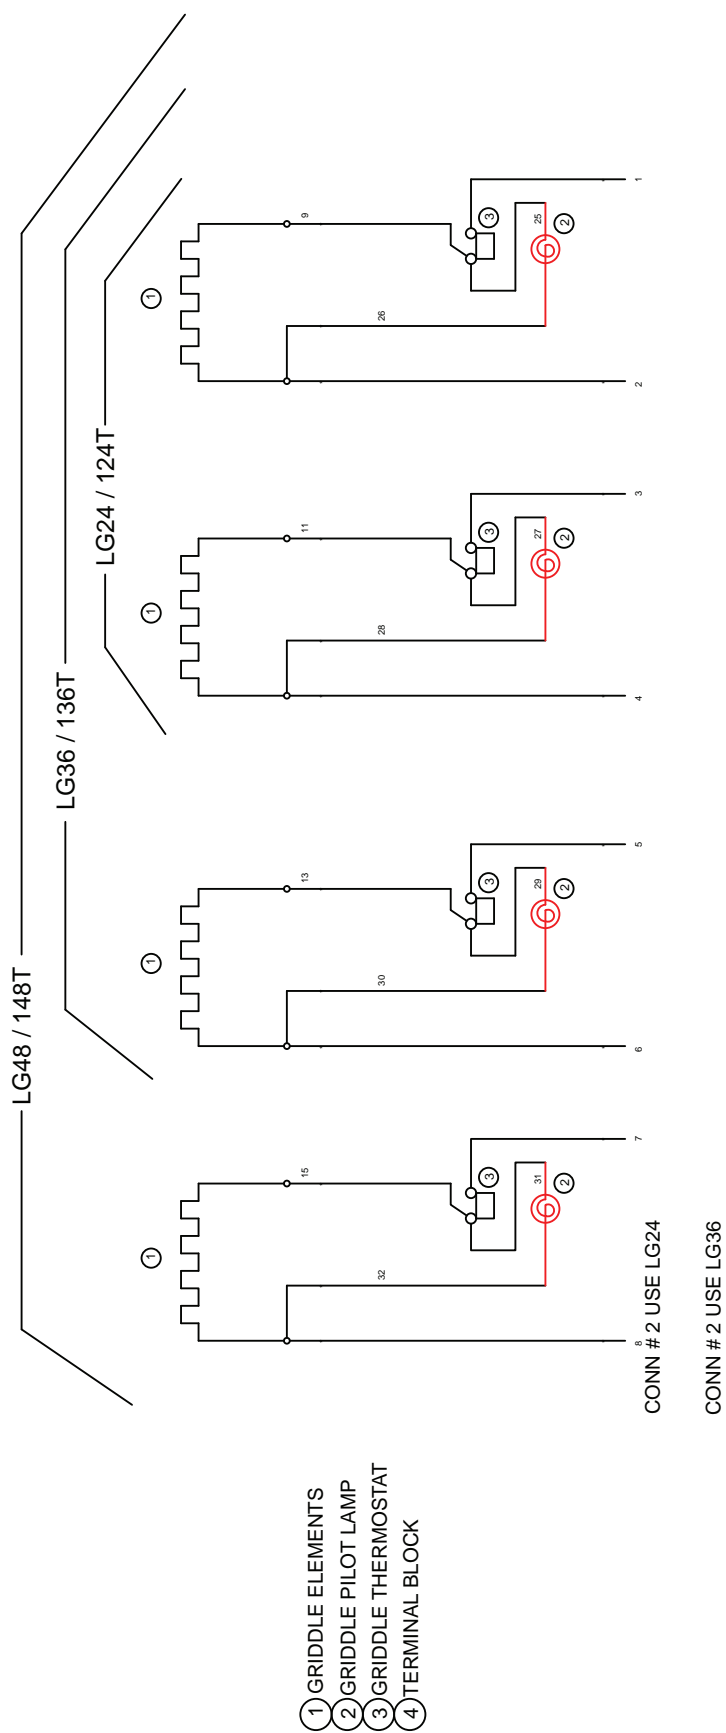


NOTE: LG60 & LG72 HAVE TWO POWER SUPPLY CONNECTIONS

LG60: CONN # 1 USE LG36

LG72: CONN # 1 USE LG36

SERVICE CONNECTIONS			
MODEL	THREE PHASE		
	L1	L2	L3
24	1,4	2	3
36	1,4	2,5	3,6
48	1,4,7	2,5,8	3,6

* NUMBER




MODELS:


48OV, 3PH Electric Thermostatic Griddles

STAR MANUFACTURING INTERNATIONAL INC. # 10 SUMNER DRIVE ST. LOUIS, MO. 63143, USA		MATERIAL		MODEL NO.		PART NO.	
Lang		FINISH		DATE: 7/29/2008		2M-61114-W51	
THIS DRAWING CONTAINS INFORMATION CONFIDENTIAL TO STAR MFG. INT'L. NO REPRODUCTION OR DISSEMINATION OF THIS CONTENT IS PERMITTED.		DR: DJS CK: [initials]		TOLERANCE UNLESS NOTED: .XXX" ± .015" ANGLES ± 1°		TITLE WID Z ACCUTEMP ELECT GRID W/ CSE12 HOODS - 208/240V	
		REVISIONS		REV: DATE/ECO		DESCRIPTION OF CHANGE	
		A		7/23/2008		REVISED GRIDDLE AND CLAMSHELL WIRING NOTES	
						DR	
						JMM	

- ① GRIDDLE ELEMENTS
- ② GRIDDLE PILOT LAMP
- ③ GRIDDLE THERMOSTAT
- ④ JUMPER
- ⑤ TERMINAL BLOCK
- ⑥ SWITCH
- ⑦ TERMINAL BLOCK - 4 POLE
- ⑧ OVERTEMP STAT #1
- ⑨ HOOD TILT SWITCH
- ⑩ HOOD ELEMENTS
- ⑪ CONTACTOR
- ⑫ FUSE
- ⑬ TIMER PLUG
- ⑭ HOOD PILOT LAMP

GRIDDLE ELEMENT HOOKUP	
208-220 V	240V
INSTALL	REMOVE
JUMPER	JUMPER
(ITEM 4)	(ITEM 4)

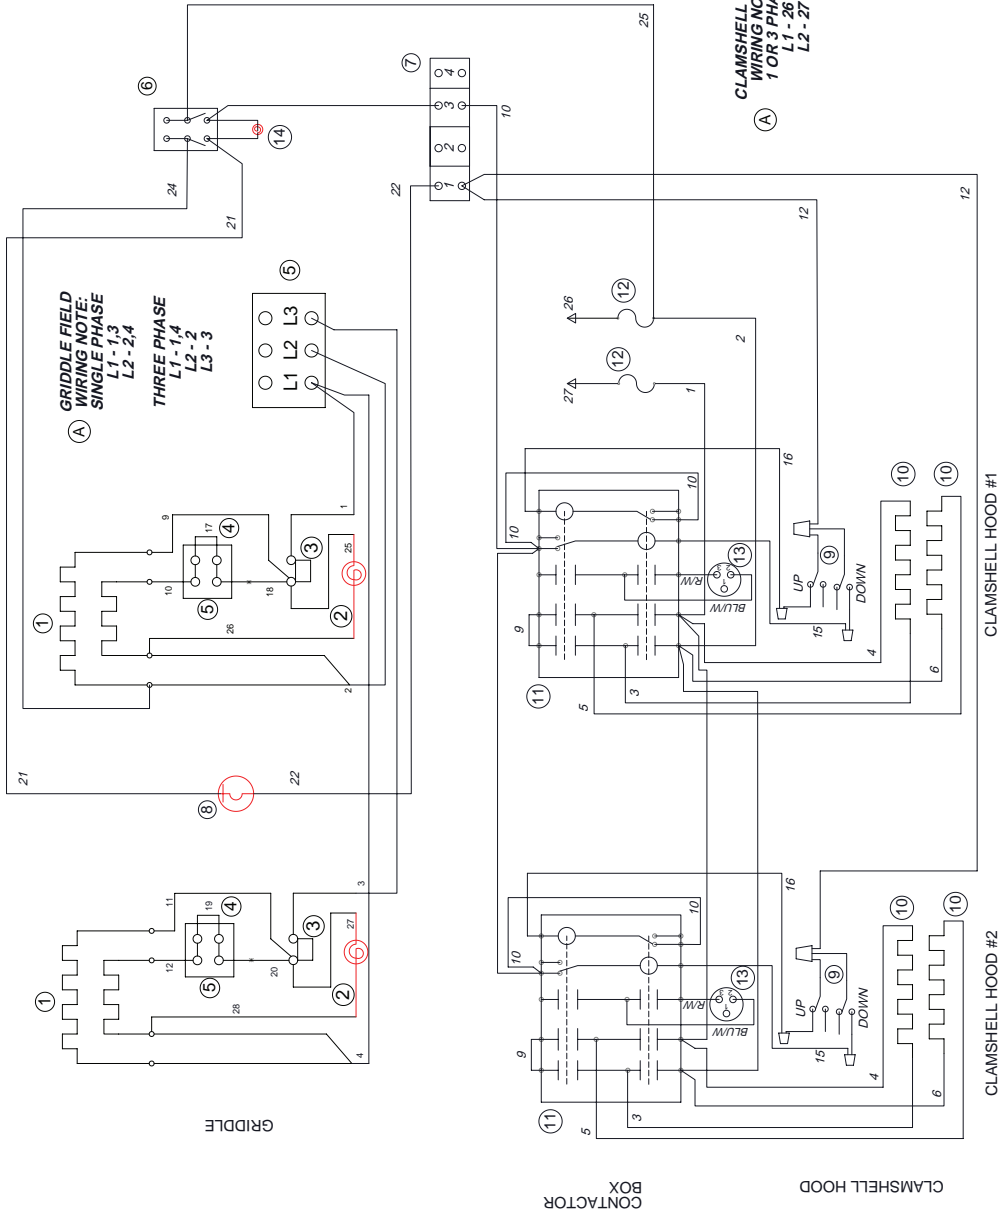

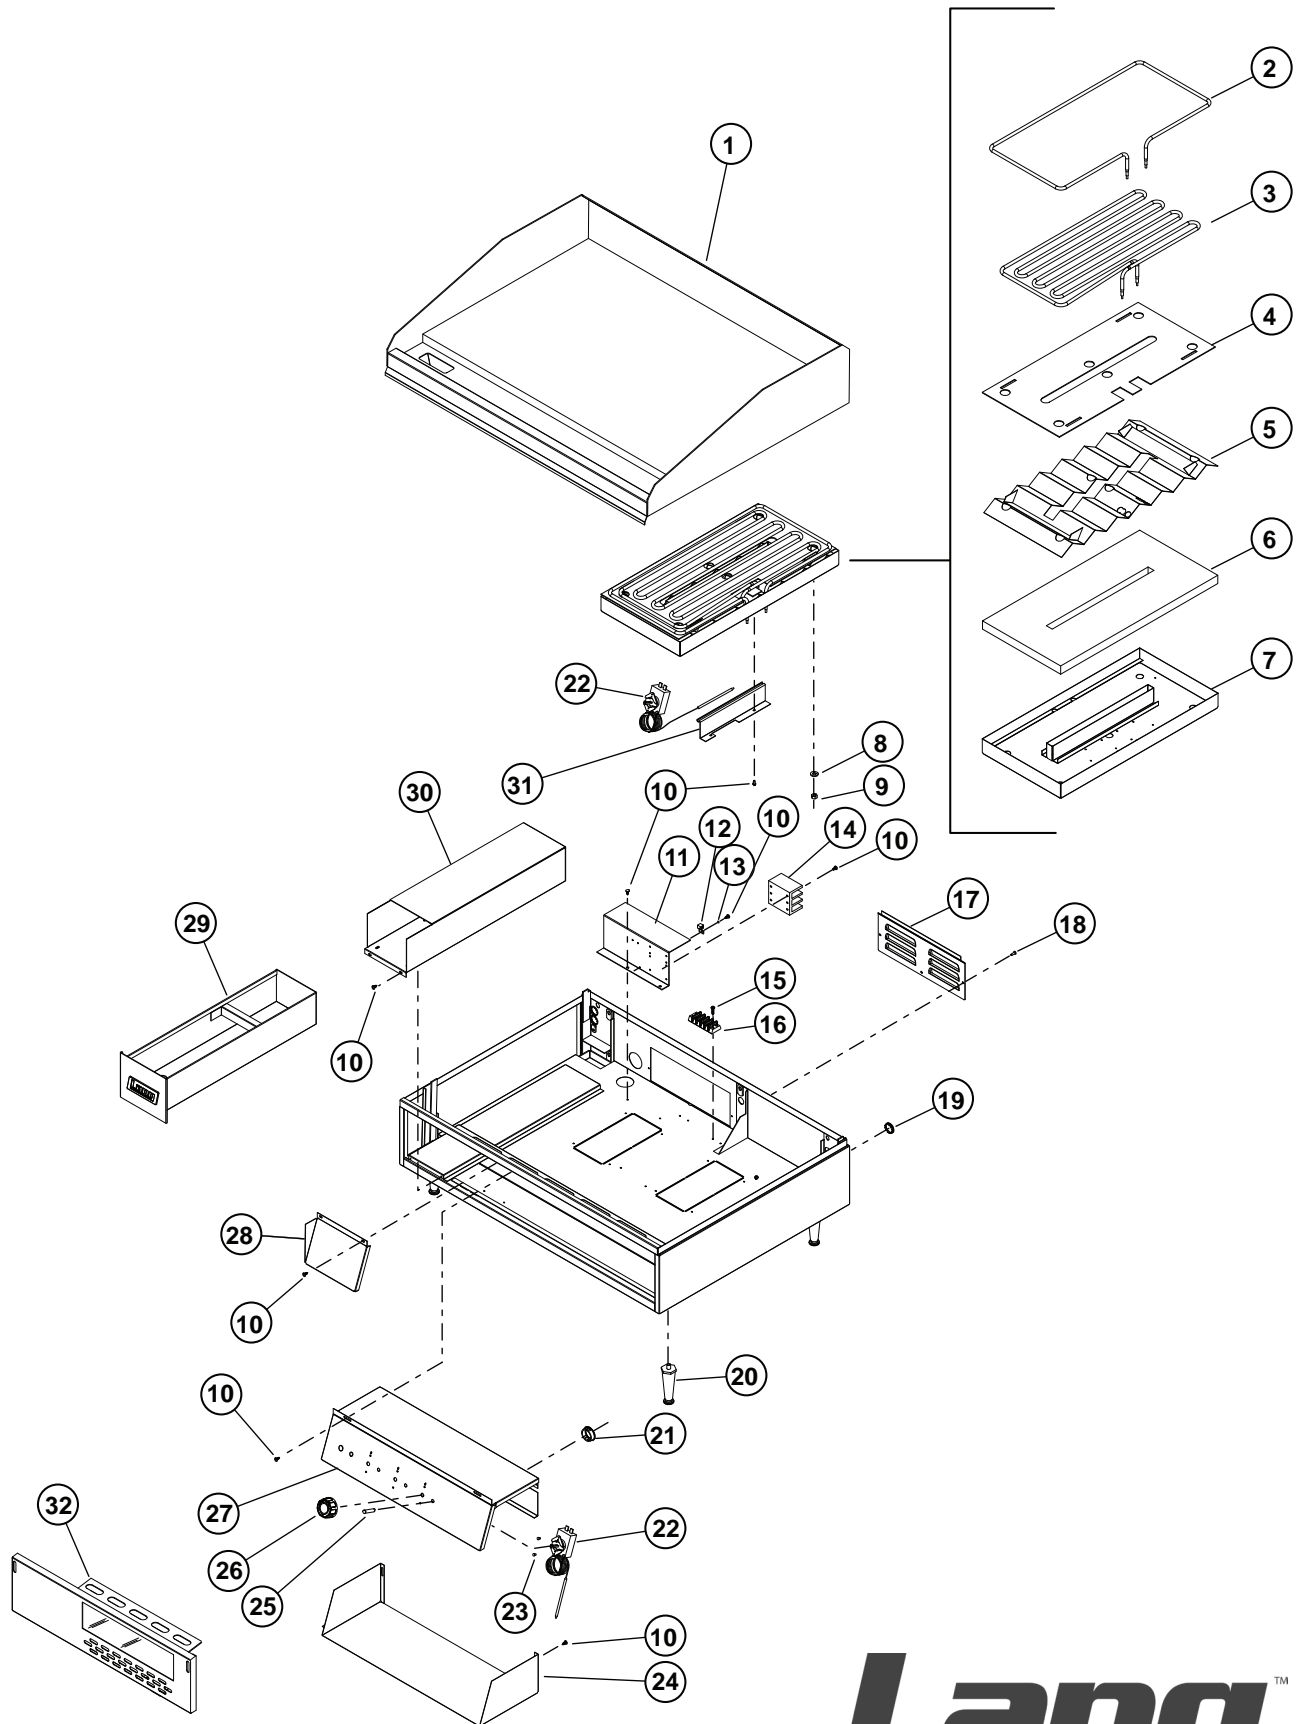

Model: Electric Thermostatic Griddle

Lang™

A Division of Star Mfg. Int'l, Inc.

SK2397

Rev. -

8/15/08

PARTS LIST

April 8, 2009, Rev G

Model No: 124T, 124TC, 124THE, 124TSS Selectronic Electric Griddle

Key Number	Part Number	Qty Per	Description
1	K9-XL-722-2	1	PLATE ASY 2' ACU 124T
	K9-XL-722-21	1	PLATE ASY 2' ACU 4.5 124T-480VSJ, 124TSS, 124TSS-480V
	K9-XL-722-211	1	PLATE ASSY 2' ACU WITH 4.5 124T-PE, 124T-PE-480V
	K9-XL-722-24	1	PLATE ASY 2' ACU W/XLH12 124THE, 124THE2L
	K9-XL-724-2	1	PLATE ASSY 2' TALL CHROME 124TC
	K9-XL-724-W24	1	PLATE ASY 2' ACU CHROME 3/4H 124TC-TE
2	2N-11030-30	2	ELMNT GRID 208V 1257W 124T
3	2N-11030-04	2	ELMNT GRID 380V 5991W 124T-380V
	2N-11030-29	2	ELE GRD 208/240V4.5KW/6KW 124T
	2N-11030-31	2	ELMNT GRID 480V 5991W 124T-480V/M, 124T-480VSJ, 124T-PE-480V, 124TSS-480V
4	K9-XL-426	2	ELEMENT PAN PLATE 124T
5	K9-XL-439	2	ELEMENT PAN Z ASSY 124T
6	2H-XL-424	2	ELEMENT PAN INSULATION 124T
7	K9-XL-434	2	ELEMENT PAN ASSEMBLY 124T
8	2C-20201-04	12	WSHR FLT 3/8 USS PLTD 124T
9	2C-20301-06	12	NUT HEX 5/16-18 PLTD 124T
10	2C-20103-02	16	SCRW SM PLT 10 X .5 PHLSL 124T
11	K9-XL-227	1	SUPPLY WIRE BAFFLE 124T
12	Y9-31200-02-1	1	GROUNDING LUG/+LABEL
13	2C-20202-06	1	WSHR LOCK #10 INT STAR
14	2E-30500-07	1	TRM BLOCK 3PLELRGE 125AMP 124T
15	2C-20103-01	4	SCRW SM PLT 10X7/8 PHIL
17	K9-XL-507	1	REAR COVER
18	2C-20104-04	3	SCRW PHD ST 8-32X.5 PLTD PHILP
19	2P-70903-08	1	PLG BTN PLTD MTL 5/16 124T
	2P-70903-09	1	PLG BTN PLTD MTL 7/16 124T
	2P-70903-09	4	PLG BTN PLTD MTL 7/16 124T
20	2A-72500-05	4	LEG 4 W/BOLT DOWN ADJ 124T-380VM, 124T-440VM
20	2A-Z0314	4	FOOT, 4" DIE CAST 124T
21	2K-70801-02	2	SNAP BUSH 1 3/8 SB1375-16 124T
22	2T-30401-30	1	STAT FXD 550° DEG OPEN 124THE2L
	2T-30402-07	2	STAT ADJ 550° 48 C/T (2 Pole) 124T, 124T-220V, 124THE2L
	2T-30402-09	2	STAT ADJ 550° 72 C/T (4 Pole) 124T-220VCW, 124T-480V, 124T-PE, 124T-PE-480V, 124TC-TE, 124TSS, 124TSS-480V
23	2C-20101-77	4	SCRW MS PLT 6-32 X .25 PHD
24	K9-XL-524-1	1	ELECT BOX COVER SPOT 2' 124T
25	2J-31601-01	2	PILOT LT 250V 6LEAD BLK 124T, 124T-220V
	2J-31601-01	3	PILOT LT 250V 6LEAD BLK 124THE2L
	2J-31601-02	3	PILOT LT 480V 6LEAD BLK 124T-380V/M, 124T-480V/M, 124T-480VSJ, 124T-PS-480V, 124TSS-480V
26	Y9-70701-14-1	2	KNOB 550° C PHANTOM 124T-220VCW, 124T-480VSJ, 124T-PE, 124T-PE-480V, 124TSS, 124TSS-480V
26	Y9-70701-15-1	2	KNOB 550° D PHANTOM 124T, 124T-220V, 124T-480V
27	K9-XL-725-04	1	ELECT BOX ASY 2' XL/LG 124T, 124T-220V
	K9-XL-725-041	1	ELECT BOX ASY 2' XL/LG 124T-220VCW, 124T-480VSJ, 124T-PE, 124TC-TE, 124TSS
	K9-XL-725-W13	1	ELECT BOX ASSY 2' XL/LG 124THE2L
28	K9-XL-422-1	1	ACCESS PANEL ASSY 2' 124T
29	K9-XL-235-1	1	GREASE BUCKET ASSY S/S 124T
30	K9-XL-228	1	BUCKET SLIDE ASSY 124T
31	K9-XL-504	2	STAT HOLDER 124T
NI	2E-30705-01	2	CONTC 2-SPD MTR COIL 240 124THE2L
NI	2E-30900-30	2	FUSE, 60 AMP 124THE2L
NI	2E-30901-14	1	FUSE BLOCK 2 POLE 60AMP 124THE2L
NI	K9-50302-14	1	2' GRAB BAR ASSY 124T-MARINE
NI	K9-LGCL-234-1	1	DRAWER STOP 124T-MARINE
NI	K9-WTGC-24	1	WORK TABLE GRIDDLE COVER 124T-BK

**IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED
INCLUDE MODEL AND SERIAL NUMBER**

PAGE 1
OF 1

Some items are included for illustrative purposes only and in certain instances may not be available.

PARTS LIST

April 8, 2009, Rev G

Model No: 136T, 136TC, 136TNTS Thermostatic Electric Griddle Commercial & Marine

Key Number	Part Number	Qty Per	Description
1	K9-XL-722-3	1	PLATE ASSY 3' ACU 136T, 136T-440VM, 136T-480V
	K9-XL-724-34	1	PLATE ASSY 3' ACU W/6.75 136TC-TE
	K9-XL-722-W35	1	PLATE ASSY 3' ACU-NO TAPER 136TNTS
	K9-XL-724-W3	1	PLATE ASSY 3" ACU CHROME 136TC
2	2N-11030-30	3	ELMNT GRID 208V 1257W ALL
3	2N-11030-29	3	ELE GRD 208/240V4.5KW/6KW 136T
	2N-11030-31	3	ELMNT GRID 480V 5991W 136T-480V
	2N-11030-48	3	ELE GRD 440V 5991W 136T-440VM
	2N-11030-04	3	ELMNT GRID 380V 5991W 136TC-TE-380, 136T-380V
4	K9-XL-426	3	ELEMENT PAN PLATE 136T
5	K9-XL-435	3	ELEMENT PAN Z ALL
6	2H-XL-424	3	ELEMENT PAN INSULATION ALL
7	K9-XL-425	3	ELEMENT PAN ALL
8	2C-20201-04	18	WSHR FLT 3/8 USS PLTD ALL
9	2C-20103-06	2	SCRW SM PLT 6 X 3/8 PHL ALL
9	2C-20301-06	18	NUT HEX 5/16-18 PLTD ALL
10	2C-20103-02	18	SCRW SM PLT 10 X .5 PHLSL ALL
11	K9-XL-227	1	SUPPLY WIRE BAFFLE ALL
12	Y9-31200-02-1	1	GROUNDING LUG/+LABEL ALL
13	2C-20202-06	1	WSHR LOCK #10 INT STAR ALL
14	2E-30500-07	1	TRM BLOCK 3PLELRGE 125AMP ALL
15	2C-20103-01	4	SCRW SM PLT 10X7/8 PHIL ALL
16	2E-30500-22	1	TRMINL STRP 8POLE 50A250V 136T
17	K9-XL-507	1	REAR COVER ALL
18	2C-20104-04	3	SCRW PHD ST 8-32X.5 PLTD PHILP ALL
19	2P-70903-08	1	PLG BTN PLTD MTL 5/16 ALL
	2P-70903-09	1	PLG BTN PLTD MTL 7/16 ALL
	2P-70903-09	4	PLG BTN PLTD MTL 7/16 ALL
20	2A-72500-05	4	LEG 4 W/BOLT DOWN ADJ MARINE
	2A-Z0314	4	FOOT, 4" DIE CAST COMMERCIAL
21	2K-70801-02	2	SNAP BUSH 1 3/8 SB1375-16 ALL
22	2T-30402-07	3	STAT ADJ 550o 48 C/T 136T
	2T-30402-09	3	STAT ADJ 550° 72 C/T 136TC-TE, 136TC-TE-380
23	2C-20101-77	6	SCRW MS PLT 6-32 X .25 PHD ALL
24	K9-XL-502	1	ELECT. BOX COVER 3' & 4' ALL
25	2J-31601-01	3	PILOT LT 250V 6LEAD BLK 136T
	2J-31601-02	3	PILOT LT 480V 6LEAD BLK 136T-440VM, 136T-480V/M, 136TC-TE-380
26	Y9-70701-15-1	3	KNOB 550o D PHANTOM 136T
26	Y9-70701-14-1	3	KNOB 550° D PHANTOM 136TC-TE, 136TC-TE-380
27	K9-XL-725-08	1	ELECT BOX ASY 3' XL/LG 136T
	K9-XL-725-081	1	ELECT BOX ASY 3' XL/LG 136TC-TE
28	K9-XL-422-2	1	ACCESS PANEL ASSY 3' 136T
29	K9-XL-235-1	1	GREASE BUCKET ASSY S/S 136T
30	K9-XL-228	1	BUCKET SLIDE ASSY 136T
31	K9-XL-504	3	STAT HOLDER 136T
NI	K9-50302-15	1	3' GRAB BAR ASSY 136T-440VM
NI	K9-LGCL-234-1	1	DRAWER STOP 136T-440VM

**IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED
INCLUDE MODEL AND SERIAL NUMBER**

PAGE 1
OF 1

Some items are included for illustrative purposes only and in certain instances may not be available.

PARTS LIST

April 8, 2009, Rev G

Model No: 148S, 148S-480V, 148S-SC, 148S-WB Selectronic Electric Griddle

Key Number	Part Number	Qty Per	Description
1	K9-XL-722-4	1	PLATE ASY 4' ACU 148T
	K9-XL-722-41	1	PLATE ASY 4' ACU 4.5 148T-SJ, 148TSS
	K9-XL-722-44	1	PLATE ASY 4' ACU CHRME 3/4H 148TC-TE
	K9-XL-724-4	1	PLATE ASY 4' ACU CHROME 148TC, 148TC-TE
2	2N-11030-30	4	ELMNT GRID 208V 1257W 148T
3	2N-11030-04	4	ELMNT GRID 380V 5991W 148TC-TE-380
	2N-11030-29	4	ELE GRD 208/240V4.5KW/6KW 148T
	2N-11030-31	4	ELMNT GRID 480V 5991W 148T-480V, 148TSS-480V
	2N-11030-48	4	ELE GRD 440V 5991W 148T-440VM
4	K9-XL-426	4	ELEMENT PAN PLATE 148T
5	K9-XL-439	4	ELEMENT PAN Z ASSY 148T
6	2H-XL-424	4	ELEMENT PAN INSULATION 148T
7	K9-XL-434	3	ELEMENT PAN ASSEMBLY 148T
8	2C-20201-04	24	WSHR FLT 3/8 USS PLTD 148T
9	2C-20301-06	24	NUT HEX 5/16-18 PLTD 148T
10	2C-20103-02	15	SCRW SM PLT 10 X .5 PHLSL 148T
11	K9-XL-227	1	SUPPLY WIRE BAFFLE 148T
12	Y9-31200-02-1	1	GROUNDING LUG+LABEL 148T
13	2C-20202-06	1	WSHR LOCK #10 INT STAR 148T
14	2E-30500-07	1	TRM BLOCK 3PLELRGE 125AMP 148T, 148T-M, 148TC, 148TH-208/240V, 148T-SJ, 148TC-TE, 148TSS, 148THS-208/240V, 148T-440VM, 148T-480V/M, 148TC-TE-380, 148TSS-480V
15	2C-20103-01	4	SCRW SM PLT 10X7/8 PHIL 148T, 148T-M, 148TC, 148TH-208/240V, 148T-SJ, 148TC-TE, 148TSS, 148THS-208/240V
16	2E-30500-22	1	TRMINL STRP 8POLE 50A250V 148T, 148T-M, 148TC, 148TH-208/240V, 148T-SJ, 148TC-TE, 148TSS, 148THS-208/240V
17	K9-XL-507	2	REAR COVER 148T
18	2C-20104-04	3	SCRW PHD ST 8-32X.5 PLTD PHILP 148T
19	2P-70903-02	2	PLG BTN PLTD MTL 1/2 148T
	2P-70903-08	1	PLG BTN PLTD MTL 5/16 148T
	2P-70903-09	3	PLG BTN PLTD MTL 7/16 148T
20	2A-72500-05	4	LEG 4 W/BOLT DOWN ADJ 148T-440VM
20	2A-Z0314	4	FOOT, 4" DIE CAST 148T
21	2K-70801-02	2	SNAP BUSH 1 3/8 SB1375-16 148T
	2T-30402-07	3	STAT ADJ 550o 48 C/T 148T, 148TC
	2T-30402-08	4	STAT ADJ 450° 72 C/T 148T-440VM
	2T-30402-09	4	STAT ADJ 550° 72 C/T 148T-SJ, 148TC-TE, 148TSS
23	2C-20101-77	8	SCRW MS PLT 6-32 X .25 PHD 148T
24	K9-XL-524-2	1	ELECT. BOX COVER 3' & 4' 148T
25	2J-31601-01	4	PILOT LT 250V 6LEAD BLK 148T
	2J-31601-02	4	PILOT LT 480V 6LEAD BLK 148T-440VM, 148T-480V, 148TC-TE-380, 148TSS-480V
26	Y9-70701-12	4	KNOB ASSY 550° A 148T-480V
	Y9-70701-14-1	4	KNOB 550° D PHANTOM 148T-SJ, 148TC-TE, 148TSS
	Y9-70701-15-1	4	KNOB 550o D PHANTOM 148T
	Y9-70701-19-1	4	KNOB 450° D PHANTOM 148T-440VM
27	K9-XL-725-12	1	ELECT BOX ASY 4' XL\LG 148T
	K9-XL-725-121	1	ELECT BOX ASY 4' XL\LG 148T-SJ, 148TC-TE, 148TSS
28	K9-XL-422-3	1	ACCESS PANEL ASSY 4' 148T
29	K9-XL-235-1	1	GREASE BUCKET ASSY S/S 148T
30	K9-XL-228	1	BUCKET SLIDE ASSY 148T
31	K9-XL-504	4	STAT HOLDER 148T
NI	K9-50302-16	1	4' GRAB BAR ASSY 148T-440VM
NI	K9-LGCL-234-1	1	DRAWER STOP 148T-440VM

**IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED
INCLUDE MODEL AND SERIAL NUMBER**

PAGE 1
OF 1

Some items are included for illustrative purposes only and in certain instances may not be available.

PARTS LIST

April 8, 2009, Rev G

Model No: 160T, 160T-M 160T-480V, 160TC-TE, 160TSS Selectronic Electric Griddle

Key Number	Part Number	Qty Per	Description
1	K9-XL-722-5	1	PLATE ASY 5' ACU 160T
	K9-XL-722-51	1	PLATE ASY 5' ACU 4.5 160TSS
	K9-XL-724-54	1	PLATE ASY 5' ACU CHRME 3/4" 160TC-TE
2	2N-11030-30	5	ELMNT GRID 208V 1257W 160T
3	2N-11030-29	5	ELE GRD 208/240V4.5KW/6KW 160T
	2N-11030-31	5	ELMNT GRID 480V 5991W 160T-480V, 160TSS-480V
4	K9-XL-426	5	ELEMENT PAN PLATE 160T
5	K9-XL-439	5	ELEMENT PAN Z ASSY 160T
6	2H-XL-424	5	ELEMENT PAN INSULATION 160T
7	K9-XL-434	5	ELEMENT PAN ASSEMBLY 160T
8	2C-20201-04	30	WSHR FLT 3/8 USS PLTD 160T
9	2C-20301-06	30	NUT HEX 5/16-18 PLTD 160T
10	2C-20103-02	34	SCRW SM PLT 10 X .5 PHLSL 160T
11	K9-XL-227	2	SUPPLY WIRE BAFFLE 160T
12	2E-31200-02	2	GROUNDING LUG/+LABEL 208/240V
13	2C-20202-06	2	WSHR LOCK #10 INT STAR 160T
14	2E-30500-07	2	TRM BLOCK 3PLELRGE 125AMP 160T
15	2C-20103-01	8	SCRW SM PLT 10X7/8 PHIL 160T
16	2E-30500-20	2	TERMINAL STRIP 4 POLE 50A 250V 160T-208/240V
	2E-30500-22	2	TRMINL STRP 8POLE 50A250V 160T
17	K9-XL-507	2	REAR COVER 160T
18	2C-20104-04	6	SCRW PHD ST 8-32X.5 PLTD PHILP 160T
19	2P-70803-02	2	PLG BTN PLTD MTL 1/2 160T-208/240V
	2P-70803-02	8	PLG BTN PLTD MTL 1/2 160TSS
	2P-70903-08	2	PLG BTN PLTD MTL 5/16 160T
	2P-70903-09	2	PLG BTN PLTD MTL 7/16 160T
20	2A-20314	8	FOOT, 4" DIE CAST 160T
	2A-72500-05	8	LEG 4 W/BOLT DOWN ADJ 160T-M
21	2K-70801-02	4	SNAP BUSH 1 3/8 SB1375-16 160T
22	2T-30402-07	5	STAT ADJ 550o 48 C/T 160T
	2T-30402-09	5	STAT ADJ 550° 72 C/T 160TC-TE, 160TSS
23	2C-20101-77	10	SCRW MS PLT 6-32 X .25 PHD
24	K9-XL-524-1	1	ELECT BOX COVER SPOT 2' 160T
	K9-XL-524-2	1	ELECT. BOX COVER 3' & 4' 160T
25	2J-31601-01	5	PILOT LT 250V 6LEAD BLK 160T
	2J-31601-02	5	PILOT LT 480V 6LEAD BLK 160T-480V, 160TSS-480V
26	Y9-70701-14-1	5	KNOB 550° D PHANTOM 160TC-TE, 160TSS
	Y9-70701-15-1	5	KNOB 550o D PHANTOM 160T
27	K9-XL-725-04	1	ELECT BOX ASY 2' XL\LG 160T
	K9-XL-725-041	1	ELECT BOX ASY 2' XL\LG 160TC-TE, 160TSS
	K9-XL-725-08	1	ELECT BOX ASY 3' XL\LG 160T
	K9-XL-725-081	1	ELECT BOX ASY 3' XL\LG 160TC-TE, 160TSS
28	K9-XL-422-1	1	ACCESS PANEL ASSY 2' 160T
	K9-XL-422-2	1	ACCESS PANEL ASSY 3' 160T
29	K9-XL-235-1	2	GREASE BUCKET ASSY S/S 160T
30	K9-XL-228	2	BUCKET SLIDE ASSY 160T
31	K9-XL-504	5	STAT HOLDER 160T
32	K9-XL-759-2	1	PANEL COVER ASSY 2' - CP CORRECTIONAL PKG
	K9-XL-759-3	1	PANEL COVER ASSY 3' - CP CORRECTIONAL PKG
NI	K9-50302-21	1	5' GRAB BAR SUPPORT - XL-LG 160T-M

**IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED
INCLUDE MODEL AND SERIAL NUMBER**

PAGE 1
OF 1

Some items are included for illustrative purposes only and in certain instances may not be available.

PARTS LIST

April 8, 2009, Rev G

Model No: 172T, 172T-PE, 172T-SJ, 172TC, 172TSS Selectronic Electric Griddle

Key Number	Part Number	Qty Per	Description
1	K9-XL-722-6	1	PLATE ASY 5' ACU 172T
	K9-XL-722-61	1	PLATE ASY 6' ACU 4.5 172T-480VSJ, 172T-SJ, 172TSS
	K9-XL-722-611	1	PLATE ASY 6' ACU TALL 172T-PE
	K9-XL-724-6	1	PLATE ASY 6' ACU CHROME 172TC
	K9-XL-724-64	1	PLATE ASY 6' ACU CHRME 3/4H 172TC-TE
2	2N-11030-30	6	ELMNT GRID 208V 1257W 172T
3	2N-11030-29	6	ELE GRD 208/240V4.5KW/6KW 172T
	2N-11030-31	6	ELMNT GRID 480V 5991W 172T-480V, 172T-480VSJ, 172T-PE-480V
	2N-11030-48	6	ELE GRD 440V 5991W XL/LG 172T-440VM
4	K9-XL-426	6	ELEMENT PAN PLATE 172T
5	K9-XL-439	6	ELEMENT PAN Z ASSY 172T
6	2H-XL-424	6	ELEMENT PAN INSULATION 172T
7	K9-XL-434	6	ELEMENT PAN ASSEMBLY 172T
8	2C-20201-04	36	WSHR FLT 3/8 USS PLTD 172T
9	2C-20301-06	36	NUT HEX 5/16-18 PLTD 172T
10	2C-20103-02	36	SCRW SM PLT 10 X .5 PHLSL 172T
11	K9-XL-227	2	SUPPLY WIRE BAFFLE 172T
12	2E-31200-02	2	GROUNDING LUG/+LABEL 172T, 172T-M
13	2C-20202-06	2	WSHR LOCK #10 INT STAR 172T, 172T-M
14	2E-30500-07	2	TRM BLOCK 3PLELRGE 125AMP 172T, 172T-440VM, 172T-480V, 172T-480VSJ, 172T-PE-480V, 172TSS-480V
15	2C-20103-01	12	SCRW SM PLT 10X7/8 PHIL 172T
16	2E-30500-22	2	TRMINL STRP 8POLE 50A250V 172T, 172T-PE, 172TSS
18	2C-20104-04	6	SCRW PHD ST 8-32X.5 PLTD PHILP 172T
17	K9-XL-507	2	REAR COVER 172T
19	2P-70903-08	2	PLG BTN PLTD MTL 5/16 172T
19	2P-70903-09	10	PLG BTN PLTD MTL 7/16 172T
20	2A-72500-05	8	LEG 4 W/BOLT DOWN ADJ 172T-M, 172T-440VM, 172T-480VM
	2A-Z0314	8	FOOT, 4" DIE CAST 172T
21	2K-70801-02	4	SNAP BUSH 1 3/8 SB1375-16 172T
22	2T-30402-07	6	STAT ADJ 550o 48 C/T 172T
	2T-30402-09	6	STAT ADJ 550° 72 C/T 172T-480VSJ, 172T-PE, 172T-SJ, 172TC-TE, 172TSS
23	2C-20101-77	12	SCRW MS PLT 6-32 X .25 PHD 172T
24	K9-XL-524-2	2	ELECT BOX CVER SPT 3' & 4' 172T
25	2J-31601-01	6	PILOT LT 250V 6LEAD BLK 172T
	2J-31601-02	6	PILOT LT 480V 6LEAD BLK 172T-440VM, 172T-480V, 172T-480VSJ, 172T-PE-480V, 172TSS-480V
26	Y9-70701-14-1	6	KNOB 550° D PHANTOM 172T-480VSJ, 172T-PE, 172T-SJ, 172TC-TE, 172TSS
	Y9-70701-15-1	6	KNOB 550o D PHANTOM 172T, 172T-440VM
27	K9-XL-725-08	2	ELECT BOX ASY 3' XL/LG 172T
	K9-XL-725-081	2	ELECT BOX ASY 3' XL/LG 172T-480VSJ, 172T-PE, 172T-SJ, 172TC-TE, 172TSS
28	K9-XL-422-2	2	ACCESS PANEL ASSY 3' 172T
29	K9-XL-235-1	2	GREASE BUCKET ASSY S/S 172T
30	K9-XL-228	2	BUCKET SLIDE ASSY 172T
31	K9-XL-504	6	STAT HOLDER 172T
32	K9-XL-759-3	1	PANEL COVER ASSY 3' - CP CORRECTIONAL PKG
NI	K9-50302-18	1	6' GRAB BAR SUPPORT - XL-LG 172T-M, 172T-440VM, 172T-480VM

**IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED
INCLUDE MODEL AND SERIAL NUMBER**

PAGE 1
OF 1

Some items are included for illustrative purposes only and in certain instances may not be available.