



CONTINUOUS FLOW ICEMAKER

500, 700, 1000, 2000 - Series

Service Manual

Release Date: May 27, 2004

Publication Number: 630460174SER

Revision Date: September 24, 2008

Revision: D

Visit the IMI Cornelius web site at www.cornelius.com for all your Literature needs.



CONTINUOUS FLOW ICEMAKER SERVICE MANUAL

The products, technical information, and instructions contained in this manual are subject to change without notice. These instructions are not intended to cover all details or variations of the equipment, nor to provide for every possible contingency in the installation, operation or maintenance of this equipment. This manual assumes that the person(s) working on the equipment have been trained and are skilled in working with electrical, plumbing, pneumatic, and mechanical equipment. It is assumed that appropriate safety precautions are taken and that all local safety and construction requirements are being met, in addition to the information contained in this manual.

To inquire about current revisions of this and other documentation or for assistance with any Cornelius product contact:

**www.cornelius.com
800-238-3600**

Trademarks and copyrights:

Aurora, Cornelius, Decade, Hydro Boost, Sitco, Spirit, UF-1, Vanguard, Venture, Olympus, and Vista are registered trademarks of IMI Cornelius Inc.

Optifill trademark is pending.

This document contains proprietary information and it may not be reproduced in any way without permission from Cornelius.

Printed in U.S.A.

Copyright © 2004-2008, All Rights Reserved, IMI Cornelius, Inc.



Safety	1
Safety Instructions	1
Read and Follow all Safety Instructions	1
Recognize Safety Alerts	1
Different Types of Alerts	1
Safety Tips	1
Qualified Service Personnel	1
Shipping And Storage	1
General Description	2
Specification Chart	2
Bin Control	5
Gearmotor	5
Cleaning and Sanitizing	6
Icemaker Cleaning and Sanitizing Procedures	6
Maintenance	6
Monthly	6
Quarterly	6
Semi-annually	7
Water Level Control	8
How Water Level Control Works	8
Purpose	8
To Replace Water Level Control	8
To Replace Water Level Safety Switch	8
Electrical	9
Refrigeration System	12
Refrigeration System Adjustments	12
Expansion Valve	12
Adjustment and Troubleshooting	12
Condenser Modulating Valve	13
Condenser Modulating Valve Removal	14
Motor Check	15
Start Relay	15
To Replace Gearmotor Assembly	15
Installation and Shaft Seal Replacement 500	16
Auger and Extruding Head Removal	16
Installation and Shaft Seal Replacement 700 & 1000	17
Upper Nut and Bearing Assembly	17
To Replace Bearing	17
Electrical Checkout	17
Overload Check	18
Compressor Check	18
Capacitor Check	18
Safety Controls	19
Troubleshooting	21



SAFETY

SAFETY INSTRUCTIONS

Read and Follow all Safety Instructions

Read and follow all safety instructions in this manual and on the machine (decals, labels, and laminated cards).

Read and understand all applicable OSHA (Occupation Safety and Health Administration) safety regulations before operating the machine.

Recognize Safety Alerts



This is the safety alert symbol. When you see it in this manual or on the machine be alert to the potential of personal injury or damage to the machine.

Different Types of Alerts

There are 3 types of safety alerts:



DANGER — Indicates an immediate hazardous situation which if not avoided WILL result in serious injury, death, or equipment damage.



WARNING — Indicates a potentially hazardous situation which, if not avoided, COULD result in serious injury, death, or equipment damage.



CAUTION — Indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury or equipment damage.

SAFETY TIPS

- Carefully read all safety messages in this manual and safety signs on the machine.
- Keep safety signs in good condition and replace missing or damaged safety signs.
- Learn how to operate the machine and how to use the controls properly.
- Do not let anyone operate the machine without proper training. This appliance is not intended for use by very young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.
- Keep your machine in proper working condition and do not allow unauthorized modifications to the machine.

QUALIFIED SERVICE PERSONNEL



CAUTION — Only trained and certified electrical, plumbing and refrigeration technicians should service this unit. ALL WIRING AND PLUMBING MUST CONFORM TO NATIONAL AND LOCAL CODES.

SHIPPING AND STORAGE



CAUTION — Before shipping, storing, or relocating the Unit, syrup systems must be sanitized and all sanitizing solution must be purged from the syrup systems. All liquids, after sanitizing, must be purged from the unit. A freezing ambient environment will cause residual sanitizing solution or water remaining inside the Unit to freeze resulting in damage to the internal components.




GENERAL DESCRIPTION

This section gives the Unit description, theory of operation, and design data for continuous flow icemaker series 500, 700, 1000, and 2000.

SPECIFICATION CHART

Models	Condensing Unit	VAC	HZ	PH	Wire	Comp. RLA	Fan Amps	GRMT R Amps	Refrigerant		Circuit Fuse
									Oz.	Type	
WCC500-A	Air Cooled	115	60	1	2	10.1	1.1	2	24	R404A	20
WCC500-W	Water Cooled	115	60	1	2	10.1	N/A	2	11	R404A	20
WCC502-A	Air Cooled	220/240	50	1	2	5.3	0.5	1.6	24	R404A	20
WCC502-W	Water Cooled	220/240	50	1	2	5.3	N/A	1.6	11	R404A	20
WCF510-A	Air Cooled	115	60	1	2	10.1	1.1	2	24	R404A	20
WCF510-W	Water Cooled	115	60	1	2	10.1	N/A	2	11	R404A	20
WCF512-A	Air Cooled	220/240	50	1	2	5.3	0.5	1.6	24	R404A	20
WCF512-W	Water Cooled	220/240	50	1	2	5.3	N/A	1.6	11	R404A	20
WCC700-A	Air Cooled	115	60	1	2	12	1.6	2	24	R404A	20
WCC700-W	Water Cooled	115	60	1	2	12	N/A	2	13	R404A	20
WCC701-A	Air Cooled	208/230	60	1	2	7.7	1.6	2	24	R404A	20
WCC701-W	Water Cooled	208/230	60	1	2	7.7	N/A	2	13	R404A	20
WCC702-A	Air Cooled	220/240	50	1	2	8.2	0.5	1.6	24	R404A	20
WCC702-W	Water Cooled	220/240	50	1	2	8.2	N/A	1.6	13	R404A	20
WCF710-A	Air Cooled	115	60	1	2	12	1.6	2	24	R404A	20
WCF710-W	Water Cooled	115	60	1	2	12	N/A	2	13	R404A	20
WCC711-A	Air Cooled	208/230	60	1	2	7.7	1.6	2	24	R404A	20
WCC711-W	Water Cooled	208/230	60	1	2	7.7	N/A	2	13	R404A	20
WCF712-A	Air Cooled	220/240	50	1	2	8.2	0.5	1.6	24	R404A	20
WCF712-W	Water Cooled	220/240	50	1	2	8.2	N/A	1.6	13	R404A	20
WCC1001-A	Air Cooled	208/230	60	1	2	7.5	0.85	2	26	R404A	20
WCC1001-W	Water Cooled	208/230	60	1	2	7.5	N/A	2	17	R404A	20
WCC1002-A	Air Cooled	220/240	50	1	2	8.9	0.85	2	26	R404A	20
WCF1101-A	Air Cooled	208/230	60	1	2	7.5	0.85	2	26	R404A	20
WCF1101-W	Water Cooled	208/230	60	1	2	7.5	N/A	2	17	R404A	20
WCF1102-A	Air Cooled	220/240	50	1	2	8.9	0.85	2	26	R404A	20
WCC1001-R	Remote	220/240	60	1	2	7.5	N/A	2	120	R404A	15
WCF1101-R	Remote	208/230	60	1	2	7.5	N/A	2	120	R404A	15
WCC2001-A	Air-Cooled	208/230	60	1	2	12.9	.85	(2) 2	46	R404A	25
WCC2001-R	Remote	208/230	60	1	2	12.9	1.7	(2) 2	220	R404A	25
WCC2001-W	Water Cooled	208/230	60	1	2	12.9	N/A	(2) 2	28	R404A	25
WCC2002-A	Air Cooled	220/240	50	1	2	11.4	.85	(2) 2	46	R404A	25
WCF2201-A	Air-Cooled	208/230	60	1	2	12.9	.85	(2) 2	46	R404A	25
WCF2201-W	Water Cooled	208/230	60	1	2	12.9	N/A	(2) 2	28	R404A	25
WCF2202-A	Air Cooled	220/240	50	1	2	11.4	.85	(2) 2	46	R404A	25

NOTE: For units not listed in above chart, refer to nameplate or contact factory service.

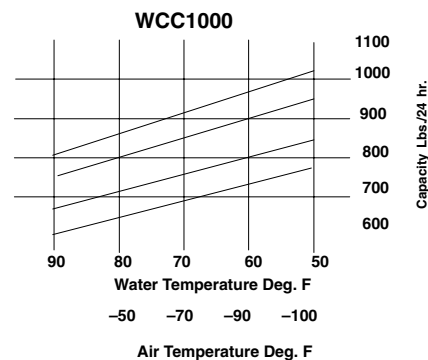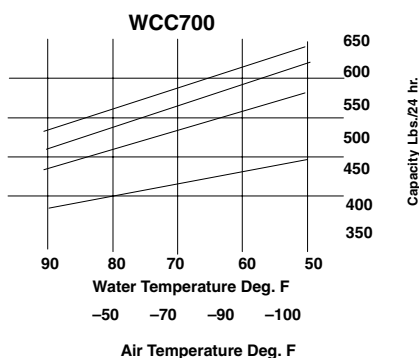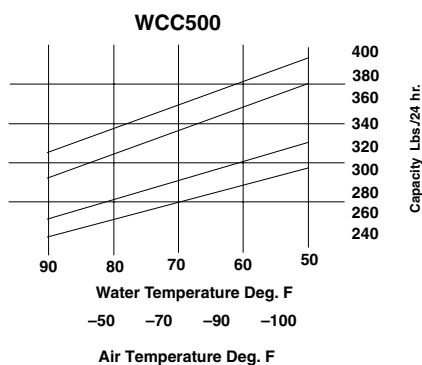

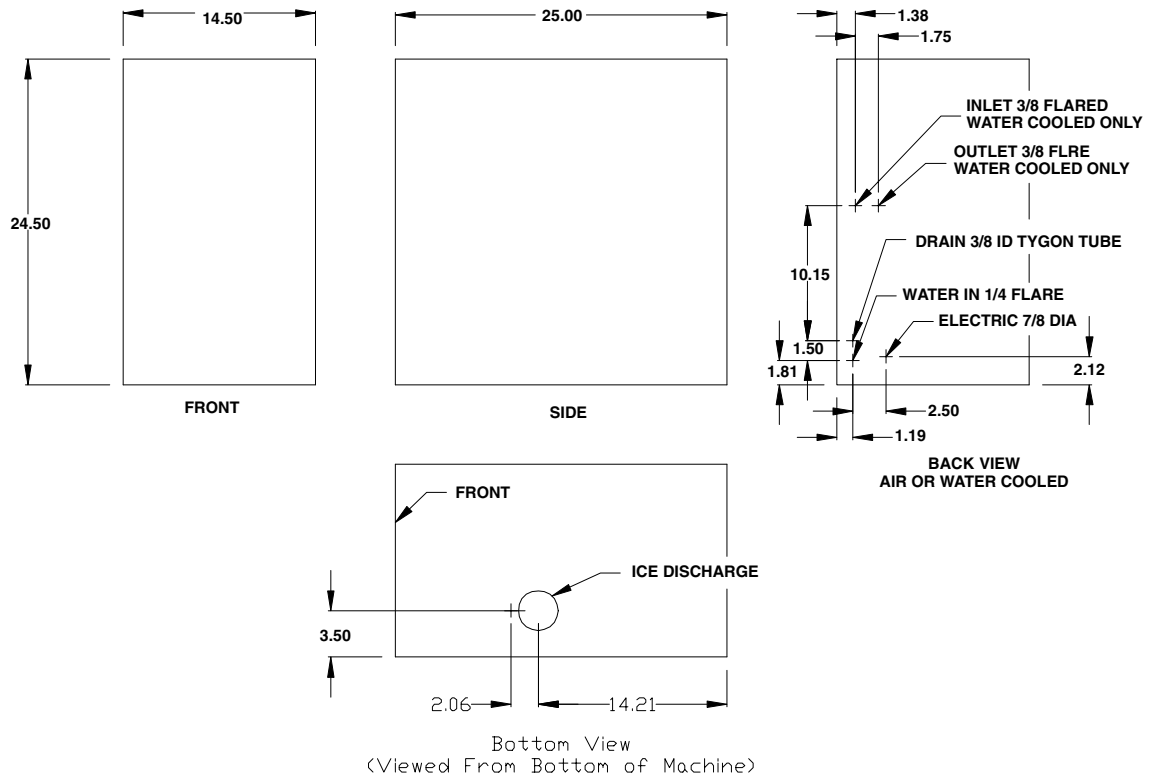


FIGURE 1. SERIES 500 & 700 DIMENSION DRAWING (SHIPPING WT. 160 LBS. APPROX).

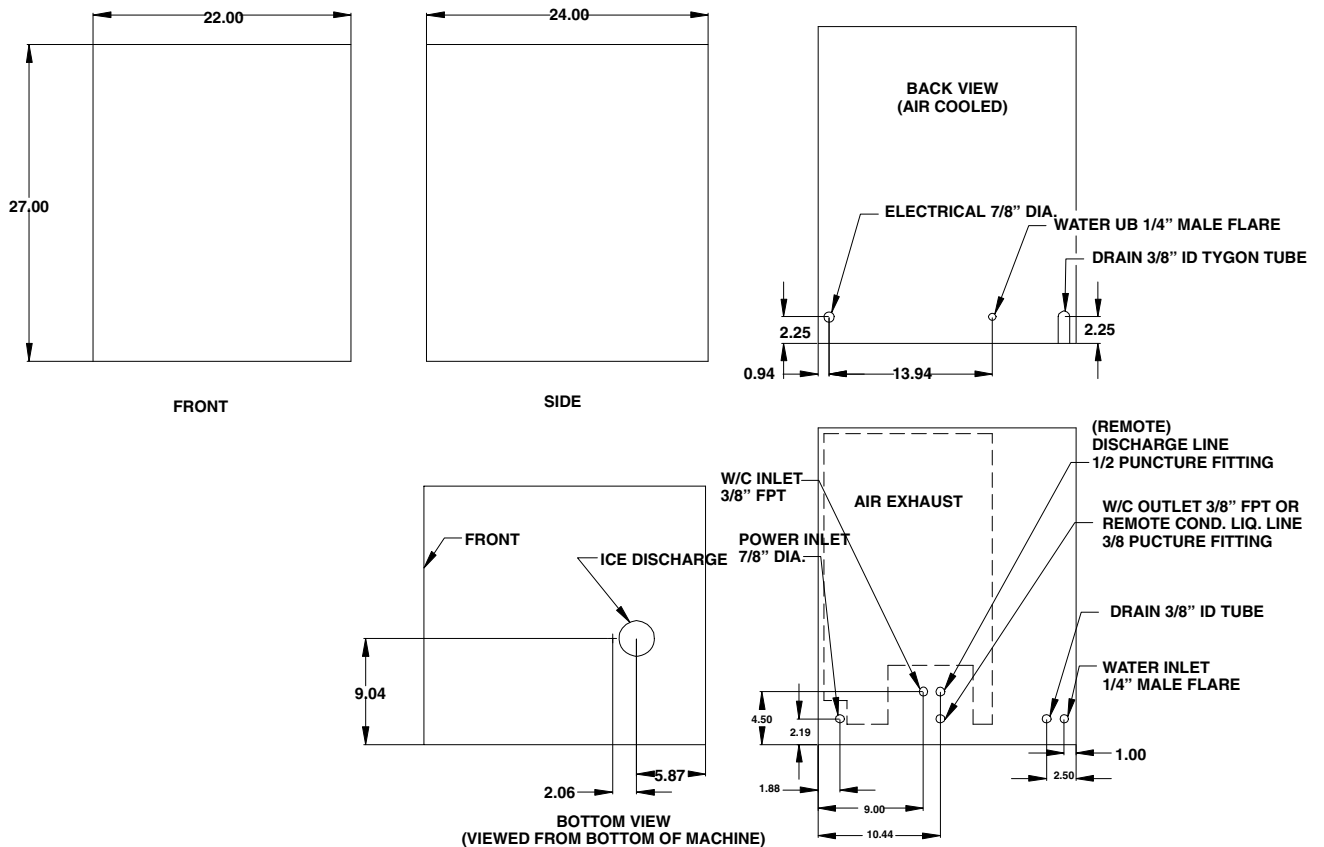


FIGURE 2. SERIES 1000 DIMENSION DRAWING (SHIPPING WT. 210 LBS. APPROX).

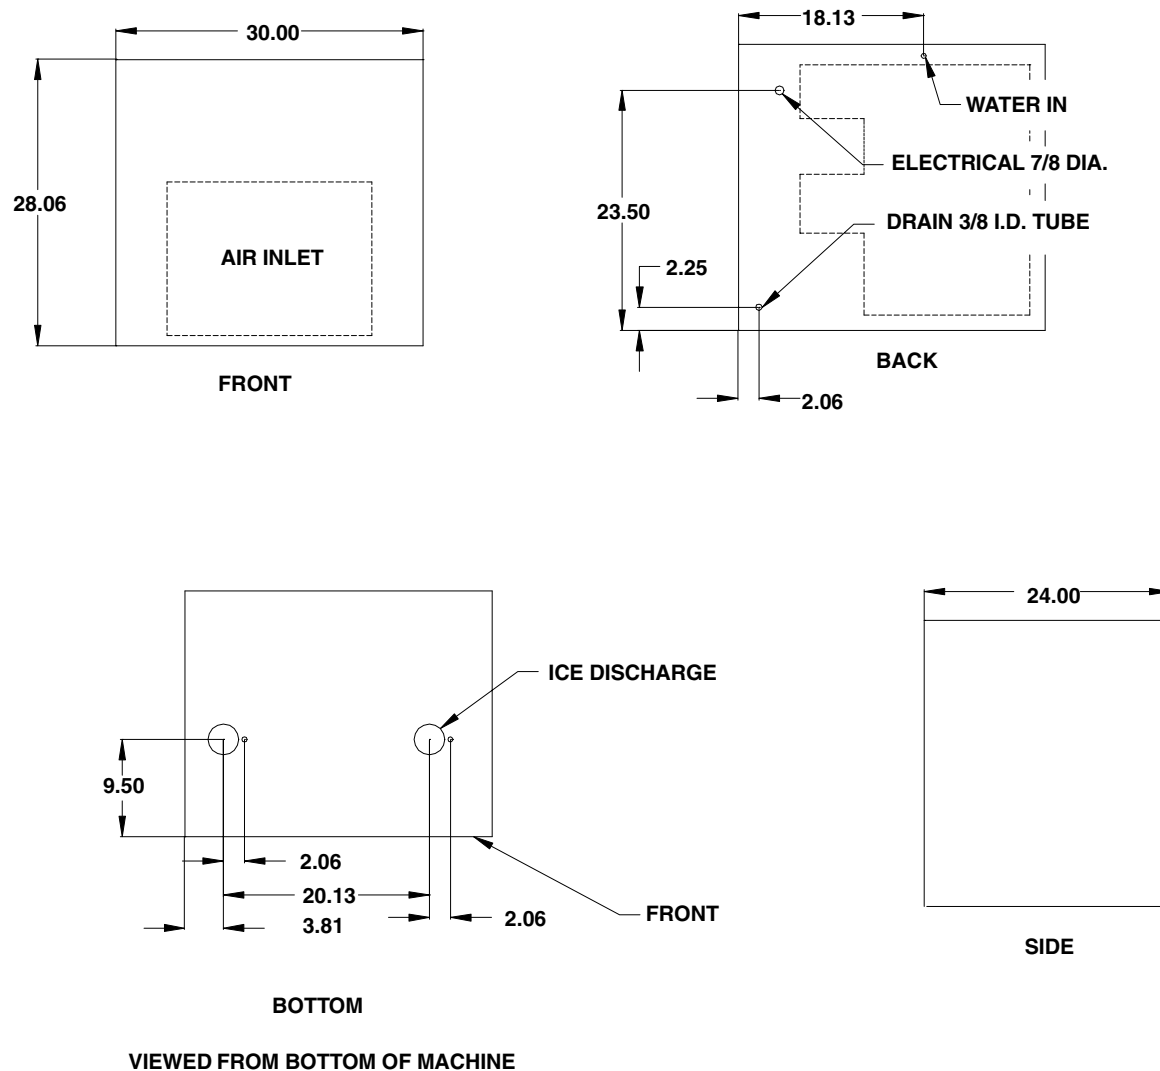


FIGURE 3. SERIES WCC2001-A AND WCF2201-A DIMENSION DRAWINGS

BIN CONTROL

The type of bin control used on all WCC & WCF Models is an electronic control. The control is supplied with power to terminals X1 and X2. Terminals X3 and X4 are a normally closed switch which open when the thermostat sensor bulb senses ice.

The sensing element is located in a 5/16" stainless steel tube which hangs from the dispense tray cover down through the center of the drop tube.

To test switch, start the icemaker and block the outlet tube. When the ice fills the drop tube about 1/2 full the icemaker should shut off. When tube is cleared the ice maker should restart within 5 min.

The Bin control is in electrical series with coil on antifreeze relay along with the low water safety. If unit is water cooled, the condenser high pressure cut out is also in series.

The Control Switch is held in place inside electrical box by 2 screws. The Control bulb is in the drop tube. It can be removed by pulling the cable located on the top of the dispense tray cover. When replacing the sensor make sure the bulb is inserted to the bottom of the thermostat well.

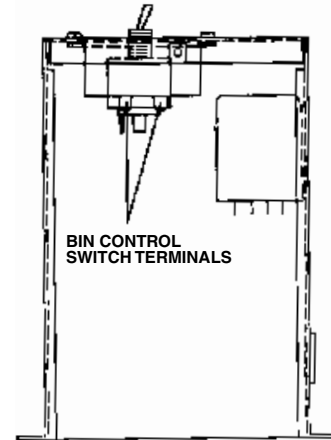


FIGURE 4. BIN CONTROL SWITCH

GEARMOTOR

The gearmotor is equipped with a start relay and a manual reset overload.

When current is applied, the relay energizes and completes the circuit to the start winding. The motor reaches a predetermined speed and the relay drops out, disconnecting the start winding. The run winding remains in the circuit as long as current is applied.

The purpose of the overload is to automatically shut off the motor in the event of a mechanical bind of the transmission, an overload condition within the evaporator or an electrical malfunction. It does this by sensing amperage draw. If the motor stalls the start relay would energize and stay energized. The amperage would surge 5 to 6 times greater than the normal draw. In this event the overload would shut off the transmission in 4 to 8 seconds.

If the motor is subjected to an abnormal load, but does not reach a stall condition, the overload will react, but over a greater period of time. The reaction time depends upon the amperage to which it is subjected.

The overload, through the safety circuit, also shuts off the compressor.

CLEANING AND SANITIZING

ICEMAKER CLEANING AND SANITIZING PROCEDURES

Do not use any of the ice made during cleaning operations.

Clean and sanitize ice storage area when cleaning icemaker.

1. Turn machine off.
2. Shut off water supply.
3. Remove ice from storage bin.
4. Mix approved cleaner (2 gallons as directed). **Recommended cleaner:** Nu-Calgon liquid ice machine cleaner. **Mixture:** 3-1/3 ounces per gallon of water.

WARNING: Cleaner must be safe for stainless steel. NO EXCEPTIONS!

5. Clean auger/diverter assembly and ice transition/drop tube in a sink using cleaner mixture and reinstall in icemaker. Using cleaner, wipe down the dispense tray.
6. Turn machine on and add cleaner solution to water level control until 2 gallons have been used.
7. Turn on water supply and run machine for 15 minutes.
8. Turn off machine and remove all ice.
9. Sanitize using household liquid bleach (50 ppm chlorine). **Mixture:** 1 fluid ounce per gallon room temperature water. 2 minute exposure time.
10. Sanitize auger/diverter assembly and ice transition/drop tube in a sink using sanitizing solution and reinstall in icemaker. Using sanitizer, wipe down the dispense tray.
11. Fill icemaker with sanitizer by slowly pouring solution into water feed reservoir until full. Solution will drain through overflow tube. Do not run machine. Allow to air dry.
12. If icemaker is used in conjunction with ice dispenser or storage bin, follow manufacturer's recommended cleaning instructions at this time.

MAINTENANCE

Preventive maintenance can increase the trouble free life of your icemaker. Many authorized service agencies offer service contracts for your icemaker. Contact your local distributor for further information.

MONTHLY

1. Clean the condenser. Use a brush, vacuum cleaner or blow from inside with air or CO₂ gas.
2. Inspect water feed reservoir at least once a month until a definite pattern for cleaning and sanitizing has been established.

QUARTERLY

This is the maximum period of time between cleaning and sanitizing the icemaker. In addition to recommended monthly procedure, and if a more frequent cleaning and sanitizing pattern has not been established, unit must be cleaned and sanitized.

SEMI-ANNUALLY

Semi-Annually in addition to all previously established service procedures perform the following:

1. Check for water leaks in tube connections, water fittings and lower icemaker water seal.
2. Check drain tubes for clogs and aged tubes. Replace if tubes are stained or brittle.
3. Check for signs of condensation. Clean where necessary and replace insulation properly.
4. Check safety circuits for proper operation.
5. Check refrigeration system.
6. Check unit for abnormal noise. Tighten machine and cabinet screws, if necessary.
7. Check white upper bearings on auger assembly. If bearings are less than 1/16" thick, replace.

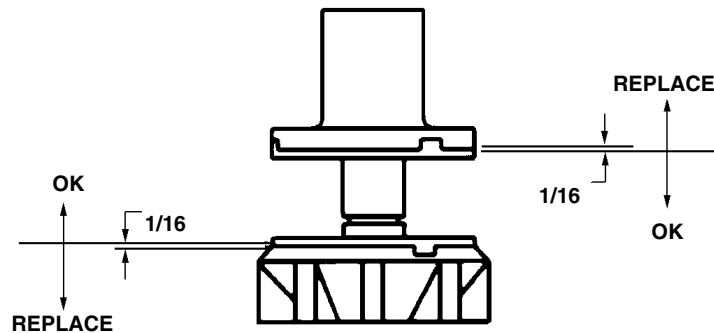


FIGURE 5. UPPER NUT AND BEARING ASSEMBLY

WATER LEVEL CONTROL

HOW WATER LEVEL CONTROL WORKS

When water is introduced through the inlet fitting the float rises. the float pushes against a lever which in turn forces the poppet assembly against the inlet fitting valve seat which seals the water off. Before the water inlet is sealed the safety switch is operated. In the event of a water failure the float would drop down and operate the safety switch to shut off the machine.

If water level control will not shut off and seal at level as indicated, be sure inlet pressure does not exceed recommended factory operating range.

Under ordinary circumstances adjustment should not be necessary providing it was properly adjusted when unit was installed or relocated. If, however, the control becomes inoperative, repair or replace. See Start-Up Adjustment in the Installation Manual.

PURPOSE

1. To automatically maintain proper water level in the evaporator when unit is running and making ice.
2. A safety switch is operated in the event of an interruption in water supply. The switch shuts off the electrical power to the icemaker and its refrigeration system. Switch will reset as soon as cause of water failure has been corrected and proper water level in icemaker has again been reached.
3. The transparent bowl not only provides a visible check of water level, but also is a good guide to the internal conditions which exist within the icemaker assembly itself. (See Cleaning Procedure.)

TO REPLACE WATER LEVEL CONTROL

1. Shut off the water supply. Shut off the main power switch or unplug the ice dispenser from electrical outlet.
2. Remove the flexible tubing from bottom of water level control and drain water from water level control and evaporator.
3. Remove flexible tubing at bottom of water level bowl connected to the overflow.
4. Hold water inlet fitting with proper tool to prevent it from rotating when disconnecting the water inlet.
5. Remove wing nut holding water control to its mounting bracket. Control can be removed by lifting straight up.

TO REPLACE WATER LEVEL SAFETY SWITCH

1. Shut off main power switch or unplug the ice dispenser from electrical outlet.
2. Unplug molex connector connecting switch to electrical box.
3. Remove the 2 screws anchoring the water level safety switch to the bottom of the water level control mounting bracket.

ELECTRICAL

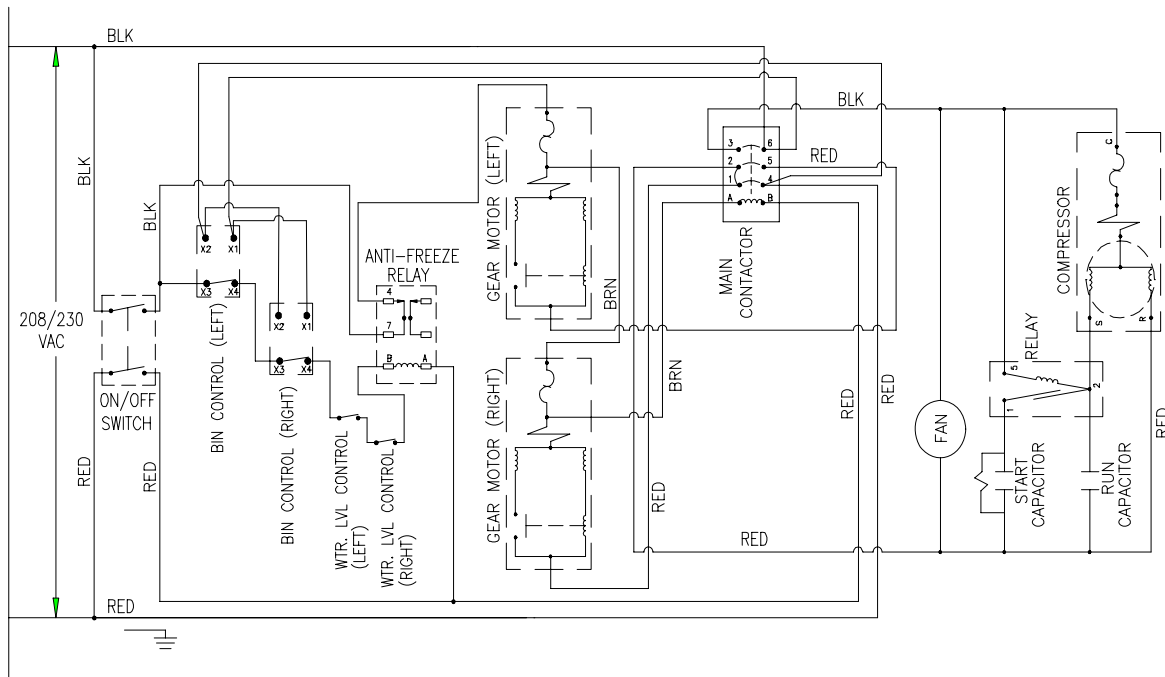


FIGURE 6. SCHEMATIC AND WIRING DIAGRAM WCC2001-A AND WCF2201-A

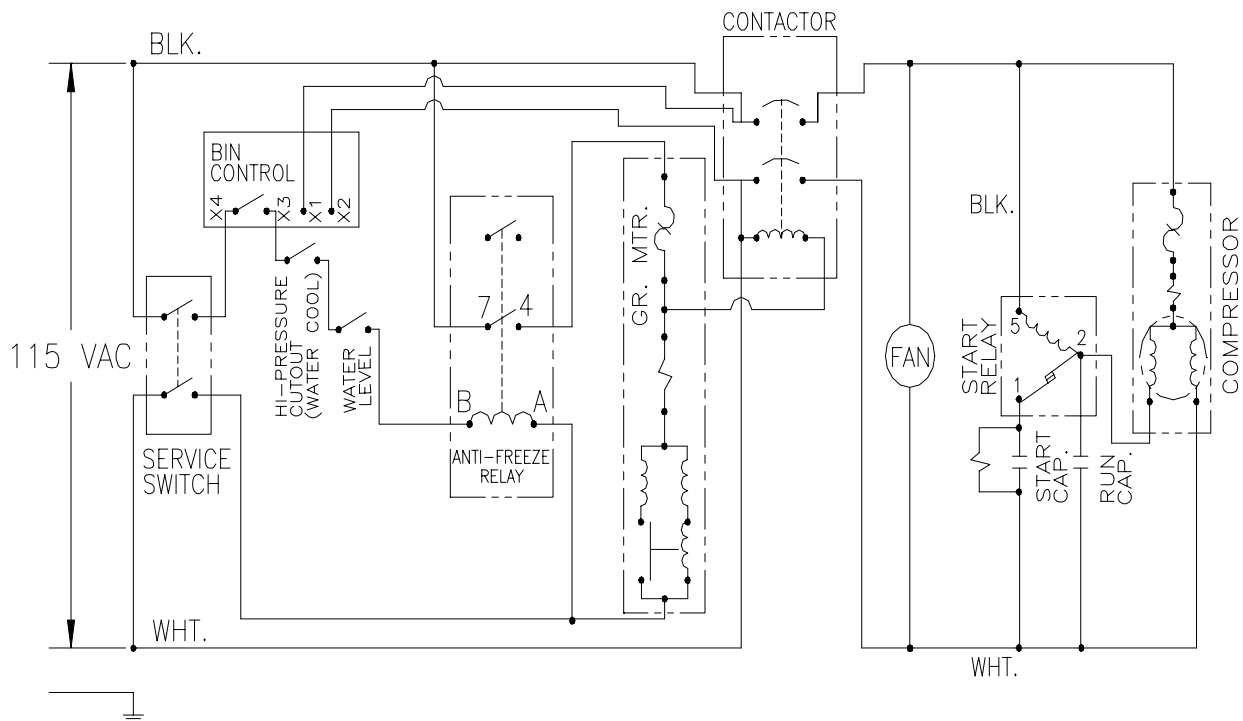


FIGURE 7. SCHEMATIC AND WIRING DIAGRAM WCC500-A, WCC500-W, WCC700-A, WCC700-W, WCF510-A, WCF510-W, WCF710-A, & WCF710-W

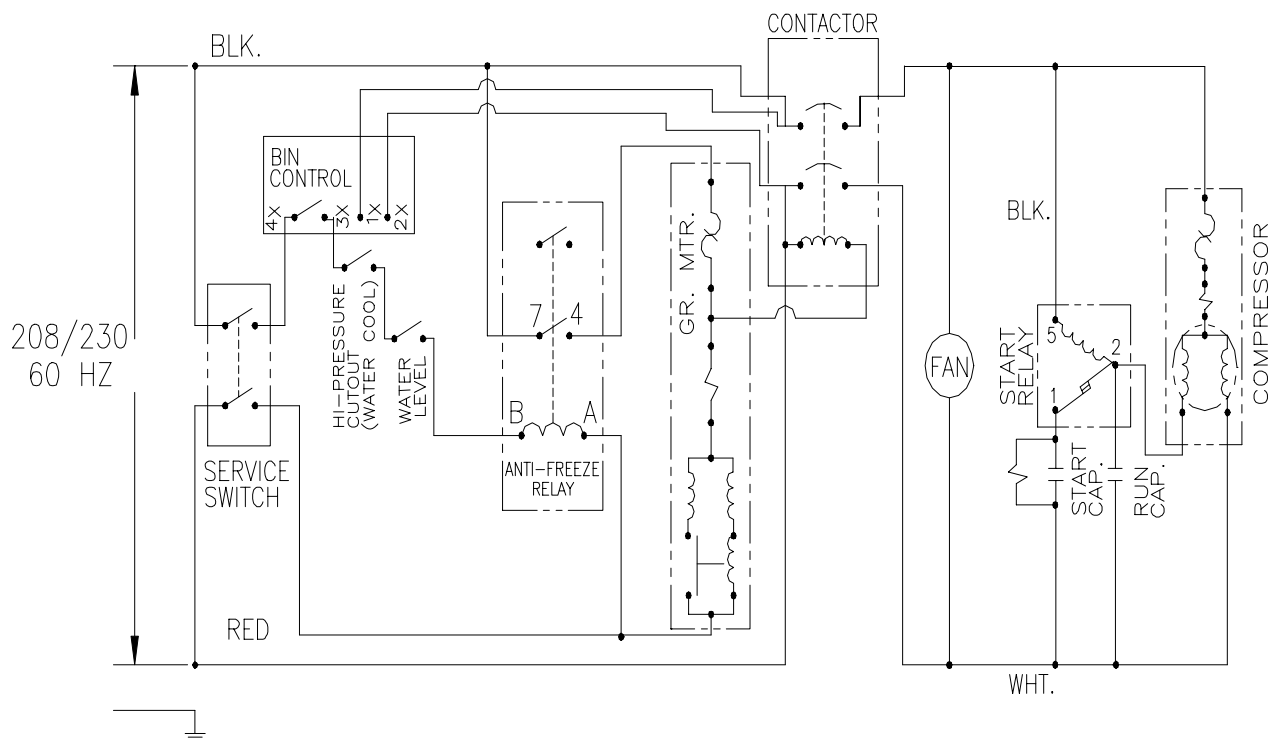


FIGURE 8. SCHEMATIC AND WIRING DIAGRAM WCC701-A, WCC701-W, WCC1001-A, WCC1001-W, WCF711-A, WCF711-W, WCF1101-A, & WCF1101-W

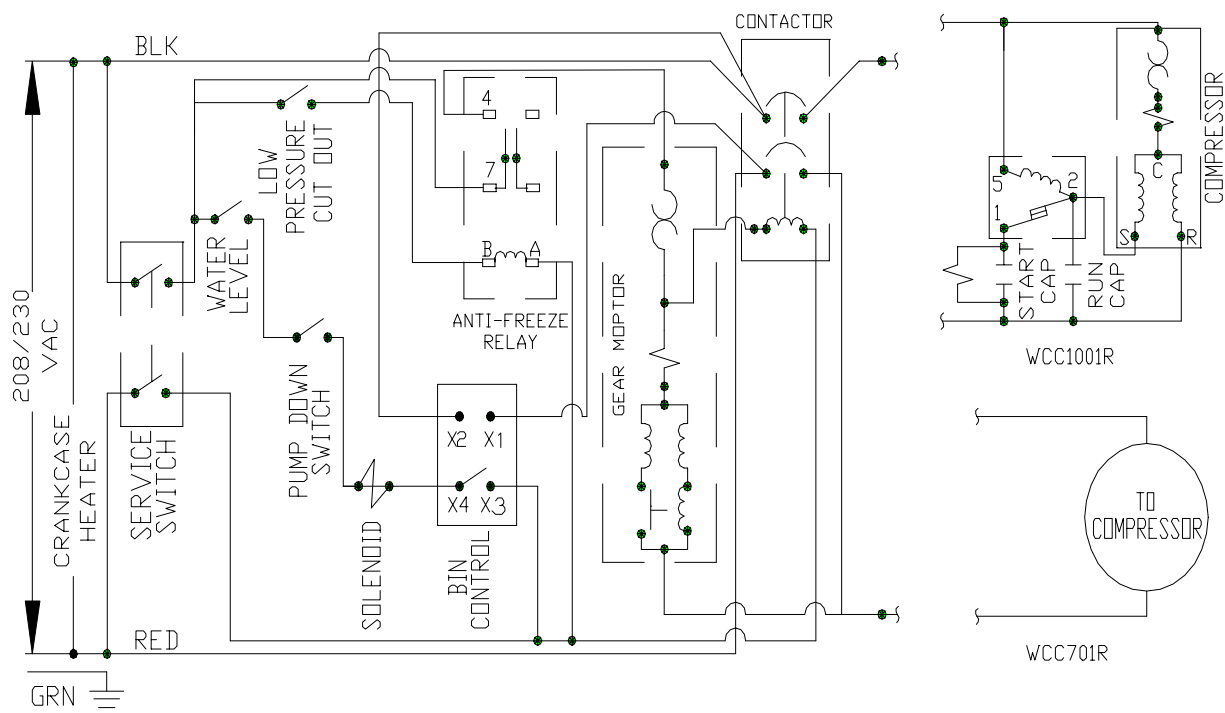


FIGURE 9. SCHEMATIC AND WIRING DIAGRAM WCF1101R, WCC1001R, WCF1102R, & WCC1102R

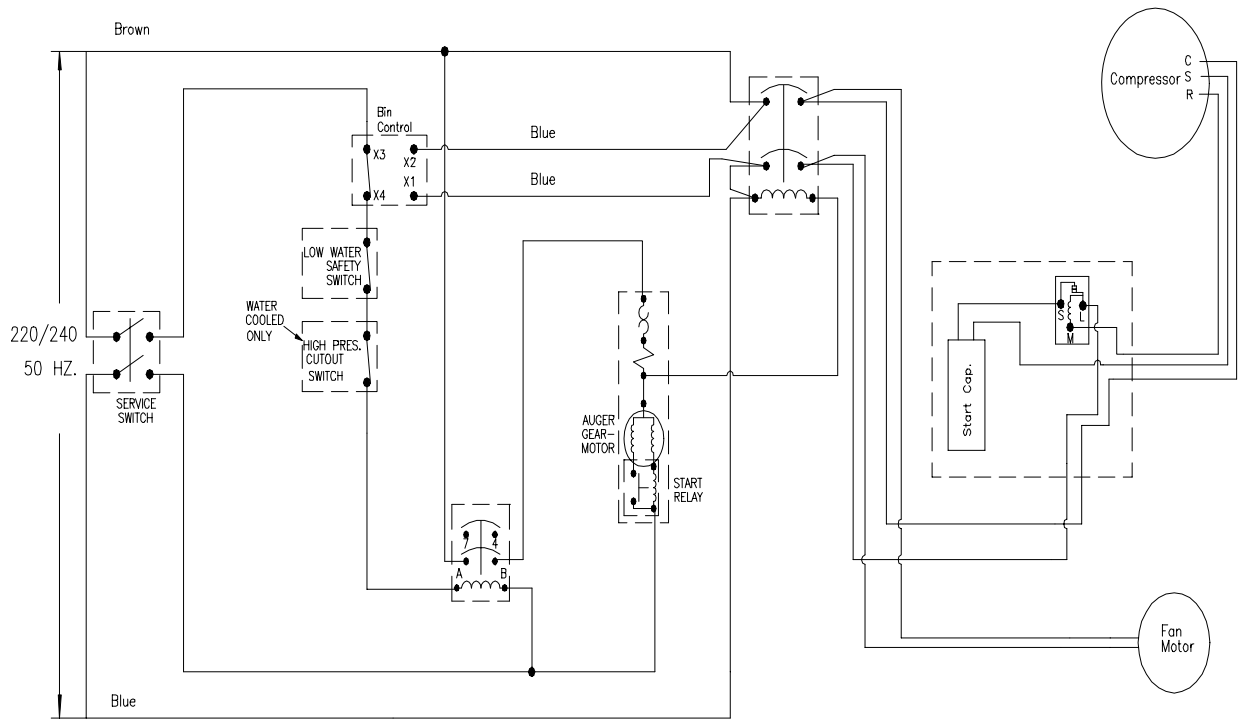


FIGURE 10. SCHEMATIC AND WIRING DIAGRAM WCC502, WCC702, WCC1002, WCF512, WCF712, & WCF1102

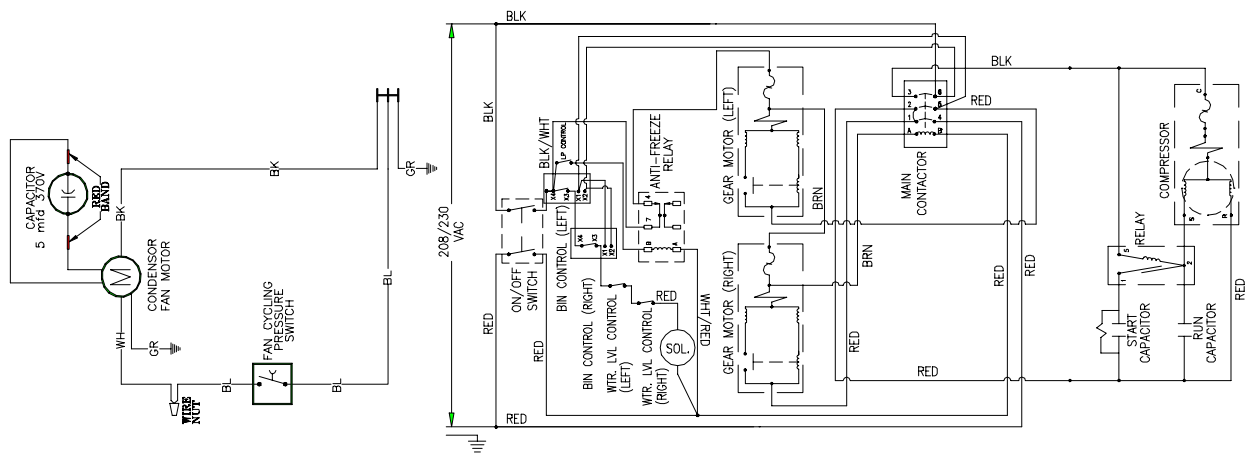


FIGURE 11. SCHEMATIC AND WIRING DIAGRAM WCC2001-R AND WCF2201-R

REFRIGERATION SYSTEM

Thermostatic Expansion Valve NO Adjustment.

+/- 10 lbs. Discharge Pressure

Water Temperature

Air Temperature	WCC 500			WCC 700			WCC 1000			WCC 2200		
	40°	65°	90°	50°	65°	90°	50°	65°	90°	50°	65°	90°
50°	162	166	168	60°	177	180	60°	171	172	60°	201	203
60°	188	192	194	70°	205	208	70°	199	200	70°	219	220
70°	214	218	220	80°	233	236	80°	227	228	80°	253	254
80°	245	249	251	90°	269	272	90°	263	264	90°	298	300
90°	275	279	281	100°	304	307	100°	298	299	100°	330	332
100°	309	313	315	328	334	340	324	328	332	362	364	366

REFRIGERATION SYSTEM ADJUSTMENTS

A complete understanding of the icemaker and hermetic refrigeration system is necessary before any adjustments are made. The refrigeration technician must use high and low side pressure readings, water and air temperatures, plus general conditions of cleanliness to assess the refrigeration system status when making any adjustments.

All icemaker products are tested and adjusted at the factory prior to shipment where the ambient temperature ranges from 65° to 90°F, depending on the season of the year.

Whenever a new icemaker product is initially installed and started-up, it is imperative that the start-up operation make the following checks and/or readjustments for local conditions.

EXPANSION VALVE

You will find a thermostatic expansion valve on icemakers, which is used to control the amount of refrigerant flowing through the evaporator. Improperly installed or defective expansion valves may cause low production, soft ice, squeaking from evaporator and excessive load inside evaporator.

By using general refrigeration system troubleshooting along with the pressure charts you can easily determine whether or not the expansion valve is working properly.

ADJUSTMENT AND TROUBLESHOOTING

When troubleshooting the expansion valve you must first be sure you have adequate water flowing into evaporator, a clean condenser, unit is properly ventilated, and system is properly charged and free from any restrictions. Also be sure compressor is operating properly.

Second, take reservoir water temperature and air temperature from condenser inlet and determine at what pressure unit should be running. Machines are equipped with thermostatic valves, there is NO adjustment. If correct pressure cannot be obtained, first be sure system has time to stabilize 10–15 minutes. Second, be sure sensing bulb is located at 12:00 position on outlet side of evaporator about 3–4 inches away from evaporator and be sure to insulate well and clamp tightly to tubing. If system pressures are still not adequate, take a second water and air temperature reading and go over other parts of system for possible problems. If proper charge is questionable evacuate and recharge to nameplate and leak check. If valve still malfunctions replace valve.

When replacing valve be sure to bleed refrigerant gas from low side port so as not to lose refrigerant oil. Use general refrigerant system practices when replacing and recharging unit. After new valve is in place, go through previous monitored adjustments and troubleshooting to be sure valve is functioning properly.

NOTE: Units with thermostatic expansion valve—valve is located on bottom refrigerant line. Sensing bulb is located on top refrigerant line. On water cooled units adjust condenser modulating valve before troubleshooting expansion valve.



CAUTION: Very High discharge pressure is present in system. Quick disconnects on you gauges will minimize danger and loss of refrigerant. Comply with federal regulations for reclaiming refrigerant.

CONDENSER MODULATING VALVE

The reason for using a water modulating valve is to supply the correct amount of water to the condenser, and to maintain a proper operating pressure to refrigeration system high side.

The flow of water through the valve is increased as the high side pressure rises and is decreased as high side pressure lowers.

To calibrate the amount of water flow with the refrigeration system high side pressure, turn adjustment screw located on end of valve opposite of bellows. Turn screw counterclockwise to raise opening point or clockwise to lower opening point. Opening point of valve should be set to maintain proper operating pressure in refrigeration system high side. Refer to Pressure Chart on. Closing point of valve should be set low enough to close valve during compressor stand-by periods.

NOTE: Cold water will absorb heat faster than warm water. The water flow will therefore automatically increase as inlet temperature increases.

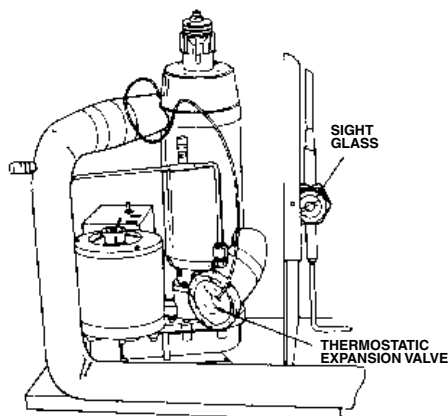


FIGURE 12. EXPANSION VALVE


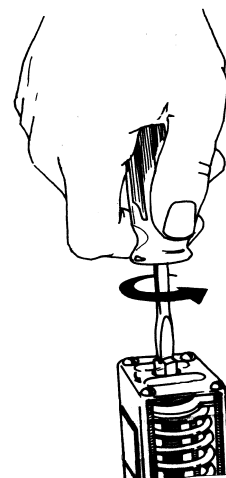


FIGURE 13. ADJUSTMENT SCREW

CONDENSER MODULATING VALVE REMOVAL

1. Disconnect power to unit, then shut off water supply to condenser and evacuate refrigerant from system.
2. Remove inlet water line from Condenser Modulating Valve. Also remove tube from high side refrigerant line.
3. Remove Condenser Modulating Valve and bracket from unit.
4. Remove valve from bracket.
5. Replace Condenser Modulating Valve by reversing Steps 2 through 4. Then pull system into vacuum.
6. Charge unit with proper amount of refrigeration.
7. Turn power and water on to unit.
8. With unit running, adjust modulating valve to proper setting.
9. Go through a complete system check.

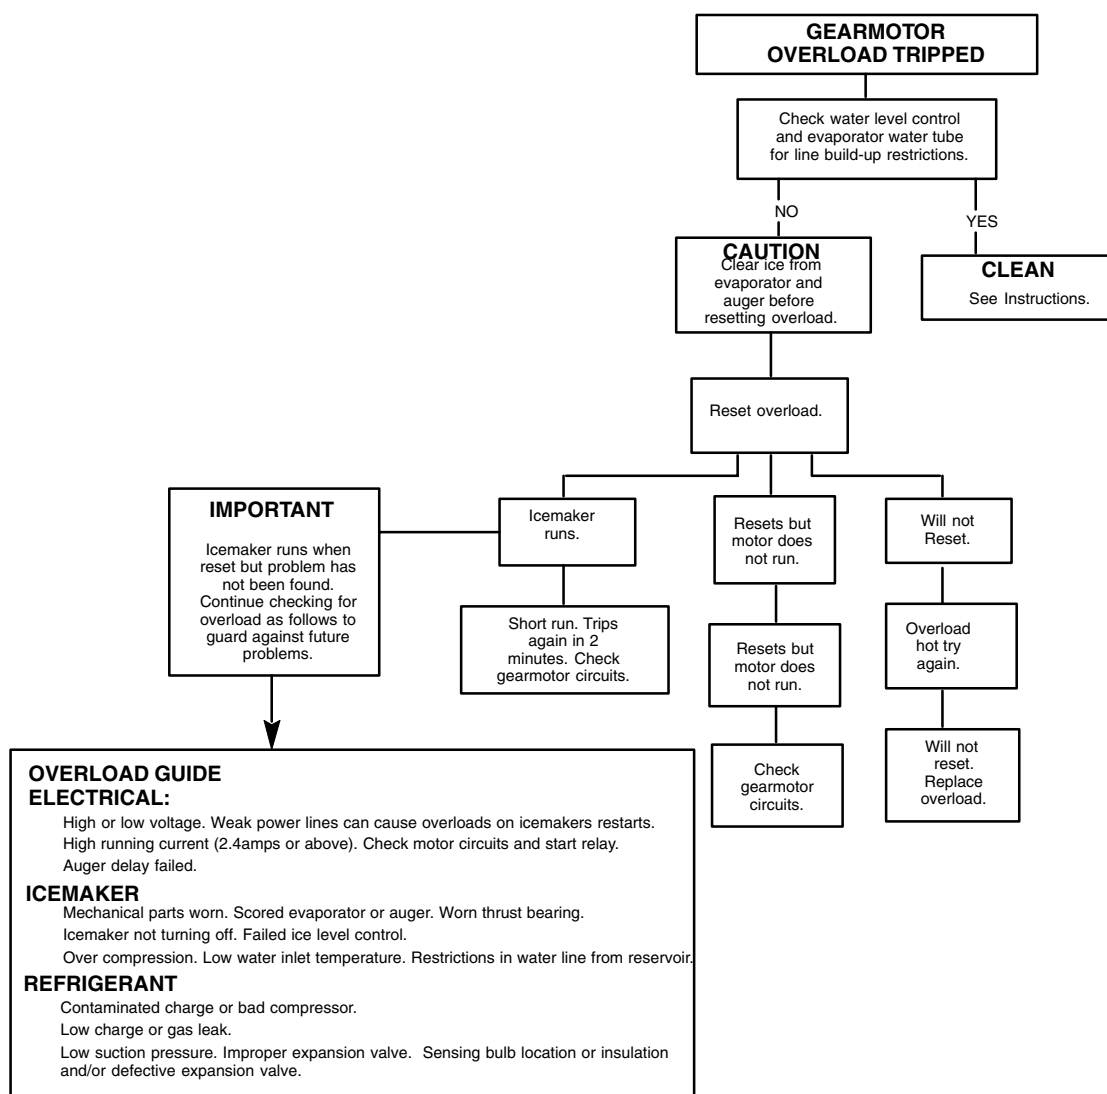

MOTOR CHECK

The resistance readings on the winding will be between 5 to 25 ohms. A meter capable of these low readings must be used. The start relay cover must be removed.

If no continuity on start or run winding test, replace gearmotor. If continuity on grounded motor test, replace gearmotor.

START RELAY

1. Check between "2" and "4" on relay (with relay unplugged). If there is continuity replace the relay, as the relay contacts should be open.
2. Check between "3" and "4" on relay, if no continuity replace the relay.

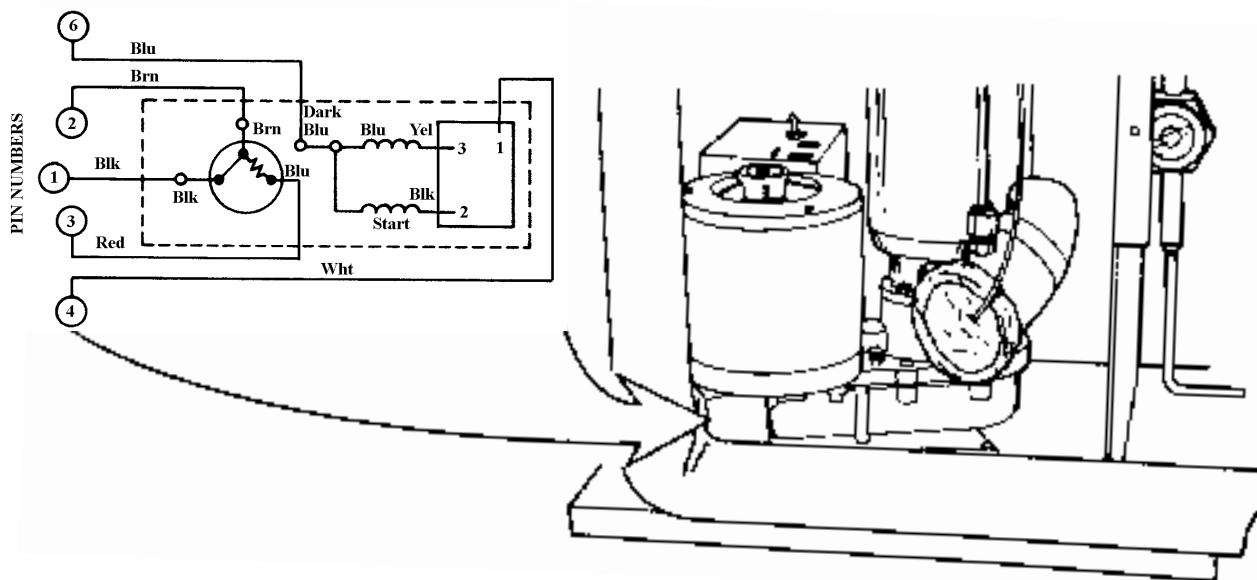


FIGURE 14. GEARMOTOR ASSEMBLY

TO REPLACE GEARMOTOR ASSEMBLY

1. Disconnect the icemaker from the electrical power source.
2. Disconnect the transmission cable from the electrical box.
3. Remove the 4 hex head bolts securing the evaporator to the top of the transmission.
4. Remove the 4 bolt's holding the transmission and bracket to frame base, while supporting the weight of the evaporator. Remove the transmission from the unit.
5. When replacing the transmission, it may be necessary to rotate the auger back and forth to align the motor shaft and auger.

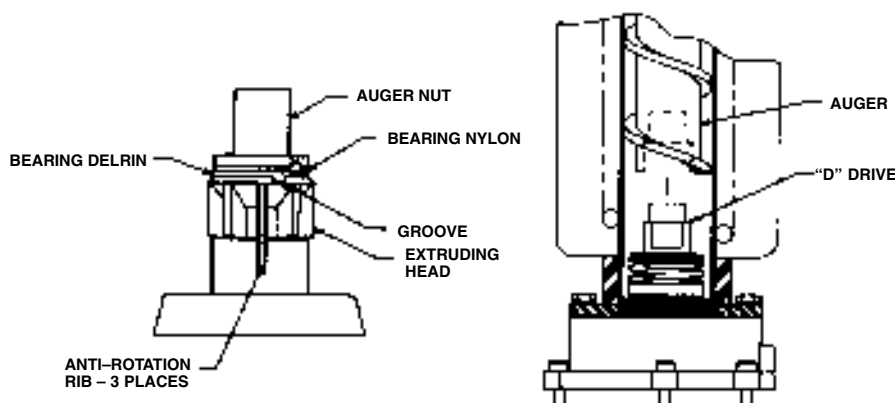


FIGURE 15. AUGER AND EXTRUDING HEAD REMOVAL

INSTALLATION AND SHAFT SEAL REPLACEMENT 500

1. Place shaft seal locator seat over gear motor output shaft, embossed side down, and push down until shaft seal seat rests flush on top of gear motor.
2. Place rubber coated ceramic seal (important: ceramic face up) over output shaft and push down until seal rests on top of the shaft seal seat. (Lubricate rubber on ceramic seal with rubber lubricant.)
3. Place shaft seal with carbon face down (spring up) over output shaft and push (gently) downward until seal rests on ceramic face of the output shaft seal.
4. Place flat washer over output shaft and let rest on the output shaft seal. Push down on the washer compressing the spring on the output shaft seal. While holding the seals (down) in place slide the E-ring into the groove on the output shaft.

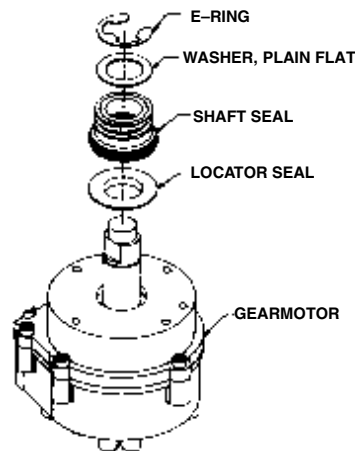


FIGURE 16. SHAFT SEAL 500

AUGER AND EXTRUDING HEAD REMOVAL

1. Disconnect unit from power supply.
2. Remove storage container cover and put aside.
3. Turn off water supply to icemaker.
4. After ice has melted from head take hold of the auger nut and lift straight up to disengage from icemaker.
5. When replacing the auger assembly, make certain that both the auger engages the output shaft drive and the extruding head ribs engage the evaporator tube.

INSTALLATION AND SHAFT SEAL REPLACEMENT 700 & 1000

1. Place shaft seal locator seat and shaft seal mount over gearmotor output shaft and push down until shaft seal seat and shaft seal mount rest flush on top of gearmotor.
2. Place rubber coated ceramic seal (important: ceramic face up) over output shaft and push down until seal nest in recess of shaft seal mount. (lubricate rubber on ceramic seal with rubber lubricant).
3. Place shaft seal with carbon face down (spring up) over output shaft and push (gently) downward until seal rests on carbon face of the output shaft seal.
4. Place flat washer over output shaft and let rest on the output shaft seal. Push down on the washer compressing the spring on the output shaft seal. While holding the seals (down) in place slide the E-ring into the groove on the output shaft

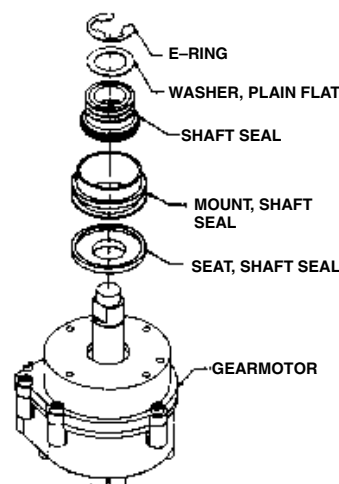


FIGURE 17. SHAFT SEAL 700 AND 1000

UPPER NUT AND BEARING ASSEMBLY

The upper white bearing located on top of the auger is used to absorb the force between the auger and extruding head.

NOTE: The bearings are 3/32 thick. When they wear below 1/16 they should be replaced. Bearings to be inspected for wear during quarterly maintenance.

To Replace Bearing

1. Disconnect unit from electric power.
2. Remove top panels.
3. Remove Dispense Tray Cover.
4. Use an open end wrench on auger nut connected to bearing and turn counterclockwise to remove assembly.
5. Remove worn bearings. Replace with new bearings and then reinstall assembly.

NOTE: If auger turns with nut, remove cover on top of gearmotor stator and hold motor while loosening nut.

ELECTRICAL CHECKOUT

1. Be sure the unit is disconnected from the power source. Remove the compressor electrical box cover. Check for obvious damage and loose wires.
2. Disconnect the fan motor leads. Since capacitors store energy, short the capacitor with a screwdriver. This will prevent shocks.
3. Disconnect the compressor terminal wires.

OVERLOAD CHECK

Using a volt-ohmmeter check the continuity across the overload, contact #1 and #3. If none, wait for unit to cool down and try again. If still no continuity, the overload protector is defective and should be replaced.



FIGURE 18. OVERLOAD CHECK

COMPRESSOR CHECK

The resistance readings on the windings will be between 0.25 to 10.00 ohms, a meter capable of these low readings must be used.

1. Check between "C" and "R." Replace the compressor if there is no continuity as the run windings are open.
2. Check between "C" and "S." Replace the compressor if there is no continuity as the start windings are open.
3. Check between "C" and "R" or "S" and the shell of the compressor. If there is continuity, replace the compressor as the motor is grounded.
4. Check between screw terminal on the overload and "C" on the compressor. Check and repair the lead or connections if there is no continuity.

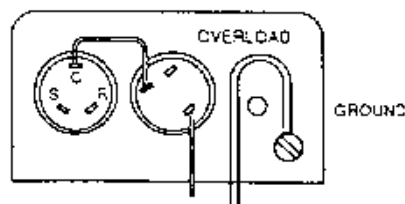


FIGURE 19. COMPRESSOR CHECK

CAPACITOR CHECK

1. Check or replace start capacitor, disconnect bleed resistor before checking for shorted capacitor.
2. Check or replace run capacitor (if supplied) check for shorted capacitor or either terminal grounded to case.

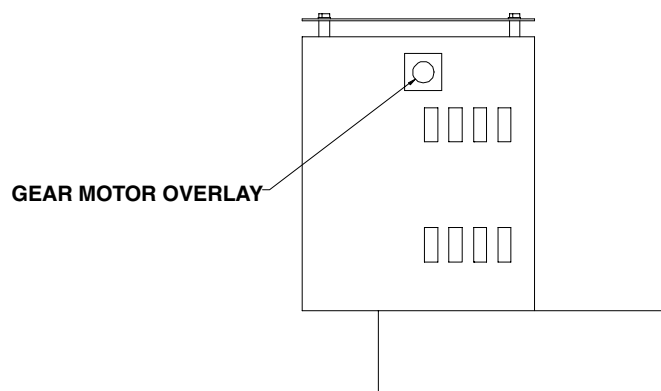


FIGURE 20. GEAR MOTOR OVERLOAD

SAFETY CONTROLS

Your icemaker unit has several safety and control devices incorporated into its design.



WARNING: None of the below described devices should ever be “bypassed” to allow the unit to function.

The safety and control system shut-off devices are:

1. Low water shut off reed switch located in icemaker float assembly. (Automatic reset type.)
2. Gearmotor thermal overload, manual reset type (red button on motor).
3. Compressor thermal overload, automatic reset type.
4. Anti-freeze relay and associated circuit. See wiring diagrams.
5. Main service switch located on top of the control box.
6. Bin Control.
7. High pressure cut out (water cooled only).

GUIDE TO GOOD ICE**CUSTOMER
COMMENTS****CHECK ICEMAKER
LOCATION CONDITIONS
FIRST****CHECK ICE MAKER**

"It runs but the ice is too soft."

"The icemaker is not producing enough ice."

"The ice is too wet."



Proper air flow for condensing system.

Location too close to high units such as coffee urns, deep fryers, grills, etc.

Supply water conditions

Water too warm (above 90°F).

Water artificially softened above 262 ppm sodium chloride.

Normal water supply too high in total dissolved solids (above 500 PPM).

Use gauges for checking suction and head pressures. See manual for correct reading and conditions. Check frost line and sight glass.

Check water level for proper adjustment and restrictions. See Manual.

Check evaporator assembly for worn parts, bearings, scored evaporator and auger, bad expansion valve, etc.

"It makes too much noise."
(With this comment the ice is usually extremely hard and larger than normal.)



Over
Compression

Check to see if noise objection is normal fan and air flow noise.

Supply water conditions.

Water too cold (below 50°F). (Possibly running from pre-cooler.)

Obstructions partially blocking ice exit from top of evaporator.

Check fan and fan shroud.

Check for loose parts and screws rattling.

Check evaporator assembly for worn parts, bearings, scored evaporator and auger, bad expansion valve, etc.

TROUBLESHOOTING CHART - ICEMAKER NOT OPERATING

```

    graph TD
      Start[NO POWER] --> CheckWiring[Check electrical wiring in control box for loose connections.  
Check for failed service switch or relay.  
Check power to machine.]
      Start --> LowWaterSafety[LOW WATER SAFETY SWITCH OPEN]
      Start --> IceMakerRunsButNoIce[ICEMAKER RUNS BUT DOES NOT MAKE ICE]
      Start --> GearmotorOverload[Gearmotor OVERLOAD TRIPPED]
      Start --> IceMakerOperatingButSoftIce[ICEMAKER OPERATING BUT SOFT ICE]

      CheckWiring --> HighPressure[High pressure switch open or cycling on and off.]
      CheckWiring --> NonCondensable[Non-condensable in system.]
      CheckWiring --> DischargeValve[Discharge king valve partially closed.]
      CheckWiring --> OpenValve[Open valve]
      CheckWiring --> LowPressureSwitch[Low pressure switch open or cycling on and off.]

      HighPressure --> CheckElectricalBox[Check electrical wiring in control box for loose connections.]
      HighPressure --> CheckPowerToCondenser[Check power to condenser.]
      HighPressure --> RemoteCondenserUnitsOnly[Remote condenser units only]
      HighPressure --> RemoteCondenserNotRunning[Remote condenser not running.]
      HighPressure --> EvaporatorWaterTube[Evaporator water tube may have an air bubble. Clear air bubble from tube.]
      HighPressure --> CheckWaterRestriction[Check that water is turned on. Check for restriction in water line. Check incoming water pressure (minimum 10 lbs.). Check water safety switch.]

      NonCondensable --> CheckElectricalBox
      NonCondensable --> CheckPowerToCondenser
      NonCondensable --> RemoteCondenserUnitsOnly
      NonCondensable --> RemoteCondenserNotRunning
      NonCondensable --> EvaporatorWaterTube
      NonCondensable --> CheckWaterRestriction

      DischargeValve --> CheckElectricalBox
      DischargeValve --> CheckPowerToCondenser
      DischargeValve --> RemoteCondenserUnitsOnly
      DischargeValve --> RemoteCondenserNotRunning
      DischargeValve --> EvaporatorWaterTube
      DischargeValve --> CheckWaterRestriction

      OpenValve --> CheckElectricalBox
      OpenValve --> CheckPowerToCondenser
      OpenValve --> RemoteCondenserUnitsOnly
      OpenValve --> RemoteCondenserNotRunning
      OpenValve --> EvaporatorWaterTube
      OpenValve --> CheckWaterRestriction

      LowPressureSwitch --> CheckElectricalBox
      LowPressureSwitch --> CheckPowerToCondenser
      LowPressureSwitch --> RemoteCondenserUnitsOnly
      LowPressureSwitch --> RemoteCondenserNotRunning
      LowPressureSwitch --> EvaporatorWaterTube
      LowPressureSwitch --> CheckWaterRestriction

      LowWaterSafety --> CheckWaterRestriction

      IceMakerRunsButNoIce --> CondenserFanRunningButCompressorNotRunning[Condenser fan running but compressor not running.]
      IceMakerRunsButNoIce --> CheckLineVoltage[Check line voltage. Check compressor winding & components.]
      IceMakerRunsButNoIce --> CheckWaterRestriction

      CondenserFanRunningButCompressorNotRunning --> CheckWaterRestriction
      CheckLineVoltage --> CheckWaterRestriction

      CheckWaterRestriction --> HighSuctionPressure[High suction pressure (30 lbs. or above).]
      CheckWaterRestriction --> LowSuctionPressure[Low suction pressure (20 lbs. or below).]

      HighSuctionPressure --> HeadPressureHigh[Head Pressure high.]
      HighSuctionPressure --> TXVNotOperating[TXV not operating properly.]
      HighSuctionPressure --> SuctionLineNotInsulated[Suction line not insulated.]
      HighSuctionPressure --> BulbUninsulated[Bulb uninsulated.]
      HighSuctionPressure --> BulbLoose[Bulb loose.]
      HighSuctionPressure --> ValveStuckOpen[Valve stuck open.]
      HighSuctionPressure --> ReplaceValve[Replace valve.]
      HighSuctionPressure --> CleanAndTighten[Clean and tighten.]
      HighSuctionPressure --> CleanAndInsulate[Clean and insulate.]

      HeadPressureHigh --> CondenserDirtyOrRestricted[Condenser dirty or restricted.]
      HeadPressureHigh --> CondenserFanNotRunning[Condenser fan not running.]
      HeadPressureHigh --> TooMuchRefrigerant[Too much refrigerant in system.]
      HeadPressureHigh --> NonCondensable
      HeadPressureHigh --> DischargeValve
      HeadPressureHigh --> OpenValve
      HeadPressureHigh --> LowPressureSwitch

      TXVNotOperating --> TXVBulbLostCharge[TXV bulb lost charge.]
      TXVNotOperating --> ReplaceValve
      TXVNotOperating --> CleanAndTighten
      TXVNotOperating --> CleanAndInsulate

      SuctionLineNotInsulated --> CleanAndInsulate
      BulbUninsulated --> CleanAndInsulate
      BulbLoose --> CleanAndTighten
      ValveStuckOpen --> ReplaceValve

      CondenserDirtyOrRestricted --> CheckElectricalBox
      CondenserDirtyOrRestricted --> CheckPowerToCondenser
      CondenserDirtyOrRestricted --> RemoteCondenserUnitsOnly
      CondenserDirtyOrRestricted --> RemoteCondenserNotRunning
      CondenserDirtyOrRestricted --> EvaporatorWaterTube
      CondenserDirtyOrRestricted --> CheckWaterRestriction

      CondenserFanNotRunning --> CheckElectricalBox
      CondenserFanNotRunning --> CheckPowerToCondenser
      CondenserFanNotRunning --> RemoteCondenserUnitsOnly
      CondenserFanNotRunning --> RemoteCondenserNotRunning
      CondenserFanNotRunning --> EvaporatorWaterTube
      CondenserFanNotRunning --> CheckWaterRestriction

      TooMuchRefrigerant --> CheckElectricalBox
      TooMuchRefrigerant --> CheckPowerToCondenser
      TooMuchRefrigerant --> RemoteCondenserUnitsOnly
      TooMuchRefrigerant --> RemoteCondenserNotRunning
      TooMuchRefrigerant --> EvaporatorWaterTube
      TooMuchRefrigerant --> CheckWaterRestriction

      NonCondensable --> CheckElectricalBox
      NonCondensable --> CheckPowerToCondenser
      NonCondensable --> RemoteCondenserUnitsOnly
      NonCondensable --> RemoteCondenserNotRunning
      NonCondensable --> EvaporatorWaterTube
      NonCondensable --> CheckWaterRestriction

      DischargeValve --> CheckElectricalBox
      DischargeValve --> CheckPowerToCondenser
      DischargeValve --> RemoteCondenserUnitsOnly
      DischargeValve --> RemoteCondenserNotRunning
      DischargeValve --> EvaporatorWaterTube
      DischargeValve --> CheckWaterRestriction

      OpenValve --> CheckElectricalBox
      OpenValve --> CheckPowerToCondenser
      OpenValve --> RemoteCondenserUnitsOnly
      OpenValve --> RemoteCondenserNotRunning
      OpenValve --> EvaporatorWaterTube
      OpenValve --> CheckWaterRestriction

      LowPressureSwitch --> CheckElectricalBox
      LowPressureSwitch --> CheckPowerToCondenser
      LowPressureSwitch --> RemoteCondenserUnitsOnly
      LowPressureSwitch --> RemoteCondenserNotRunning
      LowPressureSwitch --> EvaporatorWaterTube
      LowPressureSwitch --> CheckWaterRestriction

      TXVBulbLostCharge --> ReplaceValve
      TXVBulbLostCharge --> CleanAndTighten
      TXVBulbLostCharge --> CleanAndInsulate

      ReplaceValve --> CheckElectricalBox
      ReplaceValve --> CheckPowerToCondenser
      ReplaceValve --> RemoteCondenserUnitsOnly
      ReplaceValve --> RemoteCondenserNotRunning
      ReplaceValve --> EvaporatorWaterTube
      ReplaceValve --> CheckWaterRestriction

      CleanAndTighten --> CheckElectricalBox
      CleanAndTighten --> CheckPowerToCondenser
      CleanAndTighten --> RemoteCondenserUnitsOnly
      CleanAndTighten --> RemoteCondenserNotRunning
      CleanAndTighten --> EvaporatorWaterTube
      CleanAndTighten --> CheckWaterRestriction

      CleanAndInsulate --> CheckElectricalBox
      CleanAndInsulate --> CheckPowerToCondenser
      CleanAndInsulate --> RemoteCondenserUnitsOnly
      CleanAndInsulate --> RemoteCondenserNotRunning
      CleanAndInsulate --> EvaporatorWaterTube
      CleanAndInsulate --> CheckWaterRestriction

      IceMakerOperatingButSoftIce --> CheckBinSwitch[Check bin switch]
      CheckBinSwitch --> Yes[Yes]
      CheckBinSwitch --> No[No]
      Yes --> CleanAllRelatedDrainLines[Clean all related drain lines.]
      No --> ReferToGoodIceInServiceManual[Refer to good ice in service manual.]

      CleanAllRelatedDrainLines --> CAUTION[CAUTION Clear ice from evaporator and auger before resetting over load.]
      ReferToGoodIceInServiceManual --> CAUTION

      CAUTION --> ResetOverload[Reset overload.]
      ResetOverload --> IceMakerRuns[Icemaker runs.]
      IceMakerRuns --> ShortRunTrips[Short run trips again in 2 minutes. Check gear motor circuit.]
      ShortRunTrips --> CheckGearmotorCircuit[Check gearmotor circuit.]
      CheckGearmotorCircuit --> OverloadHotTryAgain[Overload hot try again.]
      OverloadHotTryAgain --> WillNotResetReplaceOverload[Will not reset replace overload]

      IceMakerRuns --> ResetButMotorDoesNotRun[Reset but motor does not run.]
      ResetButMotorDoesNotRun --> WillNotResetReplaceOverload

      GearmotorOverload --> CheckWaterLevelControl[Check water level control and evaporator water tube for line build up restriction.]
      CheckWaterLevelControl --> Yes
      CheckWaterLevelControl --> No
      Yes --> CLEAN[CLEAN see instructions.]
      No --> CAUTION

      WillNotResetReplaceOverload --> OVERLOADGUIDE[OVERLOAD GUIDE ELECTRICAL High or low voltage weak power lines can cause overloads on icemaker restarts. High running current. Check motor circuits and start relay - Auger delay failed. ICEMAKER Mechanical parts worn. Scored evaporator or auger. Worn thrust bearing. Ice maker not turning off. Failed ice level control. Over compression. Low water inlet temperature. Restriction in water line from reservoir. REFRIGERANT Contaminated charge or bad compressor. Low charge or gas leak. Low suction pressure. Improper expansion valve sensing bulb. Location or insulation and/or defective expansion valve]
  
```



IMI Cornelius Inc.
www.cornelius.com