

OPERATORS MANUAL

This manual provides
Installation & Operating instructions for

8000N SERIES



NOTIFY CARRIER OF DAMAGE AT ONCE.

It is the responsibility of the consignee to inspect the container upon receipt of same and to determine the possibility of any damage, including concealed damage. Randell suggests that if you are suspicious of damage to make a notation on the delivery receipt. It will be the responsibility of the consignee to file a claim with the carrier. We recommend that you do so at once.

Manufacture Service/Questions 888-994-7636.

Information contained in this document is known to be current and accurate at the time of printing/creation. Unified Brands recommends referencing our product line websites, unifiedbrands.net, for the most updated product information and specifications.



1055 Mendell Davis Drive
Jackson, MS 39272
888-994-7636, fax 888-864-7636
randell.com

TABLE OF CONTENTS

Page 2	Congratulations
Page 2	Factory Correspondence
Page 3	Serial Number Location
Page 3	Unit Specifications
Page 5	Randell Limited Warranty
Page 6	Unit Installation
Page 8	Unit Operation
Page 9	Preventative Maintenance
Page 10	Troubleshooting
Page 15	Part Figures

Congratulations on your recent purchase of Randell food service equipment, and welcome to the growing family of satisfied Randell customers.

Our reputation for superior products is the result of consistent quality craftsmanship. From the earliest stages of product design, to successive steps in fabrication and assembly, rigid standards of excellence are maintained by our staff of designers, engineers, and skilled employees.

Only the finest heavy-duty materials and parts are used in the production of Randell brand equipment. This means that each unit, given proper maintenance, will provide years of trouble free service to its owner.

In addition, all Randell food service equipment is backed by one of the best warranties in the food service industry and by our professional staff of service technicians.

Retain this manual for future reference.


Notice: Due to a continuous program of product improvement, Randell Manufacturing reserves the right to make changes in design and specifications without prior notice.

Notice: Please read the entire manual carefully before installation.
If certain recommended procedures are not followed, warranty claims will be denied.

Model Number	_____
Serial Number	_____
Installation Date	_____

**Randell Manufacturing
Service and Parts
Hot Line
1-800-621-8560
or for our
Service Agent Listings
visit our web site at
www.randell.com**


**RANDELL MANUFACTURING
SERIAL NUMBER LOCATION
FOR THE
8000 & CR9000 SERIES**

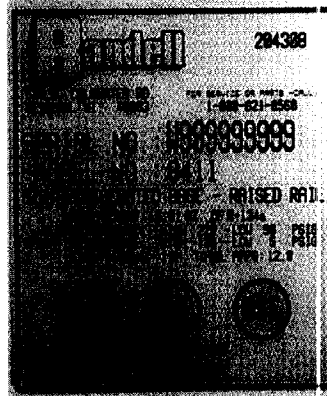

This is a sample of a serial number tag.

The serial number tag on the 8000 series is located inside the refrigerated base on the far left side of the unit. On the CR9000 series units it is located on the far right side on the compressor housing cover.

**Unit Specifications
For The
8000N Series**

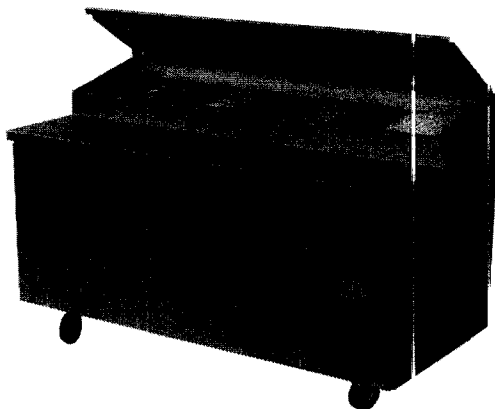

MODEL	L	D	H*	DOORS	STORAGE CU. FT.	CONDIMENT PAN CAPACITY**	PH	VOLT	AMP	NEMA	BTU RATING OF CONDENSING UNIT***
8148N	48"	33"	42.9"	(1)27"	10.4	(6)1/3 or (12)1/6	1/3	115/60/1	9	5-15P	1380
8260N	60"	33"	42.9"	(2)24"	14.5	(8)1/3 or (16)1/6	1/3	115/60/1	9	5-15P	1380
8268N	68"	33"	42.9"	(2)27"	17.3	(9)1/3 or (18)1/6	1/3	115/60/1	9	5-15P	1380
8383N	83"	33"	42.9"	(2)24", (1)21"	22.1	(10)1/3 or (20)1/6	1/2	115/60/1	12	5-15P	2385
8395N	95"	33"	42.9"	(3)27"	26.6	(12)1/3 or (24)1/6	1/2	115/60/1	12	5-15P	2385
8411N	111"	33"	42.9"	(4)24"	30.8	(14)1/3 or (28)1/6	5/8	115/60/1	12.8	5-20P	2700

Warranty Policies

Parts Warranty

Randell warrants all component parts of manufactured new equipment to be free of defects in material or workmanship, and that the equipment meets or exceeds reasonable industry standards of performance for a period of one year from the date of shipment from any Randell factory, assembly plant or warehouse facility.

Note: Warranties are effective from date of shipment, with a thirty day window to allow for shipment, installation and set up. In the event equipment was shipped to a site other than the final installation site, Randell will warranty for a period of three months following installation, with proof of starting date, up to a maximum of eighteen months from date of purchase.

Component parts warranty does not cover glass breakage or gasket replacement. Randell covers all shipping cost related to component part warranty sent at regular ground rates (UPS, USPS). **Freight or postage incurred for any express or specialty methods of shipping are the responsibility of the customer.**

Labor Coverage

In the unlikely event a Randell manufactured unit fails due to defects in materials or workmanship within the first ninety days, Randell agrees to pay reasonable labor incurred. During the first ninety days work authorizations are not required for in warranty repairs. However, repair times are limited to certain flex rate schedules and hours will be deducted from service invoices if they exceed allowed times without prior approval and a work authorization number. Warranties are effective from date of shipment, with a 30 day window to allow for shipment, installation and setup.

Where equipment is shipped to any site other than final installation Randell will honor the labor warranty for a period of ninety days following installation with proof of starting date up to a maximum of nine months from date of purchase. Travel time is limited to one hour each direction or two hours per invoice.

Any travel time exceeding two hours will be the responsibility of the customer.

Note: Temperature adjustments are not covered under warranty, due to the wide range of ambient conditions.

Five Year Extended Compressor Warranty

United States installations only:

Randell will pay for the replacement compressor only. Freight, labor, refrigerant, handling and all other miscellaneous charges are the responsibility of the customer. Randell will fulfill its warranty obligation by using one of the four methods provided below, which will be selected by the Randell in-house service technician:

1. Provide reimbursement to servicing customer for the cost of the locally obtained replacement compressor in exchange for the return of the defective compressor returned to Randell freight prepaid. Randell does limit the amount of reimbursement allowed and does require a copy of the local supply house bill for replacement compressor.

Customer should not pay servicing agent up front for compressor.

2. Provide repair at the manufacturing facility by requiring that the defective unit be sent back to Randell freight prepaid. Perform repair at the expense of Randell and ship the item back to job location freight collect.
3. Furnish a replacement compressor freight collect in exchange for the return of the defective compressor sent back freight prepaid.
4. Furnish complete condensing unit or replacement package freight collect in exchange for the return of the defective compressor sent back freight prepaid. (decisions based on whether or not to send complete condensing unit will be made by Randell in-house service technician).

Export Warranty

Our export warranties will cover all non electrical parts for the period of one year from the date of shipment to be free of defects in material or workmanship. Electrical parts are also covered if ordered and operated on 60 Hz. Electrical components, ordered and operated on 50 Hz, are warranted for the first 90 days from shipment only. Service labor is covered for the first 90 days with authorization from factory prior to service. Warranty is automatically initiated 60 days from ship date. Inbound costs on any factory supplied items would be the responsibility of the customer. Adherence to recommended equipment maintenance procedures, according to the owners manual provided with each unit, is required for this warranty to remain in effect, and can have a substantial effect on extending the service life of your equipment. Equipment abuse voids any warranty. Extended warranties are not available for parts, labor or compressors on units shipped outside the United States.

Freight Damage

Any and all freight damage that occurs to a Randell piece of equipment as a result of carrier handling is not considered warranty, and is not covered under warranty guidelines. Any freight damage incurred during shipping needs to have a freight claim filed by the receiver with the shipping carrier (note all damages on freight bill at time of delivery). Internal or concealed damage may fall under Randell's responsibility dependent upon the circumstances surrounding each specific incident and are at the discretion of the Randell in-house service technician.

Gasket Coverage

Randell does not cover gaskets under warranty. Gaskets are a maintenance type component that are subject to daily wear and tear and are the responsibility of the owner of the equipment. Because of the unlimited number of customer related circumstances that can cause gasket failure all gasket replacement issues are considered non-warranty. Randell recommends thorough cleaning of gaskets on a weekly basis with a mild dish soap and warm water. With proper care Randell gaskets can last up to two years, at which time we recommend replacement of all gaskets on the equipment for the best possible performance.

NOTICE: FOOD LOSS IS NOT COVERED UNDER WARRANTY**Unit Installation****A. Receiving Shipment**

Upon arrival, examine the exterior of the shipping crate for signs of abuse. It is advisable that the shipping crate be partially removed, in order to examine the cabinet for any possible concealed damages which might have occurred during shipment. If no damages are evident, replace the crate in order to protect the unit during storage and local delivery. If the unit is damaged, it should be noted on the delivery slip or bill of lading and signed to that effect. A claim must be filed immediately against the carrier indicating the extent and estimated cost of damage occurred.

B. Locating Your New Unit

The following conditions should be considered when selecting a location for your unit:

1. Floor and Countertop load - The area on which the unit will rest must be free of vibration and suitably strong enough to support the combined weights of the unit plus the maximum product load weight.
2. Clearance - There must be a combined total of at least 3" clearance on all sides of the unit.
3. Ventilation - The air cooled self contained unit requires a sufficient amount of cool clean air. Avoid placing the unit near heat generating equipment such as ovens, ranges, heaters, fryers, steam kettles, etc. and out of direct sunlight. Avoid locating the machine in an unheated room or where the room temperature may drop below 55° F or above 90° F.

C. Electrical Supply

The wiring should be done by a qualified electrician in accordance with local electrical codes. A properly wired, and grounded outlet will assure proper operation. Please consult the data plate attached to the compressor to ascertain the correct electrical requirements. Supply voltage and amperage requirements are located on the serial number tag located inside the far left door.

Note: It is important that a voltage reading be made at the compressor motor electrical connections, while the unit is in operation, to verify that the correct voltage required by the compressor is being supplied. Low or high voltage can detrimentally affect operation and thereby void its warranty.

Note: It is important that your unit has its own dedicated line. Condensing units are designed to operate with a voltage fluctuation of plus or minus 10% of the voltage indicated on the unit data plate. Burn out of a condensing unit due to exceeding voltage limits will void the warranty.

D. Door Inspection

1. Check doors/drawers to ensure that they are sealing properly.
2. Check doors for proper alignment.
3. Check doors to ensure that they open and shut freely.

Note: For units supplied with self closing doors.

E. Installation Checklist

After the final location of the unit has been determined refer to the following checklist prior to start up:

1. Check all exposed refrigeration lines to ensure that they are not kinked, dented or rubbing together.
2. Check that condenser and evaporator fans rotate freely without striking any stationary members.
3. Unit must be properly leveled.
4. Plug in unit and turn on main on/off switch.
5. Turn on cold control located inside the base and rail power switch located on front compressor panel.
6. Refer to the front of this manual for serial number location. Please record this information in your manual on page 3 now. It will be necessary when ordering replacement parts or requesting warranty service.
7. Confirm that unit is holding temperature. Set controls to desired temperature for your particular ambient and altitude.
8. Allow your unit to operate for approximately 2 hours before putting in food this allows interior to cool down to storage temperature.

Note: All motors are oiled and sealed.

Note: All self-contained models are shipped from the factory with the service valves open ready for operation.

Leg adjustment

The legs are equipped with bullet-type leveling bolts. Turn bolts clockwise or counterclockwise until the unit is level (both right to left and front to back). This can be done by hand or with an open end wrench.

Figure B - Temperature control adjustments

The control knob allows for temperature adjustments, with in the cabinet only. Turning the knob clockwise will result in increased cooling. Keep the arrow on the knob pointed within the green arc. Turning it clockwise beyond the green can result in freeze-up, while turning it counterclockwise beyond the green will shut the compressor off. If your cabinet temperature remains to warm and your temperature control is at the maximum setting you may need to adjust the pressure control.

Your units pressure control should be set at the time of installation by a qualified installation contractor. If minor adjustments are needed at a later date, adjust control by turning the right adjusting screw clockwise (1/4 turn at a time) to a lower number for colder temperature and counterclockwise to a higher number for warmer temperature.

Note: Numbers are pounds of pressure not degrees F.

Note: Do not adjust the differential screw.

Resetting self-closing hinge

Loosen set screw, using flat tip screwdriver turn bottom hinge (2) turns. Turn clockwise on left hinged doors, counterclockwise on right hand doors. Hold hinge in wound position with screwdriver and tighten set screw.

Door adjustment

The doors are mounted to the cabinet with two screws on the upper hinge, and a hinge pin on the bottom. To adjust the door first open it 90° and remove the two screws, leaving the center adjusting screw loose enough to reposition door. Once repositioned, install all screws and tighten.

Unit Operation

Randell has attempted to preset the cold control for an average interior temperature of 38°F at the factory but due to varying ambient conditions, including elevation, food product as well as type of operation you may need to alter this temperature. Additional adjustments can be made (within limits) by turning the control dial up or down until the desired temperature is reached. The control dial is located on the evaporator housing inside the base for all 8000 series preparation tables and inside the compressor housing on all CR9000 series counter top rail units (see figure E below).

Your condiment pans will maintain proper temperatures when utilized properly. It is strongly recommended that the covers be kept in the closed position when the unit is not in use and between rush periods. This is especially important in the summer and in kitchens exceeding 80° F.. Do not leave the covers open for prolonged periods of time. Close after using.

Note: All individual condiment pans need to be in the rail at all times. If no product is available or necessary fill empty pans with 1" or 2" of water as an insulating barrier, when condiment rail is on.

Note: Even though your make table was designed for heavy use, excessive door openings should be avoided, in order to maintain proper box temperature and eliminate the possibility of coil freeze up.

Morning Startup

1. Rail cleaning may be performed at this time.
2. Turn on the rail with the switch located on the louver.
3. Allow 25 minutes with the lids closed for the rail to cool down before loading product. (If the unit is starting from a full off position, 45 minutes to 1 hour should be allowed for the unit to cool down).
4. Load the product and proceed with food preparation. Lids should be kept closed during any periods of inactivity for efficient use of equipment and to keep product temperatures as cool as possible.

Evening Shut Down

1. Remove product from the rail at the end of the day's preparation. The product may either be stored in the base compartment or any other suitable holding compartment.
2. Turn off the rail with the switch located on the end panel of the unit.
3. Rail cleaning may be performed at this time if the frost has melted off the rail surfaces.

Preventive Maintenance

Randell strongly suggests a preventive maintenance program which would include the following **Monthly** procedures:

1. Cleaning of all condenser coils. Condenser coils are a critical component in the life of the compressor and must remain clean to assure proper air flow and heat transfer. Failure to maintain this heat transfer will affect unit performance and eventually destroy the compressor. Clean the condenser coils with coil cleaner and/or a vacuum cleaner and brush.

Note: Brush coil in direction of fins, normally vertically as to not damage or restrict air flow from passing through condenser.

2. Clean all fan blades, both on the condensing unit and the evaporator assembly.
3. Lubricate door hinges with lithium grease.
4. Clean and disinfect drain lines and evaporator pan with a solution of warm water and bleach.
5. Clean all gaskets on a weekly if not daily basis with a solution of warm water and a mild detergent to extend gasket life.

NOTE: DO NOT USE SHARP UTENSILS

Recommended cleaners for your stainless steel include the following:

JOB	CLEANING AGENT	COMMENTS
Routine cleaning	Soap, ammonia, detergent Medallion	Apply with a sponge or cloth
Fingerprints and smears	Arcal 20, Lac-O-Nu, Ecoshine	Provides a barrier film
Stubborn stains and discoloration	Cameo, Talc, Zud, First impression	Rub in the direction of the polish lines
Greasy and fatty acids, blood, burnt-on foods	Easy-Off, De-grease It, Oven aid	Excellent removal on all finishes
Grease and oil	Any good commercial detergent	Apply with a sponge or cloth
Restoration/Passivation	Benefit, Super Sheen	Good idea monthly

Reference: Nickel Development Institute, DiverseyLever, Savin, Ecolab, NAFEM

Do not use steel pads, wire brushes, scrapers or chloride cleaners to clean your stainless steel.

CAUTION: DO NOT USE ABRASIVE CLEANING SOLVENTS, NEVER USE HYDROCHLORIC ACID (MURIATIC ACID) ON STAINLESS STEEL.

Proper maintenance of equipment is the ultimate necessity in preventing costly repairs. By evaluating each unit on a regular schedule you can often catch and repair minor problems before they completely disable the unit and become burdensome on your entire operation.

For more information on preventive maintenance consult your local service company or CEFSA member. Most repair companies offer this service at very reasonable rates to allow you the time you need to run your business along with the peace of mind that all your equipment will last throughout its expected life. These services often offer guarantees as well as the flexibility in scheduling of maintenance for your convenience. Randell believes strongly in the products it manufacturers and backs those products with one of the best warranties in the industry. We believe with the proper maintenance and use you will realize a profitable return on your investment and years of satisfied service.

SYMPTOM	POSSIBLE CAUSE	PROCEDURE
UNIT NOT COLD ENOUGH	1. TEMPERATURE CONTROL SET TOO HIGH.	1. LOWER SETTING.
	2. TEMPERATURE CONTROL FAULTY.	2. TEST CONTROL.
	3. CONDENSER COIL DIRTY.	3. CLEAN COIL.
	4. DOOR NOT SEALING PROPERLY.	4. CHECK DOOR.
	5. DOOR GASKET DAMAGED.	5. REPLACE DOOR GASKET.
	6. EVAPORATOR FAN FAULTY.	6. SERVICE EVAPORATOR FAN.
	7. EVAPORATOR ICED UP.	7. CHECK DOOR.
	8. REFRIGERANT LEAKING OR CONTAMINATED.	8. CALL FOR SERVICE AT 1-800-621-8560.
UNIT TOO COLD	1. TEMPERATURE CONTROL SET TOO LOW.	1. ADJUST CONTROL.
	2. TEMPERATURE CONTROL FAULTY.	2. TEST CONTROL.
MOISTURE AROUND DOOR OR FRAME.	1. BREAKER STRIPS FAULTY.	1. INSPECT STRIPS.
	2. TEMPERATURE SET TOO LOW	2. RAISE SETTING.
ICE IN DRAIN PAN OR WATER IN BOTTOM OF UNIT OR FLOOR	1. DRAIN TUBE CLOGGED.	1. CLEAN DRAIN.
	2. UNIT NOT LEVEL	2. ADJUST LEVELING FEET
UNIT NOISY	1. UNIT NOT LEVEL	1. ADJUST LEVELING FEET.
	2. COMPRESSOR MOUNTINGS LOOSE OR HARDENED.	2. TIGHTEN OR REPLACE COMPRESSOR MOUNTINGS.
	3. CONDENSER FAN DAMAGED OR FITTING FAN SHROUD.	3. INSPECT CONDENSER FAN.
	4. EVAPORATOR FAN DAMAGED OR HITTING FAN SHROUD.	4. INSPECT EVAPORATOR FAN.
	5. MECHANICAL COMPARTMENT LOUVER RATTLING.	5. BEND OR ALIGN TABS TO REDUCE NOISE. REPLACE IF NECESSARY.

1. Cleaning condenser coil.

An accumulation of dirt and dust prevents the condenser coil from removing heat, making your unit cool poorly, run constantly, or even stop completely if the compressor overheats. Clean coil using a vacuum cleaner with a wand attachment. If the coil is greasy, wash it with warm soapy water and a bristle brush, taking care not to drip water on other parts of your unit.


2. Cleaning drain and drain pan.

Clean the drain using an oven baster to force a solution of hot water and baking soda or bleach into the opening. To clear a stubborn clog, insert a length of ¼" round plastic tubing into the drain and push it through to the drain pan, then pull it out. Wash the pan regularly with a solution of warm baking soda and water.


Checking the door seal.

Open the door and examine all four sides of the door gasket for tears. Feel the gasket for brittleness or cracks. If the gasket shows damage replace it. If not, close the door and check the seal between gasket and cabinet for obvious gaps. Next open the door and shut it on a dollar bill slowly pull it out of the door. If the gasket seals properly, you will feel tension as it grips the bill. Repeat this test all around the door. If the gasket doesn't seal tightly, replace gasket after first checking the door for sagging, warping.


PARTS LIST
FOR
8000N
SERIES
PIZZA PREPARATION TABLES

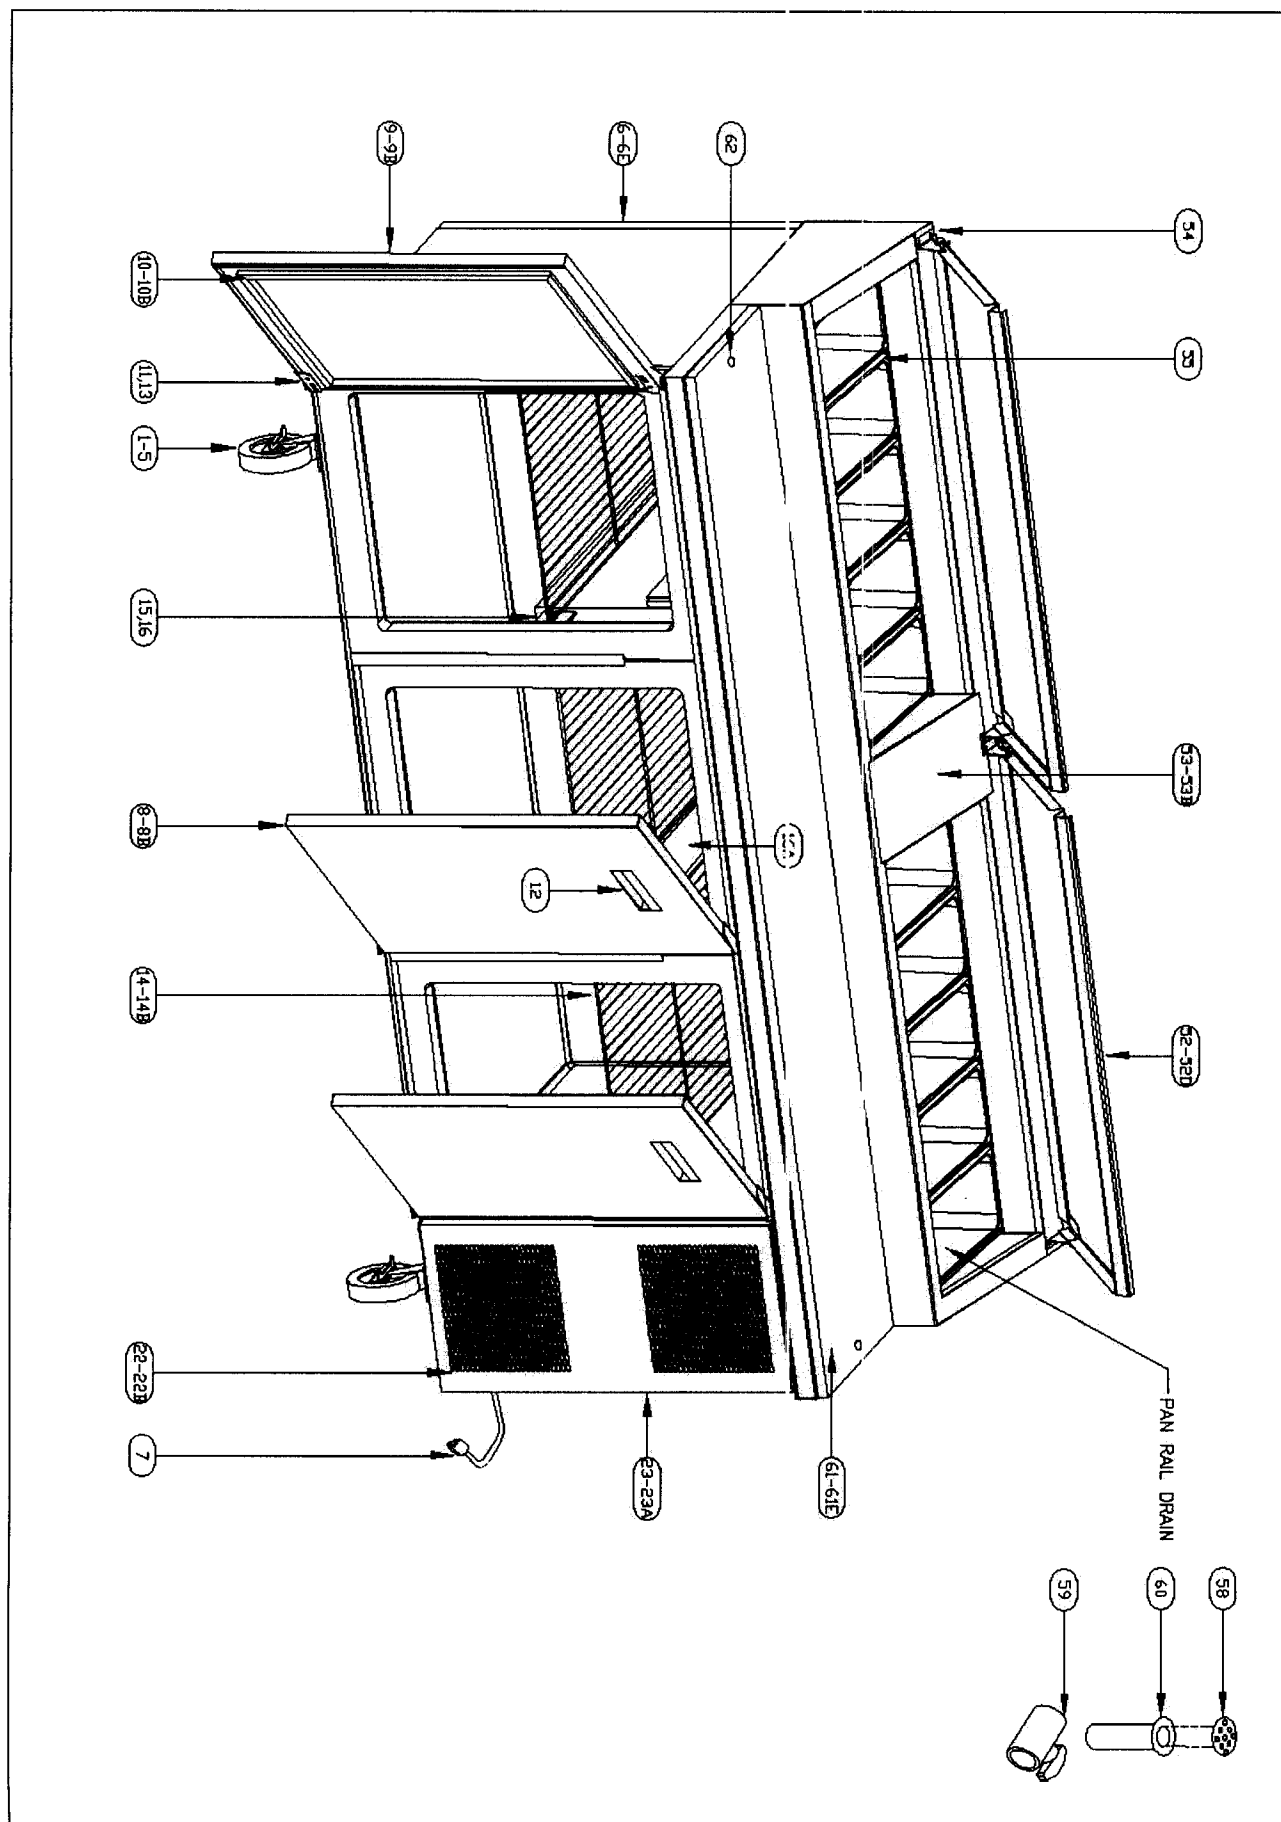


41 MULLION COIL ASSEMBLY

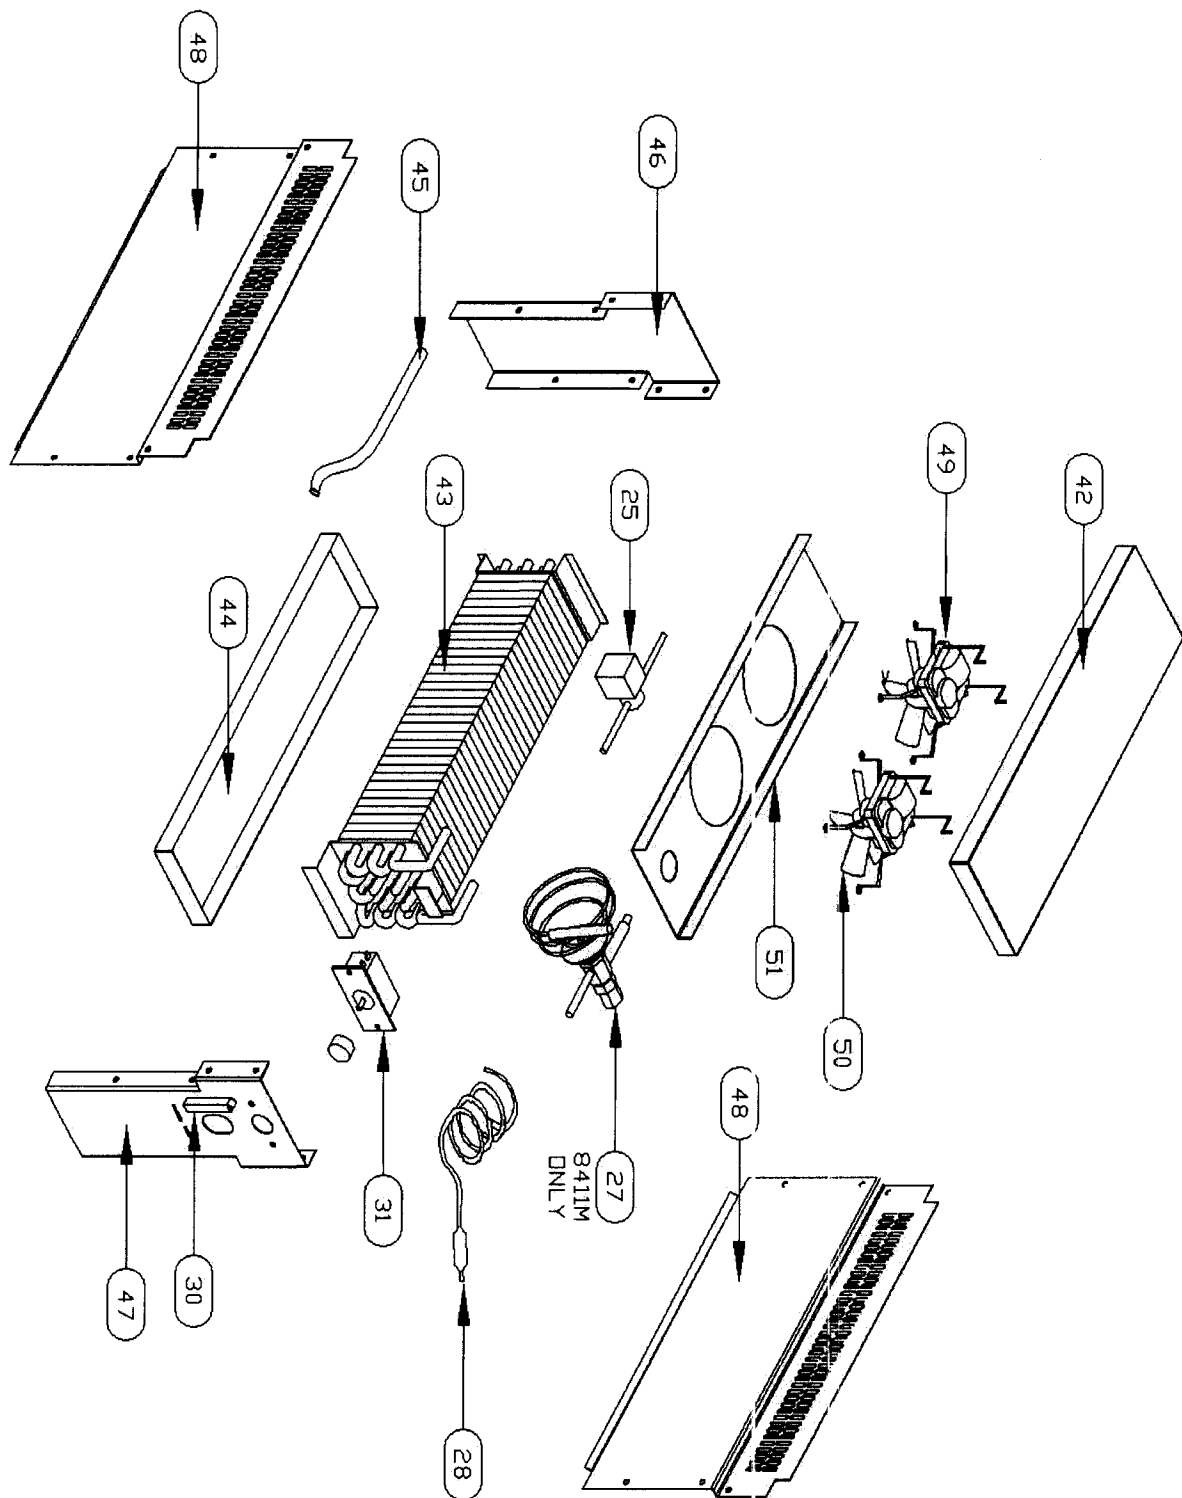

34-34B CONDENSING UNIT

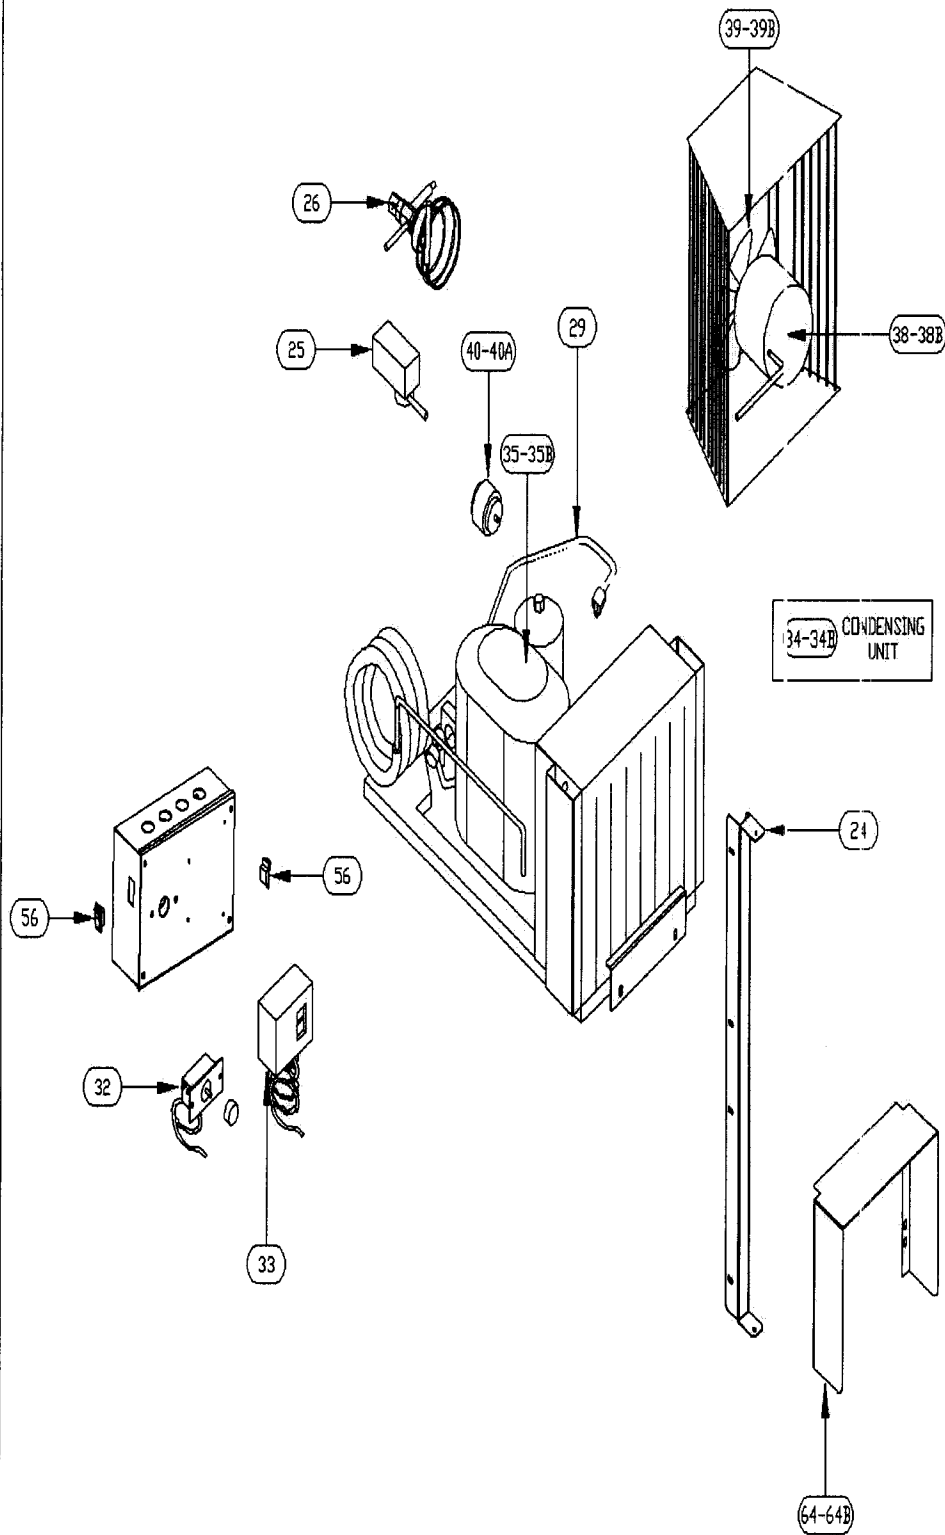

17-17C DRAWER CARTRIDGE ASSEMBLY

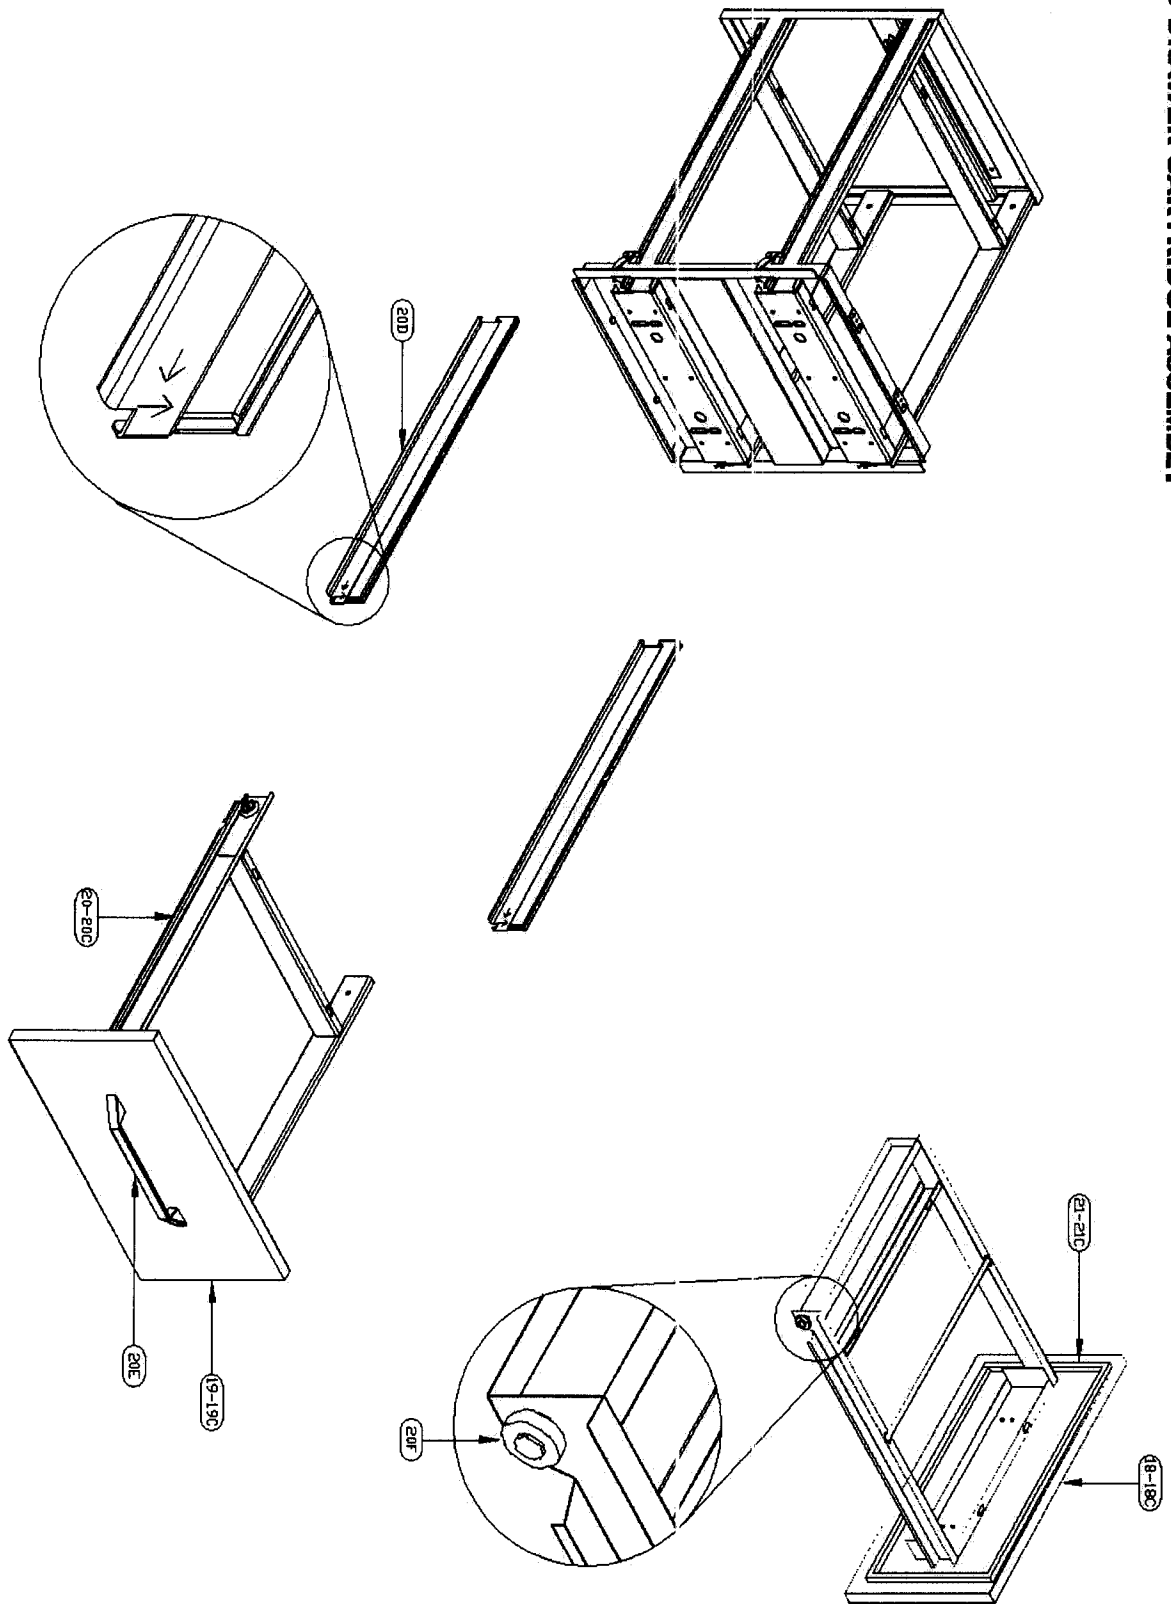

ITEM	DESCRIPTION	PART#	8148N	8260N	8268N	8383N	8395N	8411N
1	Casters 6" (set of 4)	1455	X	X	X	X		
2	Casters 6" (set of 6)	1655					X	X
3	Caster non-lock (6")	HD CST061	X	X	X	X	X	X
4	Caster - lock (6")	HD CST060	X	X	X	X	X	X
5	Leg w/bullet ft 6" [opt]	RP LEG035	X	X	X	X	X	X
6	s/s back panel 48"	RP BCK0107	X					
6A	s/s back panel 60"	RP BCK0108		X				
6B	s/s back panel 68"	RP BCK0109			X			
6C	s/s back panel 83"	RP BCK0110				X		
6D	s/s back panel 95"	RP BCK0111					X	
6E	s/s back panel 111"	RP BCK0112						X
7	Unit power cord 16/3 9'	EL WIR461-90	X	X	X	X	X	X
8	Door right hand 27" x 26"	RP DOR0213	X		X		X	
8A	Door right hand 24" x 26"	RP DOR0211		X		X		X
8B	Door right hand 21" x 26"	RP DOR0209				X		X
9	Door left hand 27" x 26"	RP DOR0212	X		X		X	
9A	Door left hand 24" x 26"	RP DOR0210		X		X		X
9B	Door left hand 21" x 26"	RP DOR0208				X		X
10	Door gasket 24.5 x 24.5"	IN GSK1030	X		X		X	
10A	Door gasket 21.75 x 24.5"	IN GSK1025		X		X		X
10B	Door gasket 18.5 x 24.25"	IN GSK9902				X		X
11	Door hinge non-self closing	RP HNG9900	X	X	X	X	X	X
12	Door handle [recessed]	HD HDL0103	X	X	X	X	X	X
13	Door bushing	HD BSH050	X	X	X	X	X	X
14	Shelf 22" x 25"	HD SHL180	X		X		X	
14A	Shelf 19" x 25"	HD SHL060		X		X		X
14B	Shelf 16.15 x 25.25	HD SHL9912				X		X
15	Shelf support pin	HD PIN0102	X	X	X	X	X	X
16	Shelf support- Frt & Bck of coil	RP BRK0107	X	X	X	X	X	X
16A	Shelf support Between doors	RP BRK0108				X	X	X
17	21" Dwr cartridge	11043-21				X		X
17A	24" Dwr cartridge	11043-24		X		X		X
17B	27" Dwr cartridge	11043-27	X		X		X	
17C	27" Trip- Dwr cartridge	11043-27T	X		X		X	
18	21" Dwr Assy	RP DWR0206				X		X
18A	24" Dwr Assy	RP DWR0201		X		X		X
18B	27" Dwr Assy	RP DWR0202	X		X		X	
18C	27" Trip - Dwr Assy	RP DWR0123	X		X		X	
19	21" Dwr Front	RP FRT9903				X		X
19A	24" Dwr Front	RP FRT9904		X		X		X
19B	27" Dwr Front	RP FRT9905	X		X			
19C	27" Trip-Dwr Front	RP FRM0117	X		X		X	
20	21" Dwr Frm Assy	RP FRM9903				X		X
20A	24" Dwr Frm Assy	RP FRM9904		X		X		X
20B	27" Dwr Frm Assy	RP FRM9905	X		X		X	

ITEM	DESCRIPTION	PART#	8148N	8260N	8268N	8383N	8395N	8411N
20C	27" Trip Dwr Frm Assy	RP FRM0117	X		X		X	
20D	Extendable Dwr Tracks	RP TRK05SM	X	X	X	X	X	X
20E	Drawer Handle	HD HDL130	X	X	X	X	X	X
20F	Drawer Bearing	HD BRG210	X	X	X	X	X	X
21	Gasket Dwr 11.3 x 18.75	IN GSK9903				X		X
21A	Gasket Dwr 11.3 x 21.75	IN GSK1041		X		X		X
21B	Gasket Dwr 11.3 x 24.75	IN GSK1046	X		X		X	
21C	Gasket Dwr 7.5 x 24.75	IN GSK1070	X		X		X	
22	Hinged Louver 12"	RP LVR0116		X				
22A	Hinged Louver 14"	RP LVR0117	X		X	X	X	
22B	Hinged Louver 18"	RP LVR0118						X
23	Louver Magnet	HD CTH9901	X	X	X	X	X	X
23A	Louver Magnet Strike	HD STR9901	X	X	X	X	X	X
24	Louver Mtg Hng Brk [1pc]	RP BRK0109	X	X	X	X	X	X
25	Solenoid Valve [120v]	RF SOL9801	X	X	X	X	X	X
26	TXV [Rail]	RF VLV404	X	X	X	X	X	X
27	TXV [Base]	RF VLV404						X
28	Cap Tube w/drier 144 x .044	RP CAP022	X	X	X	X	X	
29	Power cord/condensing unit	EL WIR470	X	X	X	X	X	X
30	Hanging Thermometer 4"	HD THR100	X	X	X	X	X	X
31	Base Thermostat	HD CNT200	X	X	X	X	X	X
32	Rail Thermostat	HD CNT9902	X	X	X	X	X	X
33	Low Pressure Switch	RF CNT700	X	X	X	X	X	X
34	Cond unit [aea2411zxa]	RF CON0003	X	X	X			
34A	Cond unit [m4pl0051iaa-140]	RF CON9901				X	X	
34B	Cond unit [m4el0055iaa]	RF CON0101						X
35	Comp [ae2411zxa]	RF CMP031-404	X	X	X			
35A	Comp [m4pl0051-iaa-140]	RF CMP9902P				X	X	
35B	Comp [aft22c2eiaa-100]	RF CMP0101P						X
38	Condenser fan motor	EL MTR300	X	X	X			
38A	Condenser fan motor	RF ASY0101P				X	X	
38B	Condenser fan motor	RF ASY0101P						X
39	Condenser fan blade	RF FAN300	X	X	X			
39A	Condenser fan blade	RF ASY0101P				X	X	
39B	Condenser fan blade	RF ASY0101P						X
40	Filter Drier	RF FLT251	X	X	X	X	X	
40A	Filter Drier	RF FLT377						X
41	Mullion Coil Assy	RP CSY107	X	X	X	X	X	X
42	Mullion Coil Mtg Brk	RP BRK007	X	X	X	X	X	X
43	Evaporator Coil	RF COI107	X	X	X	X	X	X
44	Evaporator drain pan [plastic]	RP DRP107	X	X	X	X	X	X
45	Evap coil vinyl drain tube	PL TBG075	X	X	X	X	X	X
46	Evap coil housing rear panel	RP PNL108	X	X	X	X	X	X
47	Evap coil housing front panel	RP PNL109	X	X	X	X	X	X
48	Evap coil side shroud	RP PNL107	X	X	X	X	X	X
49	Evap fan motor	EL MTR2338	X	X	X	X	X	X

ITEM	DESCRIPTION	PART#	8148N	826CN	8268N	8383N	8395N	8411N
50	Evap fan blade	RF FAN2330	X	X	X	X	X	X
51	Fan mounting shroud	RP SHD107	X	X	X	X	X	X
52	Hinged pan cover [39"]	RP PCR0114				X		
52A	Hinged pan cover [45"]	RP PCR0115	X				X	
52B	Hinged pan cover [53"]	RP PCR0116						X
52C	Hinged pan cover [57"]	RP PCR0117		X				
52D	Hinged pan cover [65"]	RP PCR0118			X			
53	Pan rail cover filler [8.25"]	RP DM0104				X		
53A	Pan rail cover filler [5.5"]	RP DM0105					X	
53B	Pan rail cover filler [7.75"]	RP DM0106						X
54	Pan cover hinges [pr]	RP HNG006	X	X	X	X	X	X
55	Adapter Bars	RP BAR1325	X	X	X	X	X	X
56	on/off rocker switch [rail/main]	EL SWT140	X	X	X	X	X	X
57	Panel Filler (8148 ONLY)	RP PNL0112	X					
58	Rail drain screen	RP DSN001	X	X	X	X	X	X
59	Rail drain ball valve	PB VLV0102	X	X	X	X	X	X
60	Brass drain tube	HD DRN100	X	X	X	X	X	X
61	1/2" X 16" X 48" poly	RP CPH1648	X					
61A	1/2" X 16" X 60" poly	RP CPH1660		X				
61B	1/2" X 16" X 68" poly	RP CPH1668			X			
61C	1/2" X 16" X 83" poly	RP CPH1683				X		
61D	1/2" X 16" X 95" poly	RP CPH1695					X	
61E	1/2" X 16" X 111" poly(2pc)	RP CPH1656						X
62	Cutting Board locator pin	HD PIN210	X	X	X	X	X	X
63	Locator pin riv-nut	FA NUT0124	X	X	X	X	X	X
64	Condensing Unit Dog House	RP DGH0101	X	X	X			
64A	Condensing Unit Dog House	RP DGH0102				X	X	
64B	Condensing Unit Dog House	RP DGH0103						X
N/S	Pull out catch pan rack	HD SHL090SS	X	X	X	X	X	X