SERVICE INSTRUCTIONS

www.keatingofchicago.com



1-800-KEATING

CONVERTING KEATING MODEL AA FRYERS FROM NATURAL GAS TO PROPANE GAS

() NOTE: In replacements and conversions use only new parts.

WARNING: Improper operation could result in death or serious injury.

▲ **WARNING:** When changing to propane or natural gas always change the burner and pilot orifices.

These instructions apply to AA models only.

Gas Valve (Refer to Figure 1)

- 1. Disconnect gas supply.
- 2. Remove two screws from regulator.
- 3. Remove the regulator and the gasket.
- 4. Install gasket, regulator and the 2 screws from conversion kit.
- 5. Check for leaks.
- 6. Set gas pressure from 4.0 inches water column for Natural gas to10 inches water column for Propane gas.
- 7. Attach the **WARNING LABEL** (provided in the kit) to the gas valve where it can be readily seen.

Burner Orifice

- 1. Turn off gas supply.
- 2. Remove the control panel by removing the two sheet metal screws underneath the control panel. Then pull bottom up and pull out (Removal only applies to 14" and 10x11 Models).
- 3. Remove the control panel back by removing the four screws and carefully lower (Removal only applies to 14" and 10x11 Models).
- 4. Remove the heat shield and the hold down bar.
- 5. "CAUTION" burners may be hot.
- 6. Lift each burner up, tilt it towards you and lift it until its base clears the orifice (gas manifold) spud.
- 7. Replace the orifices (Call 1-800-KEATING for correct orifice size).
- 8. The burners must be properly aligned with heat tubes when reassembling.

Pilot Orifice (Refer to Figure 2) With burners removed

- 1. Remove the air-shutter clip.
- 2. Remove the 1/4" aluminum tubing.
- 3. Remove the fitting compression orifice holder.
- 4. Remove orifice and replace with the required orifice (Call 1-800-KEATING for correct orifice size).
- 5. Reassemble, tighten and check for leaks.
- ▲ **WARNING:** Always check for gas leaks using soapy water. Never use an open flame to check for gas leaks.

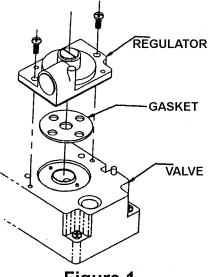


Figure 1.

