

# BUNN®

## DISPENSER USE

## JDF-2 & JDF-4 JUICE DISPENSER USE & CARE INSTRUCTIONS



### STEP 1

**PRESS AND HOLD MODELS:**  
Place a cup on the drip tray beneath the desired dispensing nozzle.



### STEP 2

Press and hold the "Product Dispense" or "Chilled Water" switch until the beverage/water reaches the desired level, then release.



### STEP 3


**PORTION CONTROL MODELS:**  
Place a cup on the drip tray beneath the desired dispensing nozzle.



### STEP 4

Momentarily press the appropriate cup size switch to dispense the beverage. The dispenser is factory preset to produce the following sizes:

- Small  
(4.0 seconds): 7 fl.oz. (207 ml)
- Medium  
(6.9 seconds): 12 fl.oz. (355 ml)
- Large  
(9.1 seconds): 16 fl.oz. (473 ml)

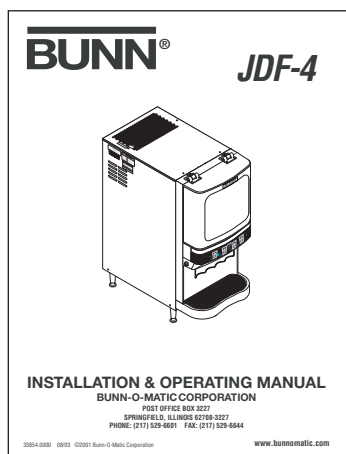

### STEP 5

The dispense times can be individually programmed by following the procedures described in *ADJUSTMENTS - Cup Size Programming* listed in the Operating and Service manual.



### STEP 6

To stop a timed dispense, momentarily press the "+/Stop Switch"



### STEP 7

To "Top Off" a beverage, press and hold the "+/Stop Switch" until the beverage reaches the desired level, then release.



### STEP 8

To dispense chilled water, press and hold the "Chilled Water Switch" until the water reaches the desired level, then release.

# BUNN®

## CLEANING

### JDF-2 & JDF-4 JUICE DISPENSER USE & CARE INSTRUCTIONS



STEP 1

**Note:** The Bunn Juice Dispenser incorporates a rinse reminder feature which lights the rinse LED on the front panel when it is time to rinse. See dip switch function list in the Operation and Service manual to activate this feature. Tools required for a daily rinse procedure include a 32 oz. (946 ml) minimum empty container.



STEP 2

Open the refrigerated compartment's door to access the "DISPENSE/RINSE" knobs.



STEP 3

Select the stations that will be rinsed and then rotate the appropriate knob(s) to the rinse position. A maximum of three heads can be rinsed at once. It is recommended that ALL dispense heads be rinsed daily. **Note:** If a station is in service lockout, leave its knob in the Dispense position. Close the refrigerated compartment's door.



STEP 4

Place the empty container under the dispense nozzle to catch the rinse water.

**(CAUTION: THE BUNN JUICE DISPENSER CAN BE PLUMBED FOR A HOT WATER RINSE. RINSE WATER CAUGHT IN THIS STEP SHOULD BE HANDLED WITH EXTREME CARE.)**



STEP 5

Press and release the appropriate "Product Dispense Switch". This will initiate a timed rinse cycle. Portion control users can press any of the four "Product Dispense Switches", to initiate a timed rinse cycle. Repeat for each dispense head.



STEP 6

Open the refrigerated compartment's door and return each knob to the dispense position. Actuate the station's Dispense Switch until concentrate appears from the dispense nozzle.



STEP 7

**Daily Parts Washing:** Remove and wash the dispense nozzle(s), mixing element(s), drip tray, drip tray cover, and cup stop in a mild detergent solution. Rinse thoroughly.



STEP 8

Wipe splash panel, areas around dispense nozzle(s), and drip trough in refrigerated compartment with a clean, damp cloth.