




Pop-Up Toaster TPT Series

Installation and Operating Manual

P/N 07.04.401.00

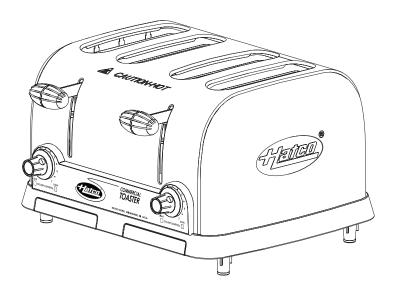

A WARNING

Do not operate this equipment unless you have read and understood the contents of this manual! Failure to follow the instructions contained in this manual may result in serious injury or death. This manual contains important safety information concerning the maintenance, use, and operation of this product. If you're unable to understand the contents of this manual, please bring it to the attention of your supervisor. Keep this manual in a safe location for future reference.

A ADVERTENCIA

No opere este equipo al menos que haya leído y comprendido el contenido de este manual! Cualquier falla en el seguimiento de las instrucciones contenidas en este manual puede resultar en un serio lesión o muerte. Este manual contiene importante información sobre seguridad concerniente al mantenimiento, uso y operación de este producto. Si usted no puede entender el contenido de este manual por favor pregunte a su supervisor. Almacenar este manual en una localización segura para la referencia futura.

A AVERTISSEMENT

Ne pas utiliser cet équipement sans avoir lu et compris le contenu de ce manuel ! Le non-respect des instructions contenues dans ce manuel peut entraîner de graves blessures ou la mort. Ce manuel contient des informations importantes concernant l'entretien, l'utilisation et le fonctionnement de ce produit. Si vous ne comprenez pas le contenu de ce manuel, veuillez le signaler à votre supérieur. Conservez ce manuel dans un endroit sûr pour pouvoir vous y référer plus tard.

CONTENTS

Important Owner Information	2	Operation	
		General	
		Maintenance	
		General	
Specifications	4	Cleaning	
		Troubleshooting Guide	
		Hatco Limited Warranty	
		Service Information	
Installation	5	Authorized Parts Distributors	Back Cove
General			

IMPORTANT OWNER INFORMATION

Record the model number, serial number, voltage, and purchase date of the unit in the spaces below (specification label located on the bottom of the unit). Please have this information available when calling Hatco for service assistance.

Model No.

Serial No.

Voltage

Date of Purchase

Register your unit!

Completing online warranty registration will prevent delay in obtaining warranty coverage. Access the Hatco website at **www.hatcocorp.com**, select the *Parts & Service* pull-down menu, and click on "Warranty Registration".

Business 8:00 AM to 5:00 PM

Hours: Central Standard Time (C.S.T.)

(Summer Hours: June to September -

8:00 AM to 5:00 PM C.S.T. Monday through Thursday 8:00 AM to 2:30 PM C.S.T. Friday)

Telephone: (800) 558-0607; (414) 671-6350

E-mail: partsandservice@hatcocorp.com

Fax: (800) 690-2966 (Parts and Service)

(414) 671-3976 (International)



24 Hour 7 Day Parts and Service Assistance available in the United States and Canada by calling (800) 558-0607.

Additional information can be found by visiting our web site at **www.hatcocorp.com**.

INTRODUCTION

The Hatco Pop-Up Toaster is perfect for self-serve buffet areas, lighter volume restaurants, diners, and cafes. The unit evenly toasts a variety of bread products including bagels, texas toast, waffles, and english muffins. The Pop-Up Toaster makes a great addition to your conveyor toaster for those non-peak periods when an occasional order of toast is needed.

The Pop-Up Toaster features a durable stainless steel housing, four self-centering extra-wide slots, individual toasting controls, a removable crumb tray for easy cleaning, and a 6' (1829 mm) cord with plug.

The Hatco Pop-Up Toaster is a product of extensive research and field testing. The materials used were selected for maximum durability, attractive appearance, and optimum performance. Every unit is inspected and tested thoroughly prior to shipment.

This manual provides the installation, safety, and operating instructions for the Hatco Pop-Up Toaster. Hatco recommends all installation, operating, and safety instructions appearing in this manual be read prior to installation or operation of the unit.

Safety information that appears in this manual is identified by the following signal word panels:



WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury.



Form No. TPTM-0511

A

Read the following important safety information before using this equipment to avoid serious injury or death and to avoid damage to equipment or property.

A WARNING

ELECTRIC SHOCK HAZARD:

- Plug unit into a properly grounded electrical receptacle of correct voltage, size, and plug configuration. If plug and receptacle do not match, contact a qualified electrician to determine and install proper voltage and size electrical receptacle.
- Unplug power cord and allow unit to cool before performing maintenance, cleaning, or attempting to clear a jam.
- DO NOT submerge or saturate with water. Unit is not waterproof. Do not operate if unit has been submerged or saturated with water.
- Unit is not weatherproof. Locate unit indoors where the ambient air temperature is a minimum of 70°F (21°C).
- Do not pull unit by power cord.
- · Discontinue use if power cord is frayed or worn.
- Do not attempt to repair or replace a damaged power cord. Cord must be replaced by Hatco, an Authorized Hatco Service Agent, or a person with similar qualifications.
- · Do not steam clean or use excessive water on unit.
- This unit is not "jet-proof" construction. Do not use jetclean spray to clean unit.
- NEVER insert a knife, fork, or similar object into toasting chamber.
- Do not pick up toaster by inserting fingers into toaster slots and grasping heating elements.
- · Do not clean unit when it is energized or hot.
- · Do not allow liquids to spill into unit.
- This unit must be serviced by qualified personnel only.
 Service by unqualified personnel may lead to electric shock or burn.

FIRE HAZARD:

- Locate unit a minimum of 1" (25 mm) from combustible walls and materials. If safe distances are not maintained, combustion or discoloration could occur.
- Do not place anything on top of toaster. Do not place toaster near or underneath curtains or other combustible materials. Items near or on top of toaster could catch fire causing injury and/or damage to toaster.

EXPLOSION HAZARD: Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

A WARNING

In case of fire, disconnect toaster from power source immediately. This allows unit to cool, making it easier and safer to put out the fire.

Make sure all operators have been instructed on the safe and proper use of the unit.

This unit is not intended for use by children or persons with reduced physical, sensory, or mental capabilities. Ensure proper supervision of children and keep them away from unit.

This unit has no "user-serviceable" parts. If service is required on this unit, contact an Authorized Hatco Service Agent or contact the Hatco Service Department at 800-558-0607 or 414-671-6350; fax 800-690-2966; or International fax 414-671-3976.

A CAUTION

BURN HAZARD:

- Some exterior surfaces on unit will get hot. Use caution when touching these areas.
- Do not remove crumb tray for cleaning until toaster is
 cool

Locate unit at proper counter height in an area that is convenient for use. Location should be level to prevent unit or its contents from falling accidentally and strong enough to support weight of unit and contents.

Always operate toaster with crumb tray installed.

Toasting of coated or buttered products such as garlic bread, cheese sandwiches, and sweet rolls is NOT recommended. Residue will reduce toaster performance and could ignite inside toaster. Using toaster with food products listed above will void unit warranty.

NOTICE

Do not lay unit on the side with the control panel or damage to the unit could occur.

Use non-abrasive cleaners and cloths only. Abrasive cleaners and cloths could scratch finish of unit, marring its appearance and making it susceptible to soil accumulation.

This unit is intended for commercial use only — NOT for household use.



MODEL DESCRIPTION

Model TPT-120

The Hatco Pop-Up Toaster is perfect for buffet areas and lighter volume restaurants. The TPT series toasters have four self-centering, extra wide slots with individual progressive toasting controls. The durable stainless steel housing contains a removable crumb tray for easy cleaning.

This unit comes equipped with cord wrap clips on the bottom of the toaster to minimize clutter on the counter.

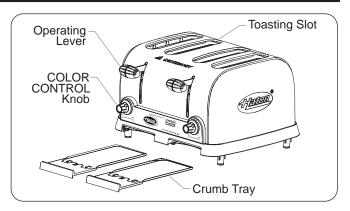


Figure 1. Model TPT-120

SPECIFICATIONS

Plug Configurations

Units are supplied from the factory with an electrical cord and plug installed. Plugs are supplied according to the applications.

A WARNING

ELECTRIC SHOCK HAZARD: Plug unit into a properly grounded electrical receptacle of correct voltage, size, and plug configuration. If plug and receptacle do not match, contact a qualified electrician to determine and install proper voltage and size electrical receptacle.

NOTE: Specification label located on the bottom of the unit. See label for serial number and verification of unit electrical information.

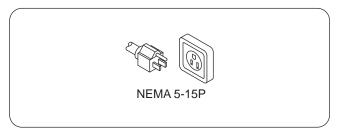


Figure 2. Plug Configurations

NOTE: Receptacle not supplied by Hatco.

Electrical Rating Chart

Model	Voltage	Watts	Amps	Plug Configuration	Shipping Weight
TPT-120	120	1800	15.0	NEMA 5-15P	10 lbs. (5 kg)
	120*	1440	12.0	NEMA 5-15P	10 lbs. (5 kg)

^{*} Electrical Ratings for Canadian model

Dimensions

Model	Width	Depth	Height	Footprint	Footprint
	(A)	(B)	(C)	Width (D)	Depth (E)
TPT-120	13-1/2"	12-3/4"	8-1/8"	12-1/8"	8-1/4"
	(342 mm)	(322 mm)	(207 mm)	(308 mm)	(209 mm)

TPT-120 Slot Openings = 1-1/2" W x 5-1/4" D (38 x 133 mm)

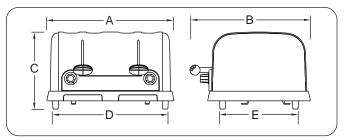


Figure 3. Dimensions



General

The Pop-Up Toaster is shipped with all components preassembled. Care should be taken when unpacking the shipping carton to avoid damage to the unit and the components enclosed.

A WARNING

ELECTRIC SHOCK HAZARD: Unit is not weatherproof. Locate unit indoors where ambient air temperature is a minimum of 70°F (21°C).

EXPLOSION HAZARD: Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

FIRE HAZARD:

- Locate unit a minimum of 1" (25 mm) from combustible walls and materials. If safe distances are not maintained, combustion or discoloration could occur.
- Do not place anything on top of toaster. Do not place toaster near or underneath curtains or other combustible materials. Items near or on top of toaster could catch fire causing injury and/or damage to toaster.

NOTE: The TPT-120 Toaster draws 15 amps and requires its own circuit.

- 1. Remove the unit from the carton.
- NOTE: To prevent delay in obtaining warranty coverage, complete online warranty registration. See the IMPORTANT OWNER INFORMATION section for details.
- Remove tape and protective packaging from all surfaces of the unit.
- 3. Place the unit in the desired location.
 - Locate the unit in an area where the ambient air temperature is constant and a minimum of 70°F (21°C). Avoid areas that may be subject to active air movements or currents (i.e., near exhaust fans/hoods and air conditioning ducts).
 - Make sure the unit is at the proper counter height in an area convenient for use.
 - Make sure the countertop is level and strong enough to support the weight of the unit and food product.
 - Make sure all the feet on the bottom of the unit are positioned securely on the countertop.

OPERATION

General

The Pop-Up Toaster is designed for ease of operation. Perform the following procedure to operate the toaster.



Read all safety messages in the IMPORTANT SAFETY INFORMATION section before operating this equipment.

- Plug the unit into a properly grounded electrical receptacle of the correct voltage, size, and plug configuration. See the SPECIFICATIONS section for details.
- NOTE: The TPT-120 is equipped with cord wrap clips on the bottom of the toaster to minimize clutter. Place excess cord around cord wrap clips.

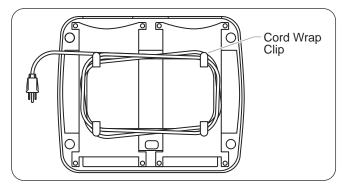


Figure 4. TPT-120 Cord Wrap Clips

2. Set the COLOR CONTROL knob(s) to the desired toast darkness setting. The "1" setting on the COLOR CONTROL knobs represents the lightest toast setting and the "7" setting represents the darkest.



3. Place bread product in toasting slot(s).

- 4. Push down on the operating lever(s) to lower product into the toaster.
 - As soon as the operating lever is pushed down, the heating elements inside the toaster energize and begin heating.



BURN HAZARD: Some exterior surfaces on unit will get hot. Use caution when touching these areas.

 When the toasting cycle is complete, the timer bell rings, the heating elements shut off, and the operating lever(s) rises automatically.

NOTE: The operating lever(s) can be lifted manually during toasting for product removal.



ELECTRIC SHOCK HAZARD:

- Unplug power cord and allow unit to cool before performing maintenance, cleaning, or attempting to clear a jam.
- NEVER insert a knife, fork, or similar object into toasting chamber
- 5. Remove and empty the crumb tray periodically in between toasting cycles.



Always operate toaster with crumb tray installed.

Toasting of coated or buttered products such as garlic bread, cheese sandwiches, and sweet rolls is NOT recommended. Residue will reduce toaster performance and could ignite inside toaster. Using toaster with food products listed above will void unit warranty.



MAINTENANCE

General

The Pop-Up Toaster is designed for maximum durability and performance with minimum maintenance.

A WARNING

ELECTRIC SHOCK HAZARD:

- Unplug power cord and allow unit to cool before performing maintenance, cleaning, or attempting to clear a jam.
- DO NOT submerge or saturate with water. Unit is not waterproof. Do not operate if unit has been submerged or saturated with water.
- · Do not steam clean or use excessive water on unit.
- This unit is not "jet-proof" construction. Do not use jetclean spray to clean this unit.
- · Do not clean unit when it is energized or hot.

This unit has no "user-serviceable" parts. If service is required on this unit, contact an Authorized Hatco Service Agent or contact the Hatco Service Department at 800-558-0607 or 414-671-6350; fax 800-690-2966; or International fax 414-671-3976.

Cleaning

To preserve the finish of the toaster, it is recommended that the metal surfaces be wiped daily with a non-abrasive, damp cloth.

A WARNING

Submerging or saturating unit with water will damage the unit and void unit warranty.

1. Remove and empty the crumb tray.



Do not remove the crumb tray for cleaning until toaster is cool.

- 2. Wash the crumb tray with warm water and a mild detergent. Rinse with water.
- 3. Allow the crumb tray to air dry or hand dry with a soft cloth before placing back into the toaster.
- Wipe the exterior surface of the toaster with a damp cloth. NOTICE: Use non-abrasive cleaners and cloths only.
- 5. Wipe dry the entire unit using a dry, non-abrasive cloth.

TROUBLESHOOTING GUIDE



This unit must be serviced by qualified personnel only. Service by unqualified personnel may lead to electric shock or burn.



ELECTRIC SHOCK HAZARD: Unplug power cord and allow unit to cool before performing maintenance, cleaning, or attempting to clear a jam.

Symptom	Probable Cause	Corrective Action
Toast too light.	COLOR CONTROL knob set on a light setting.	Turn COLOR CONTROL knob to a darker setting.
	Supply voltage to unit is low.	Verify the supply voltage to the toaster matches the unit specifications.
Toast too dark.	COLOR CONTROL knob set on a dark setting.	Turn COLOR CONTROL knob to a lighter setting.
	Supply voltage to unit is high.	Verify the supply voltage to the toaster matches the unit specifications.
Unit takes too long to toast.	The first few batches can take longer because the toaster needs time to heat up when initially turned on.	Push down the operation lever(s) for a toasting cycle before inserting bread product to allow the toaster to heat up.
	Supply voltage to unit is low.	Verify the supply voltage to the toaster matches the unit specifications.
Unit toasts on one side only.	Heating element defective.	Visually check the heating element inside the toaster with the operation lever engaged. With the lever pushed down, the heating element should glow red. If the element does not glow, Contact Authorized Service Agent or Hatco for assistance.
Heating element does not come on at all when the operating lever is pushed down.	The switch may be broken.	Contact Authorized Service Agent or Hatco for assistance.
The operating lever does not latch.	Latch mechanism is broken.	Contact Authorized Service Agent or Hatco for assistance.
Toaster trips the circuit breaker or GFCI.	Circuit breaker is not sized properly for the toaster.	Check circuit breaker for proper sizing.
	Wiring fault inside toaster.	Contact Authorized Service Agent or Hatco for assistance.



Form No. TPTM-0511

6

1. PRODUCT WARRANTY

Hatco warrants the products that it manufactures (the "Products") to be free from defects in materials and workmanship, under normal use and service, for a period of one (1) year from the date of purchase when installed and maintained in accordance with Hatco's written instructions or 18 months from the date of shipment from Hatco. Buyer must establish the Product's purchase date by registering the Product with Hatco or by other means satisfactory to Hatco in its sole discretion.

Hatco warrants the following Product components to be free from defects in materials and workmanship from the date of purchase (subject to the foregoing conditions) for the period(s) of time and on the conditions listed below:

a) One (1) Year Parts and Labor PLUS One (1) Additional Year Parts-Only Warranty:

Conveyor Toaster Elements (metal sheathed)
Drawer Warmer Elements (metal sheathed)
Drawer Warmer Drawer Rollers and Slides
Strip Heater Elements (metal sheathed)
Display Warmer Elements (metal sheathed air heating)
Holding Cabinet Elements (metal sheathed air heating)
Heated Well Elements — HWB Series (metal sheathed)

b) One (1) Year Parts and Labor PLUS Four (4) Years Parts-Only Warranty on pro-rated terms that Hatco will explain at Buyer's request:

3CS and FR Tanks

 c) One (1) Year Parts and Labor PLUS Nine (9) Years Parts-Only Warranty on:

Electric Booster Heater Tanks Gas Booster Heater Tanks

d) Ninety (90) Day Parts-Only Warranty:

Replacement Parts

THE FOREGOING WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR PATENT OR OTHER INTELLECTUAL PROPERTY RIGHT INFRINGEMENT. Without limiting the generality of the foregoing, SUCH WARRANTIES DO NOT COVER: Coated incandescent light bulbs, fluorescent lights, heat lamp bulbs, coated halogen light bulbs, halogen heat lamp bulbs, xenon light bulbs, LED light tubes, glass components, and fuses; Product failure in booster tank, fin tube heat exchanger, or other water heating equipment caused by liming, sediment buildup, chemical attack, or freezing; or Product misuse, tampering or misapplication, improper installation, or application of improper voltage.

2. LIMITATION OF REMEDIES AND DAMAGES

Hatco's liability and Buyer's exclusive remedy hereunder will be limited solely, at Hatco's option, to repair or replacement using new or refurbished parts or Product by Hatco or a Hatcoauthorized service agency (other than where Buyer is located outside of the United States, Canada, United Kingdom, or Australia, in which case Hatco's liability and Buyer's exclusive remedy hereunder will be limited solely to replacement of part under warranty) with respect to any claim made within the applicable warranty period referred to above. Hatco reserves the right to accept or reject any such claim in whole or in part. In the context of this Limited Warranty, "refurbished" means a part or Product that has been returned to its original specifications by Hatco or a Hatco-authorized service agency. Hatco will not accept the return of any Product without prior written approval from Hatco, and all such approved returns shall be made at Buyer's sole expense. HATCO WILL NOT BE UNDER ANY CIRCUMSTANCES. CONSEQUENTIAL OR INCIDENTAL DAMAGES, INCLUDING BUT NOT LIMITED TO LABOR COSTS OR LOST PROFITS RESULTING FROM THE USE OF OR INABILITY TO USE THE PRODUCTS OR FROM THE PRODUCTS BEING INCORPORATED IN OR BECOMING A COMPONENT OF ANY OTHER PRODUCT OR GOODS.

SERVICE INFORMATION

United States and Canada

The warranty on Hatco TPT Series toasters is for one year from date of purchase or eighteen months from date of shipping from Hatco, whichever occurs first.

Warranty Problems

If you experience a problem with a TPT toaster <u>during the</u> warranty period, contact the **Hatco Parts and Service Team** at:

Telephone: 1-800-558-0607 or 414-671-6350

Fax: 1-800-690-2966 or414-671-3976

When contacting Hatco for warranty service, please supply the following information:

- · Model of unit
- · Serial number (located on the bottom of the unit)
- · Specific problem with the toaster
- · Date of purchase
- · Name of business
- Shipping address
- · Contact name and phone number

Non-Warranty Problems

If you experience a non-warranty problem that requires assistance, please contact the nearest Authorized Hatco Service Agency.

To locate the nearest Service Agency, log onto our website at www.hatcocorp.com and click on Service Agency Locator, or contact the Hatco Parts and Service Team by phone.



HATCO AUTHORIZED PARTS DISTRIBUTORS

ALABAMA

ALABAINA
Jones McLeod Appl. Svc.
205-251-0159

ARIZONA

Service Solutions Group

602-234-2443 Phoenix

Byassee Equipment Co

602-252-0402 Phoenix

CALIFORNIA

Industrial Electric

Commercial Parts & Service, Inc. Huntington Beach 714-379-7100

Chapman Appl. Service

San Diego 619-298-7106

P & D Appliance

Commercial Parts & Service, Inc. 650-635-1900 S. San Francisco

COLORADO

Hawkins Commercial Appliance 303-781-5548 Englewood

FLORIDA

Whaley Foodservice Repair Jacksonville 904-725-7800

3Wire Nass Service Co., Inc. Orlando 407-425-2681

B.G.S.I.

Pompano Beach 954-971-0456

Comm. Appliance Service

813-663-0313 Tampa

GEORGIA

TWC Services 770-438-9797 Mableton

Heritage Service Group 866-388-9837 Norcross

Southeastern Rest. Svo 770-446-6177 Norcross

HAWAII

Burney's Comm. Service. Inc. 808-848-1466 Honolulu

Food Equip Parts & Service

808-847-4871 Honolulu

ILLINOIS

Parts Town 708-865-7278 Lombard

Eichenauer Elec. Service

217-429-4229

Midwest Elec. Appl. Service

630-279-8000 **Elmhurst**

Cone's Repair Service Moline 309-797-5323

<u>INDIANA</u>

GCS Service Indianapolis 317-545-9655

Electric Motor Service Co

Davenport 319-323-1823

Goodwin Tucker Group

515-262-9308 Des Moines

KENTUCKY

Service Solutions Group 859-254-8854 Lexington

Service Solutions Group

502-451-5411 Louisville

LOUISIANA

Chandlers Parts & Service

225-272-6620 **Baton Rouge**

MARYLAND

Electric Motor Service

410-467-8080 Baltimore

GCS Service 301-585-7550 Silver Spring

MASSACHUSETTS

Ace Service Co., Inc. Needham 781-449-4220

MICHIGAN

Bildons Appliance Service

248-478-3320

Commercial Kitchen Service 517-893-4561

Midwest Food Equip. Service

616-261-2000 Grandville

MINNESOTA

GCS Service Plymouth 800-345-4221

MISSOURI

General Parts

Kansas City 816-421-5400

Commercial Kitchen Services St. Louis 314-890-0700

Service Kaemmerlen Parts &

314-535-2222 St. Louis

NEBRASKA

Anderson Electric Omaha

402-341-1414

NEVADA

Burney's Commercial 702-736-0006 Las Végas

Hi. Tech Commercial Service N. Las Vegas 702-649-4616

NEW JERSEY

Jay Hill Repair Fairfield 973-575-9145

Service Plus

Flanders 973-691-6300 **NEW YORK**

Acme American Repairs, Inc.

Brooklyn 718-456-6544

Alpro Service Co. Brooklyn

718-386-2515

Appliance Installation 716-884-7425 Buffalo

Duffy's Equipment Services, Inc. Buffalo 800-836-1014

3Wire Northern 800-634-5005 Plattsburgh

Duffy's Equipment Services, Inc. Sauquoit 800-836-1014

J.B. Brady, Inc.

315-422-9271 Syracuse

NORTH CAROLINA

Authorized Appliance Charlotte 704-377-4501

OHIO

Akron/Canton Comm. Svc. Inc.
Akron 330-753-6635

Service Solutions Group
513-772-6600

Commercial Parts and Service

614-221-0057 Columbus Electrical Appl. Repair Service

Brooklyn Heights 216-459-8700

419-385-9121

405-528-8883

803-791-4420

E. A. Wichman Co.

OKLAHOMA

Hagar Rest. Service, Inc.

Oklahoma City 405-235-2184

Krueger, Inc Oklahoma City

OREGON

Ron's Service, Inc. Portland 503-624-0890

PENNSYLVANIA

Elmer Schultz Services

Philadelphia 215-627-5401

FAST Comm. Appl. Service 215-288-4800 Philadelphia

Appliance Installation & Service

Pittsburgh 412-809-0244 K & D Service Co.

717-236-9039 Harrisburg

Electric Repair Co. 610-376-5444

RHODE ISLAND

Reading

Marshall Electric Co. 401-331-1163

Providence

SOUTH CAROLINA Whaley Foodservice Repair

W. Columbia **TENNESSEE**

Camp Electric 901-527-7543 Memphis

TEXAS

Houston

GCS Service Fort Worth

800-433-1804

713-666-7100

Armstrong Repair Service

Cooking Equipment Specialist

888-866-9276 Mesquite

Refrigerated Specialist, Inc.

888-866-9276 Mesquite

Commercial Kitchen Repair Co. San Antonio 210-735-2811

UTAH

La Monica's Rest. Equip. Service Murray 801-263-3221

VIRGINIA

Daubers 757-855-4097 Norfolk

Daubers Springfield 703-866-3600

WASHINGTON

3Wire Restaurant Appliance

Seattle 800-207-3146

WISCONSIN

A.S.C., Inc.

Madison 608-246-3160

A.S.C., Inc. Milwaukee

414-543-6460

250-920-4888

506-855-4228

CANADA

ALBERTA

Key Food Equipment Service Edmonton 780-438-1690

BRITISH COLUMBIA

Key Food Equipment Service Vancouver 604-433-4484

Key Food Equipment Service

MANITOBA

Air Rite, Inc. Winnipeg 204-895-2300

NEW BRUNSWICK

EMR Services, Ltd.

Moncton

ONTARIO

R.G. Henderson Ltd. 416-422-5580

Toronto

Choquette - CKS, Inc. 613-739-8458

Ottawa

QUÉBEC

Choquette - CKS, Inc. 514-722-2000 Montreal

Choquette - CKS, Inc. 418-681-3944 Québec City UNITED KINGDOM

Marren Group Northants

+44(0)1933 666233

HATCO CORPORATION P.O. Box 340500

Milwaukee, WI 53234-0500 U.S.A (800) 558-0607 (414) 671-6350 Parts and Service Fax (800) 690-2966 International Fax (414) 671-3976 partsandservice@hatcocorp.com

www.hatcocorp.com

Register your unit online!

See IMPORTANT OWNER INFORMATION section for details.