

Star Manufacturing International Inc.


10 Sunnen Drive St. Louis, MO 63143

Phone: (314) 781-2777 FAX: (314) 781-3636 Installation and Operating Instructions

2M-Y4358 Rev. T 5-30-97

HOT DOG CHROME ROLLER GRILL MODELS 12, 25, 25X, 40, 45, 45X and 75

HOT DOG SILVERSTONE ROLLER GRILL MODELS 12S, 25S, 25SX, 40S, 45S, 45SX and 75S

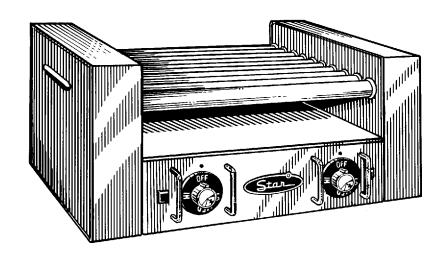

Model 25









CAUTION

This equipment is designed and sold for commercial use only by personnel trained and experienced in its operation and is not sold for consumer use in and around the home nor for use directly by the general public in food service locations. For equipment to be used by the general public, please contact the factory.

INSTALLATION:

This grill is equipped for the voltage shown on the nameplate. It will operate on alternating current only, however, the correct voltage must be applied.



CAUTION

DO NOT CONNECT TO DIRECT CURRENT (DC).

Connection Load:

Model 12, 12S 120V -610 Watts
Model 12, 12S 230CE- - 530 Watts
Model 25, 25S, 25SX, 25X- 1196 Watts
Model 40, 40S - 1636 Watts
Model 45, 45S, 45SX, 45X- 1696 Watts
Model 75, 75S -2656 Watts

The grill should be connected to a wall type receptacle, a direct line or separate circuit. A direct line or separate circuit is preferred. If the grill is connected on a line already overloaded, it will not operate properly. When installed, the unit should be level. Optional 4 inch adjustable legs are available.

GENERAL OPERATING PROCEDURES

For flexibility, all models of roller grills, excluding the I2, are divided into two independently controlled heat sections. The right control knob controls the rear cooking section and the left control knob controls the front cooking section. The I2 and I2S grills have only one heating section.

A signal light is provided next to each control knob to give a visual check if one or both sections are turned on.

Each section is controlled by means of a rotary switch with positions marked at OFF-HIGH-MEDIUM and LOW. On MEDIUM for all models except the 12 and 12S 230CE, it is normal for every other roller to be unheated. The 12 and 12S 230CE uses an infinite control which varies heat on all rollers.

Before cooking for the first time, wash all rollers with mild detergent solution and then wipe with a clean wet cloth.

Hot dogs should be kept refrigerated until ready for use. Always use hot dogs or sausages made for grilling.

NSF requires that perishable foods be kept at 140° F or above during serving periods. Do not keep hot dogs on the LOW setting for more than two hours. If held for more than two hours they must be transferred to HIGH or MEDIUM heated zone for cooking and serving.



CAUTION

USE ONLY PLASTIC OR COATED UTENSILS FOR HANDLING THE HOT DOGS. METAL WILL SCRATCH THE ROLLERS. WHEN COOKING, DO NOT TRANSFER HOT DOGS FROM HIGH TO LOW AS THEY MAY SHRINK. DO NOT OPERATE GRILL WITHOUT GREASE PAN IN PLACE.

Cooking time will vary depending on starting temperature and quality of the product. For best results follow the cooking systems shown below.

- Busy periods Set both controls on HIGH and fill to capacity.
- Medium periods Set control to HIGH to cook hot dogs. Reduce heat to MEDIUM as needed.
- 3. For all models except the 12 and 12S 230CE preheat hot dogs on LOW. Medium is used for preheating the 12 and 12S 230CE. Turn heat to HIGH for cooking as needed.

CLEANING:

Remove all hot dogs. Turn control to HIGH and allow rollers to get hot. Clean rollers with a clean wet cloth. Wipe from the outside ends towards the center of the rollers. Do not force grease into the roller end bearings.

Turn the grill off and remove the grease tray by pulling forward on the front edge. Clean the entire unit daily to insure long life and satisfactory performance as well as to maintain an attractive appearance. The exterior should be kept bright and attractive by using a mild detergent or non-abrasive cleaner.



CAUTION


DO NOT USE SHARP EDGES ON SILVERSTONE COATING - SCRAPES WILL VOID THE WARRANTY. NEVER USE STEEL WOOL OR ABRASIVE CLEANERS TO CLEAN ROLLERS AS THIS WILL DAMAGE THE FINISH AND POSSIBLY DAMAGE THE BEARINGS.


MAINTENANCE AND REPAIRS

Contact the factory, a service representative or a local service company for service or required maintenance.

RETAIN THIS MANUAL FOR FUTURE REFERENCE PART NO. 2M-Y4358 REV. S 4-24-97

MATERIAL	FINISH	MODEL NO. 12, 12S	PART N	K 1206	6
DR.D.W.V.CK. DATE 9/9/86	STAR MFG. INTERNATIONAL, INC	TITLE WIRF	DIAGRA		
LIMITS UNLESS OTHERWISE NOTED FRACTIONS ± 1/64 DECIMALS ± .005	9325 OLIVE BOULEVARD ST. LOUIS, MO 63132	CHANGES	LTR DATE	CHANGE	DR
·		311111020		ELETED (2) WIRE NUTS	
				REDRAWN TO CAD,ADDE EURO CODE, & SK #	
			D 1/23/33 E	EURO CODE, & SK #	B.IN
	—				
					
				<u> </u>	
				HIGH	
				MEDIUM	
)	L1 8		
	SWITCH		1 2	C LOW	
	MOTOR PILOT LIGHT				
	=		O O	OFF	
			0 0	12	
			SWITCH POS	SITION	
	В				
	□ BLACK/BROWN □				
	W				
	WHITE/BLUE				
	GREEN/GREEN-YELLOW				

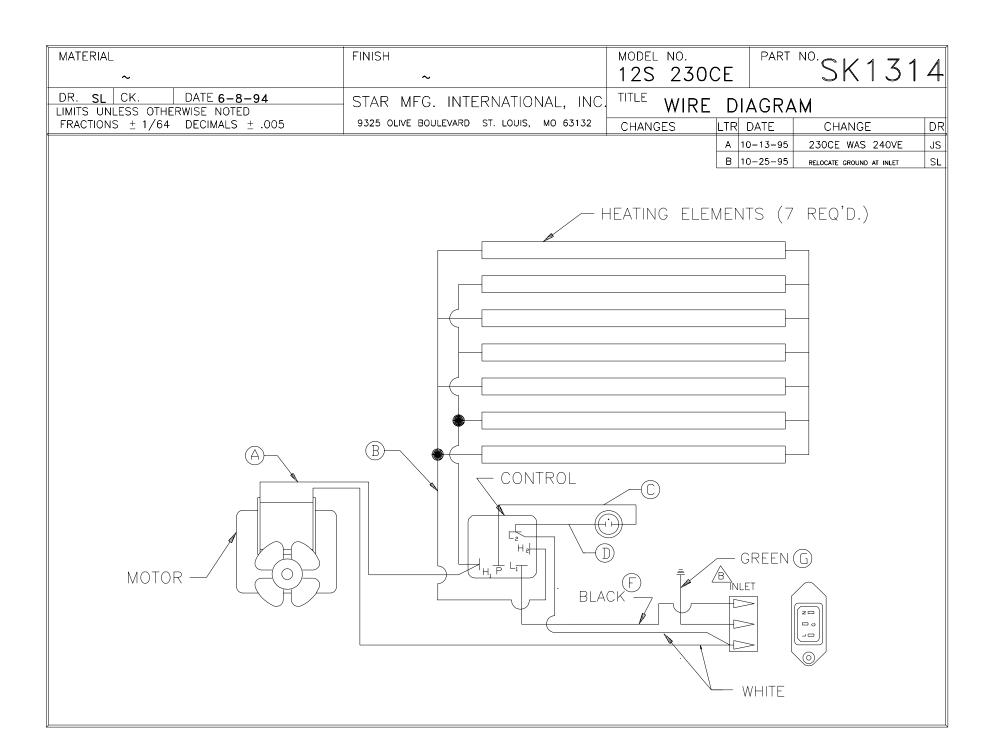


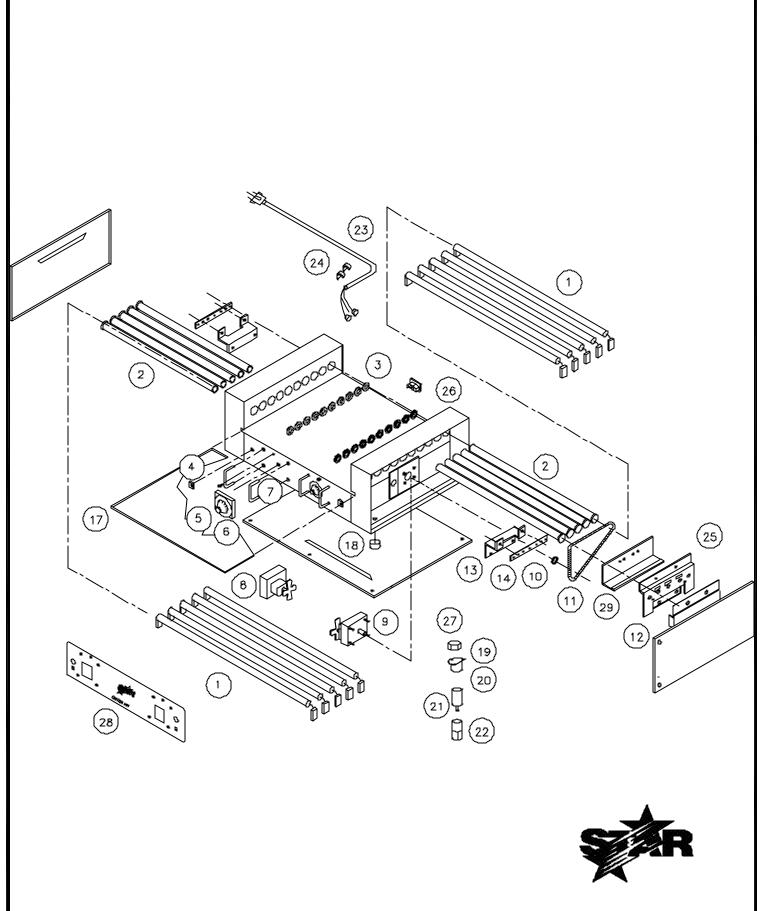

MODEL 12/25/40/45/7

STAR MANUFACTURING INTERNATIONAL, INC.

SK1304 REV. E 4-24-97 DR. BU

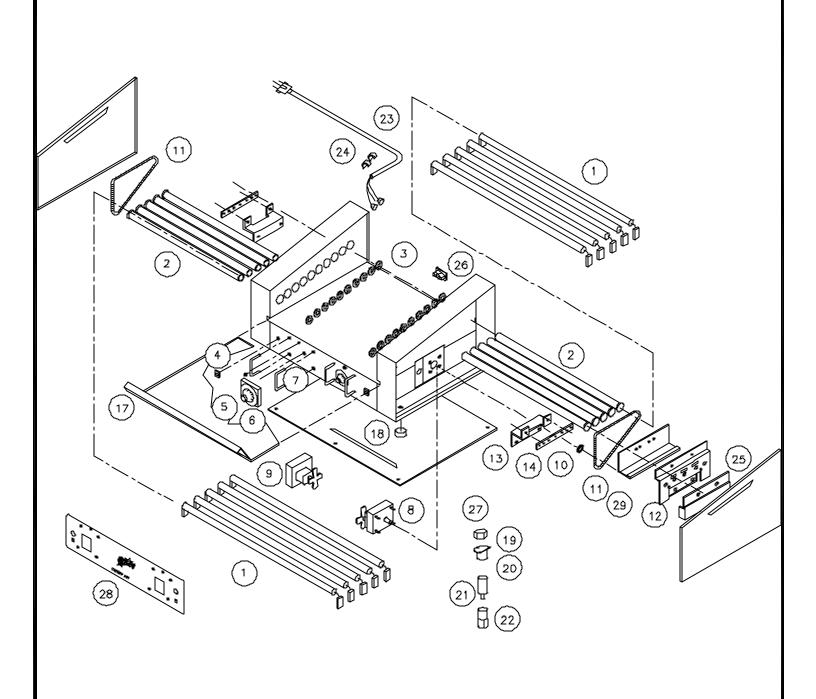



MODEL 25SX,25X,45SX

STAR MANUFACTURING INTERNATIONAL, INC.

SK1392 REV. C

5-30-97

DR. JS

PARTS LIST EFFECTIVE 2/25/98 Rev. J

12, 25, 258X, 25X, 40, 45, 458X, 45X, 75

MODEL HOT DOG ROLLER GRILLS

Key	Part	Number		
Number	Number	Per Unit	Description	
1	2N-Y9947	7	ELEMENT 120V, 80W	12
	2N-Y9541	10/14	ELEMENT 120V, 110W	25/40
	2N-Y9946	10/14	ELEMENT 240V, 110W	25/40
	2N-Y9543	10	ELEMENT 120V, 160W	45
_	2N-Y9945	10/16	ELEMENT 240V, 160W	45/75
2	A5-120102	7	ROLLER - CHROME PLATE	12
	PS-120145	7	ROLLER - PLASTECH 88	12S
	PS-250008	10/14	ROLLER - CHROME PLATE	25/25X/40
	PS-250040	10/14	ROLLER - PLASTECH 88	25S/25SX/40S
	PS-450005	10/16	ROLLER - CHROME PLATE	45/45X/75
	PS-450039	10/16	ROLLER - PLASTECH 88	45S/45SX/75S
3	2P-Z0467	14/20/	TUBE GUIDE ASSEMBLY	12/25, 45/
		28/32		40/75
4	2J-Y6689	1/2	PILOT LIGHT 120V	12/25, 40, 45
	2J-Y6690	2	PILOT LIGHT 240V	75
	2S-Y9225	1/2	PILOT LIGHT 230CE	12/ 25, 40, 45, 75
5	2R-9305	1/2	KNOB	12/25, 40, 45, 75
	2R-Y9829	1/2	KNOB	12 230CE, 240VE/40SI 230CE
	2R-Z0209	2	KNOB	25, 40, 45, 75 230CE
6	2E-Y6212	1/2	SWITCH	12/25, 40, 45, 75120V/240V
	2E-Y9252	2	SWITCH	25, 40, 45, 75 230CE
	2J-Y9226	1/2	SWITCH	12 230CE/40SI 230CE
7	2R-8229	2/4	KNOB SHIELD	12/25, 40, 45, 75
8	2U-Y6685	1	MOTOR CW 120V, LEFT CONTROL	25/25S, 40/40S, 45/45S
	2U-Z0746	1	MOTOR CW 240VLEFT CONTROL	25SX, 25X, 45SX, 45X
				75/75S
9	2U-Y6686	1	MOTOR CCW 120V, RIGHT CONTROL	12/12S, 25/25S, 40/40S, 45/45S
	2U-Z0745	1	MOTOR CCW 240V, RIGHT CONTROL	25SX, 25X, 45SX, 45X
				75/75S
10	2P-Y4183	1/2	MOTOR SPROCKET	12/25, 40, 45, 75
11	2P-Y5502	1	CHAIN - SHORT	12
	2P-Y4321	2	CHAIN - SHORT	25, 45
	2P-Y6767	2	CHAIN	40
	2P-Y4322	2	CHAIN - LONG	75
	2P-Z0023	1	CHAIN-SHORT	25SX, 25X, 45SX, 45X
	2P-Z0024	1	CHAIN-LONG	25SX, 25X, 45SX, 45X
12	PS-120160	1/2	CHAIN GUIDE ASSEMBLY (2 STUD MODE)	
	PS-250004	2	CHAIN GUIDE ASSEMBLY (2 STUD MODE)	· · · · · · · · · · · · · · · · · · ·
	PS-750004 2 CHAIN GUIDE ASSEMBLY (2 STUD MODELS ONLY)			

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER

PAGE 1 3

Some items are included for illustrative purposes only and in certain instances may not be available.



PARTS LIST EFFECTIVE 2/25/98 Rev. J

12, 25, 25SX, 25X, 40, 45, 45SX, 45X, 75

MODEL HOT DOG ROLLER GRILLS

Key	Part	Number Per		
lumber	Number	Unit	Description	
		Orini	· · · · · · · · · · · · · · · · · · ·	
12	A5-Z0670	1/2	CHAIN GUIDE 12/40 (4 STUD MODELS ONLY)	12/40
	A5-Z0671	2	CHAIN GUIDE 25/45 (4 STUD MODELS ONLY)	25/45
	A5-Z0672	2	CHAIN GUIDE 75 (4 STUD MODELS ONLY)	75
	2P-Z0584	1	TONGS (NOT SHOWN)	
13	A5-Z0667	1	ELEMENT MOUNT 12	12
	A5-Z0668	2	ELEMENT MOUNT 25/45	25, 45
	A5-Z0666	2	ELEMENT MOUNT 40	40
	A5-Z0669	2	ELEMENT MOUNT 75	75
14	A5-Y5482	1/2	TERMINAL BAR 7	12/40
	A5-Y4238	2	TERMINAL BAR 5	25, 45
	A5-Y4308	2	TERMINAL BAR 8	75
	2H-Y9229	4/8/	MICA WASHER (USED ON ELMT MNT &	12/25, 40, 45/
		12	TERM. BAR 7, 5 & 8)	75
	2I-Y9228	2/4/	INSULATOR-CERAMIC (USED ON ELMT MNT	12/25, 40, 45/
		6	TERM. BAR 7, 5 & 8)	75
17	A5-Y5484	1	DRIP TRAY	12
	A5-Y4248	1	DRIP TRAY	25
	A5-Y6769	1	DRIP TRAY	40
	A5-Y4249	1	DRIP TRAY	45
	A5-Y4250	1	DRIP TRAY	75
	A5-250032	1	DRIP TRAY ASSEMBLY	25SX, 25X
	A5-450030	1	DRIP TRAY ASSEMBLY	45SX, 45X
18	2I-Z0057	4/6	FOOT	12, 25, 45/40, 40S
19	2R-Y5092	4	FOOT (# 75000453 & UP)	75
19	Z1-115006	4	FOOT HOUSING (# 75000452 & BELOW)	75
20	2A-7612	4	FOOT	75
21	2A-9347	4	FOOT EXTENSION	75
22	2C-9348	4	STUD	75
23	E4-403009	1	LEAD IN CORD 120V	12, 25
	2E-Y9251	1	LEAD IN CORD 230CE	75 230CE
	C3-142023	1	LEAD IN CORD 120V	40, 45
	2E-Y9224	1	LEAD IN CORD 230CE	12, 25, 40, 45 230CE
	A1-175122	1	LEAD IN CORD 240V	75
24	2K-7889	1	BUSHING - CORD	12, 25
	2K-Y3240	1	BUSHING - CORD	40, 45, 75
	2C-Y4003	3	CABLE CLAMP	12, 25 2M-Z0060

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER

PAGE 2 OF 3

Some items are included for illustrative purposes only and in certain instances may not be available.



PARTS LIST EFFECTIVE 2/25/98 Rev. J

12, 25, 25SX, 25X, 40, 45, 45SX, 45X, 75

MODEL HOT DOG ROLLER GRILLS

Key Number	Part Number	Number Per Unit	Description	
25	A5-Y9497 A5-Y9498 A5-Y9499	1/2 2 2	WIRE GUIDE WIRE GUIDE WIRE GUIDE	12/40 230CE 25, 45 230CE 75 230CE
26	2E-Y9227 2E-Y9253	1 1	INLET INLET	12, 25, 40, 45 230CE 75 230CE
27	2C-Y9771	4	NUT, FOOT	75 230CE
28	2M-Z0022 2M-Z0056 2M-Z0060	1 1 1	LABEL-ROLLER GRILL LABEL-ROLLER GRILL LABEL-ROLLER GRILL	ALL MODELS 12 ALL MODELS 25,40 ALL MODELS 45,75
29	A5-Z0673 A5-Z0674 A5-Z0675	1/2 2 2 2	TUBE-RETAINER (4 STUD MODELS ONLY) TUBE-RETAINER (4 STUD MODELS ONLY) TUBE-RETAINER (4 STUD MODELS ONLY)	12/40 25/45 75

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER

PAGE 3 OF 3

Some items are included for illustrative purposes only and in certain instances may not be available.

