


Champion®

The Dishwashing Machine Specialists

*For machines beginning with
Serial no. D3694 and above*

Technical Manual

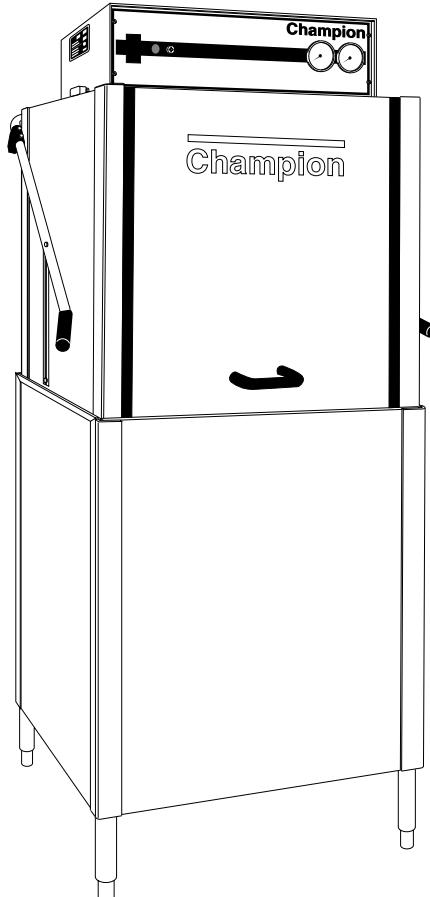

Door-Type
Dishwasher

Model

D-HBM5
High Temperature
with Built-in Booster

D-H1M5
High Temperature

D-LFM5
Low Temperature

Machine Serial No.

Manual P/N 113491 Rev. F

P.O. Box 4149
Winston-Salem, North Carolina 27115-4149
336/661-1556 Fax: 336/661-1660

2674 N. Service Road
Jordan Station, Ontario, Canada L0R 1S0
905/562-4195 Fax: 905/562-4618

Complete the information below so it will be available for quick reference.

Model Number _____ Serial Number _____

Voltage and Phase _____

Champion Parts Distributor _____ Phone _____

Champion Service Agency _____ Phone _____

Champion Industries Service: 1 (800) 858-4477 Champion Service Fax: 1 (336) 661-1660

In Canada:


Champion Service: 1 (800) 263-5798

Canada Service Fax: 1 (905) 562-4618

We strongly recommend that you fax your orders.

NOTE: When calling to order parts, be sure to have the model number, serial number, voltage, and phase of your machine.

**Machine Data Plate with
Model & Serial number
located on left side of
control cabinet.**

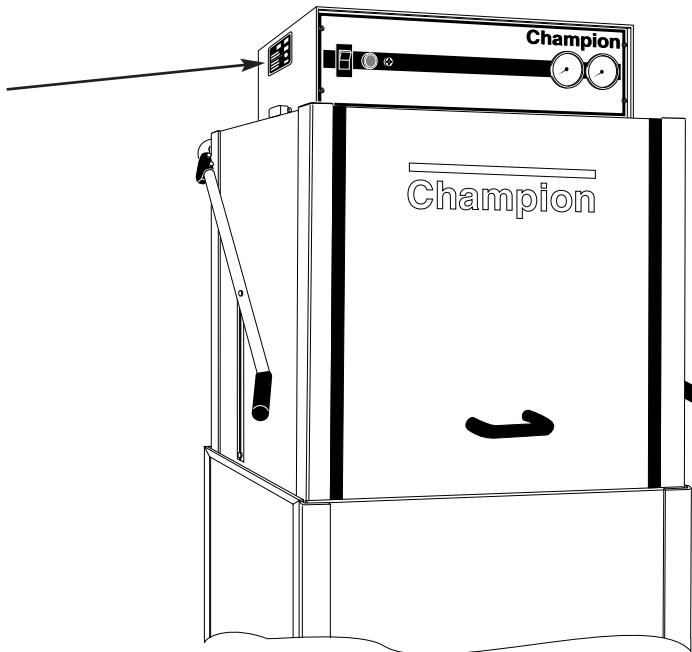

Revision History

Revision Date	Revised Pages	Serial Number Effectivity	Comments
6/01/02	All	D3694	Issue new manual with replacement parts lists
6/01/02	All	—	Issue new manual with replacement parts lists
10/18/02	3	D3858	Revised rated amps listing
10/18/02	11	D3858	Revised wash and final rinse times
10/18/02	36,37	D3858	Revised rinse arm bearings and assemblies numbers. Bearing 112164 replaced by 113514, 0707453 & 0708899 replaced by 414111.
10/18/02	37	D3858	Inserted new rinse arm assemblies 414110 (D-HB and D-H1) and 414111 (D-LF)
10/18/02	39	D3851	Inserted new water reflector P/N 327283
10/24/02	40	—	Inserted hi-limit into tank
10/24/02	47	D3700	Inserted new bushing P/N 100171
10/24/02	55	D3858	Inserted new timer board P/N 113547
12/18/02	55	D3858	Inserted new timer control board kit. P/N 900911 to convert all timer boards to 113597.
2/5/03	27	—	Replaced P/N 108391 with 113622
2/5/03	55	—	Replaced Furnace (Siemens) overloads with Telemecanique (Square D) overloads.
7/22/03	27	—	Replaced P/N 112090 with 113644 and 112086 with 113662.
7/22/03	43	D3982	Replaced P/N 110562 with 113604.
7/22/03	47, 51	—	Replaced plastic style vacuum breakers with bronze style.
2/3/04	44-45	D4237	Replaced drawings and parts numbers for separate pressure reducing valve 107550 and line strainer 110768.
3/5/04	68	—	Replaced schematic H with revision I.
3/5/04	55	D4410	Replaced door safety switch 112659 with new part number 113721.
3/11/04	65	—	Replaced schematic revision H with revision I.

Revision History *cont'd*

Revision Date	Revised Pages	Serial Number Effectivity	Comments
6/21/04	35	—	Inserted rinse support bracket part number 0309149.

CONTENTS

	Page
WARRANTY	vii
INTRODUCTION	1
GENERAL	2
Model Numbers	2
Standard Equipment	2
Options.....	2
Accessories	2
Electrical Power Requirements.....	3
INSTALLATION.....	4
Unpacking.....	4
Changing from Straight-through to Corner Operation.....	4
Electrical Connections.....	4
Plumbing Connections.....	5
Water Connections.....	6
Drain Connections	6
Chemical Connections.....	7
Model D-HB, D-H1 and D-LF.....	7
Detergent.....	7
Rinse Aid/Sanitizer.....	8
INITIAL START-UP	10
Model D-HB, D-H1 and D-LF	
OPERATION.....	11
Model D-HB, D-H1 and D-LF	
MAINTENANCE.....	12
Maintenance Schedule.....	12
CLEANING	12
Every 2 Hours or After Each Meal Period	
Model D-HB, D-H1 and D-LF	12
Every 8 Hours or at the End of the Day	
Model D-HB, D-H1 and D-LF	12
DELIMING	13
Deliming process	
Model D-HB, D-H1 and D-LF	13
OPERATION CHECKS.....	14
Daily	14
Weekly	14

CONTENTS

	Page
TROUBLESHOOTING	14
BASIC SERVICE	16
Electrical Service.....	16
Fuses	17
Motor Overloads	17
Solid State Control Board	18
Low Water Tank Heat Protection.....	20
Heater Element Wiring	21
Motor Connections.....	22
Mechanical Service	23
Pump Seal Replacement	23
REPLACEMENT PARTS LIST.....	25
ELECTRICAL SCHEMATICS	65

LIST OF FIGURES

Figure 1 — D-HB 3/4" NPT Water Supply Connection	5
Figure 2 — D-H1/ D-LF 3/4" NPT Water Supply Connection.....	5
Figure 3 — Chemical Connection Points	7
Figure 4 — Wash Tank Detergent Equipment Insertion Points	7
Figure 5 — Rinse Aid Injection Point (D-HB, D-H1 Only)	8
Figure 6 — Rinse Aid/Sanitizer Injection Points (D-LF)	9
Figure 7 — Operator Controls.....	10
Figure 8 — Door Activated Drain Lever Assembly.....	10
Figure 9 — Fuses.....	17
Figure 10 — Motor Overload.....	17
Figure 11 — Solid State Control Board	19
Figure 12 — Float Switch	20
Figure 13 — Float Switch Troubleshooting Chart.....	20
Figure 14 — Pump Motor Wiring Diagrams	22
Figure 15 — Pump Seal Replacement	23
Figure 16 — Doors, Panels and Gauges.....	26
Figure 17 — Door Guides, Stops, and Lift Bracket.....	28
Figure 18 — Door Handle and Spring Assembly	30
Figure 19A — Straight Track Assembly	32
Figure 19B — Corner Track Assembly	32
Figure 20 — Wash/Rinse Spray Piping	34
Figure 21 — Wash/Rinse Spray Arms	36
Figure 22 — Drain Assembly and Scrap Screens	38
Figure 23 — Wash Tank Heat, Thermostats, and Float Switch.....	40
Figure 24 — Electric Booster and Thermostat (D-HB Only)	42
Figure 25 — D-HB Lower Fill Piping Assembly.....	44

LIST OF FIGURES (cont'd)

	Page
Figure 26 — D-HB, D-H1 Upper Fill Piping Assembly	46
Figure 27 — D-H1, D-LF Lower Fill Piping Assebly.....	48
Figure 28 — D-LF Upper Fill Piping Assembly	50
Figure 29 — Pump Assembly	52
Figure 30 — Control Cabinet	54
Figure 31 — Dishracks and PRV	56

APPENDIXES

Appendix A — Drain/Timer Circuit	64
--	----

ELECTRIC SCHEMATICS

B701650/I — Wiring Diagram (D-HB, D-H1, D-LF Steam/Electric 1 & 3 Phase)	65
--	----

**THIS PAGE
INTENTIONALLY
LEFT BLANK**

LIMITED WARRANTY

Champion Industries Inc. (herein referred to as Champion), P.O. Box 4149, Winston-Salem, North Carolina 27115, and P.O. Box 301, 2674 North Service Road, Jordan Station, Ontario, Canada, L0R 1S0, warrants machines, and parts, as set out below.

Warranty of Machines: Champion warrants all new machines of its manufacture bearing the name "Champion" and installed within the United States and Canada to be free from defects in material and workmanship for a period of one (1) year after the date of installation or fifteen (15) months after the date of shipment by Champion, whichever occurs first. [See below for special provisions relating to glasswashers.] The warranty registration card must be returned to Champion within ten (10) days after installation. If warranty card is not returned to Champion within such period, the warranty will expire after one year from the date of shipment.

Champion will not assume any responsibility for extra costs for installation in any area where there are jurisdictional problems with local trades or unions.

If a defect in workmanship or material is found to exist within the warranty period, Champion, at its election, will either repair or replace the defective machine or accept return of the machine for full credit; provided, however, as to glasswashers, Champion's obligation with respect to labor associated with any repairs shall end (a) 120 days after shipment, or (b) 90 days after installation, whichever occurs first. In the event that Champion elects to repair, the labor and work to be performed in connection with the warranty shall be done during regular working hours by a Champion authorized service technician. Defective parts become the property of Champion. Use of replacement parts not authorized by Champion will relieve Champion of all further liability in connection with its warranty. In no event will Champion's warranty obligation exceed Champion's charge for the machine. The following are not covered by Champion's warranty:

- a. Lighting of gas pilots or burners.
- b. Cleaning of gas lines.
- c. Replacement of fuses or resetting of overload breakers.
- d. Adjustment of thermostats.
- e. Adjustment of clutches.
- f. Opening or closing of utility supply valves or switching of electrical supply current.
- g. Cleaning of valves, strainers, screens, nozzles, or spray pipes.
- h. Performance of regular maintenance and cleaning as outlined in operator's guide.
- i. Damages resulting from water conditions, accidents, alterations, improper use, abuse, tampering, improper installation, or failure to follow maintenance and operation procedures.
- j. Wear on Pulper cutter blocks, pulse vanes, and auger brush.

Examples of the defects not covered by warranty include, but are not limited to: (1) Damage to the exterior or interior finish as a result of the above. (2) Use with utility service other than that designated on the rating plate. (3) Improper connection to utility service. (4) Inadequate or excessive water pressure. (5) Corrosion from chemicals dispensed in excess of recommended concentrations. (6) Failure of electrical components due to connection of chemical dispensing equipment installed by others. (7) Leaks or damage resulting from such leaks caused by the installer, including those at machine table connections or by connection of chemical dispensing equipment installed by others. (8) Failure to comply with local building codes. (9) Damage caused by labor dispute.

Warranty of Parts: Champion warrants all new machine parts produced or authorized by Champion to be free from defects in material and workmanship for a period of 90 days from date of invoice. If any defect in material and workmanship is found to exist within the warranty period Champion will replace the defective part without charge.

DISCLAIMER OF WARRANTIES AND LIMITATIONS OF LIABILITY. CHAMPION'S WARRANTY IS ONLY TO THE EXTENT REFLECTED ABOVE. CHAMPION MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED, TO ANY WARRANTY OF MERCHANTABILITY, OR FITNESS OF PURPOSE. CHAMPION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. THE REMEDIES SET OUT ABOVE ARE THE EXCLUSIVE REMEDIES FOR ANY DEFECTS FOUND TO EXIST IN CHAMPION DISHWASHING MACHINES AND CHAMPION PARTS, AND ALL OTHER REMEDIES ARE EXCLUDED, INCLUDING ANY LIABILITY FOR INCIDENTALS OR CONSEQUENTIAL DAMAGES.

Champion does not authorize any other person, including persons who deal in Champion dishwashing machines to change this warranty or create any other obligation in connection with Champion Dishwashing Machines.

**THIS PAGE
INTENTIONALLY
LEFT BLANK**

INTRODUCTION

Welcome to **Champion** . . .

and thank you for allowing us to take care of your dishwashing needs.

This manual covers the door-type series dishwasher models D-H1, D-HB, and D-LF. Your machine was completely assembled, inspected, and thoroughly tested at our factory before it was shipped to your installation site.

This manual contains:

- Warranty Information
- Operation and Cleaning Instructions
- Maintenance Instructions
- Troubleshooting Guide
- Basic Service Information
- Replacement Parts Lists
- Electrical Schematics

Complete and return your warranty registration card within ten (10) days after the installation of your machine.

All information, illustrations and specifications contained in this manual are based upon the latest product information available at the time of publication. **Champion** constantly improves its products and reserves the right to make changes at any time or to change specifications or design without notice and without incurring obligation.

For your protection, factory authorized parts should always be used for repairs.

Replacement parts may be ordered from your **Champion** authorized parts distributor or from your **Champion** authorized service agency. When ordering parts, please supply the model number, serial number, voltage and phase of your machine, the part number, part description and quantity.

GENERAL

This manual covers the Champion door type dishwashing machine. These machines are fully automatic and come equipped with a 1-HP pump motor.

The D-series dishwasher is available in the following models:

Model Numbers

D-H1, D-HB, D-LF

The D-H1 model is a high temperature (180°F/82°C rinse) sanitizing model without booster.

The D-HB model is a high temperature (180°F/82°C rinse) sanitizing model with booster.

The D-LF is a low temperature (Min. 140°F/60°C) sanitizing model for use with a sodium hypochlorite (Chlorine) based sanitizer at a minimum concentration of 50PPM in the final rinse.

Standard Equipment includes:

D-H1, D-HB, D-LF

- Automatic tank fill
- Built-in electric (D-HB only) or steam booster heater (D-HB only)
- Drain Valve – Electric
- Specified as straight-through or corner model
- Electric tank heat
- Balanced two door lift system
- Low-water tank heat protection
- 1-Hp drip-proof pump motor
- Door safety switches
- Common utility connections
- Two dish racks (peg and flat bottom)
- Detergent/chemical connection provisions
- Stainless steel front and side panels
- Top-mounted, splash-proof control console
- 60-second time cycle
- 2" O.D. gravity drain connection
- Water pressure regulating valve (mounted) (D-HB only)
- Interchangeable upper and lower spray arms
- Stainless steel rinse arm with cleanout

Options (D-HB only)

- Electric booster (70°F/39°C temperature rise) heater for 110°F/43°C supply water
- Steam injector or steam coil tank heat (steam booster 40°F/23°C – 70°F/39°C rise)

Accessories

Additional dishracks:

Dish rack (peg)	P/N 101285
Silverware rack (flat bottom)	P/N 101273
3/4" Pressure reducing valve (PRV)	P/N 112387

Electrical Power Requirements for Electric Heat / Electric Booster

Model	Voltage	Booster Rise (D-HB Only)	Rated Amps	Minimum Supply Ckt. Conductor Ampacity	Maximum Overcurrent Protective Device
D-H1/LF	115/60/1	—	46 Amps	55 Amps	55 Amps
D-H1/LF	208/60/1	—	35 Amps	40 Amps	40 Amps
D-H1/LF	220/60/1	—	35 Amps	40 Amps	40 Amps
D-H1/LF	230/60/1	—	37 Amps	40 Amps	40 Amps
D-H1/LF	240/60/1	—	37 Amps	40 Amps	40 Amps
D-H1/LF	208/60/3	—	20 Amps	25 Amps	25 Amps
D-H1/LF	220/60/3	—	20 Amps	25 Amps	25 Amps
D-H1/LF	230/60/3	—	21 Amps	25 Amps	25 Amps
D-H1/LF	240/60/3	—	21 Amps	25 Amps	25 Amps
D-H1/LF	380/60/3	—	9 Amps	15 Amps	15 Amps
D-H1/LF	415/60/3	—	9 Amps	15 Amps	15 Amps
D-H1/LF	480/60/3	—	9 Amps	15 Amps	15 Amps
D-H1/LF	575/60/3	—	7 Amps	15 Amps	15 Amps
D-HB	115/60/1	—	—	—	—
D-HB	208/60/1	40°F/23°C	71 Amps	75 Amps	75 Amps
D-HB	220/60/1	40°F/23°C	71 Amps	75 Amps	75 Amps
D-HB	230/60/1	40°F/23°C	79 Amps	90 Amps	90 Amps
D-HB	240/60/1	40°F/23°C	79 Amps	90 Amps	90 Amps
D-HB	208/60/3	40°F/23°C	40 Amps	50 Amps	50 Amps
D-HB	220/60/3	40°F/23°C	40 Amps	50 Amps	50 Amps
D-HB	230/60/3	40°F/23°C	45 Amps	50 Amps	50 Amps
D-HB	240/60/3	40°F/23°C	45 Amps	50 Amps	50 Amps
D-HB	380/60/3	40°F/23°C	24 Amps	30 Amps	30 Amps
D-HB	415/60/3	40°F/23°C	25 Amps	30 Amps	30 Amps
D-HB	480/60/3	40°F/23°C	20 Amps	25 Amps	25 Amps
D-HB	575/60/3	40°F/23°C	18 Amps	20 Amps	20 Amps
D-HB	115/60/1	—	—	—	—
D-HB	208/60/1	—	—	—	—
D-HB	220/60/1	—	—	—	—
D-HB	230/60/1	—	—	—	—
D-HB	240/60/1	—	57 Amps	60 Amps	60 Amps
D-HB	220/60/3	70°F/39°C	57 Amps	60 Amps	60 Amps
D-HB	230/60/3	70°F/39°C	64 Amps	70 Amps	70 Amps
D-HB	240/60/3	70°F/39°C	64 Amps	70 Amps	70 Amps
D-HB	380/60/3	70°F/39°C	31 Amps	35 Amps	35 Amps
D-HB	415/60/3	70°F/39°C	34 Amps	40 Amps	40 Amps
D-HB	480/60/3	70°F/39°C	29 Amps	35 Amps	35 Amps
D-HB	575/60/3	70°F/39°C	25 Amps	30 Amps	30 Amps

Electrical Power Requirements for Steam or Gas Heat / Steam or Gas Booster

Model	Voltage	Booster Rise (D-HB Only)	Rated Amps	Minimum Supply Ckt. Conductor Ampacity	Maximum Overcurrent Protective Device
D-H1/LF	115/60/1	—	20 Amps	25 Amps	25 Amps
D-H1/LF	208/60/1	—	12 Amps	15 Amps	15 Amps
D-H1/LF	220/60/1	—	12 Amps	15 Amps	15 Amps
D-H1/LF	230/60/1	—	11 Amps	15 Amps	15 Amps
D-H1/LF	240/60/1	—	11 Amps	15 Amps	15 Amps
D-H1/LF	208/60/3	—	6 Amps	15 Amps	15 Amps
D-H1/LF	220/60/3	—	6 Amps	15 Amps	15 Amps
D-H1/LF	230/60/3	—	6 Amps	15 Amps	15 Amps
D-H1/LF	240/60/3	—	6 Amps	15 Amps	15 Amps
D-H1/LF	380/60/3	—	4 Amps	15 Amps	15 Amps
D-H1/LF	415/60/3	—	4 Amps	15 Amps	15 Amps
D-H1/LF	480/60/3	—	3 Amps	15 Amps	15 Amps
D-H1/LF	575/60/3	—	3 Amps	15 Amps	15 Amps
D-HB	115/60/1	—	—	—	—
D-HB	208/60/1	40°F/23°C	13 Amps	15 Amps	15 Amps
D-HB	220/60/1	40°F/23°C	13 Amps	15 Amps	15 Amps
D-HB	230/60/1	40°F/23°C	12 Amps	15 Amps	15 Amps
D-HB	240/60/1	40°F/23°C	12 Amps	15 Amps	15 Amps
D-HB	208/60/3	40°F/23°C	6 Amps	15 Amps	15 Amps
D-HB	220/60/3	40°F/23°C	6 Amps	15 Amps	15 Amps
D-HB	230/60/3	40°F/23°C	6 Amps	15 Amps	15 Amps
D-HB	240/60/3	40°F/23°C	6 Amps	15 Amps	15 Amps
D-HB	380/60/3	40°F/23°C	4 Amps	15 Amps	15 Amps
D-HB	415/60/3	40°F/23°C	4 Amps	15 Amps	15 Amps
D-HB	480/60/3	40°F/23°C	3 Amps	15 Amps	15 Amps
D-HB	575/60/3	40°F/23°C	3 Amps	15 Amps	15 Amps
D-HB	115/60/1	—	—	—	—
D-HB	208/60/1	—	—	—	—
D-HB	220/60/1	—	—	—	—
D-HB	230/60/1	—	—	—	—
D-HB	240/60/1	—	—	—	—
D-HB	208/60/3	70°F/39°C	6 Amps	15 Amps	15 Amps
D-HB	220/60/3	70°F/39°C	6 Amps	15 Amps	15 Amps
D-HB	230/60/3	70°F/39°C	6 Amps	15 Amps	15 Amps
D-HB	240/60/3	70°F/39°C	6 Amps	15 Amps	15 Amps
D-HB	380/60/3	70°F/39°C	4 Amps	15 Amps	15 Amps
D-HB	415/60/3	70°F/39°C	4 Amps	15 Amps	15 Amps
D-HB	480/60/3	70°F/39°C	3 Amps	15 Amps	15 Amps
D-HB	575/60/3	70°F/39°C	3 Amps	15 Amps	15 Amps

INSTALLATION

Unpacking

**CAUTION:**

Care should be taken when lifting the machine to prevent damage.

1. Immediately after unpacking the machine, inspect for any shipping damage. If damage is found, save the packing material and contact the carrier immediately.
2. Remove the dishwasher from the skid. Adjust the feet if required, then move the machine to its permanent location.
3. Level the machine (if required) by placing a level on the top of machine and adjusting the feet. Level the machine front-to-back and side-to-side.
4. Remove the two dishracks and pressure gauge from the interior of the machine. Install the pressure gauge in the upper fill piping of the dishwasher in the petcock provided.

**NOTE:**

The installation of your machine must meet local health codes.

Changing from Straight-through to Corner Operation

Your door-type dishwasher was specified to the factory as a straight-through configuration or corner configuration. Your machine can be converted from straight-through to corner or from corner to straight-through. Contact factory for instructions on changing the operation of your dishwasher.

Electrical Connections

**WARNING:**

Electrical and grounding connections must comply with the National Electrical Code and/or Local Electrical Codes.

**WARNING:**

When working on the dishwasher, disconnect the electric service and place a tag at the disconnect switch to indicate work is being done on that circuit.

1. A qualified electrician must compare the electrical power supply with the machine electrical specifications stamped on the MACHINE ELECTRICAL CONNECTION PLATE located inside the top mounted control cabinet before connecting to the incoming service at a fused disconnect switch.
2. Motor rotation was set at the factory. Check the rotation of the motor shaft (CW when viewed from rear of motor). For three phase machines, reversing the motor direction is done in the control cabinet by reversing the wires L1 and L2 on the disconnect side of

Electrical Connections (cont'd)

the main electrical connection block. For single phase machines, motor rotation is changed at the motor connection plate on the rear of the single phase motor.

3. A knock-out is provided at the rear of the top mounted control cabinet for the electrical service connection. A single source electrical connection has been provided. A fused disconnect switch or circuit breaker (supplied by others) is required to protect each power supply circuit.

Plumbing Connections



CAUTION:

Plumbing connections must comply with local sanitary and plumbing codes.

Water Connections

1. Connect the hot water supply using a 3/4" NPT connection. The connection point is located behind the lower front panel of the dishwasher. Supply enters from underneath the machine.

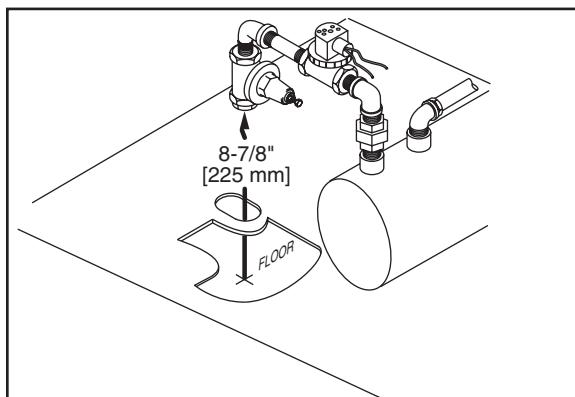


Figure 1
D-HB

3/4" NPT Water Supply Connection
Behind Front Panel

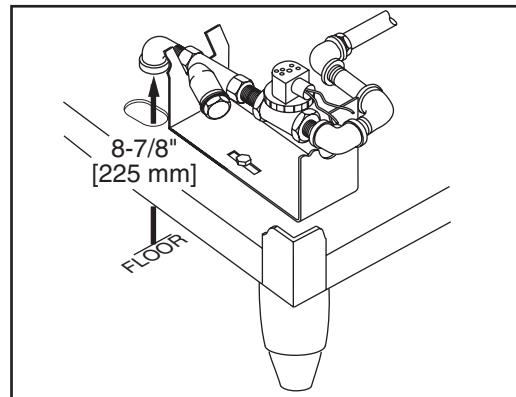


Figure 2
D-H1, D-LF

3/4" NPT Water Supply Connection
Behind Front Panel

2. Minimum incoming water supply temperature requirements are listed below:

D-HB with built-in 40°F/23°C rise electric booster (Minimum 140°F/60°C)
(Min./Max. flow pressure 20 – 22 psi/138 Kpa)

D-HB with built-in 70°F/39°C rise electric booster (Minimum 110°F/43°C)
(Min./Max. flow pressure 20 – 22 psi/138 Kpa)

D-H1 without built-in booster (Minimum 180°F/70°C)
(Min./Max. flow pressure 20 – 22 psi/138 Kpa)

D-LF (Minimum 140°F/60°C)
(Min./Max. flow pressure 20 – 22 psi/138 Kpa)

Water Connections (cont'd)

3. A manual shut-off valve for steam and water (supplied by others) should be installed in supply line to allow for servicing of the machine. The shut-off valve should be the same size or larger than the supply line.
4. A 3/4" Pressure Regulating Valve (PRV), should be installed on the incoming water supply line if water flow pressure exceeds 20 – 22 psi/138 Kpa.
A PRV is standard equipment on Model D-HB.
A PRV is not standard equipment on Models D-H1 and D-LF.
The PRV may be obtained locally or direct from Champion.

Drain Connections

1. Models D-HB, D-H1, and D-LF are GRAVITY DRAIN machines equipped with a 2" hose connection point.
 - Drain height for ALL MODELS must not exceed 8-7/8" [225 mm] above floor level.



WARNING:

Connection of the machine to a drain line higher than the machine drain height will prevent the machine from draining properly.

Ventilation



NOTE:

Ventilation must comply with local sanitary and plumbing codes.



CAUTION:

Exhaust air should not be vented into a wall, ceiling, or concealed space of a building. Condensation can cause damage.

Chemical Connections



NOTE:

Consult a qualified chemical supplier for your chemical needs.

Models D-HB, D-H1 and D-LF

Refer to Figure 3.

1. Labeled chemical signal connection points are provided inside the control cabinet for chemical dispensing equipment (supplied by others).

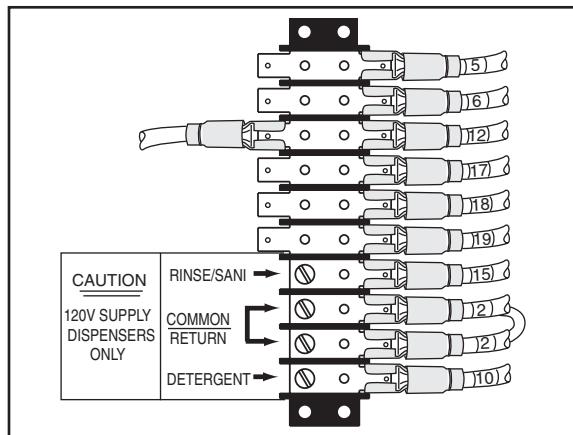


Figure 3
D-HB, D-H1, D-LF
Chemical Connection Points
Left Side Interior of Control Cabinet

Signal connection points include:

- Detergent signal 120VAC between Wire #10 and Wire #2
(1 AMP MAX AMP LOAD)
- Rinse Aid/Sanitizer signal 120VAC between Wire #15 and Wire #2
(1 AMP MAX AMP LOAD)

Detergent

Refer to Figure 4.

1. Two removable black plugs, located on the rear and left side of the wash tank are provided as detergent equipment insertion points.

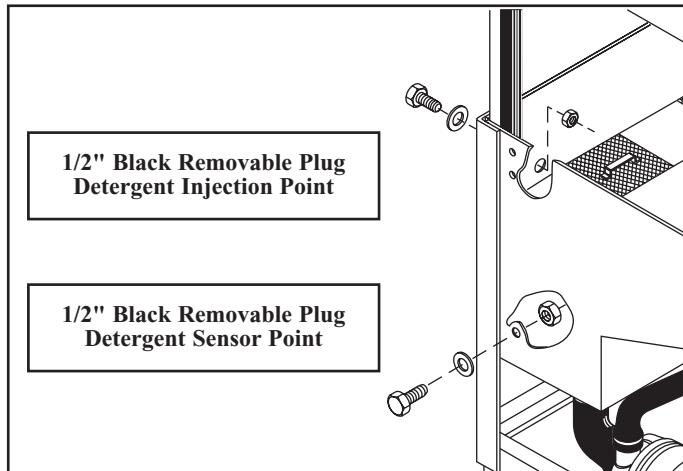


Figure 4
D-HB, D-H1, D-LF
Wash Tank Detergent Equipment
Insertion Points

Chemical Connections (cont'd)

Detergent (cont'd)

2. Detergent may be added manually if dishwasher is not equipped with dispensing equipment. Consult your chemical supplier for recommended amounts.

Rinse Aid/Sanitizer

Model D-HB and D-H1

Refer to Figure 5.

1. A rinse aid injection point is provided via a 1/4" NPT plug located in the final rinse piping. The plug is located in a cross fitting on the outlet side of the vacuum breaker. The vacuum breaker is located behind the control cabinet at the top of the machine.
2. Use a liquid rinse aid.

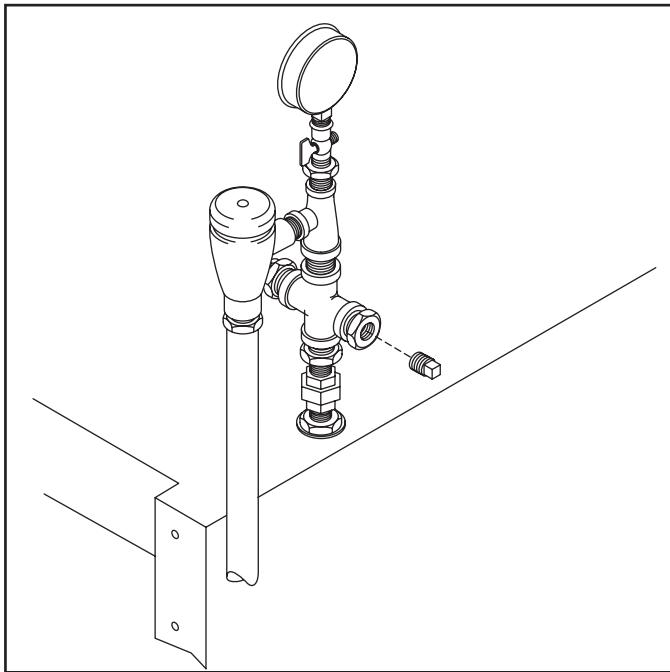


Figure 5
Rinse Aid Injection Point
D-HB, D-H1 Only



NOTE:
Models D-HB and D-H1 do not require sanitizer.

Chemical Connections (cont'd)

Rinse Aid/Sanitizer (cont'd)

Model D-LF

Refer to Figure 6.

1. A rinse aid injection point is provided via a 1/4" NPT plug located in the final rinse piping. The plug is located in a cross fitting on the outlet side of the vacuum breaker. The vacuum breaker is located behind the control cabinet at the top of the machine.
2. Use a liquid rinse aid.
3. A sanitizer injection point is provided via a 1/8" NPT plug located in the final rinse piping. The plug is located in a cross fitting on the outlet side of the vacuum breaker. The vacuum breaker is located behind the control cabinet at the top of the machine.
4. Use a sodium hypochlorite (Chlorine) based sanitizer at a minimum concentration of 50PPM in the final rinse. Use chlorine test papers to verify and monitor the 50PPM chlorine level.

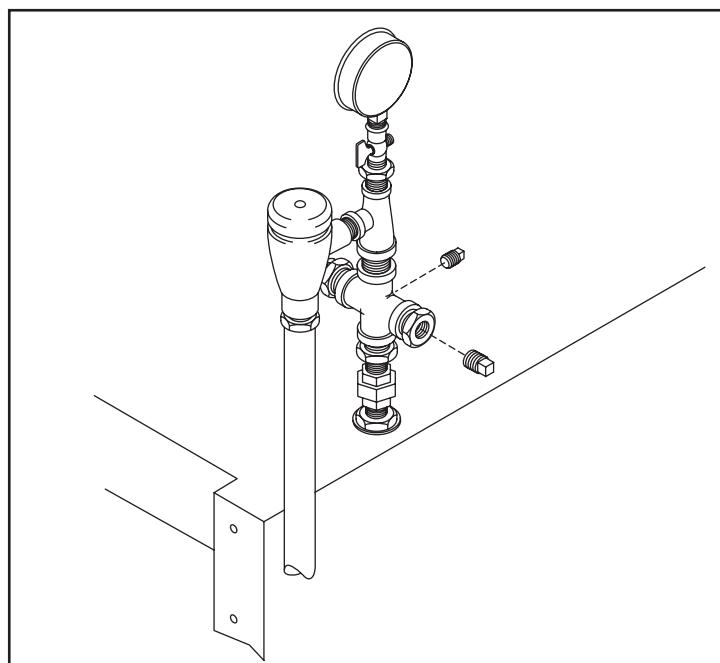


Figure 6
D-LF
Rinse Aid/Sanitizer Injection Points



WARNING:

Never premix rinse aid with the sanitizing agent. Mixing may cause hazardous gases to form.



CAUTION:

Some metal, including silver, aluminum, and pewter are attacked by sodium hypochlorite (chlorine sanitizer). Avoid cleaning these metals in a D-LF dishwasher.

INITIAL START-UP

After plumbing and electrical connections are completed, follow the steps below to place your machine in service.

Model D-HB, D-H1 and D-LF

Refer to Figures 7 and 8 below.

1. Remove any foreign material from inside the machine. Make sure scrap screens are in place.
2. Make sure wash and rinse arms are installed correctly.
3. Close the Door.
4. Turn the water and main power sources to the dishwasher ON.
5. Flip the Power switch to the ON position. The “power on” light will illuminate and the machine will automatically fill with water.
6. Check the machine for leaks.
7. Push the Green Start Button to check automatic cycle.
8. Check pump motor rotation. Rotation is CW when viewed from rear of motor.
9. If machine checks okay, flip the power switch to OFF and machine will drain for ten minutes.

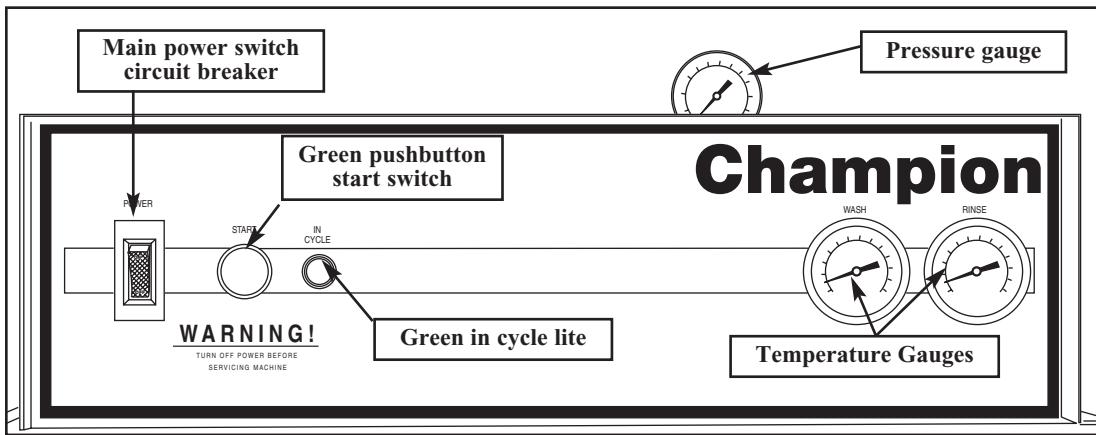


Figure 7
Operator Controls
Top Mounted Control Cabinet

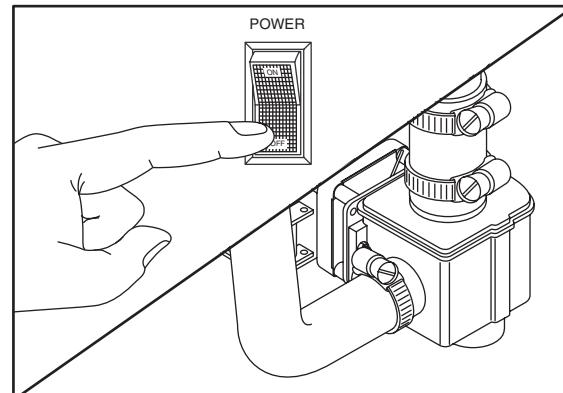


Figure 8
Drain Assembly

OPERATION

Model D-HB, D-H1 and D-LF

1. Close the door and flip power switch ON
Power light illuminates. Drain valve closes.
Tank fills automatically and tank heat comes on.
2. Monitor wash tank temperature gauge
Wait for temperature reading to reach
Min. 150°F/66°C (D-HB, D-H1 Only)
Temperature reading must be
Min. 120°F-140°F/49°C-60°C Optimum (For D-LF Only)
3. Prescrap and load ware into rack
Place dishes edgewise in peg rack, cups and bowls upside down in flat rack, and silverware spread evenly in single layer in flat rack.
4. Open door, insert rack
5. Close door, Push Green start button
Green cycle light will illuminate. Automatic cycle begins.
6. During Final Rinse monitor pressure
Machine washes for 40 sec., then pauses for 1 sec.
7. 60-second cycle complete
Machine final rinses for 10 sec. Pressure gauge and final rinse temperature gauge reading must read between 20 – 22 PSI.
Temperature gauge must read
180 – 195°F/82 – 91°C (D-HB, D-H1 Only)
Min. 120° – 140°F/49°C – 60°C Optimum (D-LF Only)
8. Open door, remove clean rack
Green cycle light goes out.
9. After each meal period or every two hours operation
Insert another rack of soiled ware.



NOTE:

*Opening the door at any time during the cycle will stop the machine.
Closing the door and pushing the Green start button will resume the cycle where it left off.*

MAINTENANCE

Cleaning your machine is the best maintenance that you can provide. Components that are not regularly flushed and cleaned do not perform well.

The Maintenance intervals shown in the following schedules are the minimum requirements necessary for the proper performance of your machine. Maintenance intervals should be shortened whenever your machine is faced with abnormal working conditions, hard water, or multiple shift operations.

Maintenance Schedule

CLEANING

• Every 2 Hours or After Each Meal Period

Model D-HB, D-H1, and D-LF

1. Flip the power switch OFF.
2. Machine drain valve will open for 10 minutes automatically.
3. Flush tank interior with fresh water.
4. Remove and clean the scrap screens. Clean the pump intake screen.
5. Inspect the spray arm nozzles and rinse nozzles. Clean if necessary.
6. Close door, flip power switch ON to refill machine.

• Every 8 Hours or at the End of the Day

Model D-HB, D-H1, and D-LF

1. Flip the power switch OFF.
2. Machine drain valve will open for 10 minutes automatically.
3. Flush tank interior with fresh water.
4. Remove and clean the scrap screens. Clean the pump intake screen.
5. Remove the spray arms.
6. Clean and inspect the spray arm bearings.
7. Flush the wash arm and rinse arm assemblies and nozzles.
8. Back flush the scrap screens and pump intake strainer.
9. Flip power switch ON then OFF to open drain valve for 10 minutes.
10. Reassemble the machine. Leave the door open to aid overnight drying.



CAUTION:

DO NOT LEAVE WATER IN WASH TANK OVERNIGHT

DELIMING

Your dishwasher should be delimed regularly depending on the mineral content of your water. Inspect the machine interior for mineral deposits and use a deliming solution for the best cleaning results.



NOTE:

Consult your chemical supplier for an appropriate deliming solution.



WARNING:

Deliming solutions or other acids must not come in contact with household bleach (sodium hypochlorite) or any chemicals containing chlorine, iodine, bromine, or fluorine. Mixing will cause hazardous gases to form.

Skin contact with deliming solutions can cause severe irritation and possible chemical burns. Consult your chemical supplier for specific safety precautions.

DELIMING PROCESS

Model D-HB, D-H1, and D-LF

1. Remove all dishes from machine.
2. Remove any chemical pick-up tubes from their containers.
3. Place each tube in a container of fresh water and prime the chemical lines for several minutes to thoroughly flush chemical from the lines. Leave pick-up tubes out of their containers.
4. Turn power switch to OFF position to drain machine for ten minutes, return power switch to ON position to refill with fresh water.
5. Spray interior walls with deliming solution and let sit for 5 or 10 minutes depending on amount of build-up. Add deliming solution to wash tank. Do not let chemicals sit for longer than 15 minutes.
6. Push the Green start button and run an automatic cycle.
7. Repeat Steps 3-4 if necessary.
8. Repeat Step 4.
9. Refill the machine and run a complete cycle two additional times. Drain and refill the machine after each cycle to thoroughly flush any deliming solution from the interior of the machine.
10. Flip the power switch to OFF.
11. Machine drain valve will open for 10 minutes to drain machine completely.
12. Deliming is complete.

OPERATION CHECKS

• Daily

1. Check temperature gauges for proper readings.
2. Check pressure gauge for proper reading (D-H1, D-HB ONLY).
3. Check for leaks.
4. Check chemical supplies and refill as necessary.

• Weekly

1. Inspect all water lines for leaks.
2. Clean all detergent residue from the exterior of the machine.
3. Check the drains for leaks.
4. Clean accumulated mineral deposits from the tank heating elements
5. Check that float switch moves freely.

TROUBLESHOOTING

Before determining any specific cause of a breakdown or abnormal operation on your dishwasher, check that:

Checklist

1. Main power and water supply are turned on to the machine
2. All switches are ON
3. Wash pipe and rinse nozzles are clean
4. Scrap screen(s) are properly positioned
5. Spray pipes are in their proper positions
6. Doors are fully closed
7. Thermostat(s) are at their correct setting
8. Sanitizer, detergent, and rinse additive dispensers are adequately filled.
9. Drain valve/timer problems see Appendix D for trouble shooting.

If a problem still exists, use the following for troubleshooting.

CONDITION	CAUSE	SOLUTION
Machine will not start	Door not closed Door safety switch faulty Start switch faulty Main switch OFF Overload protector tripped	Make sure doors are fully closed Contact your service agency Contact your service agency Check disconnect Reset overload in control box
Low or no water	Main water supply is turned off Faulty drain valve Machine doors not fully closed Faulty fill valve Defective circuit board Stuck or defective float Clogged "Y" strainer	Turn on house water supply Contact your service agency Close doors securely Contact your service agency Contact your service agency Check floats and clean Clean or replace
Continuous water filling	Stuck or defective float Drain valve will not close Fill valve will not close Defective circuit board	Check floats and clean Replace drain valve/Contact your service agency Clean or replace Contact your service agency
Any motor not running	Overload protector tripped Defective motor	Reset overload in control box Contact your service agency
Wash tank water temperature is low when in use	Incoming water temperature at machine too low Defective thermometer Defective thermostat Lime scale buildup on heating elements Defective heater element Low steam pressure Defective steam trap Defective solenoid valve	Raise temperature to: 140°F/60°C for D-HB and D-LF, 180°F/82°C for D-H1 Check or replace Check for proper setting or replace Delime element Check or replace Check steam supply pressure (15 – 30 psi) Check or replace Check or replace
Insufficient pumped spray pressure	Clogged pump intake screen Clogged spray pipe Scrap screen full Low water level in tank Pump motor rotation incorrect Defective pump seal	Clean Clean Must be kept clean and in place Check drain Reverse connection between L1 and L2 in Control Cabinet (3PH machines only) Contact Service Agent
Insufficient final rinse or no final rinse	Faulty pressure reducing valve Improper setting on pressure reducing valve Clogged rinse nozzle and/or pipe Improper water line size Clogged "Y" strainer	Clean or replace Set psi flow pressure at 20 – 22 psi/138 Kpa Clean Have installer change to proper size (3/4" min.) Clean or replace
Low final rinse temperature	Low incoming water temperature ... Improper setting of booster thermostat Defective booster thermostat Defective thermometer	Check house supply water temperature Be sure booster thermostat is set to maintain 180°F/82°C temperature Replace thermostat Check for proper setting or replace
Poor washing results	Detergent dispenser not operating properly Insufficient detergents Wash water temperature too low Wash arm clogged Improperly scraped dishes Ware being improperly placed in rack Improperly cleaned equipment Electric Elements or steam coils has soil/lime buildup	Contact detergent supplier Contact detergent supplier See condition "Wash tank water temperature" above. Clean Check scraping procedures Use proper racks. Do not overload racks Unclog wash sprays and rinse nozzles to maintain proper pressure and flow conditions. Keep wash water as clean as possible.
Poor drying results	Insufficient rinse-aid Low final rinse temp	Contact chemical supplier See condition "Low final rinse temperature" above.

BASIC SERVICE

This Basic Service section does not cover all possible repair procedures. If you require additional service support, you may call your local service company or:

Champion National Service
1-800-858-4477

In Canada
1-800-263-5798

Please have the Model and Serial Number of the machine ready when you call.

ELECTRICAL SERVICE



WARNING:

Disconnect Power at main disconnect switch before removing lower panels. Removing lower panels exposes live open electrical wiring (not contained in conduit).

Always replace panels after completing service or repairs. Do not operate the dishwasher with panels removed for anything other than service repair operation.



NOTE:

DO NOT USE CHASSIS GROUND WHEN PERFORMING VOLTAGE CHECKS.

Doing so will result in false and inaccurate readings.

PERFORM VOLTAGE CHECKS BY READING FROM THE HOT SIDE OF THE LINE AND NEUTRAL (any #2 or white wire).



WARNING:

USE EXTREME CAUTION when performing tests on energized circuits.



WARNING:

When repairing a circuit, disconnect the power at the main service disconnect switch and place a tag at the disconnect switch to indicate that work is being performed on the circuit.

Troubleshooting

Schematics

Champion places an electrical schematic in the control cabinet of every machine before it is shipped. Schematics are included at the back of this manual as well. Be aware that these schematics include options that may not apply to your machine. Options are enclosed in dashed lines with the words (IF USED) next to them on the schematic. Disregard any options that appear on the schematics which are not a part of your machine.

Fuses

Refer to Figure 9.

There are two fuse blocks, located in the center of the main control cabinet. The (A) fuses protect the main control transformer. The (B) fuses protect the wash tank heater circuit. Fuses are marked FU on the electrical schematic. Booster heater circuits (D-HB only) are not fused.

To Replace a fuse:

Turn the dishwasher main power switch off. Disconnect power to the machine at the main service disconnect switch.

Replace the fuse. If the fuse blows again, DO NOT INCREASE THE FUSE SIZE.
DETERMINE THE CAUSE OF THE OVERLOAD.

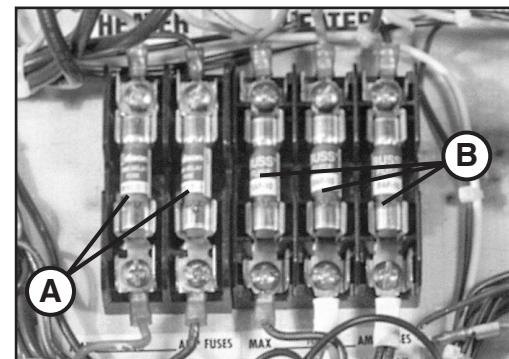


Figure 9
Fuses
(Three phase shown)

Motor Overloads

The wash pump motor has an overload to protect it from line voltage electrical overloads. The overload disconnects 120VAC power to the motor contactor coil.

Refer to Figure 10.

Note the Switch Lever on the Overload.

If the switch lever is off with the "0" showing then the overload has tripped.

To Reset the Motor Overload:

Flip the overload switch to the On position. A "1" should be visible on the switch lever.

To Replace a Motor Overload:

Disconnect the wires to the overload. Release the mounting catch on the front side of the overload. Push forward and lift out. Snap the new overload into place and reconnect the wires.

To adjust the overload setting:

The screwdriver in Figure 10 is positioned to adjust the motor overload AMP setting. Read the full load amps (FLA) motor amps on the motor nameplate. Turn setting to match nameplate.

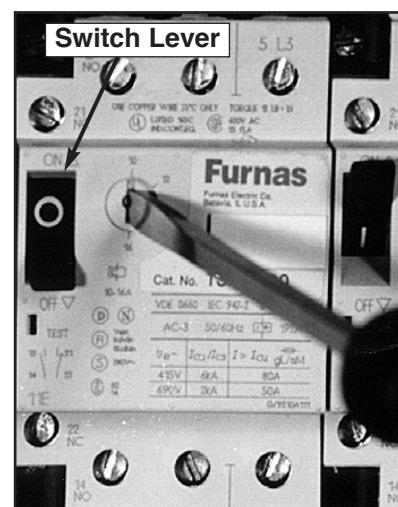


Figure 10
Motor Overload

Solid State D-HB, D-H1, and D-LF

Operating Instructions

Automatic Operation

1. Check that drain is closed and screens are in place.
2. Turn on main power to the machine.
3. Flip machine control panel power switch to ON.
4. Close doors.*
*Machine pauses 4 seconds to check water level.
5. Machine fills for 110 seconds if float is down.

ELECTRICAL SERVICE (cont'd)

6. Run machine through several cycles or wait 10 minutes for temperature to stabilize.
7. Open door, insert rack of dishes.
8. Close doors. Push the GREEN push button to start cycle.
9. Machine cycle is:
WASH = 40 seconds DWELL = 1 second RINSE = 10 seconds
10. Open door, remove clean rack of dishes.
11. Repeat for additional racks.

Troubleshooting Timer Circuit Board

1.1 Introduction

The following procedures are for determining whether or not the timer circuit board itself is faulty.

In this part —

- Checking the general condition of the circuit board.
- Testing inputs.
- Testing outputs.

Special Tools —

- A voltmeter capable of reading DC and AC volts.

1.2 Checking General Condition

Before testing the inputs and outputs, you should first check that the board is receiving power.

Turn on the power switch to the unit (do not start the unit, just turn ON power to the unit). If red "POWER" LED on board is illuminated, go directly to "1.3 Testing Board Inputs." When LED is not illuminated, then check that the following conditions are true:

Power Terminals

- Verify that the board is receiving power of 120 VAC at the terminals:
 - T2, marked "H" (AC Hot).
 - T1, marked "N" (AC Neutral).

If either of these terminals is not receiving 120 VAC, then there is a problem elsewhere with the unit not receiving power.

The Fuse (F1)

- Verify that the circuit board fuse (F1) is good.
If not replace it.

Red "POWER" LED

- Verify that the red "POWER" LED is illuminated.
If it is not, and the previous two conditions are true, then the board is bad and should be replaced.


1.3 Testing Board Inputs

After you have verified that the circuit board is receiving power (as explained above), then test the board inputs. There are 4 board inputs:

- | | |
|----------------|--|
| • Start Switch | • Door Safety Switch |
| • Float Switch | • Extended Wash (not used on this Model) |

Perform the following steps to test a board input:

1. Set the voltmeter to measure **DC volts**.

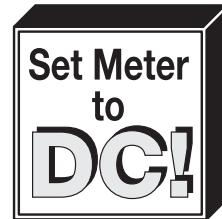

2. Place the NEGATIVE (Black) test probe on the "HOT" terminal:
 - T2, marked "H".
3. Place the POSITIVE (Red) test probe on the input terminal to be tested:
 - T7, marked "START SW" (for the Start Switch).
 - T8, marked "DOOR SW" (for the Door Safety Switch).
 - T9, marked "FLOAT SW" (for the Float Switch).
4. Check the results on the voltmeter:
 - *If switch is opened* – the meter should read between 4.7 to 5.3 DC volts.
 - *If switch is closed* – the meter should read between 0 to 1 DC volts.

1.4 Testing Board Outputs

After you have verified that the circuit board is receiving power (as explained above), then test the board outputs. There are 4 board outputs:

- Wash Cycle
- Heaters
- Rinse Cycle
- In-Cycle Lamp

Perform the following steps to test a board output:

1. Set the voltmeter to measure **AC volts**.
2. Place the NEGATIVE (Black) test probe on the "NEUTRAL" terminal:
 - T1, marked "N".
3. Place the POSITIVE (Red) test probe on the output terminal to be tested:
 - T3, marked "WASH OUTPUT" (for the Wash Cycle).
 - T4, marked "RINSE OUTPUT" (for the Rinse Cycle).
 - T5, marked "HEATERS OUTPUT" (for the Water Heater).
 - T6, marked "LAMP OUTPUT" (for the In-Cycle Lamp indicator).
4. Check the results on the voltmeter for the terminal you are testing:
 - **For T3** – the meter should read 120 VAC whenever the unit is in cycle and the "WASH" LED is illuminated on the circuit board.
 - **For T4** – the meter should read 120 VAC whenever the unit is in a fill or rinse mode and the corresponding "FILL" or "RINSE" LED is illuminated on the circuit board.
 - **For T5** – the meter should read 120 VAC whenever the power switch is on and the wash tank is full (i.e., the float switch is up).
 - **For T6** – the meter should read 120 VAC whenever the machine is in cycle.

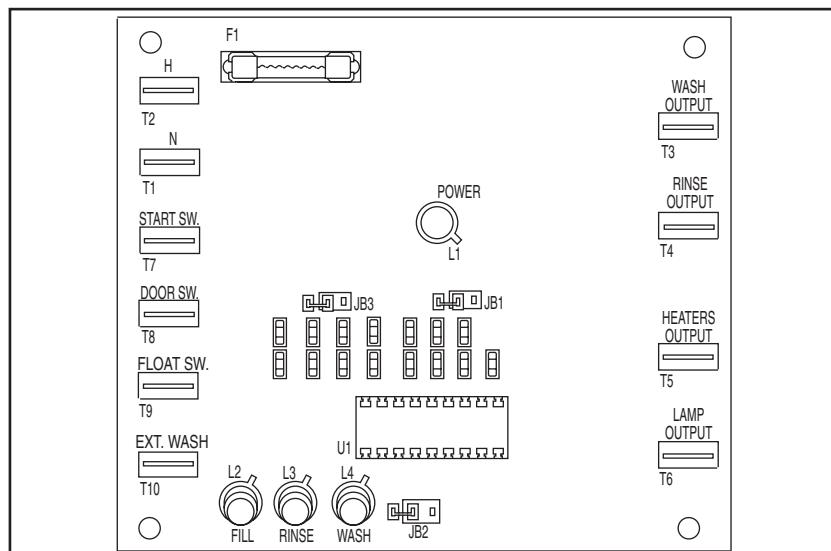


Figure 11
Solid State Control Board (112676 Shown)

Models D-HB, D-H1, and D-LF use a float switch and circuit board to control tank fill and tank heat.

For Model D-HB only, the built-in booster heat circuit is also controlled by the float switch.

Operation:

1. When dishwasher main power switch is turned on (wash tank empty), the drain valve closes allowing cycle time to run for a minimum of 110 seconds to fill the tank.
2. The float switch ball rises; its normally open contacts close. The fill circuit times out; the fill solenoid de-energizes, and the tank heat and booster heat energize.
3. If water level drops below the float level, the float switch ball moves down; heat de-energizes. The fill solenoid energizes and the fill cycle runs for a minimum of 110 seconds to refill the tank.
4. If the tank is not full of water at the end of the 110-second fill cycle , then the machine will cycle again. When the float switch is satisfied, the fill cycle stops after completing its 110-second cycle.
5. Refer to the float switch troubleshooting chart (Fig.13) below, for a quick guide to evaluating float switch problems.



Figure 12
Float Switch


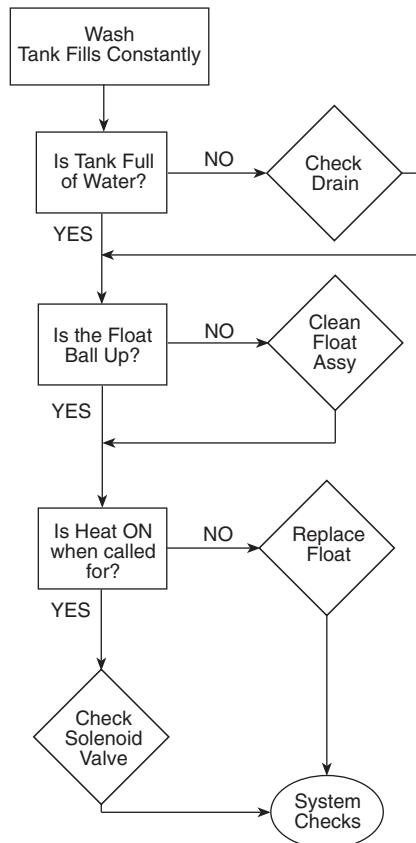


Figure 13
Float Switch
Troubleshooting Chart

Heater Element Wiring – Booster Tank and Wash Tank Heater Elements

Refer to the illustrations and follow the steps below to properly install terminal jumpers and to make line power connections to a replacement element.

- Step 1.** Hold the element assembly with the calrod coils facing toward you.
- Step 2.** Match your element coil to Configuration A, B, C, or D.
- Step 3.** Rotate your element coils to match the correct configuration.
- Step 4.** Turn the element over and match your element to the correct terminal configuration.
- Step 5.** Install terminal jumpers according to the illustration for your voltage requirement.
- Step 6.** Install the element and make your line connections 1L1, 1L2, or 1L3 per the illustration.

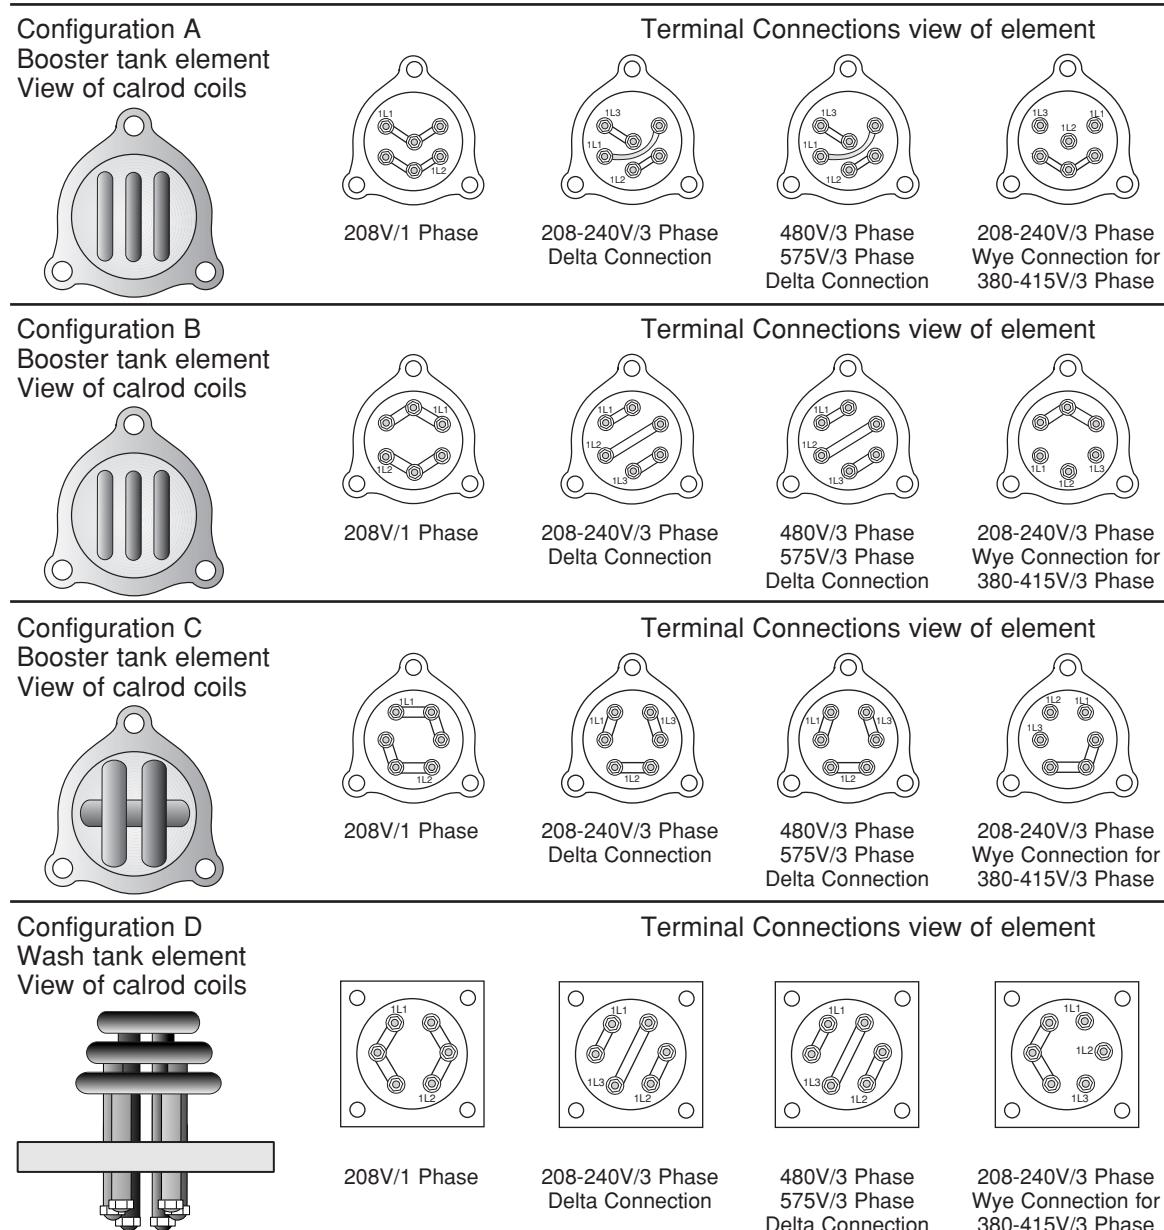


Motor Connections

1. Models D-HB, D-H1, and D-LF are available in either single phase or 3 phase voltages.
2. Motor rotation was set at the factory. For three phase machines, reversing the motor direction is done in the control cabinet by reversing the wires L1 and L2 on the disconnect side of the main electrical connection block. For single phase machines, motor rotation is changed at the motor connection plate on the rear of the single phase motor (if necessary).

Refer to Figure 14 for the proper wiring of the pump motor for single and three phase voltages.

Single Phase - Low Voltage

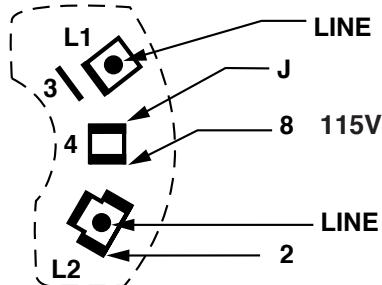

Single Phase - High Voltage



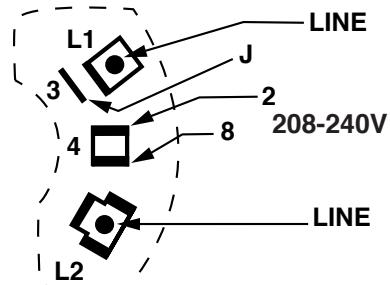


Figure 14
Pump Motor Wiring Diagrams


208-240V Three Phase - Low Voltage

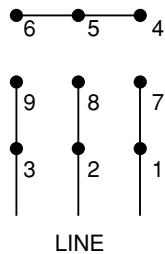

480V Three Phase - High Voltage

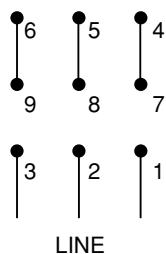

575V Only Three Phase



MECHANICAL SERVICE

Pump Seal Replacement

1. Disconnect the power to the machine at the main breaker panel or fuse box.
2. Drain the machine.
3. Remove the front and side panels.
4. Remove drain plug on the pump volute and drain the pump.
5. Remove the pump hoses.
6. Disconnect the wires to the motor at the motor junction box.
7. Unbolt motor from machine base and remove the pump/motor assembly.
8. Remove bolts on volute and carefully remove from the pump flange.
9. Lock the motor shaft with a wrench or pliers. The back of motor shaft is square.
10. Turn the impeller counter-clockwise to remove from shaft (right hand threads).
11. Remove the old seal and discard.
12. Check seal seat in the pump flange and clean thoroughly.
13. Press rubber seal/ceramic portion of seal assembly into the pump flange. Use a water soluble lubricant. Be careful to keep the ceramic clean.
14. Install the rotating part of the seal on the shaft with the graphite surface toward the ceramic. Use a water soluble lubricant on the rubber seal part only (not the graphite).
15. Reinstall impeller and new flange gasket. Reinstall bolts.
16. Reinstall the pump/motor assembly and reconnect the pump hoses.
17. Fill the dishwasher with water.
18. Check motor rotation by bump starting motor. Correct motor shaft rotation is clockwise when viewing motor from the rear.
19. Test run and check for leaks.


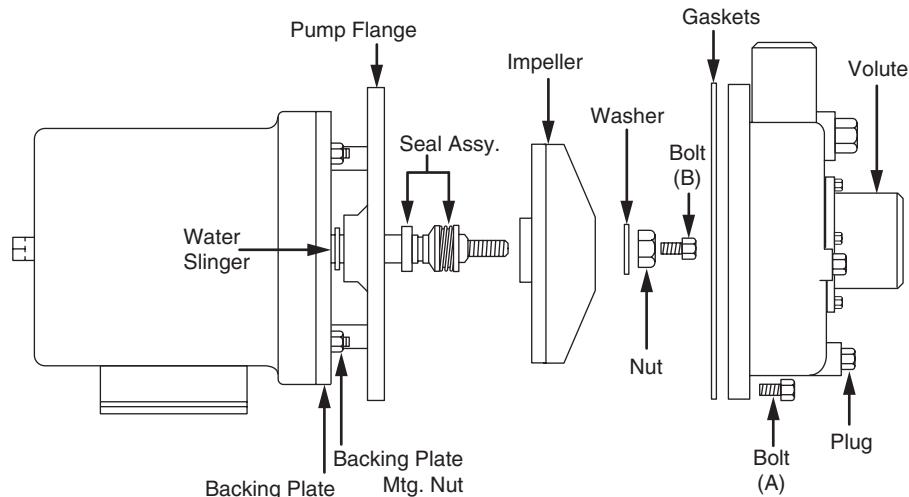


Figure 15
Pump Seal Replacement

**THIS PAGE
INTENTIONALLY
LEFT BLANK**

REPLACEMENT PARTS

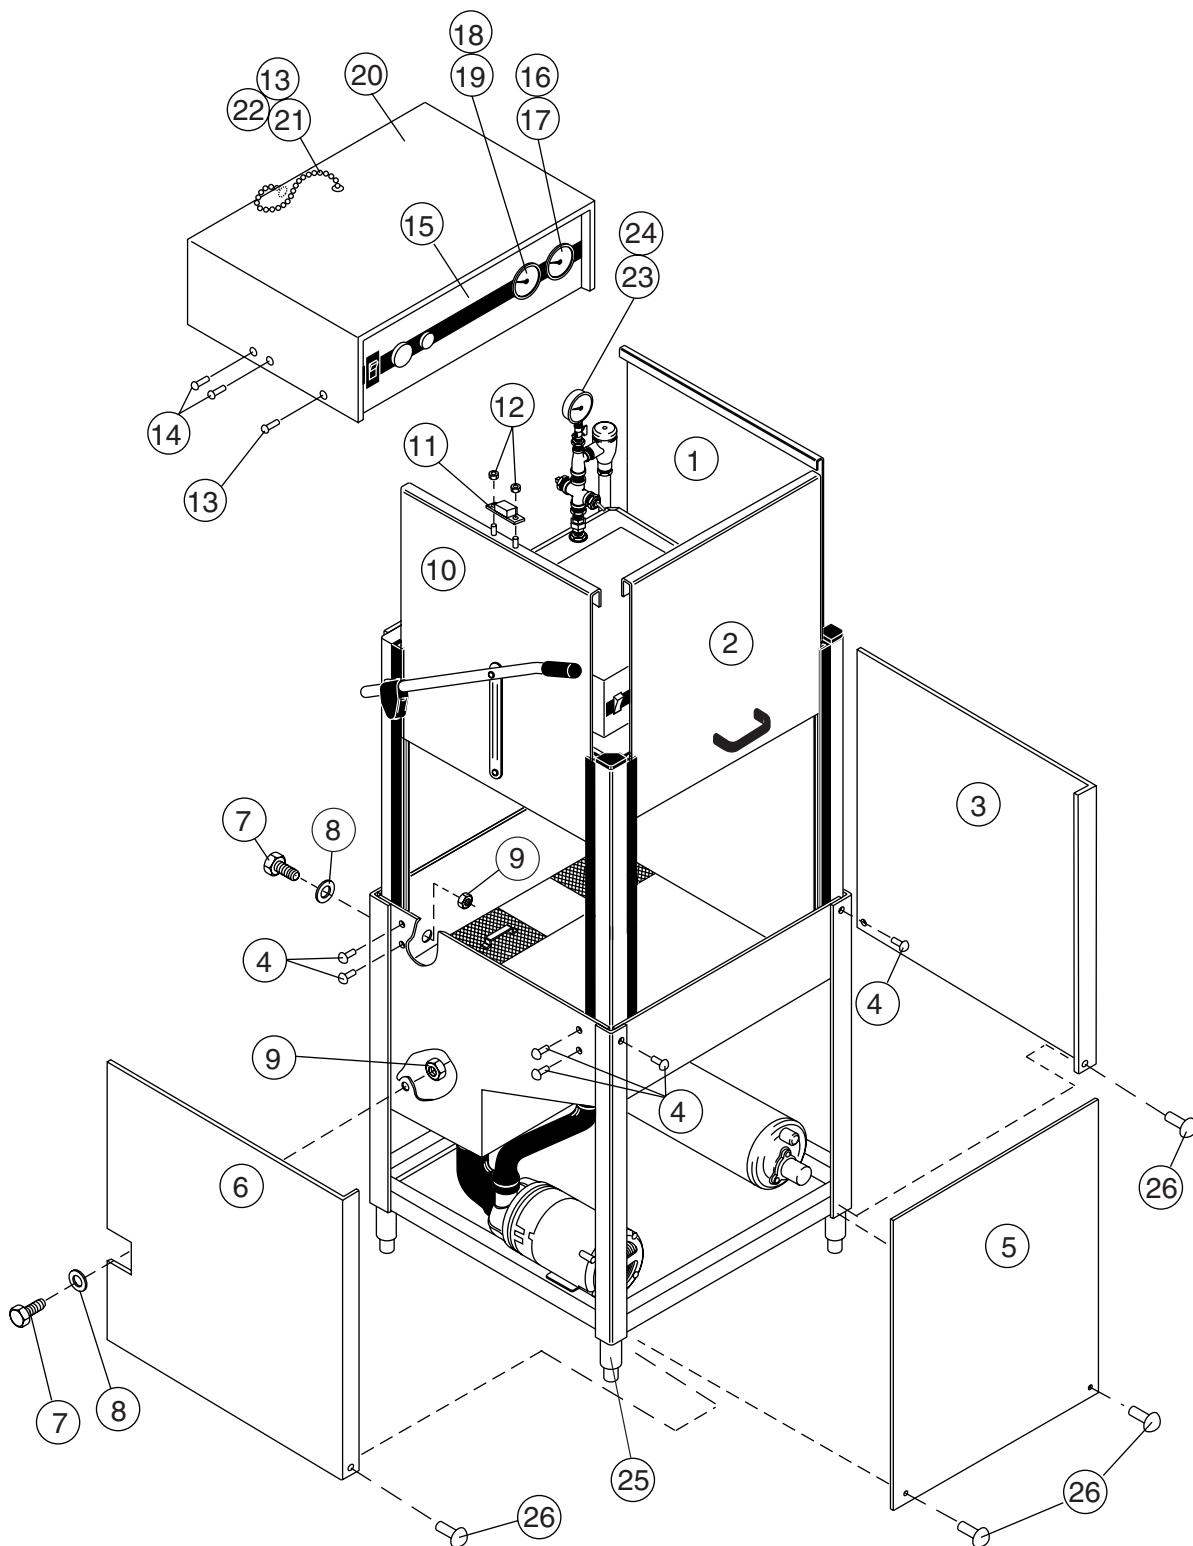

**Figure 16 – D-HB/D-H1/D-LF
Doors, Panels and Gauges**

D-HB/D-H1/D-LF
DOORS, PANELS AND GAUGES

Fig. 16 Item No.	Part No.	Part Description	Qty.
1	325405	Side Door, Right.....	1
1	325407	Side Door, Right (Corner Machine).....	1
2	327127	Front Door	1
3	321929	RH Panel, No Cut Out	1
4	100779	Screw 1/4-20 x 5/8 Truss Head	6
5	321932	Panel Front	1
6	321941	LH Panel w/Cut Out.....	1
7	108418	Plug, Plastic	4
8	109034	Washer 13/16 x 1-13/16.....	4
9	108417	Nut, Plastic	4
10	325406	Door, Side Left.....	1
11	324801	Magnet Assembly.....	1
12	108954	Nut, Grip 6/32 w/Nylon Insert	2
13	100007	Screw 10-32 x 3/8 Truss Head.....	2
14	0508752	Screw 4-40 x 5/8 Round Head	2
15	0508668	Decal Control Cabinet	1
16	113622	Thermometer 4-ft. Gas Filled (Replaces 108391) (Final Rinse) ..	1
17	113644	Overlay, Final Rinse 180° – 195°F.....	1
17	112092	Overlay, Final Rinse 120°F (D-LF Only).....	1
18	107440	Thermometer 8-ft. (Wash)	1
19	113662	Overlay, Wash 150°F – 160°F	1
19	112093	Overlay, Wash 120°F (D-LF Only).....	1
20	305404	Control Cabinet Cover.....	1
21	107367	Chain, Bead #10	1
22	107368	Chain, End Coupling	1
23	100135	Gauge, Pressure (0 – 60 PSI)	1
24	109765	Overlay, Pressure Gauge.....	1
25	112587	Foot, Cast Grey.....	4
26	0504822	Screw 8-32 x 1/2 Pan Head	4
27	325392	Splash Baffle (Front & Side Doors) (Not Shown).....	A/R
28	325400-1	Splash Baffle (Top of Hood) (Not Shown).....	A/R
29	325400-2	Splash Baffle (Side, Top of Hood) (Not Shown).....	A/R
30	325444	Splash Baffle (Front, Side, Top of Hood) (Not Shown).....	A/R
31	108966	Door Handle	1
32	100073	Screw, 1/4-20 x 1/2 Truss Head	2


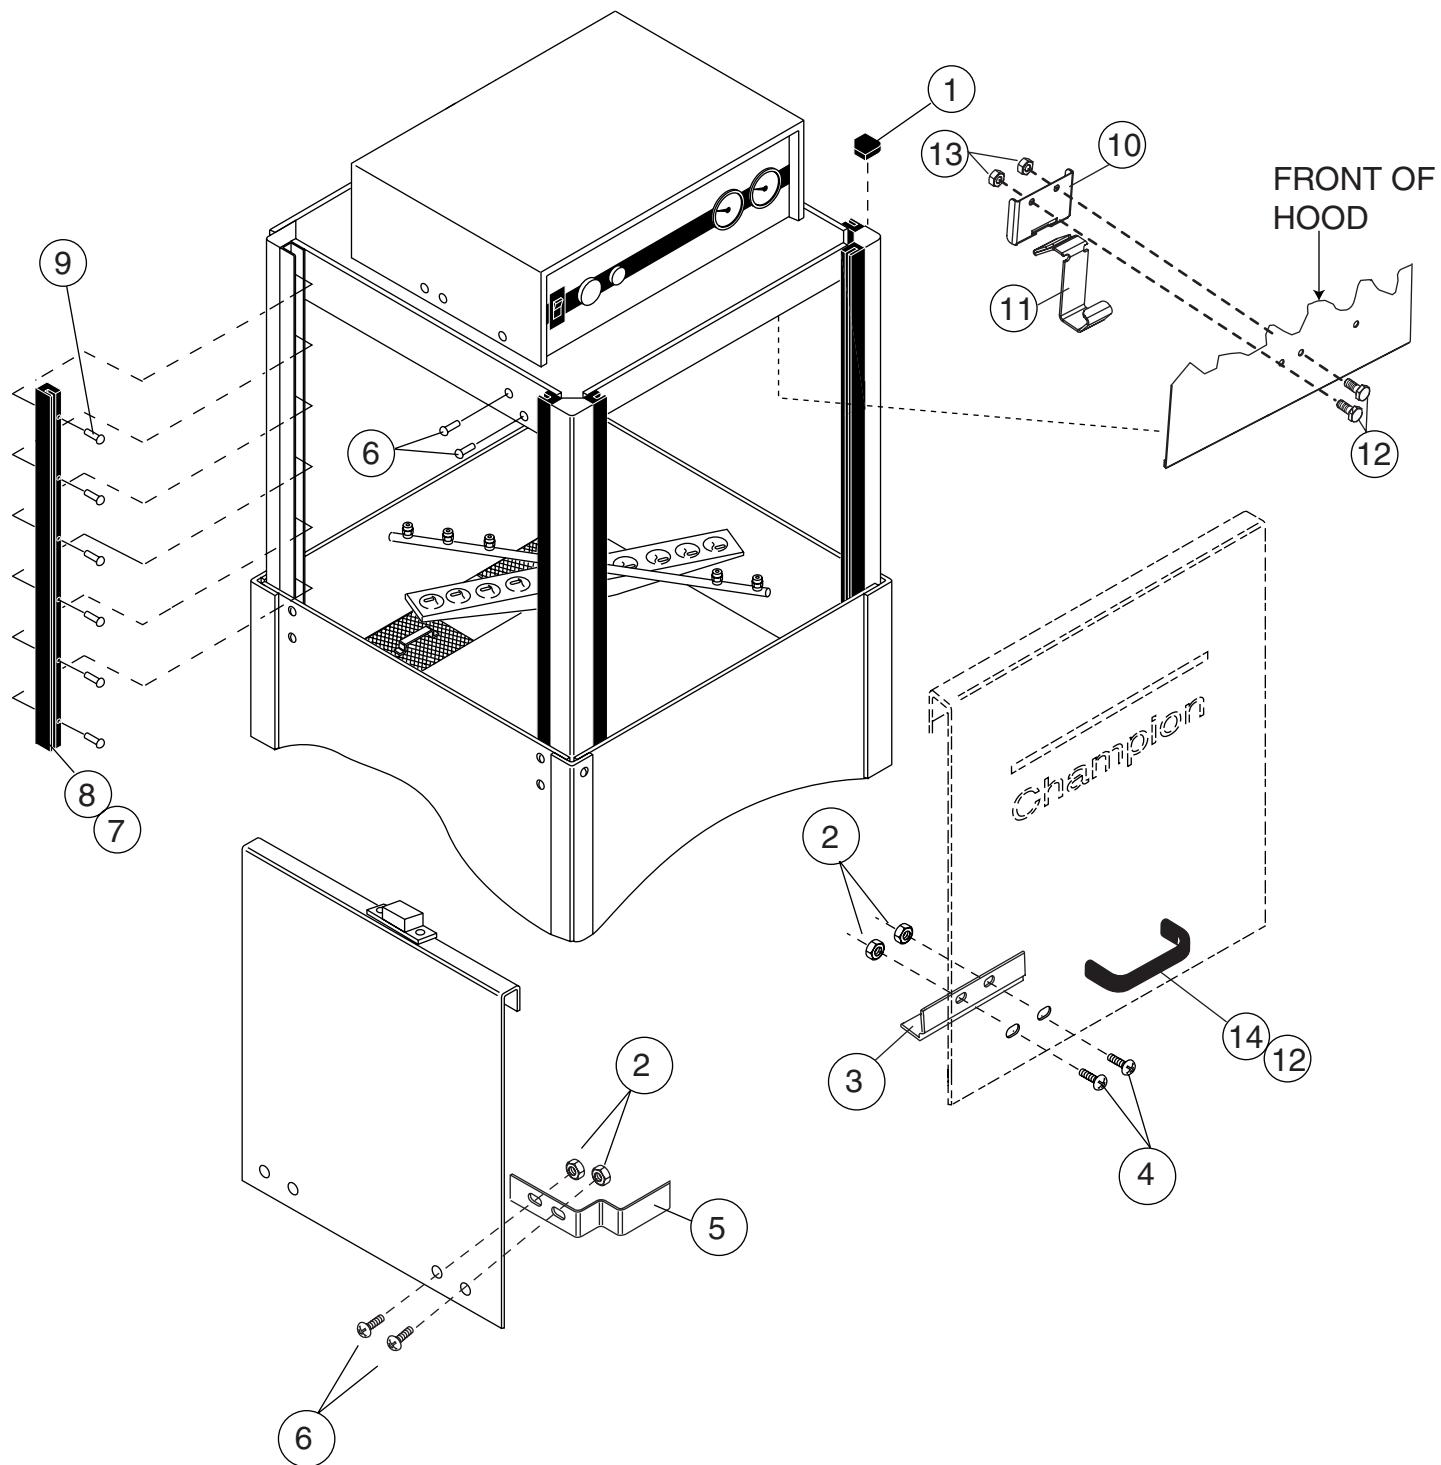


Fig. 17 – D-HB/D-H1/D-LF
Door Guides, Stops, and Lift Bracket

D-HB/D-H1/D-LF
DOOR GUIDES, STOPS, AND LIFT BRACKET


Fig. 17 Item No.	Part No.	Part Description	Qty.
1	108053	Plug, Cornerpost.....	2
2	107966	Nut, Grip 10-32 w/Insert	10
3	327104	Bracket, Door Lift.....	1
4	100007	Screw 10-32 x 3/8" Truss Head	4
5	327103	Door Lift Bracket	1
6	100097	Scew 10-32 x 1/2" Truss Head.....	2
7	108347	Guide, Door	6
8	108410	Gasket, Door Guide (26").....	12
9	107970	Screw 8-32 x 1 Filister	36
10	317345	Bracket, Door catch	1
11	325921	Door Catch	1
12	100073	Screw 1/4-20 x 1/2"	2
13	100141	Nut, Grip 1/4-20	2
14	108966	Door Handle	1

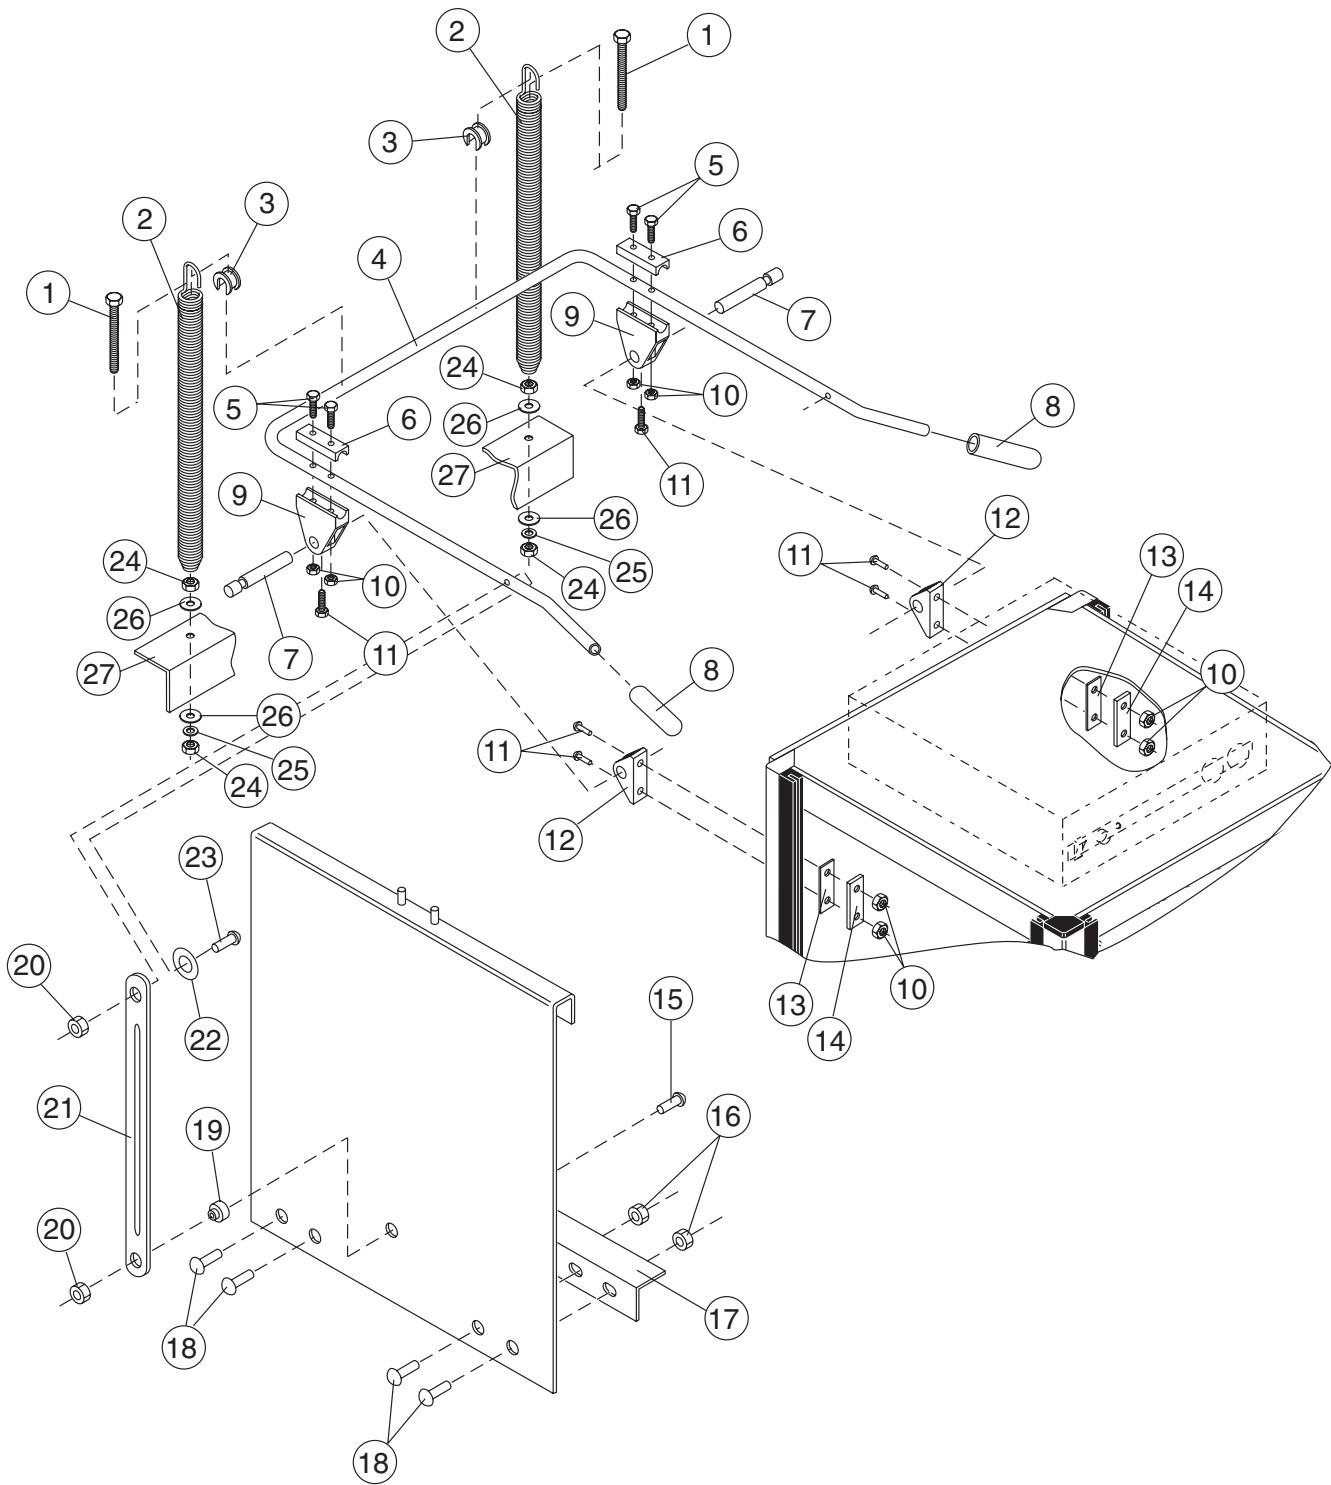


**Fig. 18 – D-HB/D-H1/D-LF
Door Handle and Spring Assembly**

D-HB/D-H1/D-LF
DOOR HANDLE AND SPRING ASSEMBLY

Fig. 18 Item No.	Part No.	Part Description	Qty.
1	112723	Bolt 5/16-18 x 15 Hex Head	1
2	108066	Spring, Extension	2
3	107397	Block, Spring Hook	2
4	0509166	Door Handle (Straight Thru Machine).....	1
4	112859	Door Handle (Corner Machine).....	1
5	107437	Bolt M6 x 45mm Hex Head.....	4
6	107396	Block, Upper Pivot	2
7	107393	Pin, Pivot	2
8	107962	Handle, Grip	2
9	107395	Block, Lower Pivot.....	2
10	107420	Nut, Plain M6	8
11	107436	Screw M6 x 16mm Filister.....	6
12	107399	Support, Pivot Block.....	2
13	304811	Gasket, Backing	2
14	108368	Plate, Backing.....	2
15	100740	Bolt 5/16-18 x 1" Hex Head.....	2
16	107966	Nut, Grip 10-32 w/Nylon Insert.....	8
17	322077	Guard, Splash (Prior to S/N D3857) (No Longer Used)	2
18	100097	Screw, 10-32 x 1/2 Truss Head.....	8
19	0509264	Bushing, Side Door	2
20	100142-T	Nut, Toplock 5/16-18 SST	2
21	0309167	Lift Bar, Door	2
22	102376	Washer, Flat	2
23	104002	Bolt 5-16-18 x 1-1/2	2
24	100154	Nut, Plain 5/16-18	4
25	106013	Washer, Lock 5/16 Split	2
26	102376	Washer 5/16 x 3/4 x 1/16	4
27	321927	Spring Anchor Bracket.....	2

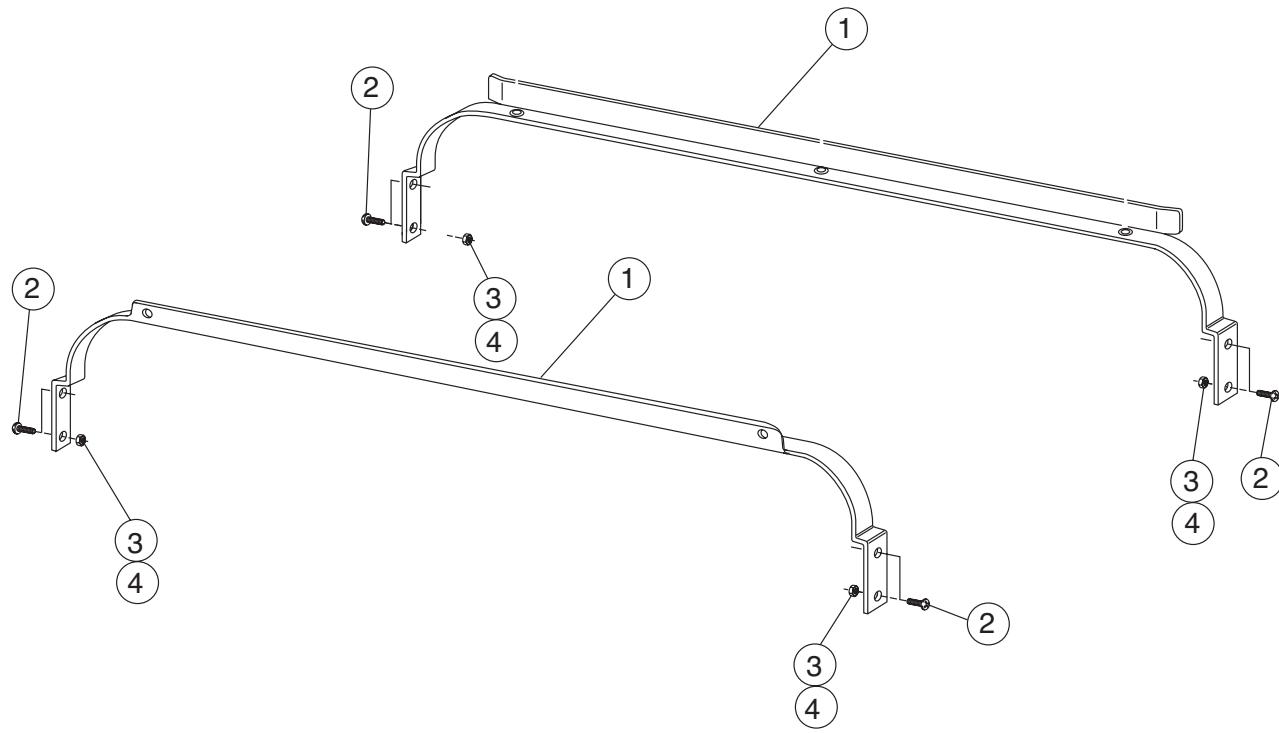

**Fig. 19A – D-HB/D-H1/D-LF
Straight Track Assembly**

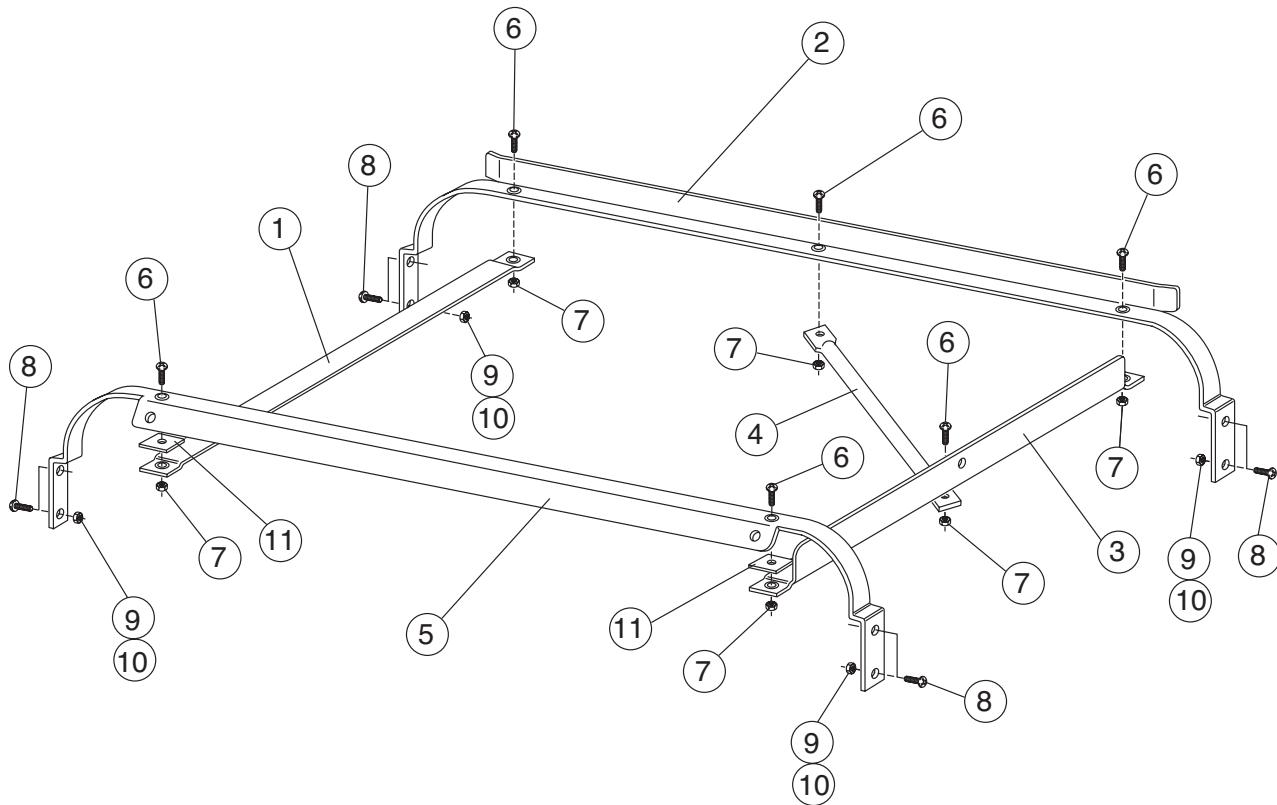


**Fig. 19B – D-HB/D-H1/D-LF
Corner Track Assembly**

D-HB/D-H1/D-LF
STRAIGHT TRACK ASSEMBLY

Fig. 19A	Part No.	Part Description	Qty.
1	0309472	Track, Rear	2
2	100073	Screw (1/4-20 x 1/2 Truss Head)	8
3	106482	Washer, Lock	8
4	100003	Nut (1/4-20 Hex Head).....	8

D-HB/D-H1/D-LF
CORNER TRACK ASSEMBLY


Fig. 19B	Part No.	Part Description	Qty.
1	0309469	Guide, Right Hand	1
2	0309472	Track, Rear	1
3	0309468	Guide, Left Hand	1
4	0309470	Support, Rack	1
5	0309471	Track, Front	1
6	106727	Screw (10-32 x 5/8 Flat Head)	6
7	107966	Nut, Grip (10-32 w/Nylon Insert)	6
8	100073	Screw (1/4-20 x 1/2 Truss Head)	8
9	106482	Washer, Lock	8
10	100003	Nut (1/4-20 Hex Head).....	8
11	0309473	Spacer	2

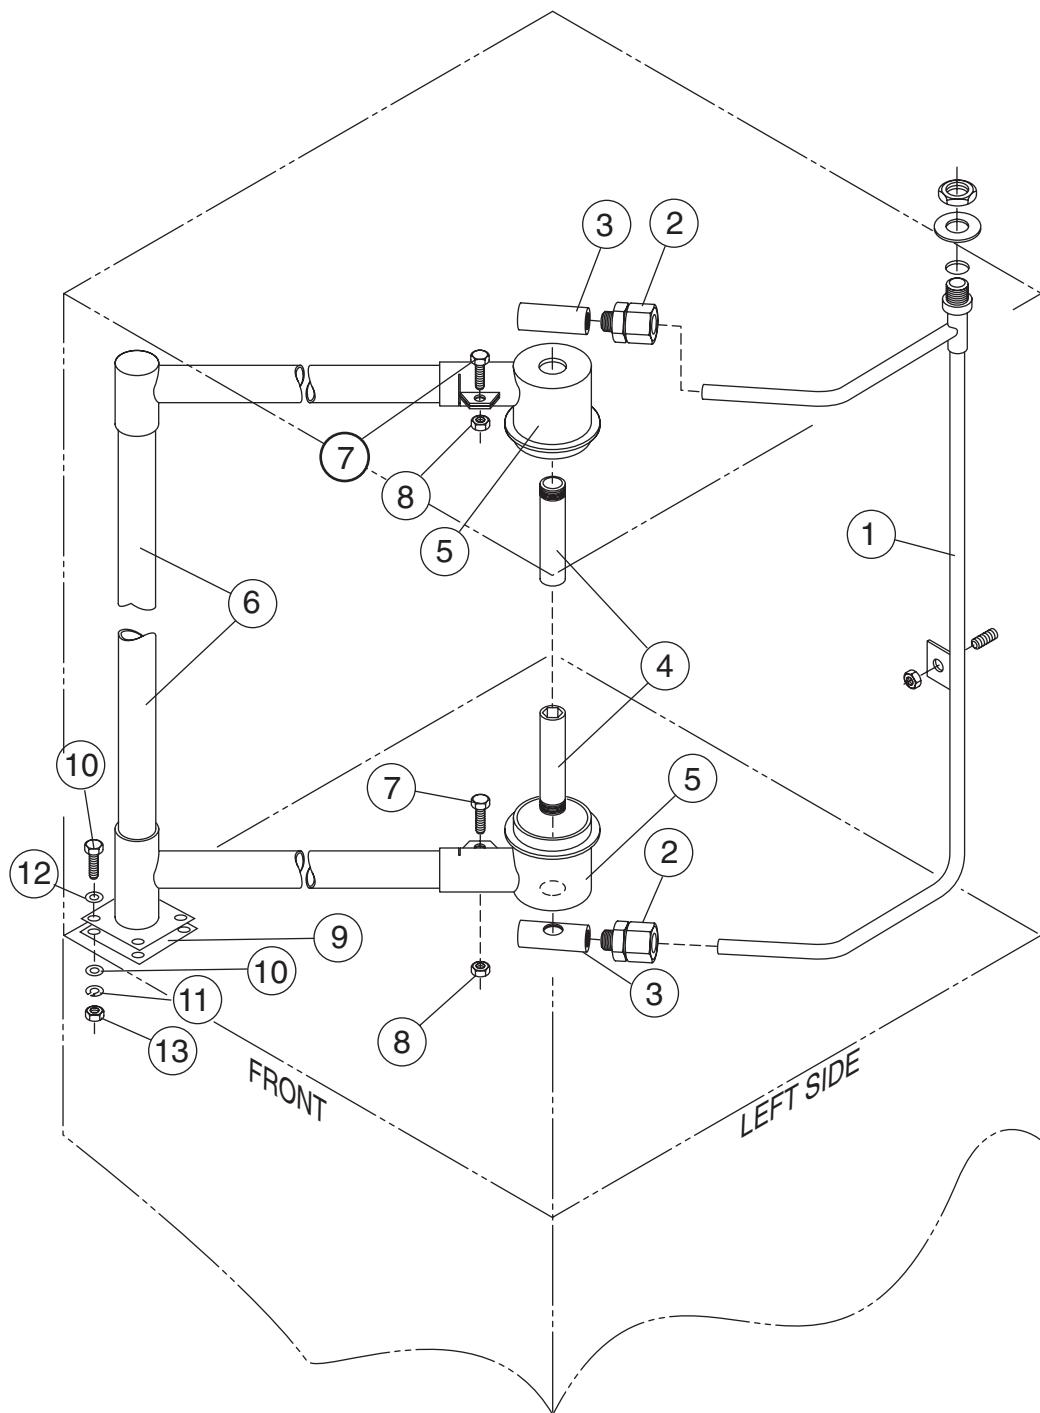

**Fig. 20 – D-HB/D-H1/D-LF
Wash/Rinse Spray Piping**

D-HB/D-H1/D-LF
WASH/RINSE SPRAY PIPING

Fig. 20 Item No.	Part No.	Part Description	Qty.
1	324526	Rinse Manifold Weldment	1
2	113027	Connector, Rinse Arm	2
3	113028	Top Rinse Arm Connector	2
4	0507445	Spindle, Wash Arm.....	2
5	109864	Support, Wash Arm	2
6	109781	Standpipe, Wash	1
7	100736	Bolt 1/4-20 x 3/4 Hex Head.....	2
8	107967	Nut, Grip 1/4-20	3
9	109854	Gasket, Standpipe Wash	1
10	100740	Bolt 5/16-18 x 1" Hex Head.....	4
11	106013	Washer, Lock 5/16 Split	4
12	102376	Washer, Flat	8
13	100154	Nut, Plain 5/16-18	4
-	0309149	Bracket Rinse Pipe Support (Not Shown)	1

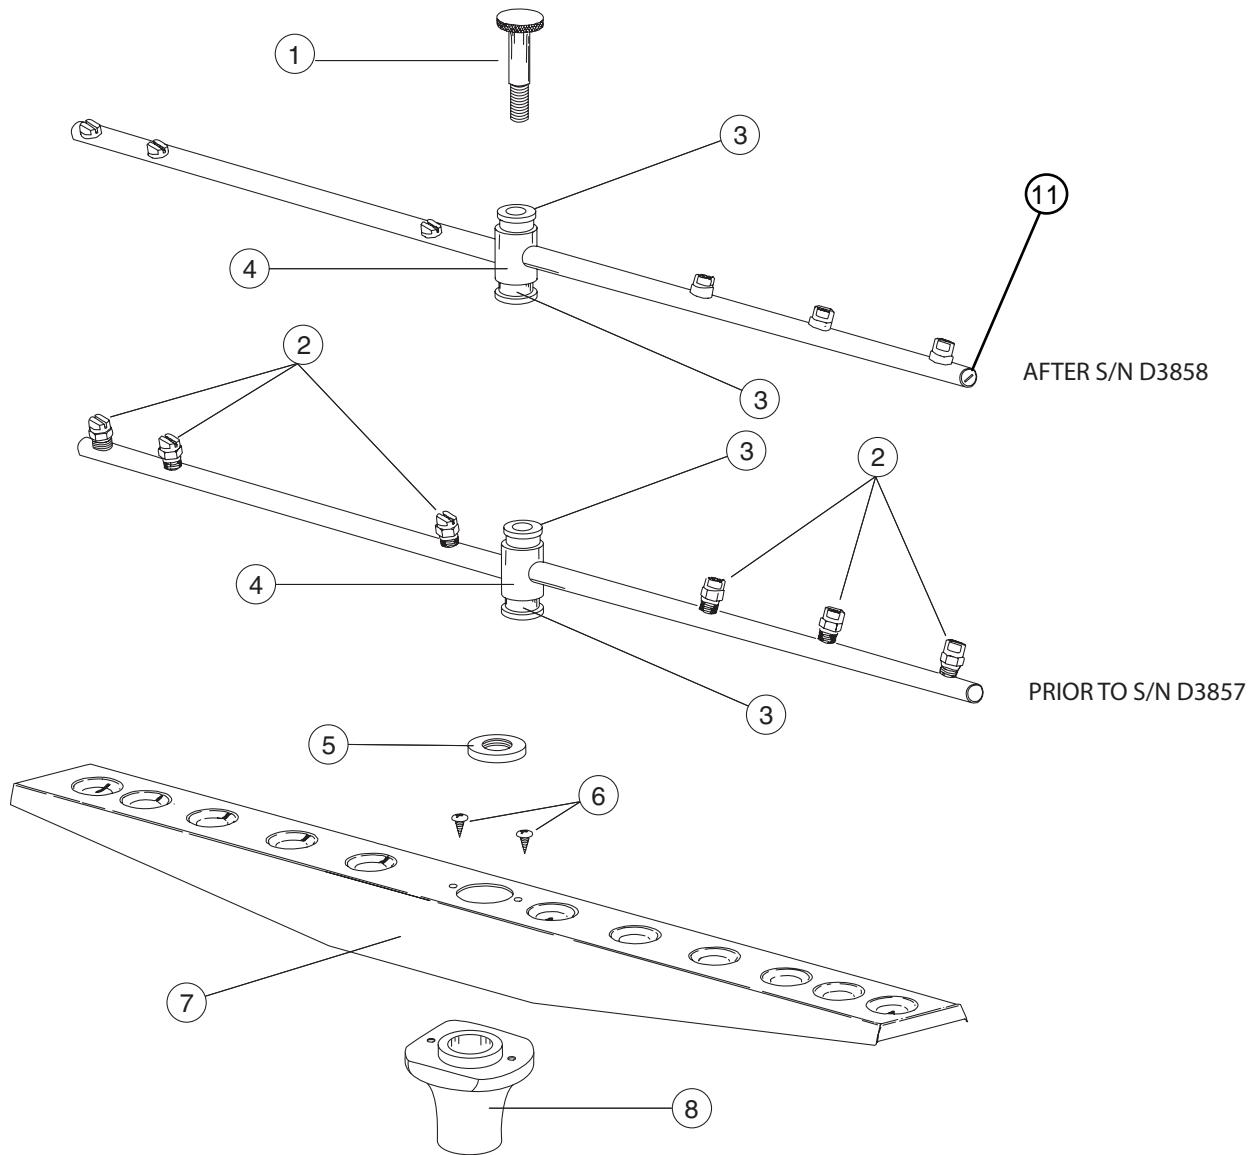


**Fig. 21 – D-HB/D-H1/D-LF
Wash/Rinse Spray Arms**

D-HB/D-H1/D-LF
WASH/RINSE SPRAY ARMS

Fig. 21**Item No.****Part No.****Part Description****Qty.**

1	0507443	Spindle, Rinse Arm	2
2	0508376	Nozzle, Rinse Arm (DHB, D-H1 Only) (Prior to S/N D3857)	12
3	113514	Bearing, Rinse Arm (Replaced 112164)	4
*4	414111	Rinse Arm Assembly (Complete) (DH-B, DH-1 only Prior to S/N D3857)	2
4	414110	Rinse Arm Assembly (Complete) (DH-B, DH-1 only) (After S/N D3858).....	2
5	0507444	Nut, Rinse Arm.....	2
6	109835	Screw (#8 x 1/2 Pan Head).....	4
7	0707452-S	Wash Arm Assembly (Includes 6 & 8)	2
8	0507446	Bearing, Wash Arm	2
9	0507451	Nozzle Rinse Arm (SST) (Model D-LF Only) (Prior to S/N D3857)	12
*10	414111	Rinse Arm Assembly (Model D-LF Only) (Complete) (Prior to S/N D3857)	1
10	414111	Rinse Arm Assembly (Complete) (D-LF only) (After S/N D3858).....	1
11	113992	Rinse arm plug	2

*Part number 0707453 (D-HB, D-H1) and 0708899 (D-LF) are no longer available as a complete rinse arm assembly. Replacement nozzles and bearings are still available for those assemblies. To replace the complete rinse arm assembly order part number 414111.

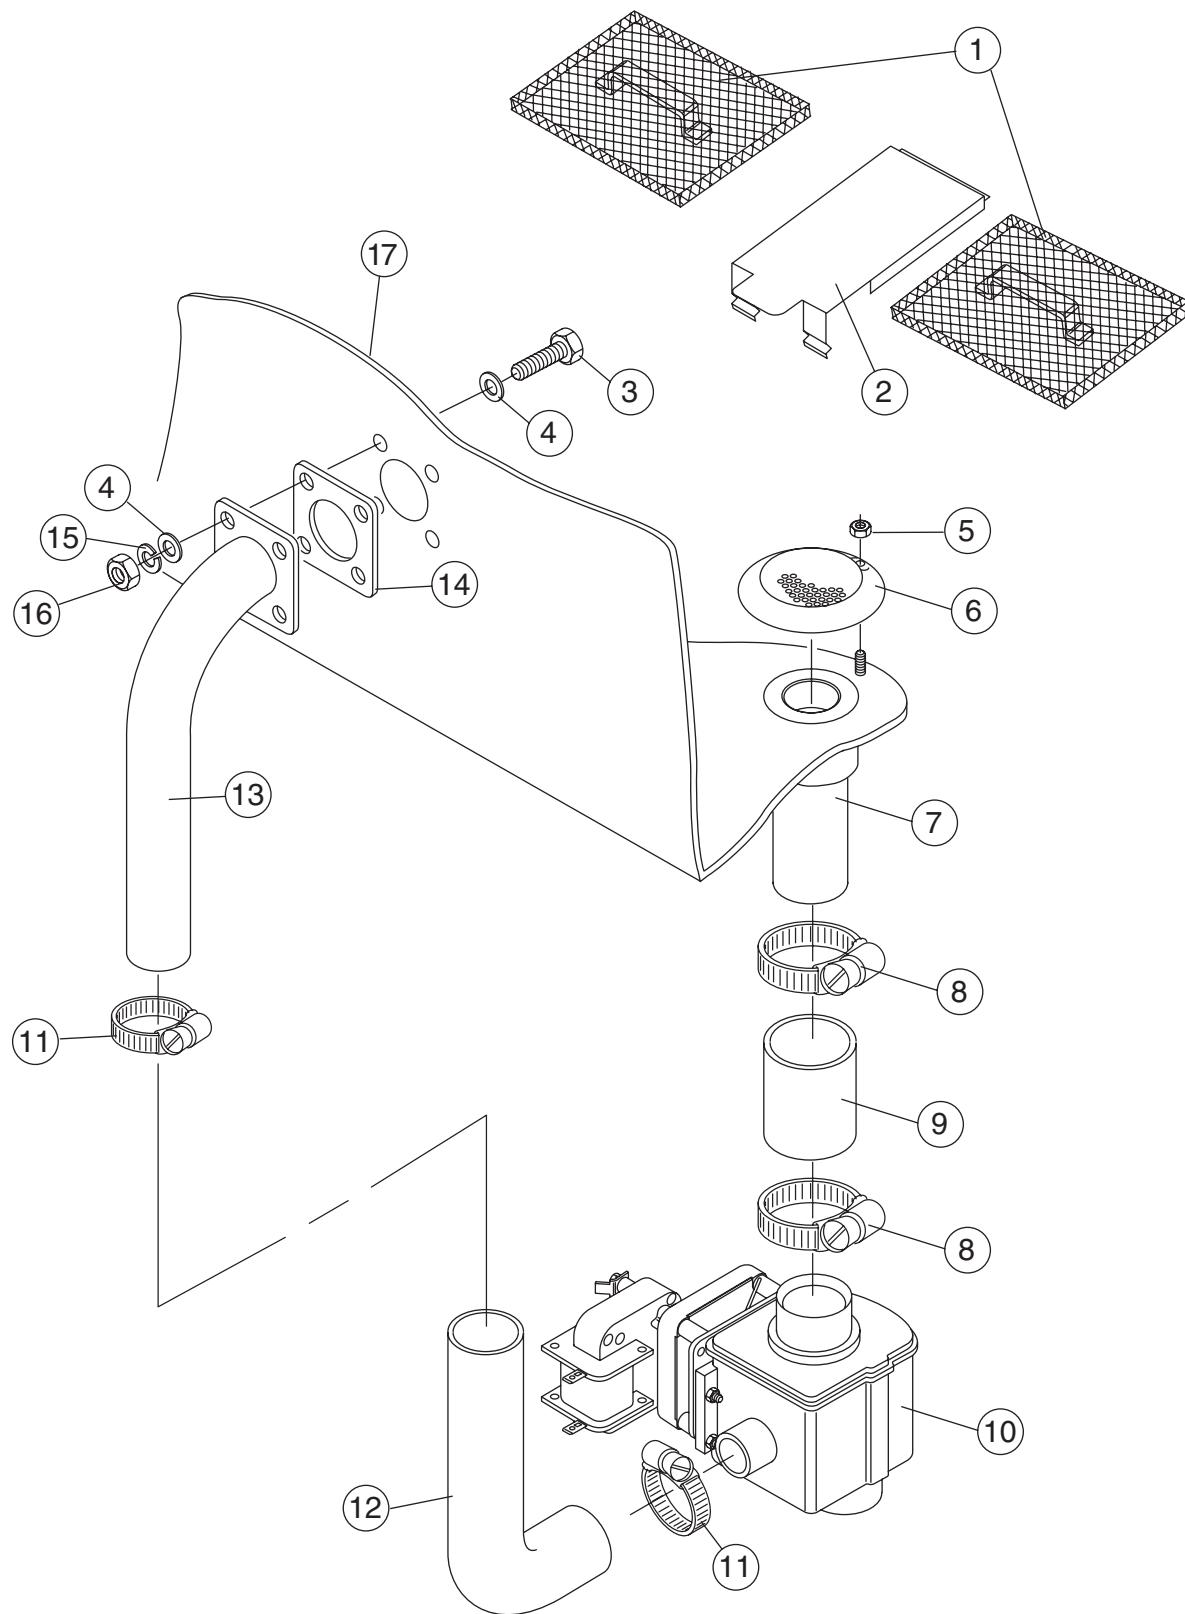

**Fig. 22 – D-HB/D-H1/D-LF
Drain Assembly and Scrap Screens**

D-HB/D-H1/D-LF
DRAIN ASSEMBLY AND SCRAP SCREENS

Fig. 22 Item No.	Part No.	Part Description	Qty.
1	305164	Screen 10".....	2
2	324582	Filler Plate.....	1
3	100736	Bolt 1/4-20 x 3/4 Hex Head.....	4
4	106026	Washer, Flat	8
5	107967	Grip, Nut 1/4-20 w/Nylon Insert	1
6	304816	Strainer	1
7	205988	Connector, Electric Drain Valve.....	1
8	104165	Clamp, Hose	2
9	205990	Hose, Rubber	1
10	113315	Electric Drain Valve (After S/N D2964)	1
10	900830	Kit, Drain Valve (From S/N D2099 thru D2963)	
11	107340	Hose Clamp	2
12	113048	Overflow Hose	1
13	324573	Overflow Flange Weldment	1
14	113047	Gasket, Drain Flange	1
15	106482	Washer, Lock 1/4 Split	4
16	100003	Nut, Plain 1/4-20 SST	4
17	327283	Reflector, Water (After S/N D3851).	1
---	327098	Support, Drain Valve (Not Shown)	A/R

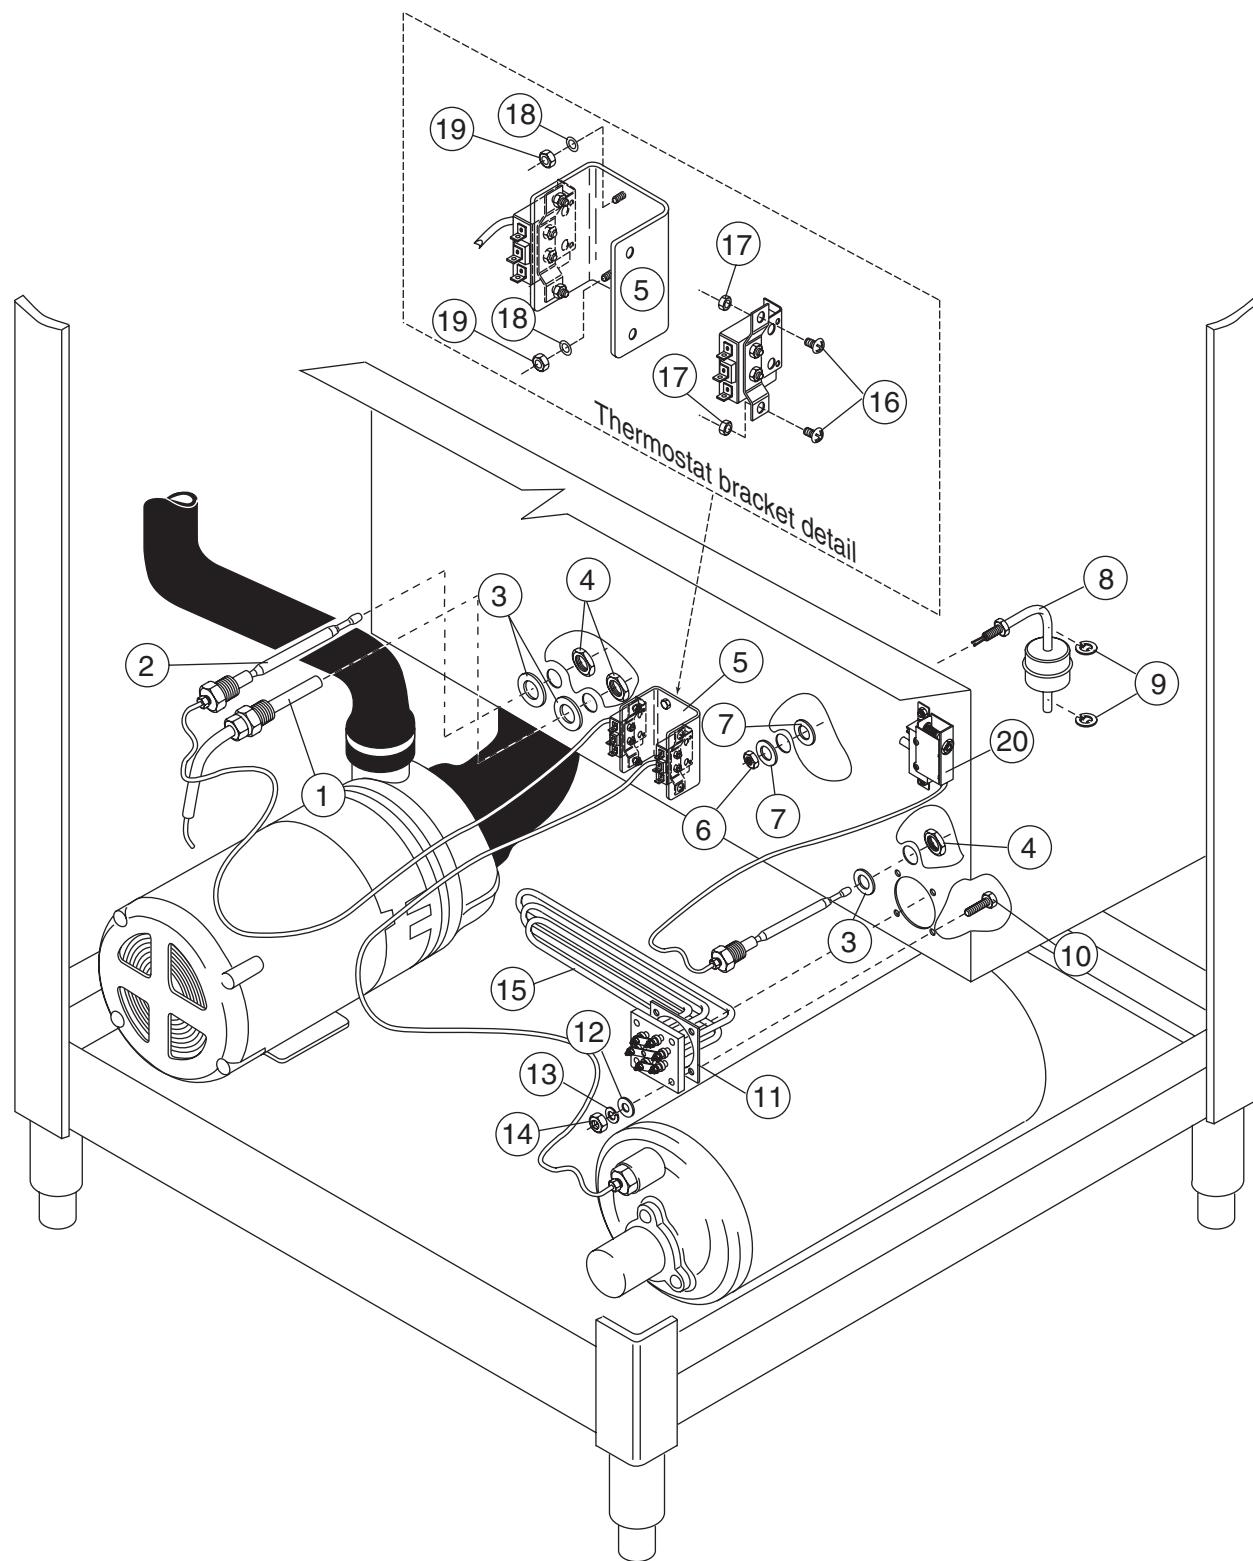


Fig. 23 – D-HB/D-H1/D-LF
Wash Tank Heat, Thermostats, and Float Switch

D-HB/D-H1/D-LF
WASH TANK HEAT, THERMOSTATS, AND FLOAT SWITCH

Fig. 23

Item No.	Part No.	Part Description	Qty.
1	107440	Thermometer 8 ft.	1
2	109069	Thermostat w/Cap 110-220°F	1
3	201041	Washer	2
4	201029	Nut, Lock 1/2"	2
5	322076	Dual Thermostat Bracket	1
6	107089	Nut, Jam 1/2-13	1
7	104882	Washer	2
8	111092	Float Switch	1
9	111151	C-clip Float Switch	2
10	100740	Bolt 5/16-18 x 1 Hex Head	4
11	108345	Gasket 3 x 3 x 1/8 2"	1
12	102376	Washer 5/16 x 3/4 x 1/16	8
13	106013	Washer, Lock 5/16 Split	4
14	100154	Nut, Plain 5/16-18 SST	4
15	0509637	Heater 3kw 115v/1ph	1
	113479	Heater 4.7kw 208-240/380-415v 1/3ph	1
	113480	Heater 4.7kw 480v/3ph	1
	113481	Heater 4.7kw 575v/3ph	1
16	100007	Screw 10-32 x 3/8 Truss Head	4
17	107966	Nut, Grip 10-32 w/Nylon Insert	4
18	106482	Washer, Lock 1/4 Split	4
19	100003	Plain Nut 1/4-20 SST	4
20	110561	Thermostat, Fixed Hi Limit	1
—	104889	Putty, Sealing (Use To Seal Items 1, 2 & 8)	A/R

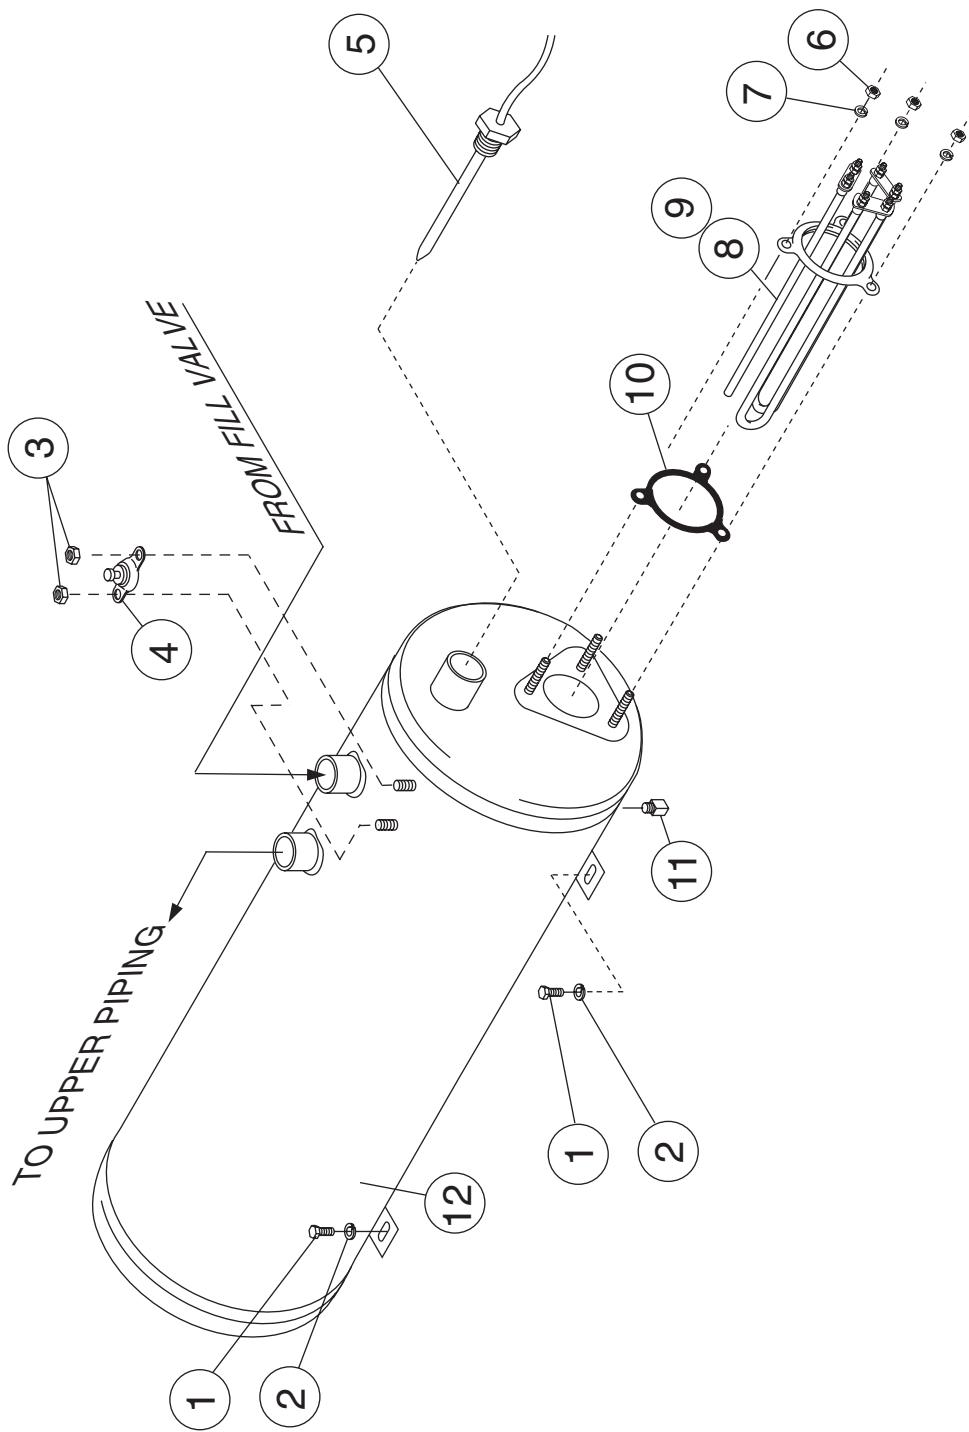


Fig. 24 – D-HB Only
Electric Booster and Thermostat

D-HB ONLY
ELECTRIC BOOSTER AND THERMOSTAT

Fig. 24 Item No.	Part No.	Part Description	Qty.
1	100740	Bolt 5/16-18 x 1 Hex Head	2
2	102376	Washer, Flat 5/16 x 3/4 x 1/16	2
3	108954	Nut, Grip 6-32 w/Insert	2
4	113604	Thermostat, High Limit	1
	110563	Compound, Heat Sink.	A/R
5	109069	Thermostat, Booster	1
6	100003	Nut, Plain 1/4-20 SST	3
7	106482	Washer, Lock 1/4 Split	5
8	111233	Heater 7.5kw 208-240/380-415v, 40° Rise (1 & 3 Phase)	1
	108579	Heater 9kw 480v, 40° Rise (3 Phase Only)	1
	111122	Heater 9kw 575v, 40° Rise (3 Phase Only)	1
9	111266	Heater 18kw 208 -240/380-415v, 70° Rise (1 & 3 Phase)	1
	111267	Heater 18kw 480v, 70° Rise (3 Phase Only)	1
	111600	Heater 18kw 575v, 70° Rise (3 Phase Only)	1
10	109985	Seal, Electric Heater	1
11	100210	Plug 1/8 SST	1
12	0509042	Tank, Booster	1

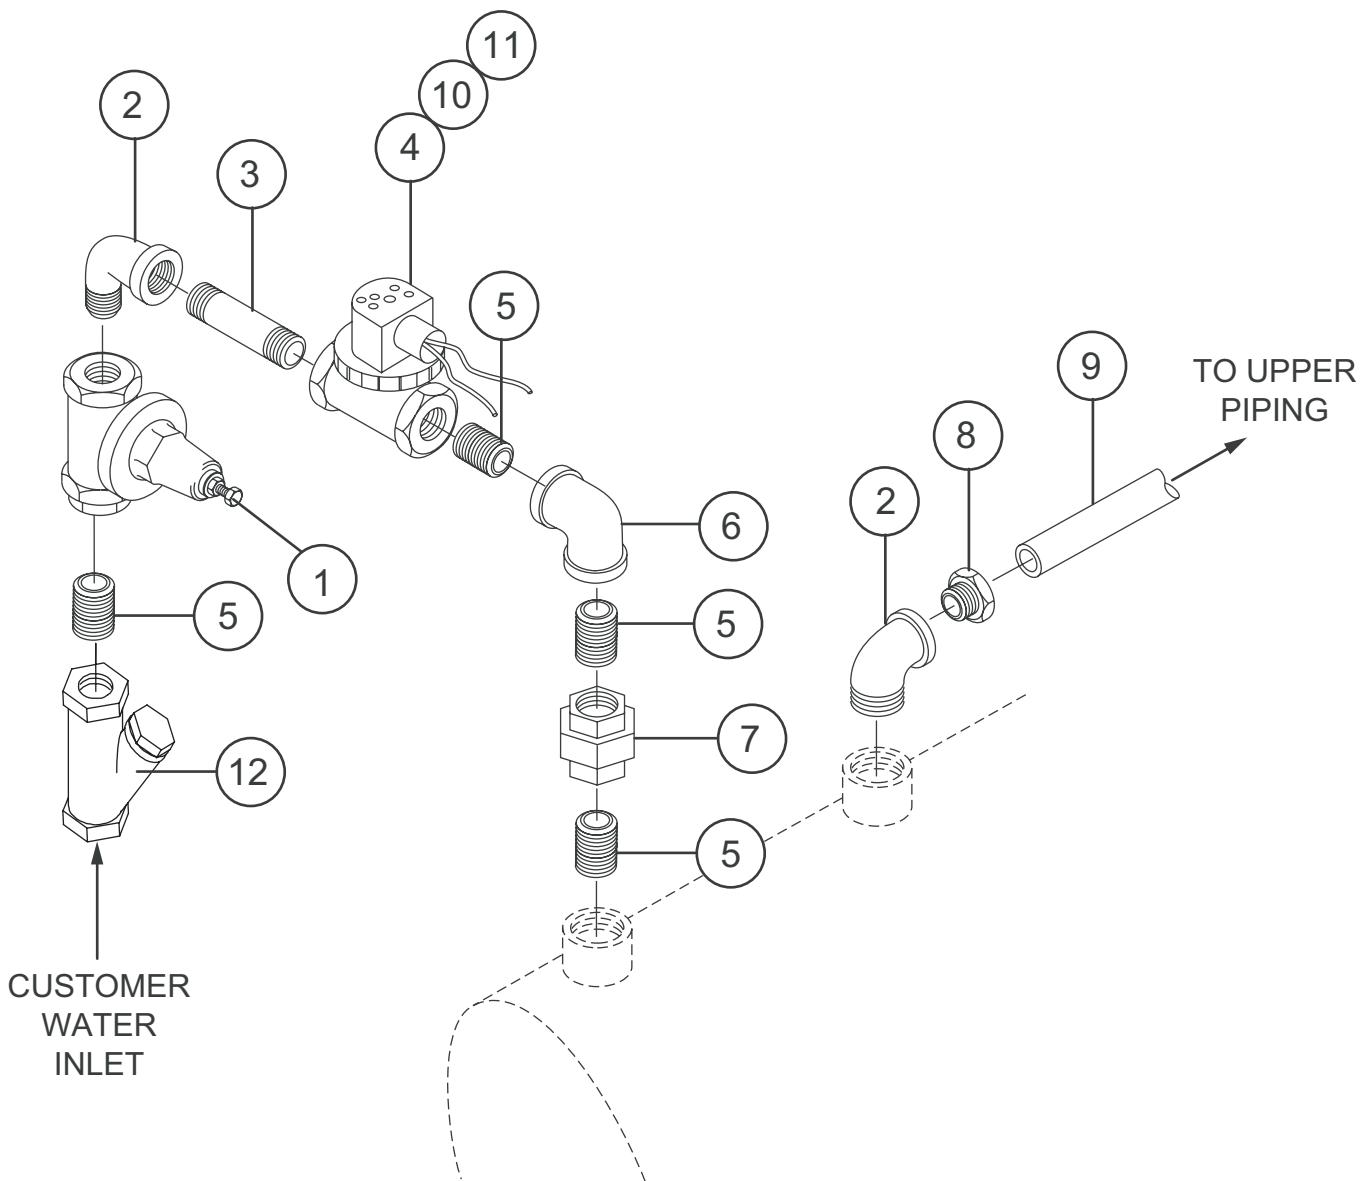


Fig. 25 – D-HB ONLY
Lower Fill Piping Assembly

D-HB ONLY
LOWER FILL PIPING ASSEMBLY

Fig. 25 Item No.	Part No.	Part Description	Qty.
1	107550	Valve Pressure Red. 3/4"	1
2	102444	Street Ell 3/4" NPT Brass	2
3	102651	Nipple 3/4" x 2" Brass	1
4	111437	Valve 3/4" NPT Hot Water	1
5	100184	Nipple 3/4" NPT	4
6	102442	Elbow 3/4" NPT x 90°	1
7	100571	Union 3/4" NPT Brass	1
8	109879	Compression Fitting 3/4" x 7/8"	1
9	205761	3/4" Copper Tube (Formed)	1
10	108516	Coil, Solenoid Valve (120v)	1
11	109903	Repair Kit, 3/4" Solenoid Valve	1
12	110768	Strainer, Line 3/4" Brass	1


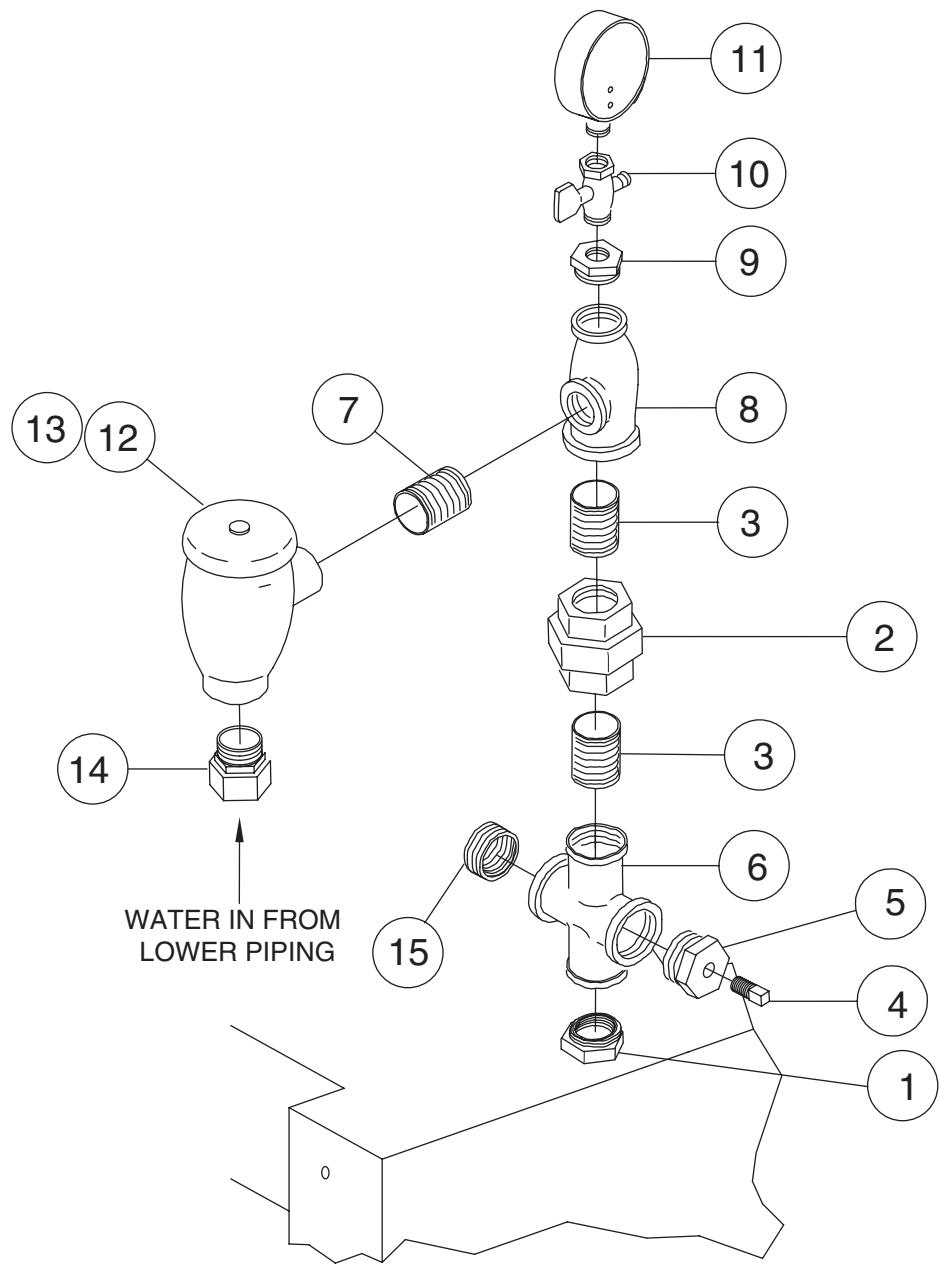


Fig. 26 – D-HB/D-H1
Upper Fill Piping Assembly

D-HB/D-H1
UPPER FILL PIPING ASSEMBLY

Fig. 26 Item No.	Part No.	Part Description	Qty.
1	100156	Locknut 3/4" NPT Brass.....	1
2	100571	Union, 3/4" NPT Brass.....	1
3	100184	Nipple, Close 3/4" NPT Brass	2
4	107463	Plug 1/4" NPT Plastic.....	1
5	108181	Bushing, Reducing 3/4 x 1/4 NPT Plastic	1
6	100599	Cross, 3/4 NPT Brass	1
7	102489	Nipple 3/4 x 2-1/2 NPT Brass	1
8	102525	Tee 3/4 x 1/2 x 3/4 NPT Brass	1
9	102388	Bushing, Reducing 1/2 x 1/4 NPT Brass	1
10	112437	Needle Valve 1/4".....	1
11	100135	Gauge, Pressure (0-60 PSI)	1
12	104429	Vacuum Breaker 3/4" (After S/N D3291)	1
*13	900837	Repair Kit 3/4" Vacuum Breaker (Not Shown)	1
14	109879	Compression Fitting 3/4 NPT x 7/8" OD.....	1
15	102392	Bushing, Reducing 3/4 x 1/2 NPT Brass (Prior to S/N D3699) ..	1
	100171	Bushing Red Face 3/4 x 1/2 Brass (After S/N D3700)	1

* Kit was made to repair old and new style (plastic or bronze style) vacuum breakers.

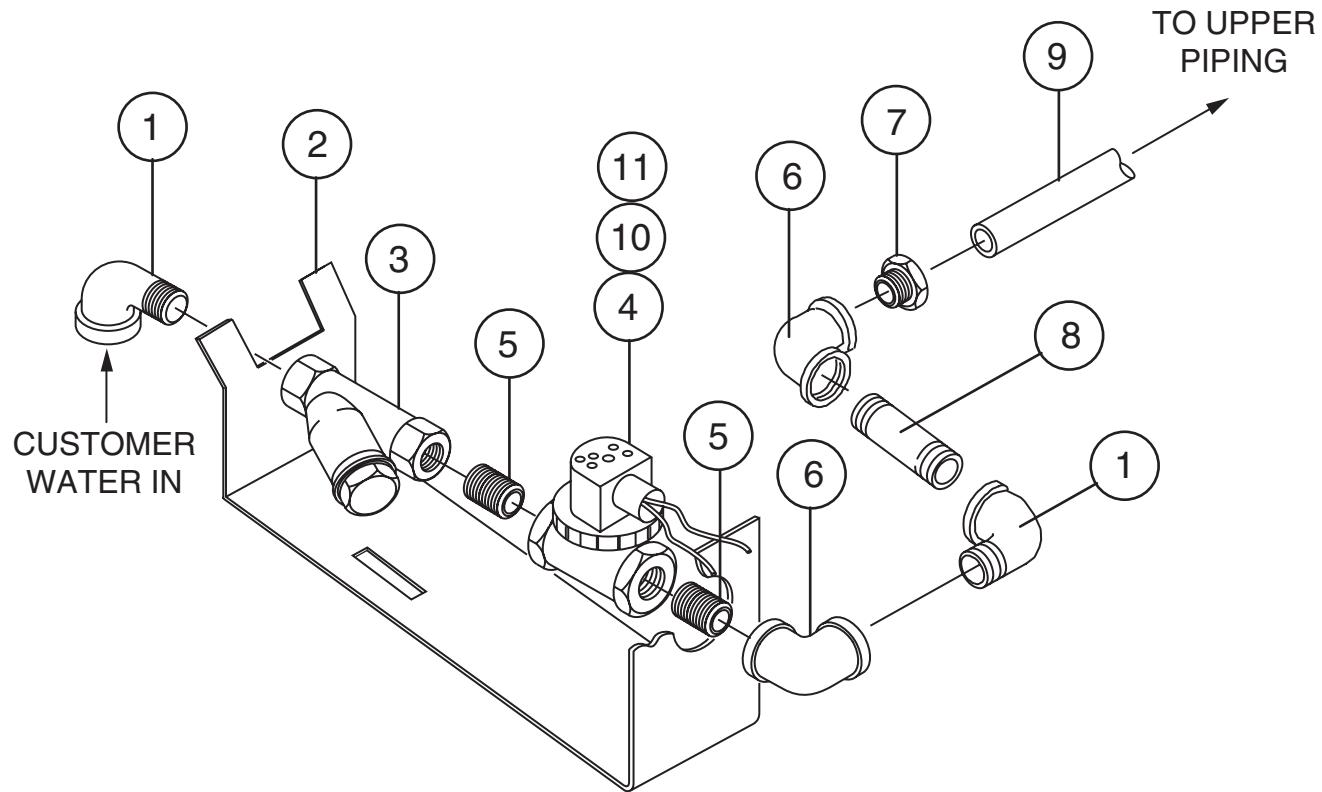

**Fig. 27 – D-H1/D-LF
Lower Fill Piping Assembly**

D-H1/D-LF
LOWER FILL PIPING ASSEMBLY

Fig. 27	Part		
Item No.	Part No.	Part Description	Qty.
1	102444	Street Ell 3/4" NPT Brass.....	2
2	0309340	Plumbing Support Bracket.....	1
3	110768	Line Strainer 3/4" Brass	1
4	111437	Valve 3/4" NPT Hot Water.....	1
5	100184	Nipple, Close 3/4" NPT Brass	2
6	109879	Compression Fitting 3/4" NPT 7/8"	1
7	102442	Elbow 3/4" NPT Brass	1
8	102470	Nipple 3/4" NPT x 3" Brass.....	1
9	205761	Tube 3/4" Copper (Formed)	1
10	108516	Coil, Solenoid Valve (120V)	1
11	109903	Repair Kit, 3/4" Solenoid Valve.....	1

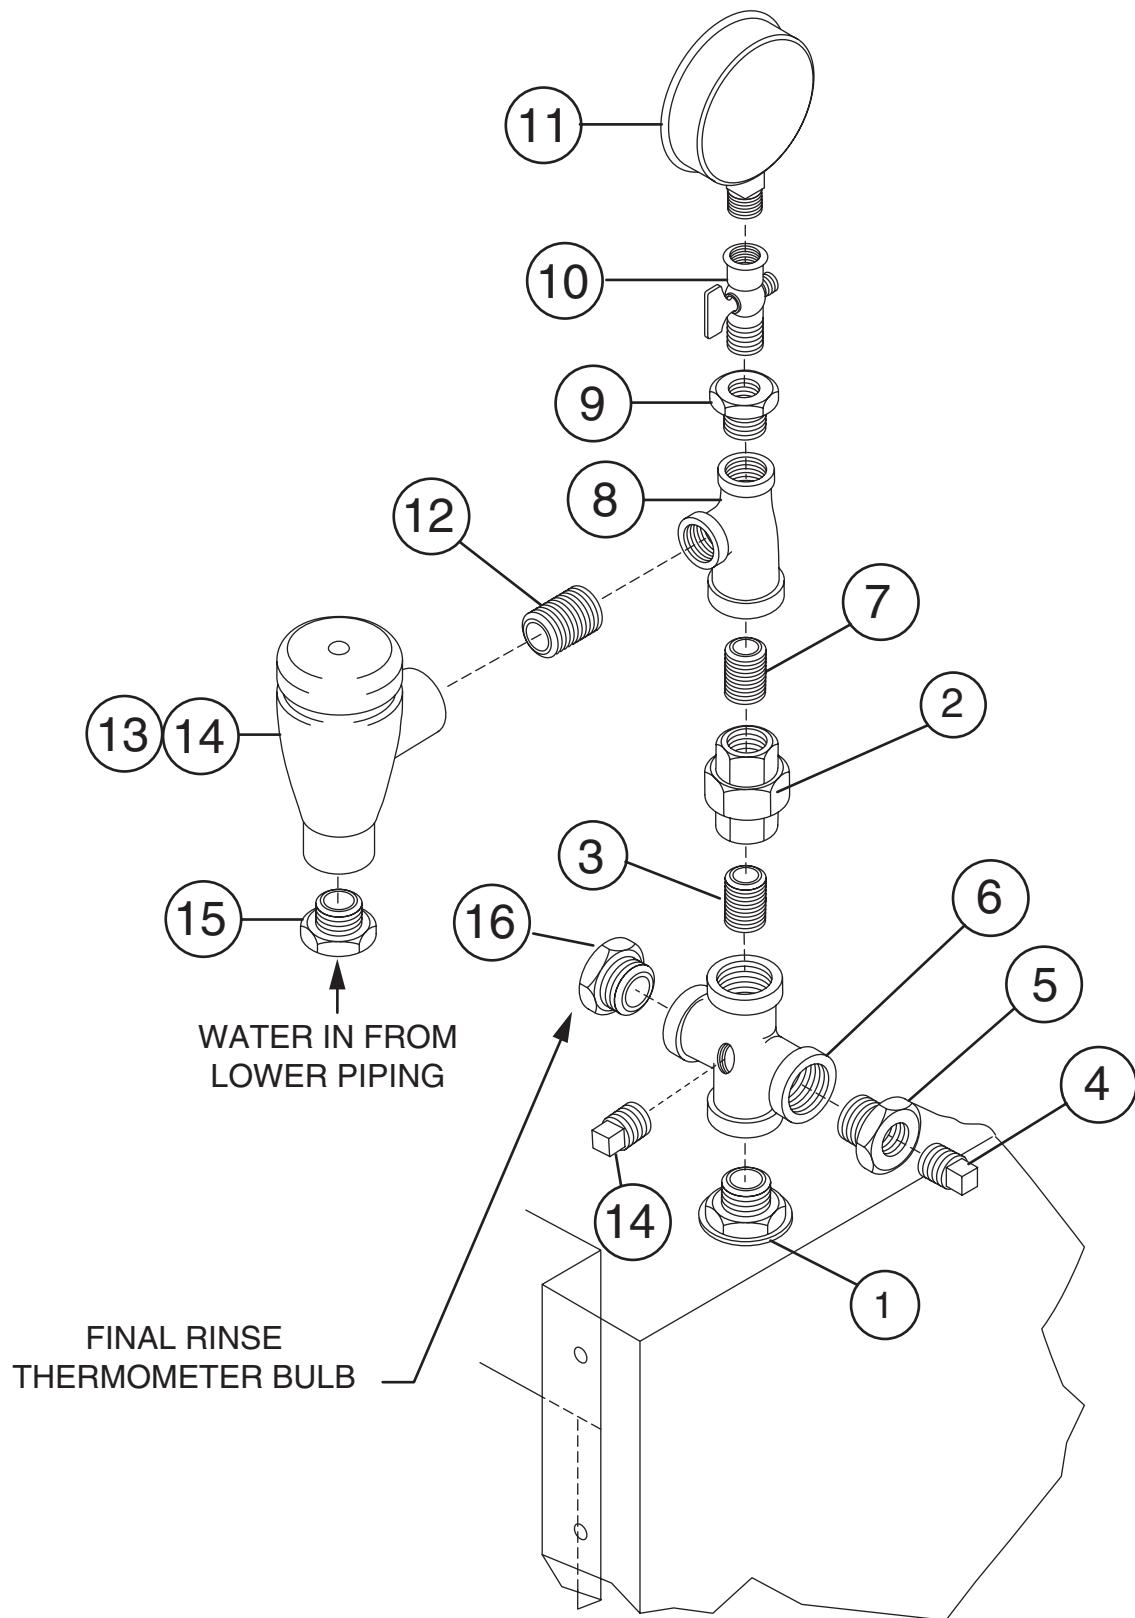


Fig. 28 – D-LF
Upper Fill Piping Assembly

D-LF
UPPER FILL PIPING ASSEMBLY

Fig. 28 Item No.	Part No.	Part Description	Qty.
1	100548	Locknut 3/4" NPT SST	1
2	102554	Union, 3/4" NPT SST.....	1
3	100051	Nipple, Close 3/4" NPT SST	1
4	107463	Plug 1/4" NPT Plastic.....	1
5	108181	Bushing, Reducing 3/4 x 1/4 NPT Plastic	1
6	205993	Cross, 3/4 NPT SST	1
7	100184	Nipple, Close 3/4" NPT Brass	1
8	102525	Tee 3/4 x 1/2 x 3/4 NPT Brass	1
9	102388	Bushing, Reducing 1/2 x 1/4 NPT Brass	1
10	112437	Needle Valve 1/4".....	1
11	100135	Gauge, Pressure (0-60 PSI)	1
12	102489	Nipple, 3/4 x 2-1/2" Brass	1
13	104429	Vacuum Breaker 3/4" (After S/N D3291)	1
*14	900837	Repair Kit 3/4" Vacuum Breaker (Not Shown)	1
15	109879	Compression Fitting 3/4 NPT x 7/8" OD.....	1
16	102393	Bushing, Reducing 3/4 x 1/2 NPT SST	1

* Kit was made to repair old and new style (plastic or bronze style) vacuum breakers.

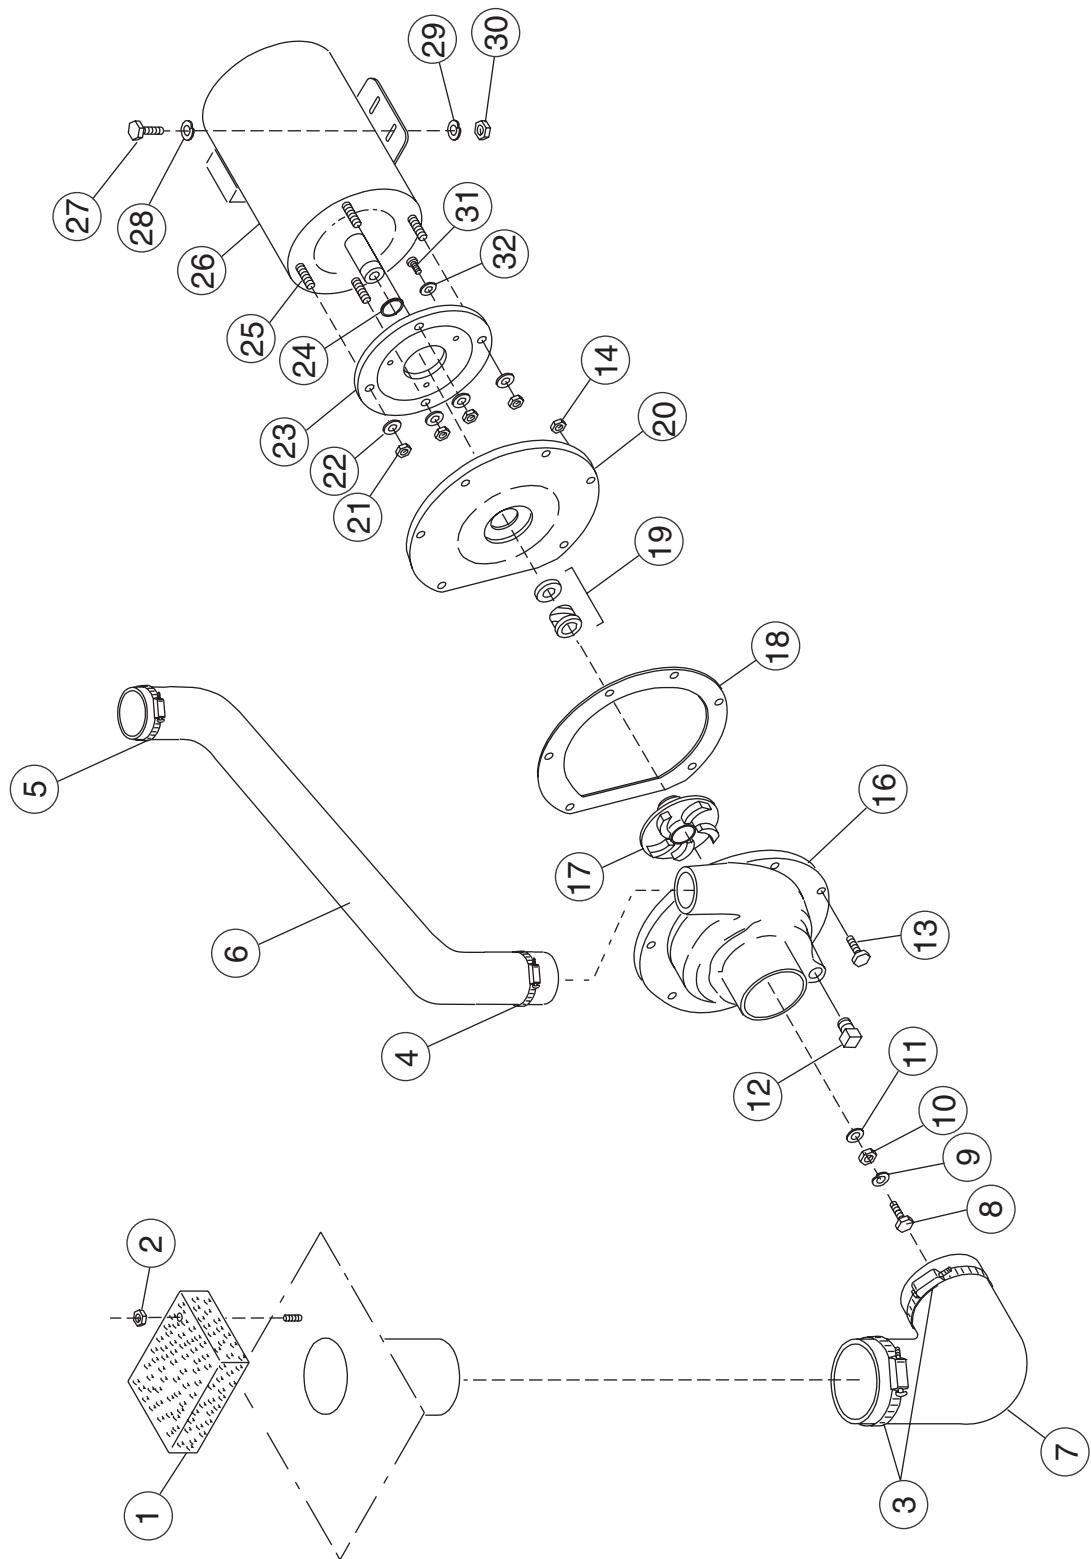


Fig. 29 – D-HB/D-H1/D-LF
Pump Assembly

D-HB/D-H1/D-LF
PUMP ASSEMBLY

Fig. 29	Part		
Item No.	Part No.	Part Description	Qty.
1	324580	Stainer	1
2	107966	Nut, Grip 10-32 w/Nylon Insert	1
3	104203	Clamp, Hose	2
4	104165	Clamp, Hose	1
5	107340	Clamp, Hose	1
6	112383	Hose Pump, Discharge	1
7	109562	Hose, Suction	1
8	100734	Bolt 1/4-20 x 1/2" Hex Head	1
9	106482	Washer, Lock 1/4" Split	1
10	110247	Nut, Hex Jam 7/16-20	1
11	110248	Washer, Flat	1
12	107463	Plug 1/4"	1
13	107137	Bolt 10-32 x 7/8 Hex Head	11
14	100194	Nut, Grip (10-32)	11
15	0501505	Washer, Lock Int. SST #8 (not shown)	11
16	109651	Volute	1
17	113248	Impeller, SST	1
18	109653	Gasket, O-ring	1
19	111111	Pump Seal	1
20	109649	Flange Assembly, 1-HP	1
21	107690	Nut, Jam 3/8-16	4
22	106407	Washer, Lock 3/8" Split	4
23	109648	Backing Plate	1
24	109654	Pump Slinger Washer	1
25	110734	Stud 3/8-16 x 1-3/8	4
26	111145	Motor, 1.4-HP (208-240v/460v/60/3)	1
26	111144	Motor, 1.4-HP (115v/208-240v/60/1)	1
26	112163	Motor ,1.4-HP (115v/208-240v/50/1)	1
26	0507708	Motor, 1.4-HP (575v/60/3)	1
27	100739	Bolt 5/16-18 x 3/4 Hex Head	4
28	102376	Washer, Flat 5/16	4
29	106013	Washer, Lock 5/16-18 SST	4
30	100142	Nut, Grip 5/16-18	4
31	100754	Screw, Flat 10-32 x 1/2	4
32	110270	Washer, Countersunk SST	4
—	109645	Kit, Pump (Includes 16, 18, 20, 23, 24)	1
—	451643	Pump, Motor Assembly	1
—	451642	Complete 1.4-HP (208-240v/460v/60/3ph)	1
—	0707549	Pump, Motor Assembly	1
—		Complete 1.4-HP (115v/208-240v/60/1ph)	1
—		Pump, Motor Assembly	1
—		Complete 1.4-HP (575v/60/3ph)	1


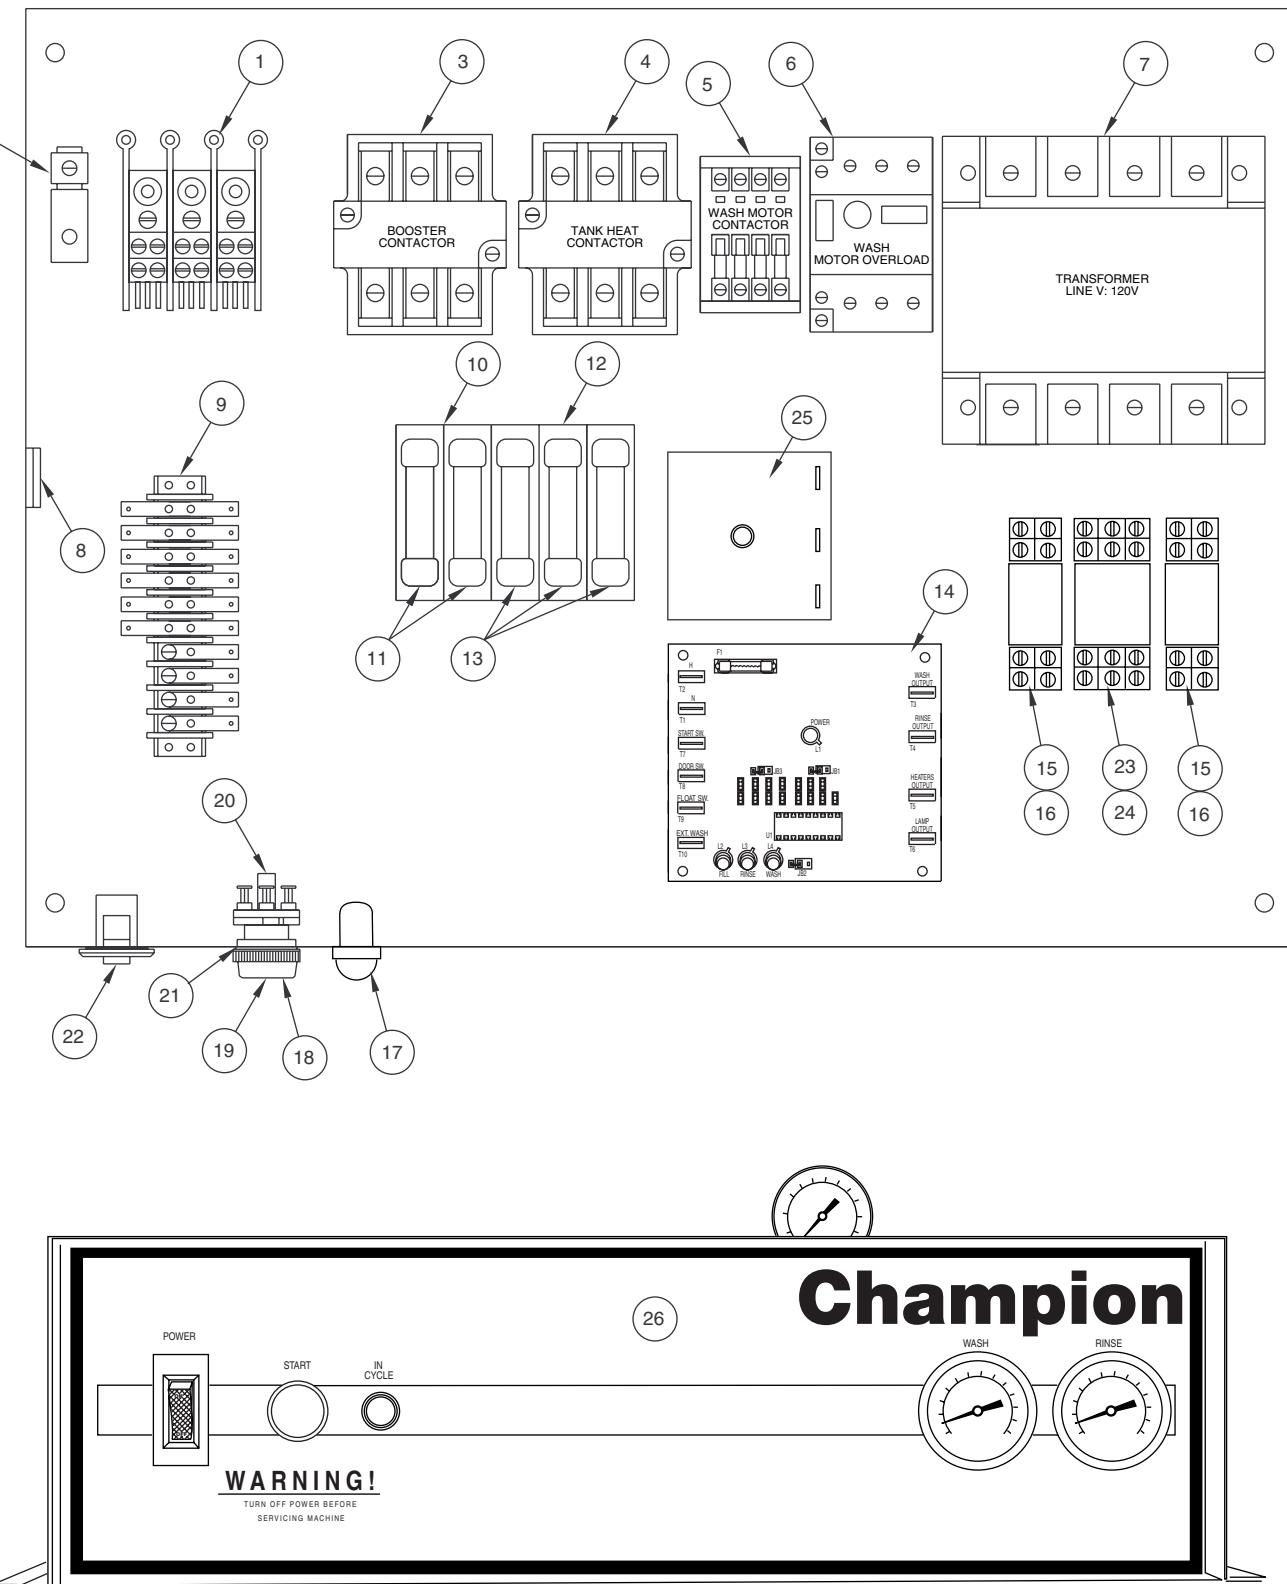


Fig. 30 – D-HB/D-H1/D-LF
Control Cabinet

D-HB/D-H1/D-LF
CONTROL CABINET

Fig. 30	Part No.	Part Description	Qty.
1	111833	Terminal Block, 1& 3 phase.....	1
2	103310	Wire Lug, Ground.....	1
3	111702	Contactor, Booster (All voltages), 3 phase 40° & 70°.....	1
4	111702	Contactor, Tank Heat (All voltages), 1 & 3 phase.....	1
5	109582	Contactor, Wash Motor, 1 phase.....	1
5	108122	Contactor, Wash Motor, 3 phase.....	1
6	111632	Overload, Motor, Manual-1.4-HP Wash (115v/1ph)	1
6	111630	Overload, Motor, Manual-1.4-HP Wash (208-240/1ph).....	1
6	110806	Starter, Mtr OL GV2-M10 w/Aux 1.4-HP Wash (208-240/3ph)	1
6	110805	Starter, Mtr OL GV2-M08 w/Aux 1.4-HP Wash (380-415/3ph)	1
6	110804	Starter, Mtr OL GV2-M07 w/Aux 1.4-HP Wash (480v/3ph)	1
6	112692	Overload, Motor, Manual-1.4-HP Wash (575v/3ph)	1
7	109064	Transformer, Control (208-240v/1 & 3 phase).....	1
7	109064	Transformer, Control (480v/3ph).....	1
7	111484	Transformer, Control (380-415vV/3ph).....	1
7	111521	Transformer, Control (575v/3ph)	1
8	113721	Switch Reed Aleph.....	1
9	0508895	Terminal Block	1
10	106402	Fuse Block, 2 Pole (1 & 3 phase).....	1
11	107289	Fuse 2.5A (115v/1ph).....	2
11	107289	Fuse 2.5A (280-240v/1ph)	2
11	107289	Fuse 2.5A (280-240v/3ph)	2
11	0508707	Fuse 1A (380-415v/3ph)	2
11	0508707	Fuse 1A (480v/3ph)	2
11	0508708	Fuse 2.5A (575v/3ph)	2
12	106925	Fuse Block, 3 Pole (1 & 3 phase).....	1
13	100929	Fuse 30A (115v/1ph)	1
13	100929	Fuse 20A (208-240v/1ph)	3
13	100922	Fuse 20A (208-240v/3ph)	3
13	100913	Fuse 10A (380-415v/3ph)	3
13	100913	Fuse 10A (480-575v/3ph)	3
14	900911	Kit* DM Board & Instructions (Prior to S/N D3857)	1
14	113597	Timer Board (After S/N D3858)	1
15	111068	Relay 120v	2
16	111036	Relay Socket	2
17	106364	Indicator Light	1
18	900725	Kit* Pushbutton (Includes items 19, 20, 21)	1
19	111614	Switch, Pushbutton	1
20	111617	Contact Block (NO)	1
21	113140	Boot, Silicone, Pushbutton	1
22	111980	Circuit Breaker 5A	1
23	112382	Relay 3PDT 10Amp 120v	1
24	112415	Relay Socket	1
25	113314	Timer, Infintec 600 Second	1
26	0508668	Decal, Control Cabinet	1

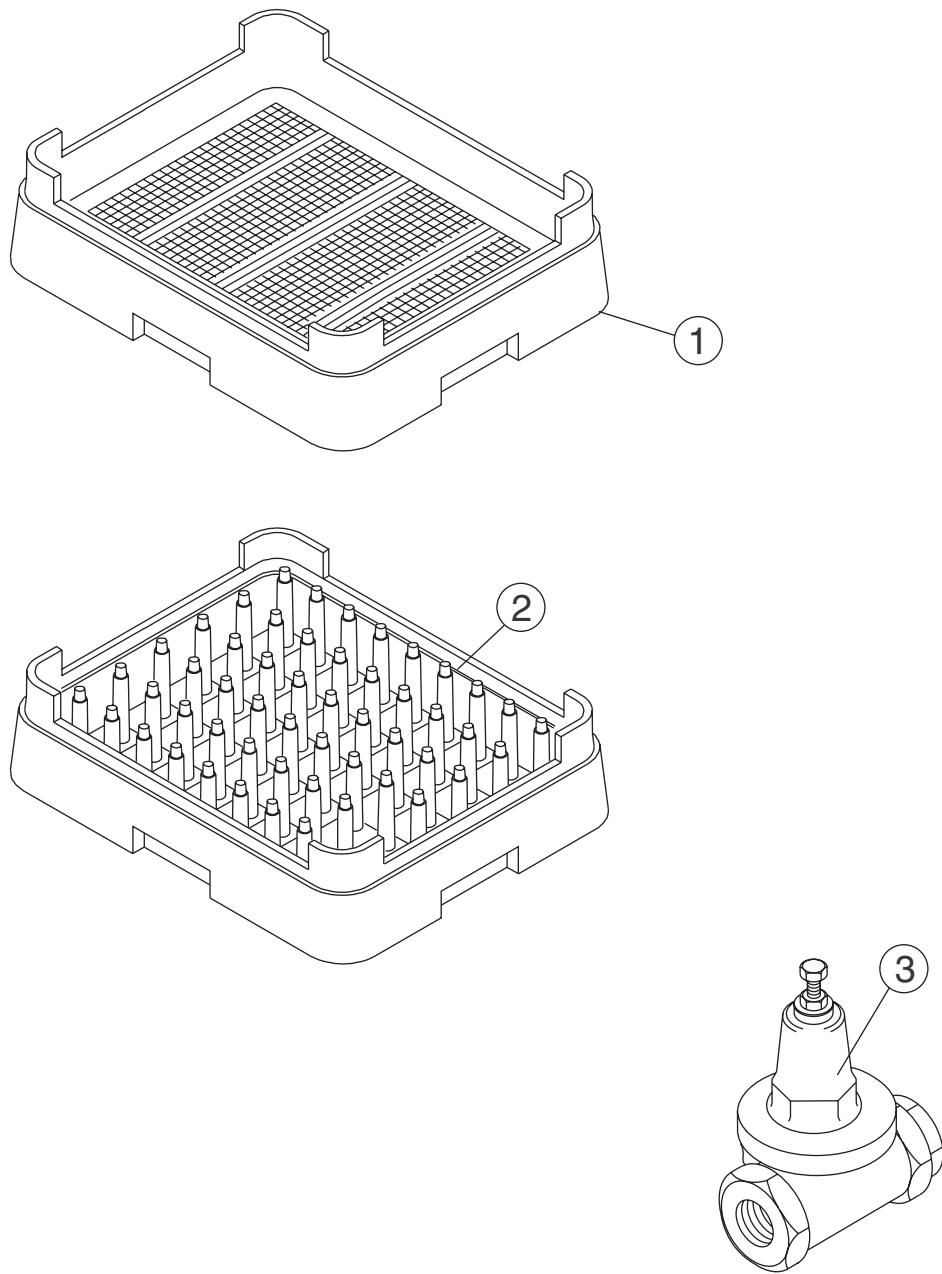

**Fig. 31 – D-HB/D-H1/D-LF
Dishracks and PRV**

D-HB/D-H1/D-LF
DISHRACKS AND PRV

Fig. 31

Item No.

**Part
No.**

Part Description

Qty.

1	101273	Rack (Flat Bottom).....	1
2	101285	Rack (Peg).	1
3	112387	Pressure Reducing Valve (3/4") (PRV)	A/R

**THIS PAGE
INTENTIONALLY
LEFT BLANK**

APPENDICES



APPENDIX A**DRAIN TIMER/VALVE CIRCUIT**

Models D-HB, D-H1, and D-LF uses a drain circuit consisting of a 3cr relay, 10 minute timer, and a drain valve.

OPERATION:

- 1) When the power switch is pushed to the OFF position, the 3CR relay coil is then energized, closing the 3CR contacts.
- 2) Drain timer now is powered from the 3CR relay, which opens the drain valve for ten (10) minutes.
- 3) When the timer times out (10 minutes), the drain valve closes and machine has completed it's drain cycle.

NOTE: Flip the power switch on the machine to ON then OFF position to open the drain for an additional drain cycle. Repeat this step as necessary.

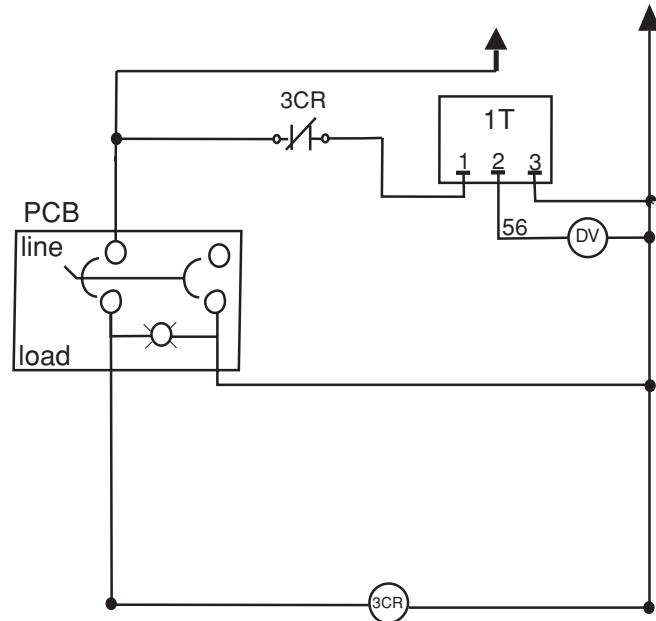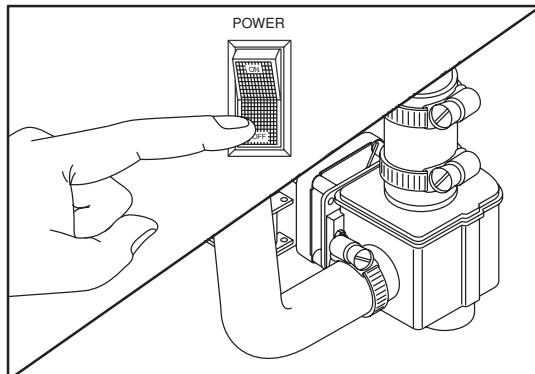

ELECTRICAL SCHEMATICS

