

Tea Concentrate Dispenser

Features

Tea Concentrate Dispenser

- Venturi valve creates siphon pulling product through to mixing valve.
- Rear shut-off valve for cleaning dispenser.
- Accommodates up to two, 3.8 liter (1 gallon) jugs in top of container, or bag-in-box.
- Side off-set handles for side-by-side placement.
- Built-in pressure regulator provides consistent product to water ratio.
- Mixes a range of 5:1 to 15:1 concentrate to water ratio.
- Solid plastic lid.



Model TCD-1

Dimensions: 22.9" H x 12.8" W x 18.1" D
(58.2cm H x 32.5cm W x 46cm D)

Model TCD-2

Dimensions: 22.9"H x 12.8"W x 18.1" D
(58.2cm H x 32.5cm W x 46cm D)



Bottom View



Top View

For current specification sheets and other information, go to www.bunn.com.

Related Products

TDO Lid Retainer

Product No. : 35136.0001

Drip Tray

Product No. : 38029.1000

Product No. : 38029.1001 (for use with TCD
Booster Stand)

TCD Booster Stand

Product No. : 38839.0000TCD



Model

Agency Listing

TCD-1



TCD-2



Dimensions & Specifications



CANADA







| Model | Product # | Cubic Measure | Shipping Weight |
|-------|------------|---|------------------------|
| TCD-1 | 37750.0000 | 4.25 ft ³ (.12 m ³) | 17.1 lbs. (7.76 kg) |
| TCD-2 | 37750.0002 | 4.25 ft ³ (.12 m ³) | 19.6 lbs. (8.9 kg) |

Electrical: No electrical

Plumbing: 20-90 psi (138-621 kPa). Model supplied with a 1/4" male flare fitting. Shut-off valve.

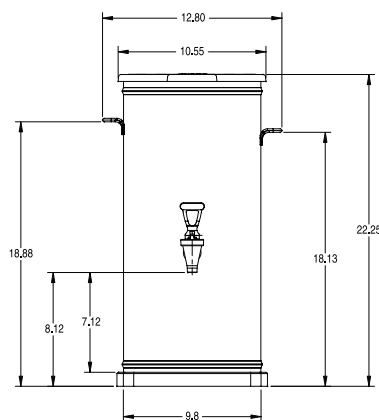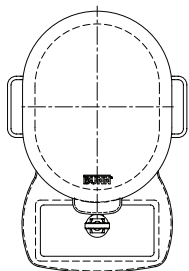

TCD-1

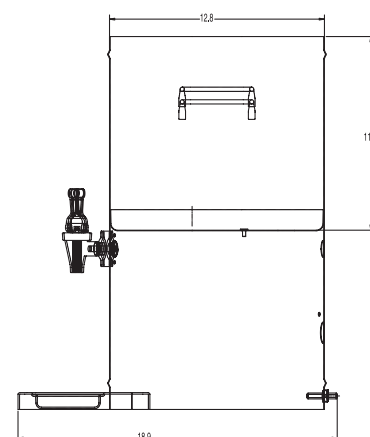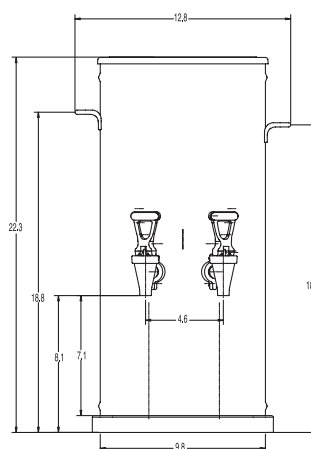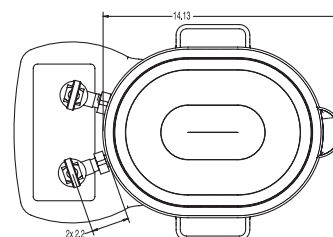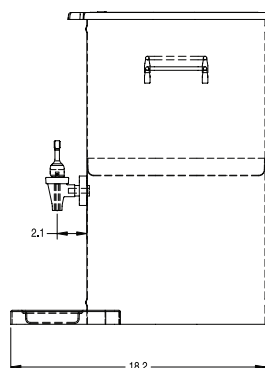

TCD-2

Bunn-O-Matic Corporation of Canada - 280 Industrial Pkwy. S. Aurora, Ontario L4G 3T9 • 905-841-2866 • Fax 905-841-2775 • www.bunn.com

BUNN® practices continuous product research and improvement. We reserve the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.

All dimensions shown in inches. Bunn Corporation owns all copyrights relating to materials in this publication. Please contact Bunn Corporation to request permission to reproduce any portion of this publication.