

F18 SERIES

Service and Installation Manual

Please read this manual completely before attempting to install or operate this equipment! Notify carrier of damage! Inspect all components immediately.













Refrigerated Work Tables, Salad Tables & Freezer Bases



September 2010



Important Warning And Safety Information

WARNING Read This Manual Thoroughly Before Operating, Installing, Or Performing Maintenance On The Equipment.

WARNING Failure To Follow Instructions In This Manual Can Cause Property Damage, Injury Or Death.

WARNING Do Not Store Or Use Gasoline Or Other Flammable Vapors Or Liquids In The Vicinity Of This Or Any Other Appliance.

WARNING Unless All Cover And Access Panels Are In Place And Properly Secured, Do **Not Operate This Equipment.**

WARNING Do Not Clean With Water Jet.



CAUTION Observe the following:



- Minimum clearances must be maintained from all walls and combustible materials.
- Keep the equipment area free and clear of combustible material.
- Adequate clearance for air openings.
- Operate equipment only on the type of electricity indicated on the specification plate.
- Retain this manual for future reference.



Contents

Serial Number Location	3
Receiving & Inspecting	3
Specifications	4-6
Installation	7
Operation	8
Pressure Control Settings	8
Maintenance	9-10
Wiring Diagrams	11-12
Replacement Part Lists	13-16
Replacement Part Assemblies	17-20
Warranties	21-23

Serial Number Location

The serial number on all self-contained F18 Series refrigerated work tables and freezer bases is located on the electrical specifications tag affixed inside the compressor section next to the pressure control.

On remote refrigerated bases with doors, the tag is inside the unit on the coil side. On remote refrigerated bases with drawers, the tag is affixed to the drawer divider. On remote freezer bases, the tag is located on the inside back of the unit.

Always have the serial number of your unit available when calling for parts or service. A complete list of authorized Delfield parts depots is available at www.delfield.com.

©2010 The Delfield Company. All rights reserved. Reproduction without written permission is prohibited. "Delfield" is a registered trademark of The Delfield Company.

Receiving and Inspecting the Equipment

Even though most equipment is shipped crated, care should be taken during unloading so the equipment is not damaged while being moved into the building.

- 1. Visually inspect the exterior of the package an skid or container. Any damage should be noted and reported to the delivering carrier immediately.
- 2. If damaged, open and inspect the contents with the carrier.
- In the event that the exterior is not damaged, yet upon opening, there is concealed damage to the equipment notify the carrier. Notification should be made verbally as well as in written form.
- Request an inspection of the concealed equipment. This should be done within 10 days from receipt of the equipment.
- Check the lower portion of the unit to be sure legs or casters are not bent.

- 6. Also open the compressor compartment housing and visually inspect the refrigeration package. Be sure lines are secure and base is still intact.
- 7. Freight carriers can supply the necessary forms upon request.
- 8. Retain all crating material until an inspection has been made or waived.

Uncrating the Equipment

First cut and remove the banding from around the crate. Remove the front of the crate material, use of some tools will be required. If the unit is on legs remove the top of the crate as well and lift the unit off the skid. If the unit is on casters it can be "rolled" off the skid.



Specifications

Remote Refrigerated Work Tables

Model	# Of Doors	Shelf Max Load (lbs)	Base Storage Cap. FT ³	Shelf Area FT ²	Volts/Hertz/ Phase	Amps	BTU Load	EVAP. BTU/°TD
F18WR31	(1) 19"	70	7.56	2.56	115/60/1	3.0	383	120/3°
F18WR39	(1) 27"	124	10.23	3.95	115/60/1	3.0	465	120/4°
F18WR44	(2) 19"	70	12.14	5.12	115/60/1	3.0	605	120/5°
F18WR52	(1) 19" & (1) 27"	70/124	15.12	6.51	115/60/1	3.0	686	120/6°
F18WR60	(2) 27"	124	18.10	7.90	115/60/1	3.0	768	120/6°
F18WR70	(2) 32"	140	21.23	9.64	115/60/1	3.0	869	120/7°
F18WR79	(2) 27" & (1) 19"	124/70	24.48	10.29	115/60/1	6.0	1050	240/4°
F18WR87	(3) 27"	124	27.46	11.85	115/60/1	6.0	1131	240/5°

Self-Contained Refrigerated Work Tables

	" O. D		Base Storage	Shelf	Volts/Hertz/			DT11.0	R-404A		NEMA
Model	# Of Doors	Load (lbs)	Cap. FT ³	Area FT ²	Phase	Amps	BTU Load	BTU System Cap.	OZ.	H.P.	Plug
F18WC39	(1) 19"	70	7.56	2.56	115/60/1	8.0	383	1462	16	1/5	5-15P
F18WC47	(1) 27"	124	10.23	3.95	115/60/1	8.0	465	1462	16	1/5	5-15P
F18WC52	(2) 19"	70	12.14	5.12	115/60/1	8.0	605	1462	16	1/5	5-15P
F18WC60	(1) 19" & (1) 27"	70/124	15.12	6.51	115/60/1	8.0	686	1462	16	1/5	5-15P
F18WC68	(2) 27"	124	18.10	7.90	115/60/1	10.0	768	1462	16	1/4	5-15P
F18WC78	(2) 32"	140	21.23	9.64	115/60/1	10.0	869	1994	16	1/4	5-15P
F18WC87	(2) 27" & (1) 19"	124/70	24.48	10.29	115/60/1	10.0	1050	2261	16	1/4	5-15P
F18WC95	(3) 27"	124	27.46	11.85	115/60/1	10.0	1131	2261	16	1/4	5-15P

Remote Refrigerated Mega Top Salad Tables

Model	# Of Doors	Shelf Max Load (lbs)	Base Storage Cap. FT ³	# of Pans	Volts/Hertz/ Phase	Amps	BTU Load Base/Rail	EVAP. BTU/°TD Base/Rail
F18MR31A	(1) 19"	70	4.14	6	115/60/1	3.0	280/265	120/2°/12/22°
F18MR44A	(2) 19"	70	7.15	6	115/60/1	3.0	444/265	120/4°/12/22°
F18MR44D	(2) 19"	70	7.15	12	115/60/1	3.0	444/529	120/4°/22/25°
F18MR52A	(1) 19" & (1) 27"	70/124	8.97	6	115/60/1	3.0	515/265	120/4°/12/22°
F18MR52D	(1) 19" & (1) 27"	70/124	8.97	12	115/60/1	3.0	515/529	120/4°/22/25°
F18MR52E	(1) 19" & (1) 27"	70/124	8.97	18	115/60/1	3.0	515/794	120/4°/31/26°

Self-Contained Refrigerated Mega Top Salad Tables

Model	# Of Doors	Shelf Max Load (lbs)	Base Storage Cap. FT ³	# of Pans	Volts/Hertz/ Phase	Amps	BTU Load Base/Rail	BTU System Cap. Base/Rail	R-404A oz.	H.P.	NEMA Plug
F18MC39A	(1) 19"	70	4.14	6	115/60/1	10.0	280/265	1903/925	16	1/4	5-15P
F18MC39D	(1) 19"	70	4.14	12	115/60/1	10.0	280/529	1903/1156	16	1/4	5-15P
F18MC52A	(2) 19"	70	7.15	6	115/60/1	10.0	444/265	1903/925	16	1/4	5-15P
F18MC52D	(2) 19"	70	7.15	12	115/60/1	10.0	444/529	1903/1156	16	1/4	5-15P
F18MC52E	(2) 19"	70	7.15	18	115/60/1	10.0	444/794	1903/1321	16	1/4	5-15P
F18MC60A	(1) 19" & (1) 27"	70/124	8.97	6	115/60/1	10.0	515/265	2314/864	16	1/4	5-15P
F18MC60D	(1) 19" & (1) 27"	70/124	8.97	12	115/60/1	10.0	515/529	2314/1141	16	1/4	5-15P
F18MC60E	(1) 19" & (1) 27"	70/124	8.97	18	115/60/1	10.0	515/794	2314/1361	16	1/4	5-15P
F18MC60F	(1) 19" & (1) 27"	70/124	8.97	24	115/60/1	10.0	515/1058	2314/1540	16	1/4	5-15P



Specifications

Remote Refrigerated Salad Top Tables

Model	# Of Doors	Shelf Max Load (lbs)	Base Storage Cap. FT ³	# of Pans	Volts/Hertz/ Phase	Amps	BTU Load Base/Rail	Evap. BTU/°TD Base/Rail
F18SR31A	(1) 19"	70	4.14	6	115/60/1	3.0	280/265	120/2°/13/21°
F18SR44A	(2) 19"	70	7.15	6	115/60/1	3.0	491/441	120/4°/13/21°
F18SR44B	(2) 19"	70	7.15	8	115/60/1	3.0	491/441	120/4°/16/22°
F18SR44C	(2) 19"	70	7.15	10	115/60/1	3.0	491/441	120/4°/19/23°
F18SR52A	(1) 19" & (1) 27"	70/124	8.97	6	115/60/1	3.0	532/529	120/4°/13/21°
F18SR52B	(1) 19" & (1) 27"	70/124	8.97	8	115/60/1	3.0	532/529	120/4°/16/22°
F18SR52C	(1) 19" & (1) 27"	70/124	8.97	10	115/60/1	3.0	532/529	120/4°/19/23°
F18SR52D	(1) 19" & (1) 27"	70/124	8.97	12	115/60/1	3.0	532/529	120/4°/23/23°

Self-Contained Refrigerated Salad Top Tables

Model	# Of Doors	Shelf Max Load (lbs)		# of Pans	Volts/Hertz/ Phase	Amps	BTU Load Base/Rail	BTU System Cap. Base/Rail	R-404A oz.	H.P.	NEMA Plug
F18SC39A	(1) 19"	70	4.14	6	115/60/1	10.0	280/265	1903/745	16	1/4	5-15P
F18SC39B	(1) 19"	70	4.14	8	115/60/1	10.0	280/353	1903/867	16	1/4	5-15P
F18SC52A	(2) 19"	70	7.15	6	115/60/1	10.0	444/265	1903/745	16	1/4	5-15P
F18SC52B	(2) 19"	70	7.15	8	115/60/1	10.0	444/353	1903/867	16	1/4	5-15P
F18SC52C	(2) 19"	70	7.15	10	115/60/1	10.0	444/441	1903/971	16	1/4	5-15P
F18SC52D	(2) 19"	70	7.15	12	115/60/1	10.0	444/529	1903/1061	16	1/4	5-15P
F18SC60A	(1) 19" & (1) 27"	70/124	8.97	6	115/60/1	10.0	515/265	2314/667	16	1/4	5-15P
F18SC60B	(1) 19" & (1) 27"	70/124	8.97	8	115/60/1	10.0	515/353	2314/798	16	1/4	5-15P
F18SC60C	(1) 19" & (1) 27"	70/124	8.97	10	115/60/1	10.0	515/441	2314/916	16	1/4	5-15P
F18SC60D	(1) 19" & (1) 27"	70/124	8.97	12	115/60/1	10.0	515/529	2314/1023	16	1/4	5-15P

Remote Refrigerated Reduced Height Rail

Model	# Of Doors	Shelf Max Load (lbs)	Base Storage Cap. FT ³	Shelf Area FT ²	# of Pans	Volts/Hertz/ Phase	Amps	BTU Load Base/Rail	Evap. BTU/°TD Base/Rail
F18DR44	(2) 19"	70	9.54	5.12	10	115/60/1	3.0	547/441	120/5°/19/23°
F18DR52	(1) 19" & (1) 27"	70/124	13.89	6.51	12	115/60/1	3.0	625/529	120/5°/23/23°
F18DR60	(2) 27"	124	16.64	7.9	16	115/60/1	5.0	703/617	120/6°/26/24°
F18DR70	(2) 32"	140	22.96	9.64	18	115/60/1	5.0	800/794	120/7°/32/24°
F18DR79	(1) 19" & (2) 27"	70/124	22.47	10.29	18	115/60/1	5.0	962/882	240/4°/36/25°
F18DR87	(3) 27"	124	25.22	11.85	22	115/60/1	5.0	1032/970	240/4°/39/25°

Self-Contained Refrigerated Reduced Height Rail

Model	# Of Doors	Shelf Max Load (lbs)	Base Storage Cap. FT ³	Shelf Area FT ²	# of Pans	Volts/Hertz/ Phase	Amps	BTU Load Base/Rail	BTU System Cap. Base/Rail	R-404A oz.	H.P.	NEMA Plug
F18DC52	(2) 19"	70	9.54	5.12	12	115/60/1	10.0	547/529	1903/1061	16	1/4	5-15P
F18DC60	(1) 19" & (1) 27"	70/124	13.89	6.51	14	115/60/1	12.0	625/617	2314/1121	24	1/3	5-15P
F18DC68	(2) 27"	124	16.64	7.9	18	115/60/1	12.0	703/794	2314/1544	24	1/3	5-15P
F18DC82	(2) 32"	140	22.96	9.64	20	115/60/1	14.0	800/882	3097/1648	32	1/2	5-20P
F18DC91	(1) 19" & (2) 27"	70/124	22.47	10.29	22	115/60/1	14.0	962/1058	3807/1839	32	1/2	5-20P
F18DC99	(3) 27"	124	25.22	11.85	24	115/60/1	14.0	1032/1147	3807/1839	32	1/2	5-20P



Specifications

Remote Refrigerated Reduced Height Rail

Model	# Of Doors	Shelf Max Load (lbs)	Base Storage Cap. FT ³	Shelf Area FT ²	Volts/Hertz/ Phase	Amps	BTU Load Base/Rail	Evap. BTU/°TD Base/Rail	# of Pans
F18RR44	(2) 19"	70	9.49	5.12	115/60/1	3.0	547/441	120/5°/19/23°	10
F18RR52	(1) 19" & (1) 27"	70/124	11.81	6.51	115/60/1	3.0	625/529	120/5°/23/23°	12
F18RR60	(2) 27"	124	14.14	7.9	115/60/1	5.0	703/617	120/6°/26/24°	16
F18RR70	(2) 32"	140	17.05	9.64	115/60/1	5.0	800/794	120/7°/32/24°	18
F18RR79	(1) 19" & (2) 27"	70/124	18.68	10.29	115/60/1	5.0	962/882	240/4°/36/25°	18
F18RR87	(3) 27"	124	21.30	11.85	115/60/1	5.0	1032/970	240/4°/39/25°	22

Self-Contained Refrigerated Reduced Height Rail

Model	# Of Doors	Shelf Max Load (lbs)	Base Storage Cap. FT ³	Shelf Area FT ²	Volts/Hertz/ Phase	Amps	BTU Load Base/Rail	BTU System Cap. Base/Rail	# of Pans	R-404A oz.	H.P.	NEMA Plug
F18RC52	(2) 19"	70	9.49	5.12	115/60/1	10.0	547/529	1903/1061	12	16	1/4	5-15P
F18RC60	(1) 19" & (1) 27"	70/124	11.81	6.51	115/60/1	12.0	625/617	2314/1121	14	24	1/3	5-15P
F18RC68	(2) 27"	124	14.14	7.9	115/60/1	12.0	703/794	2314/1544	16	24	1/3	5-15P
F18RC82	(2) 32"	140	17.05	9.64	115/60/1	14.0	800/882	3097/1648	20	32	1/2	5-20P
F18RC91	(1) 19" & (2) 27"	70/124	18.68	10.29	115/60/1	14.0	962/1058	3807/1839	22	32	1/2	5-20P
F18RC99	(3) 27"	124	21.30	11.85	115/60/1	14.0	1032/1147	3807/1839	24	32	1/2	5-20P

Remote Freezer Base

Model	# Of Doors	Shelf Max Load (lbs)	Base Storage Cap. FT ³	Shelf Area FT ²	Volts/Hertz/ Phase	Amps	BTU Load Base/Rail	Evap. BTU/°TD
F18FR35	(1) 19"	70	5.58	2.56	115/60/1	10.0	943	160/6°
F18FR50	(2) 19"	70	12.21	5.12	115/60/1	10.0	1471	160/9°
F18FR58	(1) 19" & (1) 27"	70/124	15.00	6.51	115/60/1	10.0	1844	160/10°
F18FR66	(2) 27"	124	17.79	7.9	115/60/1	10.0	2020	160/11°
F18FR76	(2) 32"	140	21.28	9.64	115/60/1	10.0	2437	160/13°

Self-Contained Freezer Base

Model	# Of Doors	Shelf Max Load (lbs)	Base Storage Cap. FT ³	Shelf Area FT ²	Volts/Hertz/ Phase	Amps	BTU Load Base/Rail	BTU System Cap. Base/Rail	H.P.	R-404A oz.	NEMA Plug
F18FC43	(1) 19"	70	5.58	2.56	115/60/1	10.0	943	1558	1/3	24	5-15P
F18FC62	(2) 19"	70	12.21	5.12	115/60/1	12.0	1471	1776	1/2	40	5-15P
F18FC70	(1) 19" & (1) 27"	70/124	15.00	6.51	115/60/1	16.0	1647	2713	3/4	56	5-20P
F18FC78	(2) 27"	124	17.79	7.9	115/60/1	16.0	1824	2713	3/4	56	5-20P
F18FC88	(2) 32"	140	21.28	9.64	115/60/1	16.0	2045	2713	3/4	56	5-20P

Self-Contained Dual Rails

Model	# Of Doors	Shelf Max I Load (lbs)	Base Storage Cap. FT ³	Shelf Area FT ²	Volts/Hertz/ Phase	Amps	BTU Load Base/Rail	BTU System Cap. Base/Rail	H.P.	R-404A oz.	NEMA Plug
F18PD48	(1) 27"	124	9.38	3.95	115/60/1	10.0	424/1058	2001/1865	1/5, 1/3	40	5-20P
F18PD72	(2) 27"	124	16.64	7.90	115/60/1	12.7	703/1588	2001/3174	1/5. 1/2	48	5-20P



Installation

Location

These units are intended for indoor use only. Be sure the location chosen has a floor strong enough to support the total weight of the cabinet and contents. A fully loaded 72" (183cm) long model may weigh as much as 1500 pounds (680kg)! Reinforce the floor as necessary to provide for maximum loading.

It is very important to allow for proper air flow, both inside and outside.

Avoid hot corners and locations near stoves, ovens and other pieces of cooking equipment.



It is recommended that the unit be installed no closer than 1" (2.54cm) from any wall. Do not install the unit near any combustible material or object affected by heat or moisture.

PDL models also require 14" (36cm) clearance at the top and 6" (15cm) clearance at the bottom (casters).

Leveling

A level cabinet looks better and will perform better because the drain pan will drain properly, the doors will line up with the frames properly, and the cabinet will not be subject to undue strain.

A unit on legs will have an adjustable bullet foot on each leg, adjust each for a level unit. A unit on casters will not be adjustable. Be sure the unit is on a level floor, make necessary changes to the floor for proper level.

Lock all front casters to ensure the stability of the unit.

Plumbing

Self-contained models are standard with a condensate evaporator. If, for some reason a unit does not have a condensate evaporator. or if the evaporator fails, the unit's drain must have an outlet to an appropriate drainage area or container. A refrigerated rail will have a 1" (2.54cm) drain which will need to be run to an appropriate floor drain or container. The drain will be stubbed to the bottom of the machine compartment. Either run drain to a floor drain or add a valve to the base of the machine compartment and drain the rail to a container when convenient. The LiquiTec option will NOT have a drain available.



Moisture collecting from improper drainage can create a slippery surface on the floor and a hazard to employees. It is the owner's responsibility to CAUTION provide a container or outlet for drainage.

Electrical connection

Refer to the specification pages amperage data, the serial tag, your local code or the National Electrical Code to be sure the unit is connected to the proper power source. A protected circuit of the correct voltage and amperage must be run for connection of the line cord, or permanent connection of the unit.

Self-contained units with a cord and plug have an ON/OFF switch located directly behind the louvered panel covering the compressor section. Simply turn the switch to **ON** to begin operation.



The power switch must be turned to OFF and the unit disconnected from the power source whenever performing service or maintenance functions.

Never operate the unit without the louvered panel in place!

If electrical receptacles are to be mounted in the unit's backsplash, they must be wired independently from the existing unit wiring.



Operation

After turning the **ON/OFF** switch to **ON** the unit's compressor will begin operating. Delfield refrigerated bases are designed to maintain an operational temperature of 36°F to 40°F (2°C to 4°C). Temperature in the salad top and refrigerated rail opening is 33°F to 41°F (0°C to 5°C) with pans recessed 2" (5.1cm) on a standard wrapped refrigerated rail or flush with the LiquiTec option at 86°F (30°C) ambient room temperature. Freezer bases are designed to maintain an operational temperature of 0°F (-18°C).



Do not place hot pans on/against the blue ABS liner. Do not throw items into the storage area. Failure to heed these recommendations could result in damage to the interior of the cabinet or to the blower coil.



NOTE:

Overloading the storage area, restricting the air flow, and continuous opening and closing of the doors and drawers will hamper the units ability to maintain operational temperature.

Refrigerated rail units

Product in the rail should be removed to the refrigerated base at the end of the day. This allows you to turn the rail off at night to save energy and the rail will have time to defrost as needed. It also helps maintain product quality. The standard wrapped refrigerated units are controlled by the pressure control which is set to maintain the proper rail temperature. An on/off switch is also provided for the rail and is required to be shut off at night. The rail switch shuts off the rail only. With a LiquiTec rail a thermostat is provided to maintain rail temperature as well as the rail on/off switch. The LiquiTec rail is required to be shut off at night as well to allow for defrosting. To ensure product quality in the rail it is recommended that product be rotated every four hours.



If adding any item to the unit, be sure to keep in mind the location of the refrigeration lines on wrapped rail units. A refrigeration leak in a rail is extremely difficult and costly to repair. In some cases it cannot be repaired at all.

Pressure Control Settings

Factory recommended low-pressure control settings are:

HFC-404A refrigerators: 85psi (5.86bar) cut-in and 65psi

(4.48bar) cut-out to maintain approximate interior temperature of

38°F (3°C).

Differential setting of 20psi (1.38bar).

HFC-404A freezers: 32psi (2.21bar) cut-in and 8psi (.552bar)

cut-out to maintain approximate interior temperature of 0°F to 5°F

(-18°C to -15°C).

Differential setting of 24psi (1.65bar).

HFC-404A refrigerators with LiquiTec Rail:

20psi (1.38bar) cut-in and 10psi


(.689bar) cut-out

Differential setting of 10psi (.689bar) Temperature control for LiquiTec Rail, 25°F (-4°C) cut in and 18°F (-8°C) cut-

out.



Pressure control settings are measured in pressure, not temperature.

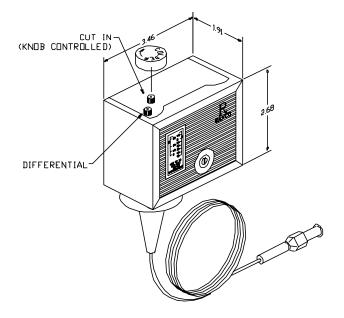



Maintenance

Door Gasket Maintenance

Door gaskets require regular cleaning to prevent mold and mildew build up and also to retain the elasticity of the gasket. Gasket cleaning can be done with the use of warm soapy water. Avoid full strength cleaning products on gaskets as this can cause them to become brittle and crack. Never use sharp tools or knives to scrape or clean the gasket. Gaskets can be easily replaced and do not require the use of tools or an authorized service person. The gaskets are "Dart" style and can be pulled out of the groove in the door and new gaskets can be "pressed" back into place.

Drain Maintenance - Base

Each unit has a drain located inside the unit that removes the condensation from the evaporator coil and routes it to an external condensate evaporator pan. Each drain can become loose or disconnected during normal use. If you notice water accumulation on the inside of the unit be sure the drain tube is connected to the evaporator drain pan. If water is collecting underneath the unit make sure the end of the drain tube is in the condensate evaporator in the machine compartment. The leveling of the unit is important as the units are designed to drain properly when level. Be sure all drain lines are free of obstructions.

Drawer Maintenance Drawer Assembly Cleaning

The drawer assembly is designed to be cleaned easily. Both drawer and tracks are removable without tools. The drawer tracks are dishwasher safe or can be cleaned in a sink with detergents and a soft bristle brush. Drawers and tracks should be cleaned on a weekly basis

Remove Drawers

Pull the drawer box out until it stops. Lift up on the drawer front and pull the drawer box completely out. Using a soft bristle brush, clean the track on the bottom of the drawer box. When finished, it should be wiped clean of all food and debris.

Tracks

The drawer box assembly must be removed. Pull the drawer tracks out until they hit a stop. Locate blue safety clips towards the back of each drawer track. Blue safety clips have a tab on the top. Push the tab back until it clicks. Lift up and pull the drawer tracks all



the way out of the drawer cage. The drawer tracks are dishwasher safe or can be cleaned in a sink with detergents and a soft bristle brush. Drawers and tracks should be cleaned on a weekly basis. Using a soft

bristle brush, wash the track making sure each roller is thoroughly cleaned. The drawer cage should be cleaned with a soft bristle brush, removing any food and debris gathered on the bottom ledge. Once it's cleaned thoroughly with a soft bristle brush, wipe remaining debris clean with a soft towel.

Reassembly

Push the drawer tracks into the drawer cage. The blue safety clip must remain pushed towards the back. Lift up and slide the drawer track all the way into the drawer cage. The blue safety clip will lock in place automatically. Once all tracks are replaced, insert the drawer box. Rest the drawer box bottom track on the front track roller. Then push the drawer back in place SLOWLY. When the drawer box is about half way in you will hit a STOP. You must lift the front of the drawer up approximately ½" (1.3cm) to continue inward. Clean tracks as often as possible. The cleaner the tracks are the better they will operate.

Caster Maintenance

Wipe casters with a damp cloth monthly to prevent corrosion.



The power switch must be turned to OFF and the unit disconnected from the power source whenever performing service, maintenance functions or cleaning the refrigerated area.

Refrigerators and Freezers

The interior and exterior can be cleaned using soap and warm water. If this isn't sufficient, try ammonia and water or a nonabrasive liquid cleaner. When cleaning the exterior, always rub with the "grain" of the stainless steel to avoid marring the finish. Do not use an abrasive cleaner because it will scratch the stainless steel and can damage the breaker strips and gaskets.

Stainless Steel Care and Cleaning

To prevent discoloration of rust on stainless steel several important steps need to be taken. First, we need to understand the properties of stainless steel. Stainless steel contains 70-80% iron, which will rust. It also contains 12-30% chromium, which forms an invisible passive film over the steels surface, which acts as a shield against corrosion. As long as the protective layer is intact, the metal is still stainless. If the film is broken or contaminated, outside elements can begin to breakdown the steel and begin to form discoloration of rust. Proper cleaning of stainless steel requires soft cloths or plastic scouring pads.

NEVER USE STEEL PADS, WIRE BRUSHES OR SCRAPERS!

Cleaning solutions need to be alkaline based or non-chloride cleaners. Any cleaner containing chlorides will damage the protective film of the stainless steel. Chlorides are also commonly found in hard water, salts, and household and industrial cleaners. If cleaners containing chlorides are used be sure to rinse repeatedly and dry thoroughly. Routine cleaning of stainless steel can be done with soap and water. Extreme stains or grease should be cleaned with a non-abrasive cleaner and plastic scrub pad. Always rub with the grain of the steel. There are stainless steel cleaners available which can restore and preserve the finish of the steels protective layer. Early signs of stainless steel breakdown are small pits and cracks. If this has begun, clean thoroughly and start to apply stainless steel cleaners in attempt to restore the passivity of the steel.



Never use an acid based cleaning solution! Many food products have an acidic content, which can deteriorate the finish. Be sure to clean the stainless steel surfaces of ALL food products. Common items include, tomatoes, peppers and other vegetables.



Maintenance, continued

Cleaning the Condenser Coil

In order to maintain proper refrigeration performance, the condenser fins must be cleaned of dust, dirt and grease regularly. It is recommended that this be done at least every three months. If conditions are such that the condenser is totally blocked in three months, the frequency of cleaning should be increased. Clean the condenser with a vacuum cleaner or stiff brush. If extremely dirty, a commercially available condenser cleaner may be required.

Failure to maintain a clean condenser coil can initially cause high temperatures and excessive run times. Continuous operation with a dirty or clogged condenser coil can result in compressor failure. Neglecting the condenser coil cleaning procedures will void any warranties associated with the compressor and cost to replace the compressor.



Never use a high-pressure water wash for this cleaning procedure as water can damage the electrical components located near or at the condenser coil.

Doors/Hinges

Over time and with heavy use doors the hinges may become loose. If this happens tighten the screws that mount the hinge brackets to the frame of the unit. Loose or sagging doors can cause the hinges to pull out of the frame, which may damage both the doors and the hinges. In some cases this may require qualified service agents or maintenance personnel to perform repairs.



Do not place hot pans on/against the blue ABS liner. Do not throw items into the storage area. Failure to follow these recommendations could result in damage to the interior of the cabinet or to the blower coil. Overloading the storage area, restricting the airflow, and continuous opening and closing of the doors and drawers will hamper the units ability to maintain operational temperature.

Refrigerated rail units

Product in the rail should be removed to the refrigerated base at the end of the day. This allows you to turn the rail off at night to save energy and to defrost the rail. It also helps maintain product quality. The standard wrapped refrigerated rail units are controlled by a low-pressure control that is set to maintain the proper rail temperature. An on/off switch is also provided for the rail and is required to be shut off at night. With a LiquiTec rail a thermostat is provided to maintain rail temperature as well as the rail on/off switch. The LiquiTec rail is required to be shut off at night as well to allow for defrosting. To ensure product quality in the rail it is recommended that product be rotated every four hours.



If adding any item to the unit, be sure to keep in mind the location of the refrigeration lines on wrapped rail units. A refrigeration leak in a rail is extremely difficult and costly to repair. In some cases it cannot be repaired at all.

Preventing blower coil corrosion

To help prevent corrosion of the blower coil, store all acidic items, such as pickles and tomatoes, in sealable containers. Immediately wipe up all spills.




Units with pans should be operated with pans in place. Operating the unit without all pans in place will lower efficiency and may damage the unit.


Continuous opening and closing of the doors will hamper the unit's ability to maintain optimum refrigeration temperature. Top section is not intended for overnight storage. Product should be removed from pans. Pans can remain in unit while empty.



Wiring Diagram, F18WC

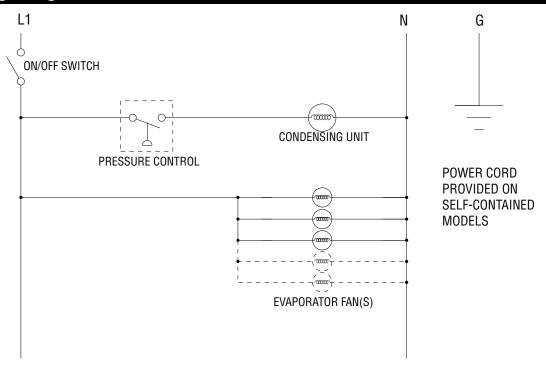


Wiring Diagram, F18MC, F18SC, F18BC & F18RC

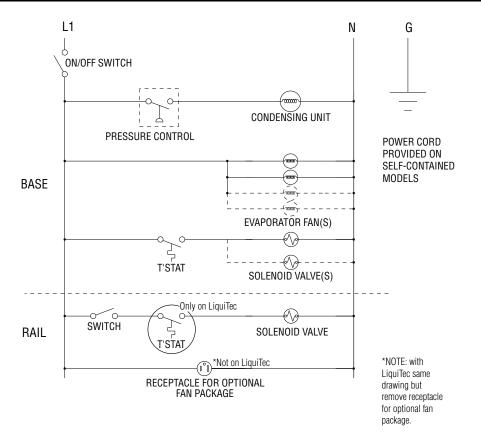




Wiring Diagram, F18PD

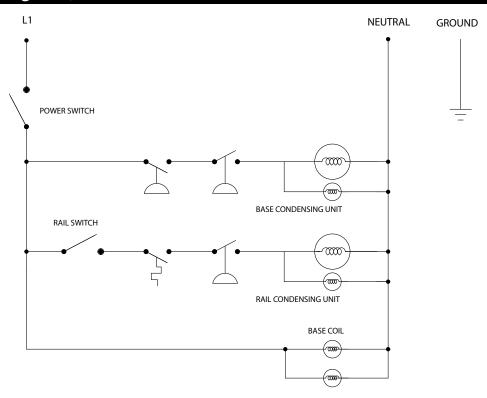

Wiring Diagram, F18FC

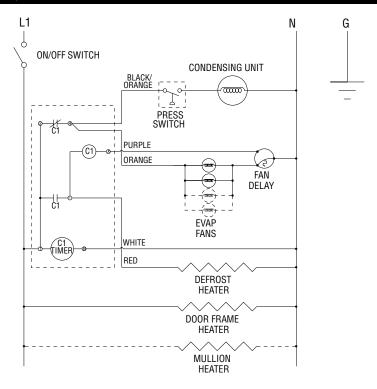



Replacement Parts

France 2194201 Thermostat, rail 3516053 Coil, solenoid, 120V/50/60HZ (rail) 3516225 Valve, expansion (rail) **000-248-0002 Coil assembly, R404A, with solenoid 3516102 Valve, solenoid (rail) **000-8N5-0035 Condensing unit, 1/3hp, R404a *** Valve, solenoid (rail) ***000-BN5-0037 Condensing unit, 1/3hp, R404a **** **** ***193927 Control, presure, low ***** **** ***234392 Hinge, pan cover, center **** **** **** Condensing unit, 1/3HP, low temp ***3234282 Hinge, pan cover, right **** **** Condensing unit, 1/2HP, low temp ***3234266 Hinge, pin (for pan cover) 2193942 Control, pressure, dual Condensing unit, 1/2HP, low temp ***3234645 Leg, 6°; s/s *** *** *** Control, pressure, low ***3977984 Shelf, 2** door *** *** *** *** *** *** *** *** *** *** *** *** *** ** *** **	51006		2190154	Switch, rocker
***000-248-0001 Coil assembly, R404A 3516225 Valve, expansion (rail) **000-248-0002 Coil assembly, R404A, with solenoid 3516102 Valve, solenoid (rail) **000-BNS-0035 Condensing unit, 1/2hp, R404a **000-AMR-0030 Condensing unit, 1/3hp, R404a **000-BNS-0030 Condensing unit, 1/4hp, R404a **000-BNS-0034 Condensing unit, 1/3HP, low temp 23234392 Hinge, pan cover, center **000-BNS-0034 Condensing unit, 1/3HP, low temp 3234282 Hinge, pan cover, left **000-BNS-0034 Condensing unit, 1/3HP, low temp 3234266 Hinge, pan cover, right **000-ENS-0034 Condensing unit, 1/3HP, low temp 3234265 Hinge, pin (for pan cover) 2193927 Control, pressure, dual 1060179 Hinge kit 2193927 Control, pressure, dual 1060179 Hinge kit 2193927 Control, pressure, dual 3977984 Shelf, 2** door 3234645 Leg, 6*, s/s 3977981 Shelf, 2** door 3231132 Shelf support, 1** blue 3977982 Shelf, 2** door 323493 Shelf, support, 1** blue	F18DC	C :	2194201	Thermostat, rail
**000-248-0002 Coil assembly, R404A, with solenoid **000-BNS-0035 Condensing unit, 1/3hp, R404a **000-BNS-0030 Condensing unit, 1/3hp, R404a **000-BNS-0030 Condensing unit, 1/3hp, R404a **000-BNS-0030 Condensing unit, 1/3hp, R404a **000-BNS-0030 Condensing unit, 1/3hP, low temp 2193927 Control, presure, low **000-BNS-0034 Condensing unit, 1/3HP, low temp 3234282 Hinge, pan cover, left **000-BNS-0033 Condensing unit, 1/2HP, low temp 9221374 Hinge, pan cover, left **000-BNS-0033 Condensing unit, 1/2HP, low temp 9221374 Hinge, pan cover, left **000-BNS-0003 Condensing unit, 1/2HP, low temp 9221374 Hinge, pan cover, left **000-BNS-0003 Condensing unit, 1/2HP, low temp 9221374 Hinge, pan cover, left **000-BNS-0003 Condensing unit, 1/2HP, low temp 9321374 Hinge, pan cover, left **000-BNS-0003 Condensing unit, 1/2HP, low temp 9321374 Hinge, pan cover, left **199327 Control, pressure, dual 1060179 Hinge, pan **1944 **1944 **1944 **1944 **1944 <t< td=""><td></td><td></td><td>3516225</td><td>Valve, expansion (rail)</td></t<>			3516225	Valve, expansion (rail)
****O00-BNS-0035 Condensing unit, 1/3hp, R404a ************************************		•	3516102	Valve, solenoid (rail)
**000-BNS-0037 Condensing unit, 1/3hp, R404a **18FC **000-BNS-0030 Condensing unit, 1/4hp, R404a **000-BNS-0036 Condensing unit, 1/3Hp, low temp 2193927 Control, presure, low **000-BNS-0036 Condensing unit, 1/3Hp, low temp 3234392 Hinge, pan cover, center **000-BNS-0034 Condensing unit, 1/2Hp, low temp 3234282 Hinge, pan cover, right **000-249-0000 Coil, assembly, freezer, R404a 9321374 Hinge, pin (for pan cover) 2193942 Control, pressure, dual 0160179 Hinge Kit 2193927 Control, pressure, low 3234645 Leg, 6°, 5/s 0160179 Hinge Kit 3977984 Shelf, 19" door 3234645 Leg, 6°, s/s 3977981 Shelf, 24" door 321132 Shelf support screw (coil side) 3977983 Shelf, 24" door 3234290 Shelf support screw (wall side) 2190154 Switch, rocker 3977984 Shelf, 19" door 3516025 Valve, expansion (rail) 3977984 Shelf, 22" door 3234290 Shelf support screw (coil side) 2194099 <t< td=""><td></td><td></td><td></td><td></td></t<>				
**000-BNS-0030 Condensing unit, 1/4hp, R404a **000-BNS-003G Condensate Evaporator Pan Assembly 2193927 Control, presure, low **000-BNS-003G Condensing unit, 1/3HP, low temp 3234392 Hinge, pan cover, center **000-BNS-0033 Condensing unit, 1/2HP, low temp 3234282 Hinge, pan cover, left **000-BNS-0033 Condensing unit, 1/2HP, low temp 3234266 Hinge, pan cover, left **000-BNS-0033 Condensing unit, 1/2HP, low temp 3234265 Hinge, pan cover, left **000-BNS-0033 Control, pressure, dual 3234645 Leg, 6", s/s 0160179 Hinge Kit 3977984 Shelf, 24" door 3234645 Leg, 6", s/s 3977983 Shelf, 24" door 9321132 Shelf support screw (wall side) 3977984 Switch, rocker 3977984 Shelf, 19" door 3516102 Valve, expansion (rail) 3977998 Shelf, 22" door 3516102 Valve, solenoid (rail) 3977998 Shelf, 22" door 3234290 Shelf support, 1" blue 3977983 Shelf, 22" door 321040 Shelf support screw (coil			E19EC	
2193927 Control, presure, low *000-BN5-003G Condensing unit, 1/3HP, low temp 3234392 Hinge, pan cover, left *000-BN5-0034 Condensing unit, 1/2HP, low temp 3234282 Hinge, pan cover, left *000-BN5-0030 Condensing unit, 1/2HP, low temp 3234266 Hinge, pin (for pan cover) 2193942 Control, pressure, dual 0160179 Hinge Kit 2193927 Control, pressure, low 3234645 Leg, 6°, s/s 0160179 Hinge Kit 3977984 Shelf, 24" door 3234645 Leg, 6°, s/s 3977998 Shelf, 24" door 9321040 Shelf support screw (coil side) 3977981 Shelf, 27" door 9321132 Shelf support screw (wall side) 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516102 Valve, solenoid (rail) 3977984 Shelf, 21" door 3516102 Valve, solenoid (rail) 3977988 Shelf, 21" door 3234290 Shelf support, 1" blue 3977988 Shelf, 21" door 3234290 Shelf support, 1" blue 3977988 Shelf, 21" door		- · · · · · · · · · · · · · · · · · · ·		Condensate Evaporator Pan Assembly
3234392 Hinge, pan cover, center *000-BN5-0034 Condensing unit, 3/4HP, low temp 3234282 Hinge, pan cover, left *000-BN5-0033 Condensing unit, 1/2HP, low temp 3234266 Hinge, pin (for pan cover) 2193922 Control, pressure, dual 9321374 Hinge, pin (for pan cover) 2193927 Control, pressure, dual 160179 Hinge Kit 2193927 Control, pressure, dual 3377984 Shelf, 19" door 3234645 Leg. 6", s/s 3977998 Shelf, 24" door 3231040 Shelf support screw (coil side) 3977983 Shelf, 32" door 3234290 Shelf support screw (wall side) 3978014 Switch, rocker 3977984 Shelf, 19" door 3516225 Valve, sclenoid (rail) 3977984 Shelf, 19" door 3516102 Valve, solenoid (rail) 3977983 Shelf, 27" door 3234290 Shelf support, 1" blue 3977984 Shelf, 27" door 3231132 Shelf support, 1" blue 3977983 Shelf, 52" door 3221240 Shelf support screw (coil side) 2194099 Switch, SPST				•
3234282 Hinge, pan cover, left *000-BNS-0033 Condensing unit, 1/2HP, low temp 3234266 Hinge, pan cover, right *000-249-0000 Coil, assembly, freezer, R404a 9321374 Hinge, pin (for pan cover) 2193942 Control, pressure, dual 0160179 Hinge Kit 2193927 Control, pressure, low 3234645 Leg, 6°, s/s 0160179 Hinge Kit 3977984 Shelf, 19° door 3234645 Leg, 6°, s/s 39778014 Shelf, 24° door 9321132 Shelf support screw (coil side) 3977803 Shelf, 32° door 3234290 Shelf support, 1° blue 3977983 Shelf, 32° door 3277984 Shelf, 19° door 3516102 Valve, solenoid (rail) 3977998 Shelf, 19° door 3516102 Valve, solenoid (rail) 3977983 Shelf, 24° door 3234290 Shelf support, 1° blue 3977983 Shelf, 27° door 3231132 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 3231132 Shelf support screw (wall side) 2194291 Switch, SPST, 20amp				-
3234266 Hinge, pan cover, right "000-249-0000 Coil, assembly, freezer, R404a 9321374 Hinge, pin (for pan cover) 2193942 Control, pressure, dual 0160179 Hinge Kit 2193927 Control, pressure, low 3234645 Leg, 6", s/s 0160179 Hinge Kit 3977984 Shelf, 19" door 3234645 Leg, 6", s/s 3977989 Shelf, 24" door 93211040 Shelf support screw (coil side) 3977981 Shelf, 22" door 9321132 Shelf support screw (wall side) 3977983 Shelf, 70cker 3977984 Shelf, 19" door 3516225 Valve, sepansion (rail) 3977998 Shelf, 24" door 3516022 Valve, solenoid (rail) 3977983 Shelf, 22" door 3234290 Shelf support, 1" blue 3977983 Shelf, 22" door 323100 Shelf support, 1" blue 3977983 Shelf, 22" door 3234290 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 323100 Shelf support screw (wall side) 2194211 Switch, SPST, 15amp <t< td=""><td></td><td></td><td></td><td></td></t<>				
9321374 Hinge, pin (for pan cover) 2193942 Control, pressure, dual 0160179 Hinge Kit 2193927 Control, pressure, low 3234645 Leg, 6", s/s 0160179 Hinge Kit 3977984 Shelf, 29" door 3234645 Leg, 6", s/s 3977998 Shelf, 22" door 9321132 Shelf support screw (coil side) 3978014 Shelf, 22" door 3234290 Shelf support screw (wall side) 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 2190154 Switch, rocker 3977984 Shelf, 24" door 3516025 Valve, solenoid (rail) 3977998 Shelf, 27" door 3234290 Shelf support, 1" blue 3977983 Shelf, 27" door 3231132 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 9321132 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 3516053 Coil, solenoid, 120V/50/60HZ (rail) F18FR *000-248-0001 Coil, solenoid, 120V/50/60HZ (rail) F18FR *000-248-0001 Coil, solenoid, 120V/50/60				
0160179 Hinge kit 2193927 Control, pressure, low 3234645 Leg, 6°, s/s 0160179 Hinge Kit 3977984 Shelf, 19" door 3234645 Leg, 6°, s/s 3977998 Shelf, 24" door 9321040 Shelf support screw (coil side) 3978014 Shelf, 32" door 3234290 Shelf support, 1" blue 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516225 Valve, expansion (rail) 3977984 Shelf, 19" door 3516102 Valve, solenoid (rail) 3977983 Shelf, 24" door 3234290 Shelf support, 1" blue 3977983 Shelf, 27" door 3234290 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 9321132 Shelf support screw (wall side) 2194299 Switch, SPST, 15amp 9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 20amp 718DR Timer, defrost 718FR 8516053 Coil, solenoid, 120V/50/60HZ (rail) F18FR 8000-248-0001 Coil assembly, R404A *000-249-0000 <td></td> <td></td> <td></td> <td>•</td>				•
3234645 Leg, 6°, s/s 0160179 Hinge Kit 3977984 Shelf, 19" door 3234645 Leg, 6°, s/s 3977998 Shelf, 24" door 9321040 Shelf support screw (coil side) 3978014 Shelf, 27" door 323132 Shelf support, 1" blue 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 2190154 Switch, rocker 3977984 Shelf, 19" door 3516225 Valve, spansion (rail) 3977998 Shelf, 24" door 3516102 Valve, solenoid (rail) 3977981 Shelf, 27" door 3234290 Shelf support, 1" blue 3977983 Shelf, 27" door 9321040 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 20amp 9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 20amp *000-248-0001 Coil, solenoid, 120V/50/60HZ (rail) **F18FR *000-248-0001 Coil assembly, R404A **000-249-0000 Coil, assembly, freezer, R404a 3234282 <td></td> <td></td> <td></td> <td>·</td>				·
3977984 Shelf, 19" door 3234645 Leg, 6", s/s 3977998 Shelf, 24" door 9321040 Shelf support screw (coil side) 3978014 Shelf, 27" door 9321132 Shelf support screw (wall side) 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 2190154 Switch, rocker 3977984 Shelf, 19" door 3516225 Valwe, expansion (rail) 3977998 Shelf, 24" door 3516022 Valve, solenoid (rail) 3977981 Shelf, 27" door 351602 Valve, solenoid (rail) 3977983 Shelf, 27" door 3234290 Shelf support, 1" blue 3977983 Shelf, 27" door 3234290 Shelf support, screw (coil side) 2194099 Switch, SPST, 15amp 9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 15amp 9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 15amp 3516053 Coil, solenoid, 120V/50/60HZ (rail) F18FR 3516053 Coil, solenoid, 120V/50/60HZ (rail) F18FR 3516053 Coil, solenoid				•
3977998 Shelf, 24" door 9321040 Shelf support screw (coil side) 3978014 Shelf, 27" door 9321132 Shelf support screw (wall side) 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 2190154 Switch, rocker 3977984 Shelf, 19" door 3516225 Valve, expansion (rail) 3977998 Shelf, 24" door 3516102 Valve, solenoid (rail) 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3977983 Shelf, 32" door 9321040 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 20amp Timer, defrost F18DR **Shelf support screw (wall side) **P18FR **000-248-0001 Coil, solenoid, 120V/50/60HZ (rail) **F18FR **000-248-0001 Coil assembly, R404A **000-249-0000 Coil, assembly, freezer, R404a 3234282 Hinge, pan cover, center 3516053 Coil, solenoid, 120V/50/60HZ 3234282 Hing		_		_
3978014 Shelf, 27" door 9321132 Shelf support screw (wall side) 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 2190154 Switch, rocker 3977984 Shelf, 19" door 3516225 Valve, expansion (rail) 3977998 Shelf, 24" door 3516102 Valve, solenoid (rail) 3978014 Shelf, 27" door 3234290 Shelf support, 1" blue 3977983 Shelf, 32" door 9321040 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 20amp 3516053 Coil, solenoid, 120V/50/60HZ (rail) F18FR Timer, defrost F18DR ***Since Support screw (wall side) \$16053 Coil, assembly, freezer, R404a 3234290 Hinge, pan cover, center 3516053 Coil, solenoid, 120V/50/60HZ 3234282 Hinge, pan cover, left 0160179 Hinge kit 3234266 Hinge, pan cover, right 3234645 Leg, 6", s/s 323474 Hinge, pin (for pan cover) <				_
3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 2190154 Switch, rocker 3977984 Shelf, 19" door 3516225 Valve, expansion (rail) 3977998 Shelf, 24" door 3516102 Valve, solenoid (rail) 3978014 Shelf, 27" door 3234290 Shelf support, 1" blue 3977983 Shelf, 32" door 9321040 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 20amp 2194151 Timer, defrost Timer, defrost F18DR 5316053 Coil, solenoid, 120V/50/60HZ (rail) F18FR *000-248-0001 Coil assembly, R404A *000-249-0000 Coil, assembly, freezer, R404a 3234282 Hinge, pan cover, center 3516053 Coil, solenoid, 120V/50/60HZ 3234266 Hinge, pan cover, right 3234645 Leg, 6", s/s 9321374 Hinge, pin (for pan cover) 9321040 Shelf support screw (coil side) 0160179 Hinge Kit (left or right hinged) 9321132				
2190154 Switch, rocker 3977984 Shelf, 19" door 3516225 Valve, expansion (rail) 3977998 Shelf, 24" door 3516102 Valve, solenoid (rail) 3978014 Shelf, 27" door 3234290 Shelf support, 1" blue 3977983 Shelf, 32" door 9321040 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 20amp 2194151 Timer, defrost F18DR **Solenoid, 120V/50/60HZ (rail) **F18FR *000-248-0001 Coil, solenoid, 120V/50/60HZ (rail) *F18FR *000-248-0001 Coil assembly, R404A *000-249-0000 Coil, assembly, freezer, R404a 3234392 Hinge, pan cover, center 3516053 Coil, solenoid, 120V/50/60HZ 3234282 Hinge, pan cover, left 0160179 Hinge Kit 3234266 Hinge, pin (for pan cover) 9321040 Shelf support screw (coil side) 0160179 Hinge Kit (left or right hinged) 9321132 Shelf support, 1" blue 3977984 </td <td></td> <td></td> <td></td> <td></td>				
3516225 Valve, expansion (rail) 3977998 Shelf, 24" door 3516102 Valve, solenoid (rail) 3978014 Shelf, 27" door 3234290 Shelf support, 1" blue 3977983 Shelf, 32" door 9321040 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 20amp 2194151 Timer, defrost F18DR ***********************************				
3516102 Valve, solenoid (rail) 3978014 Shelf, 27" door 3234290 Shelf support, 1" blue 3977983 Shelf, 32" door 9321040 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 20amp 2194151 Timer, defrost F18DR 3516053 Coil, solenoid, 120V/50/60HZ (rail) F18FR **000-248-0001 Coil assembly, R404A **000-249-0000 Coil, assembly, freezer, R404a 3234392 Hinge, pan cover, center 3516053 Coil, solenoid, 120V/50/60HZ 3234282 Hinge, pan cover, left 0160179 Hinge Kit 3234266 Hinge, pin (for pan cover) 9321040 Shelf support screw (coil side) 0160179 Hinge Kit (left or right hinged) 9321132 Shelf support screw (wall side) 3234645 Leg, 6", s/s 3234290 Shelf, 19" door 3977984 Shelf, 19" door 3977984 Shelf, 24" door 3977998 Shelf, 24" door 3977998 Shelf, 24" door <t< td=""><td></td><td></td><td></td><td></td></t<>				
3234290 Shelf support, 1" blue 3977983 Shelf, 32" door 9321040 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 20amp 2194151 Timer, defrost F18DR 3516053 Coil, solenoid, 120V/50/60HZ (rail) F18FR **000-248-0001 Coil assembly, R404A **000-249-0000 Coil, assembly, freezer, R404a 3234392 Hinge, pan cover, center 3516053 Coil, solenoid, 120V/50/60HZ 3234282 Hinge, pan cover, left 0160179 Hinge Kit 3234266 Hinge, pan cover, right 3234645 Leg, 6", s/s 9321374 Hinge, pin (for pan cover) 9321040 Shelf support screw (coil side) 0160179 Hinge Kit (left or right hinged) 9321132 Shelf support, 1" blue 3977984 Shelf, 19" door 3977984 Shelf, 19" door 3977998 Shelf, 24" door 3977998 Shelf, 24" door 3977983 Shelf, 27" door 3977983 Shelf, 32" door				
9321040 Shelf support screw (coil side) 2194099 Switch, SPST, 15amp 9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 20amp 2194151 Timer, defrost F18DR 3516053 Coil, solenoid, 120V/50/60HZ (rail) F18FR **000-248-0001 Coil assembly, R404A **000-249-0000 Coil, assembly, freezer, R404a 3234392 Hinge, pan cover, center 3516053 Coil, solenoid, 120V/50/60HZ 3234282 Hinge, pan cover, left 0160179 Hinge Kit 3234266 Hinge, pan cover, right 3234645 Leg, 6", s/s 9321374 Hinge, pin (for pan cover) 9321040 Shelf support screw (coil side) 0160179 Hinge Kit (left or right hinged) 9321132 Shelf support screw (wall side) 3324645 Leg, 6", s/s 3234290 Shelf support, 1" blue 3977998 Shelf, 24" door 3977984 Shelf, 24" door 3977998 Shelf, 27" door 3978014 Shelf, 27" door 3977983 Shelf, 32" door 3977983 Shelf, 27" door				
9321132 Shelf support screw (wall side) 2194241 Switch, SPST, 20amp 2194151 Timer, defrost F18DR 3516053 Coil, solenoid, 120V/50/60HZ (rail) F18FR *000-248-0001 Coil assembly, R404A *000-249-0000 Coil, assembly, freezer, R404a 3234392 Hinge, pan cover, center 3516053 Coil, solenoid, 120V/50/60HZ 3234282 Hinge, pan cover, left 0160179 Hinge Kit 3234266 Hinge, pan cover, right 3234645 Leg, 6", s/s 9321374 Hinge, pin (for pan cover) 9321040 Shelf support screw (coil side) 0160179 Hinge Kit (left or right hinged) 9321132 Shelf support screw (wall side) 3234645 Leg, 6", s/s 3234290 Shelf, 19" door 3977984 Shelf, 19" door 3977984 Shelf, 19" door 3977998 Shelf, 24" door 3977998 Shelf, 24" door 3978014 Shelf, 27" door 3978014 Shelf, 27" door 3977983 Shelf, 32" door 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 11mer, defrost				
F18DR 5516053 Coil, solenoid, 120V/50/60HZ (rail) F18FR *000-248-0001 Coil assembly, R404A *000-249-0000 Coil, assembly, freezer, R404a 3234392 Hinge, pan cover, center 3516053 Coil, solenoid, 120V/50/60HZ 3234282 Hinge, pan cover, left 0160179 Hinge Kit 3234266 Hinge, pan cover, right 3234645 Leg, 6", s/s 9321374 Hinge, pin (for pan cover) 9321040 Shelf support screw (coil side) 0160179 Hinge Kit (left or right hinged) 9321132 Shelf support screw (wall side) 3234645 Leg, 6", s/s 3234290 Shelf support, 1" blue 3977984 Shelf, 19" door 3977984 Shelf, 19" door 3978014 Shelf, 24" door 3977998 Shelf, 24" door 3977983 Shelf, 32" door 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost				·
F18DR 3516053 Coil, solenoid, 120V/50/60HZ (rail) F18FR *000-248-0001 Coil assembly, R404A *000-249-0000 Coil, assembly, freezer, R404a 3234392 Hinge, pan cover, center 3516053 Coil, solenoid, 120V/50/60HZ 3234282 Hinge, pan cover, left 0160179 Hinge Kit 3234266 Hinge, pan cover, right 3234645 Leg, 6", s/s 9321374 Hinge Kit (left or right hinged) 93211040 Shelf support screw (coil side) 0160179 Hinge Kit (left or right hinged) 9321132 Shelf support, 1" blue 3977984 Shelf, 19" door 3977984 Shelf, 19" door 3977998 Shelf, 24" door 3977998 Shelf, 24" door 3977983 Shelf, 27" door 3978014 Shelf, 32" door 3921040 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost	9321132	Shelf support screw (wall side)		·
3516053 Coil, solenoid, 120V/50/60HZ (rail) F18FR *000-248-0001 Coil assembly, R404A *000-249-0000 Coil, assembly, freezer, R404a 3234392 Hinge, pan cover, center 3516053 Coil, solenoid, 120V/50/60HZ 3234282 Hinge, pan cover, left 0160179 Hinge Kit 3234266 Hinge, pan cover, right 3234645 Leg, 6", s/s 9321374 Hinge, pin (for pan cover) 9321040 Shelf support screw (coil side) 0160179 Hinge Kit (left or right hinged) 9321132 Shelf support screw (wall side) 3234645 Leg, 6", s/s 3234290 Shelf support, 1" blue 3977984 Shelf, 19" door 3977984 Shelf, 19" door 3977998 Shelf, 24" door 3977998 Shelf, 27" door 3977983 Shelf, 32" door 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost			2194151	limer, defrost
*000-248-0001Coil assembly, R404A*000-249-0000Coil, assembly, freezer, R404a3234392Hinge, pan cover, center3516053Coil, solenoid, 120V/50/60HZ3234282Hinge, pan cover, left0160179Hinge Kit3234266Hinge, pan cover, right3234645Leg, 6", s/s9321374Hinge, pin (for pan cover)9321040Shelf support screw (coil side)0160179Hinge Kit (left or right hinged)9321132Shelf support screw (wall side)3234645Leg, 6", s/s3234290Shelf support, 1" blue3977984Shelf, 19" door3977984Shelf, 19" door3977998Shelf, 24" door3977998Shelf, 24" door3978014Shelf, 27" door3978014Shelf, 27" door3977983Shelf, 32" door3977983Shelf, 32" door3234290Shelf support, 1" blue3516056Temperature control9321040Shelf support screw (coil side)2194151Timer, defrost	F18DR			
3234392 Hinge, pan cover, center 3516053 Coil, solenoid, 120V/50/60HZ 3234282 Hinge, pan cover, left 0160179 Hinge Kit 3234266 Hinge, pan cover, right 3234645 Leg, 6", s/s 9321374 Hinge, pin (for pan cover) 9321040 Shelf support screw (coil side) 0160179 Hinge Kit (left or right hinged) 9321132 Shelf support screw (wall side) 3234645 Leg, 6", s/s 3234290 Shelf support, 1" blue 3977984 Shelf, 19" door 3977984 Shelf, 19" door 3977998 Shelf, 24" door 3977998 Shelf, 24" door 3977983 Shelf, 32" door 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost	3516053	Coil, solenoid, 120V/50/60HZ (rail)	F18FR	
3234282 Hinge, pan cover, left 0160179 Hinge Kit 3234266 Hinge, pan cover, right 3234645 Leg, 6", s/s 9321374 Hinge, pin (for pan cover) 9321040 Shelf support screw (coil side) 0160179 Hinge Kit (left or right hinged) 9321132 Shelf support screw (wall side) 3234645 Leg, 6", s/s 3234290 Shelf support, 1" blue 3977984 Shelf, 19" door 3977984 Shelf, 19" door 3977998 Shelf, 24" door 3977998 Shelf, 24" door 3977983 Shelf, 27" door 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost	*000-248-0001	Coil assembly, R404A	*000-249-0000	Coil, assembly, freezer, R404a
3234266 Hinge, pan cover, right 3234645 Leg, 6", s/s 9321374 Hinge, pin (for pan cover) 9321040 Shelf support screw (coil side) 0160179 Hinge Kit (left or right hinged) 9321132 Shelf support screw (wall side) 3234645 Leg, 6", s/s 3234290 Shelf support, 1" blue 3977984 Shelf, 19" door 3977984 Shelf, 19" door 3977998 Shelf, 24" door 3977998 Shelf, 24" door 3978014 Shelf, 27" door 3978014 Shelf, 27" door 3977983 Shelf, 32" door 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost	3234392	Hinge, pan cover, center	3516053	Coil, solenoid, 120V/50/60HZ
9321374 Hinge, pin (for pan cover) 9321040 Shelf support screw (coil side) 0160179 Hinge Kit (left or right hinged) 9321132 Shelf support screw (wall side) 3234645 Leg, 6", s/s 3234290 Shelf support, 1" blue 3977984 Shelf, 19" door 3977984 Shelf, 19" door 3977998 Shelf, 24" door 3977998 Shelf, 24" door 3978014 Shelf, 27" door 3978014 Shelf, 27" door 3977983 Shelf, 32" door 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost	3234282	Hinge, pan cover, left	0160179	Hinge Kit
0160179 Hinge Kit (left or right hinged) 9321132 Shelf support screw (wall side) 3234645 Leg, 6", s/s 3234290 Shelf support, 1" blue 3977984 Shelf, 19" door 3977984 Shelf, 19" door 3977998 Shelf, 24" door 3977998 Shelf, 24" door 3978014 Shelf, 27" door 3978014 Shelf, 27" door 3977983 Shelf, 32" door 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost	3234266	Hinge, pan cover, right	3234645	Leg, 6", s/s
3234645 Leg, 6", s/s 3234290 Shelf support, 1" blue 3977984 Shelf, 19" door 3977984 Shelf, 19" door 3977998 Shelf, 24" door 3977998 Shelf, 24" door 3978014 Shelf, 27" door 3978014 Shelf, 27" door 3977983 Shelf, 32" door 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost	9321374	Hinge, pin (for pan cover)	9321040	Shelf support screw (coil side)
3977984 Shelf, 19" door 3977984 Shelf, 19" door 3977998 Shelf, 24" door 3977998 Shelf, 24" door 3978014 Shelf, 27" door 3978014 Shelf, 27" door 3977983 Shelf, 32" door 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost	0160179	Hinge Kit (left or right hinged)	9321132	Shelf support screw (wall side)
3977998 Shelf, 24" door 3977998 Shelf, 24" door 3978014 Shelf, 27" door 3978014 Shelf, 27" door 3977983 Shelf, 32" door 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost	3234645	Leg, 6", s/s	3234290	Shelf support, 1" blue
3978014 Shelf, 27" door 3978014 Shelf, 27" door 3977983 Shelf, 32" door 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost	3977984	Shelf, 19" door	3977984	Shelf, 19" door
3977983 Shelf, 32" door 3977983 Shelf, 32" door 3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost	3977998	Shelf, 24" door	3977998	Shelf, 24" door
3234290 Shelf support, 1" blue 3516056 Temperature control 9321040 Shelf support screw (coil side) 2194151 Timer, defrost	3978014	Shelf, 27" door	3978014	Shelf, 27" door
9321040 Shelf support screw (coil side) 2194151 Timer, defrost	3977983	Shelf, 32" door	3977983	Shelf, 32" door
• •	3234290	Shelf support, 1" blue	3516056	Temperature control
9321132 Shelf support screw (wall side) 3516102 Valve, solenoid	9321040	Shelf support screw (coil side)	2194151	Timer, defrost
	9321132	Shelf support screw (wall side)	3516102	Valve, solenoid



^{*}Replacement part assemblies on pages 17-20.

Replacement Parts, continued

*000-248-0001 *000-BN5-0030 2193927 3234392 3234282 3234266 9321374 0420068 2190154 3516225 3516102 3234645	Coil, solenoid, 120V/50/60HZ (rail) Coil assembly, R404A, with thermostat and solenoid Condensing unit, 1/4hp, R404a Control, pressure, low Hinge, pan cover, center Hinge, pan cover, left Hinge, pan cover, right Hinge, pin (for pan cover) Hinge kit, lo profile (left or right) Switch, rocker Valve, expansion (rail) Valve, solenoid (rail) Leg, 6", s/s	**18PD48 **000-248-0003 **000-BN5-0040 2193927 **000-402-0056 **000-187-006B 3234645 **356-478-0038 3978014 3234290 2190154 3516135 000-282-0051	Coil Assembly, r404a, std Condensing Assembly, 1/3-1/5 Stacked Control, pressure, low Cover Assembly, hinged, 6 pan, l/t Door Assembly, ref, 27x26, lt Leg, 6, s/s, removable Foot Panel, louver, 14.0, sw Cut, lh Shelf, wire, coated Support, shelf, plastic Switch, rocker, 20a/125v Thermometer, hanging, 4 Tstat Assembly, danfoss
F18MR 3516053 *000-248-0001 3234392 3234282 3234266 9321374 0420068 3234645 9321041 2190154 2194201 3516225 3516102	Coil, solenoid, 120V/50/60HZ (rail) Coil assy, R404A, w/ thermostat & solenoid Hinge, pan cover, center Hinge, pan cover, left Hinge, pan cover, right Hinge, pin (for pan cover) Hinge kit, lo profile (left or right) Leg, 6", s/s Nut, acorn (for pan cover) Switch, rocker Thermostat, rail Valve, expansion (rail) Valve, solenoid (rail)	**T18PD72 **000-248-0003 **000-BN5-003Y 2193927 000-282-003Z **000-402-0056 **000-187-006B **000-187-006A 3234645 **356-478-0039 3978014 3234290 2190154 3516135 000-282-0051	Coil Assembly, r404a, std Condensing Assembly, 1/2-1/5 Stacked Control, pressure, low Control Assembly, t-stat, 2sw,l/t Cover Assembly, hinged, 6pan, l/t Door Assembly, ref, 27x26, lt Door Assembly, ref, 27x26, rt Leg, 6, s/s, removable Foot Panel, louver, 18.0, sw Cut, lh Shelf, wire, coated Support, shelf, plastic Switch, rocker, 20a/125v Thermometer, hanging, 4 Tstat Assembly, danfoss



^{*}Replacement part assemblies on pages 17-20.

Replacement Parts, continued

		0224040	
		9321040	Shelf support screw (coil side)
F18RC		9321132	Shelf support screw (wall side)
3516053	Coil, solenoid, 120V/50/60HZ (rail)	2190154	Switch, rocker
*000-248-0001	Coil assembly, R404A	3516225	Valve, expansion (rail)
*000-248-0002	Coil assembly, R404A, with solenoid	3516102	Valve, solenoid (rail)
*000-BN5-0035	Condensing unit, 1/2hp, R404a		
*000-BN5-0037	Condensing unit, 1/3hp, R404a	F18SC	
*000-BN5-0030	Condensing unit, 1/4hp, R404a	3516053	Coil, solenoid, 120V/50/60HZ (rail)
2193927	Control, pressure, low		Coil assembly, R404A, with thermostat and
3234392	Hinge, pan cover, center	*000-248-0001	solenoid
3234282	Hinge, pan cover, left	*000-BN5-0030	Condensing unit, 1/4hp, R404a
3234266	Hinge, pan cover, right	2193927	Control, presure, low
9321374	Hinge, pin (for pan cover)	3234392	Hinge, pan cover, center
0160179	Hinge Kit	3234282	Hinge, pan cover, left
3234645	Leg, 6", s/s	3234266	Hinge, pan cover, right
3977984	Shelf, 19" door	9321374	Hinge, pin (for pan cover)
3977998	Shelf, 24" door	0420068	Hinge kit, lo profile (left or right)
3978014	Shelf, 27" door	3234645	Leg, 6", s/s
3977983	Shelf, 32" door	2190154	Switch, rocker
3234290	Shelf support, 1" blue	3516225	Valve, expansion (rail)
9321040	Shelf support screw (coil side)	3516102	Valve, solenoid (rail)
9321132	Shelf support screw (wall side)		
2190154	Switch, rocker	510CD	
3516225	Valve, expansion (rail)	F18SR	C :
3516102	Valve, solenoid (rail)	3516053	Coil, solenoid, 120V/50/60HZ (rail)
		*000-248-0001	Coil assembly, R404A, with thermostat and solenoid
F18RR		3234392	Hinge, pan cover, center
3516053	Coil, solenoid, 120V/50/60HZ (rail)	3234282	Hinge, pan cover, left
*000-248-0001	Coil assembly, R404A	3234266	Hinge, pan cover, right
*000-248-0002	Coil assembly, R404A, with solenoid	9321374	Hinge, pin (for pan cover)
3234392	Hinge, pan cover, center	0420068	Hinge kit, lo profile (left or right)
3234282	Hinge, pan cover, left	3234645	Leg, 6", s/s
3234266	Hinge, pan cover, right	2190154	Switch, rocker
9321374	Hinge, pin (for pan cover)	2194201	Thermostat, rail
0160179	Hinge Kit	3516225	Valve, expansion (rail)
3234645	Leg, 6", s/s	3516102	Valve, solenoid (rail)
3977984	Shelf, 19" door		
3977998	Shelf, 24" door		
3978014	Shelf, 27" door		
3977983	Shelf, 32" door		
3234290	Shelf support, 1" blue	*Replacement p	part assemblies on pages 17-20.



Replacement Parts, continued

F18WC

*000-248-0003	Coil assembly, R404A
*000-BN5-0030	Condensing unit, 1/4hp, R404a
*000-BN5-0031	Condensing unit, 1/5hp, R404a
2193927	Control, pressure, low
0160179	Hinge Kit
3234645	Leg, 6", s/s
3977984	Shelf, 19" door
3977998	Shelf, 24" door
3978014	Shelf, 27" door
3977983	Shelf, 32" door
2194099	Switch, SPST, 15amp
3234290	Shelf support, 1" blue
9321040	Shelf support screw (coil side)
9321132	Shelf support screw (wall side)


F18WR

*000-248-0001	Coil assembly, R404A
*000-248-0002	Coil assembly, R404A, with solenoid
0160179	Hinge Kit (left or right hinged)
3234645	Leg, 6", s/s
3977984	Shelf, 19" door
3977998	Shelf, 24" door
3978014	Shelf, 27" door
3977983	Shelf, 32" door
3234290	Shelf support, 1" blue
9321040	Shelf support screw (coil side)
9321132	Shelf support screw (wall side)




^{*}Replacement part assemblies on pages 17-20.


Replacement Part Assemblies

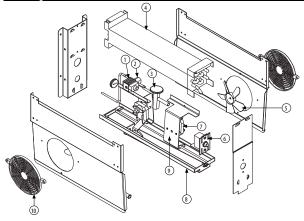


Key	Part Number	Description
-	000-248-0001	Coil Assembly, R404A
1	3516103	Solenoid Coil
2	3516102	Solenoid Valve
3	3516273	Expansion Valve
4	3516095	Evap Coil
5	3516172	Fan Blade
6	2194536	Thermostat
7	2162691	Fan Motor
8	039-231-0000	Drip Pan
9	270-235-0000	Fan Motor Bracket
10	3516173	Fan Guard
-	2183312	Harness, coil, with solenoid

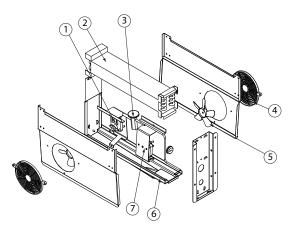

Key	Part Number	Description
-	000-248-0003	Coil Assembly, R404A, STD
1	2162691	Fan Motor
2	3516095	Evap Coil
3	3516273	Expansion Valve
4	3516173	Fan Guard
5	3516172	Fan Blade
6	039-231-0000	Drip Pan
7	270-235-0000	Fan Motor Bracket

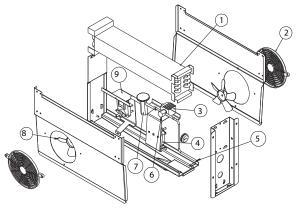


Key	Part Number	Description
-	000-248-0002	Coil Assembly, R404A, Solenoid
1	3516095	Evap Coil
2	3516173	Fan Guard
3	3516103	Solenoid Coil
4	2162691	Fan Motor
5	039-231-0000	Drip Pan
6	3516102	Solenoid Valve
7	3516273	Expansion Valve
8	3516172	Fan Blade
9	270-235-0000	Fan Motor Bracket

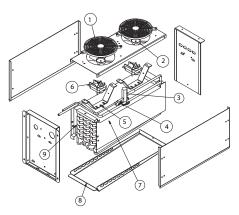


Key	Part Number	Description
-	000-249-0000	Coil Assembly, Freezer, R404A
1	3516173	Guard, fan
2	3516172	Blade, fan
3	3516271	Valve, expansion, 1/2hp, R404a
4	2194046	Control, limit, fan delay/defrost
5	031-264-0000	Bracket, fan motor
6	2162691	Motor, fan, 115V
7	3516073	Coil, Evaporator
8	000-BNH-Z0000	Pan, freezer evaporator
9	2194034	Heater, defrost
-	2194631	Fuse, defrost heater, 7amp
-	2183310	Harness, coil
-	2194235	Switch, safety heater
-	3977980	Tie, wire, stainless




Replacement Part Assemblies, continued

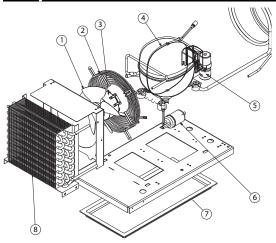


Key	Part Number	Description
-	000-BN5-0030	Assembly, 1/4 HP Condensing Unit
1	3516457	Fan Blade
2	2160020	Fan Guard
3	2162717	Fan Motor
4	3526999	Compressor, Danfoss, NF5.5CLX
5	2194787	Start Capacitor
6	3516322	Filter Dryer
7	075-231-0030	Condensate Pan
8	3516454	Condenser Coil
-	3516444	Comp, Relay, Overload, NF5.5CLX

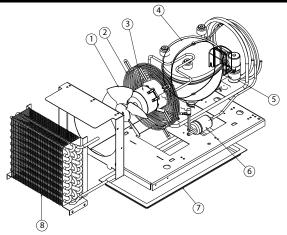

Key	Part Number	Description	
-	000-BN5-0031	Assembly, 1/5 Condensing Unit	
1	3516457	Fan Blade	
2	2160020	Fan Guard	
3	2162717	Fan Motor	
4	3526997	Compressor, Danfoss, TF4CLS	
5	2194787	Start Capacitor	
6	3516322	Filter Dryer	
7	075-231-0030	Condensate Pan	
8	3516454	Condenser Coil	
-	3516446	Comp, Relay, Danfoss	

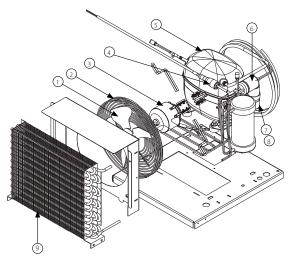


Key	Part Number	Description
-	000-BN5-0033	Assembly, 1/2HP Cond, Low
1	3516554	Blade, Fan, 9.00"
2	2160019	Guard, Fan, Wire
3	2162716	Motor, Fan, 16W, 115V, CW
4	3516324	Cutout, High Pressure
5	3527001	Compressor, SC12CLX.2,115/60HZ
6	3516322	Drier, Filter, (2)Inlet
7	2194789	Capacitor, Start, 240MFD
8	3516441	Relay, Comp, SC12CLX.2
9	3516455	Coil, Condenser, 1/2 HP
-	024-034-0031	Pan, Comp, 18.00

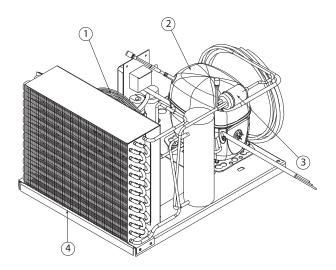


Key	Part Number	Description	
-	000-BN5-0034	Assembly, 3/4 HP Cond, Low	
1	2160019	Guard, fan condenser	
1	2162716	Motor, condenser fan 16W, 155V	
1	3516433	Blade, fan 10" CW	
2	3527002	Compressor, SC18CLS.2, 115V60hz	
2	3516442	Capacitor, start, run assembly	
3	3516322	Filter drier	
4	3516456	Coil, condenser, 3/4hp	




Replacement Part Assemblies, continued

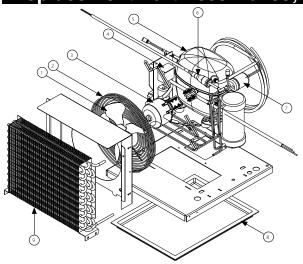


Key	Part Number	Description	
-	000-BN5-0035	Assembly, 1/2HP Condenser, Med	
1	3516554	Condenser fan blade	
2	2160019	Condenser fan guard	
3	2162716	Condenser fan motor, 115V	
4	3516462	Capacitor, start-run assy	
5	3527026	Compressor, Danfoss, SC12MLX	
6	3516331	Hi pressure switch	
7	3516322	Filter Drier	
8	075-231-0031	Pan, Condensate	
9	3516455	Condenser coil	

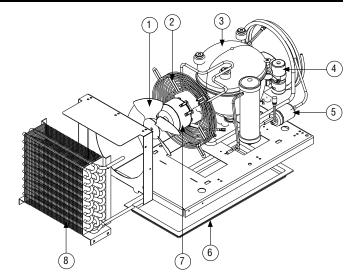

Key	Part Number	Description	
-	000-BN5-0037	Assembly, 1/3 Condensing Unit	
1	3516457	Fan Blade	
2	2160020	Fan Guard	
3	3527000	Compress, Danfoss, NF7CLS	
4	2194788	Start Capacitor	
5	3516322	Filter Drier	
6	075-231-0030	Pan, Condensate	
7	2162717	Fan Motor	
8	3516454	Condenser Coil	
-	3516438	Relay, overload, compressor	

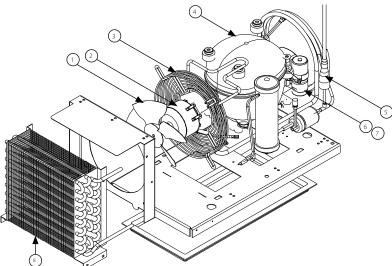

Key	Delfield Part #	Description	
-	000-BN5-003G	Condensing Unit Assembly, 115V	
1	3516457	Blade, Fan, 7.25"	
2	2162717	Motor, fan, 9W, 115V	
3	2160020	Guard, Fan, 7.25"	
4	3527000	Compressor, NF7.0. 115V/60Hz, Danfoss	
5	3516324	High pressure switch	
6	2194788	Capacitor, Start 320MFD	
7	3516438	Compressor relay and overload, NF7CLX	
8	3516454	Condenser Coil	

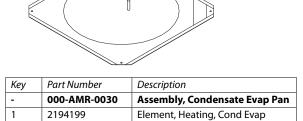


Cord, #51C Evap




2183387


Replacement Part Assemblies, continued

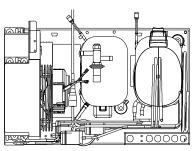


000-BN5-003Y	Assembly, 1/2-1/5 Stacked,
3516457	Blade, Fan, 7.25 Dia.,
3516433	Blade, fan, 25deg, 10", cw
2194789	Capacitor, start, 240mfd
2194787	Capacitor, start, 280mfd
3516454	Coil, Condenser, 1/5, 1/4,
3516455	Coil, Condenser, 1/2 Hp
3526997	Compressor, 1/5hp, 115/60, r404a
3527001	Compressor, sc12clx.2, 115/60hz,
3516322	Drier, filter, (2)inlet
2160020	Guard, Fan, 7.25
2160019	Guard, fan, wire
2162717	Motor, fan, 9w, 115v, cw
2162513	Motor, fan, 35w, blast
3516193	Regulator, pressure, 1/2
3516446	Relay, Compressor, Danfoss
3516441	Relay, compressor, sc12clx.2
3516225	Valve, expansion, frz, 1/4ton

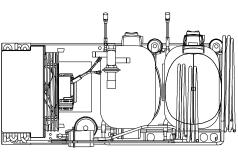

000-BN5-0040	Assy, 1/3-1/5 Stacked,
3516457	Blade, Fan, 7.25 Dia.
2194787	Capacitor, start, 280mfd
2194788	Capacitor, start, 320mfd
3516454	Coil, Cond., 1/5, 1/4
3526997	Comp, 1/5hp, 115/60, r404a
3527000	Comp, nf7cls, 115v/60hz
3516322	Drier, filter, (2)inlet
2160020	Guard, Fan, 7.25
2162717	Motor, fan, 9w,115v,cw
3516193	Regulator, pressure, 1/2
3516446	Relay, Comp, Danfoss
3516438	Relay, comp, ovld, nf7clx
3516225	Valve, exp, frz, 1/4ton



359-478-003E	Panel, louver, 15.0, ptb
359-478-003D	Panel, louver, 18.0, ptb
356-478-0038	Panel, louver, 14.0, sw Cut,lh
356-478-0039	Panel, louver, 18.0, sw Cut, lh



000-187-0081	Door Assembly, ref, 27x26, rt, 430	
000-187-0082	Door Assembly, ref, 27x26, lt, 430	
000-187-006B	Door Assembly, ref, 27x26, lt	
000-187-006A	Door Assembly, ref, 27x26, rt	
1701185	Gasket, door, 27, mark7	
0420067	Hinge Kit	



000-402-0054	Cover Assembly, hinged, 6 Pan, ptl	
000-402-0056 Cover Assembly, hinged, 6pan, I/t		
9321374	Pin, hinge, salad Pan	
3234266	Hinge, pan Cover, end, rh,	
3234282	Hinge, pan Cover, end, lh,	
3234392	Hinge, pan Cover,	



Standard One Year Warranty (one year parts, 90 days labor)

The Delfield Company ("Delfield") warrants to the Original Purchaser of the Delfield product (herein called the "Unit") that such Unit, and all parts thereof, will be free from defects in material and workmanship under normal use and service for a period of one (1) year from the date of shipment of the Unit to the Original Purchaser or, if the Original Purchaser returns the warranty card completely filled out including the date of installation within thirty (30) days of receipt of the Unit, one (1) year from the date of installation. During this one year warranty period. Delfield will repair or replace any defective part or portion there of returned to Delfield by the Original Purchaser which Delfield determines was defective due to faulty material or workmanship. The Original purchaser will pay all labor, crating, freight and related costs incurred in the removal of the Unit of defective component and shipment to Delfield, except that during a period of either ninety (90) days from the date of shipment of the Unit to the Original Purchaser or, if the Original Purchaser returns the warranty card completely filled out including the date of installation within thirty (30) days of receipt of the Unit, ninety (90) days from the date of installation Delfield will pay all related labor costs. Delfield will pay the return costs if the Unit or part thereof was defective.

The term "Original Purchaser" as used herein means that person, firm, association, or corporation for whom the Unit was originally installed.

This warranty does not apply to any Unit or part thereof that has been subjected to misuse, neglect, alteration, or accident, such as accidental damage to the exterior finish, operated contrary to the recommendations specified by Delfield; or repaired or altered by anyone other than Delfield in any way so as to, in Delfield's sole judgement, affect its quality or efficiency. This warranty does not apply to any Unit that has been moved from the location where it was originally installed. This warranty also does not cover the refrigerator drier or the light bulbs used in the Unit. The warranty is subject to the user's normal maintenance and care responsibility as set forth in the Service and Installation Manual, such as cleaning the condenser coil, and is in lieu of all other obligations of Delfield. Delfield neither assumes, nor authorizes any other person to assume for Delfield, any other liability in connection with Delfield's products.

Removal or defacement of the original Serial Number or Model Number from any Unit shall be deemed to release Delfield from all obligations hereunder or any other obligations, express or implied.

Parts furnished by suppliers to Delfield are guaranteed by Delfield only to the extent of the original manufacturer's express warranty to Delfield. Failure of the Original Purchaser to receive such manufacturer's express warranty to Delfield. Failure of the Original Purchaser to receive such manufacturers warranty shall in no way create any warranty, expressed or implied, or any other obligation or liability on Delfield's part in respect thereof.

If shipment of a replacement part is requested prior to the arrival in the Delfield factory of the part claimed to be defective, the Original Purchaser must accept delivery of the replacement part of a C.O.D. basis, with credit being issued after the part has been received and inspected at Delfield's plant and determined by Delfield to be within this warranty.

Under no condition does this warranty give the Original Purchaser the right to replace the defective Unit with a complete Unit of the same manufacturer or of another make. Unless authorized by Delfield in writing, this warranty does not permit the replacement of any part, including the motor-compressor, to be made with the part of another make or manufacturer.

No claims can be made under this warranty for spoilage of any products for any reason, including system failure.

The installation contractor shall be responsible for building access, entrance and field conditions to insure sufficient clearance to allow any hood(s), vent(s), or Unit(s) if necessary, to be brought into the building. Delfield will not be responsible for structural changes or damages incurred during installation of the Unit or any exhaust system.

Delfield shall not be liable in any manner for any default or delay in performance hereunder caused by or resulting from any contingency beyond Delfield's control, including, but not limited to, war, governmental restrictions or restraints, strike, lockouts, injunctions, fire, flood, acts of nature, short or reduced supply of raw materials, or discontinuance of the parts by the original part manufacturer.

Except as provided in any Additional Four Year Protection Plan, if applicable, and the Service Labor Contract, if applicable, the foregoing is exclusive and in lieu of all other warranties, whether written or oral, express or implied. This warranty supersedes and excludes any prior oral or written representations or warranties. Delfield expressly disclaims any implied warranties of merchantability, fitness for a particular purpose of compliance with any law, treaty, rule or regulation relating to the discharge of substances into the environment. The sole and exclusive remedies of any person relating to the Unit, and the full liability of Delfield for any breach of this warranty, will be as provided in this warranty.

Other than this Delfield Standard One Year Limited Warranty, any applicable Delfield Additional Four Year Protection Plan or applicable Delfield Service Labor Contract, the Original Purchaser agrees and acknowledges that no other warranties are offered or provided in connection with or for the unit or any other part thereof.

In no event will Delfield be liable for special, incidental or consequential damages, or for damages in the nature of penalties.



F18PD One Limited Year Warranty (One Year Parts And Labor)

Delfield warrants to the Original Purchaser of the Delfield product (herein called the "Unit") that such Unit, and all parts thereof, will be free from defects in material and workmanship under normal use and service for a period of one (1) year from the date of shipment of the Unit to the Original Purchaser or, if the Original Purchaser returns the warranty card completely filled out including the date of installation within thirty (30) days of receipt of the Unit, one (1) year from the date of installation. During this one year warranty period, Delfield will pay labor, crating and freight incurred in the removal of the Unit or defective component and shipment to Delfield. Reimbursement is subject to the following limitations: A maximum of 1-hour is allowed to diagnose a defective component; A maximum of 1-hour is allowed for retrieval of parts not in stock; A maximum travel distance of 100 miles round trip and 2-hours will be reimbursed. Overtime, installation/startup, normal control adjustments, general maintenance, glass breakage, freight damage, and/or correcting an end-user installation error will not be reimbursed under warranty unless pre-approved with a Service Work Authorization from Delfield. Delfield will pay the return costs if the Unit or part thereof was defective.

The term "Original Purchaser" as used herein means that person, firm, association, or corporation for whom the Unit was originally installed.

This warranty does not apply to any Unit or part thereof that has been subjected to misuse, neglect, alteration, or accident, such as accidental damage to the exterior finish, operated contrary to the recommendations specified by Delfield; or repaired or altered by anyone other than Delfield in any way so as to, in Delfield's sole judgement, affect its quality or efficiency. This warranty does not apply to any Unit that has been moved from the location where it was originally installed. This warranty also does not cover the refrigerator drier or the light bulbs used in the Unit. The warranty is subject to the user's normal maintenance and care responsibility as set forth in the Service and Installation Manual, such as cleaning the condenser coil, and is in lieu of all other obligations of Delfield. Delfield neither assumes, nor authorizes any other person to assume for Delfield, any other liability in connection with Delfield's products.

Removal or defacement of the original Serial Number or Model Number from any Unit shall be deemed to release Delfield from all obligations hereunder or any other obligations, express or implied.

Parts furnished by suppliers to Delfield are guaranteed by Delfield only to the extent of the original manufacturer's express warranty to Delfield. Failure of the Original Purchaser to receive such manufacturers warranty shall in no way create any warranty, expressed or implied, or any other obligation or liability on Delfield's part in respect thereof.

If shipment of a replacement part is requested prior to the arrival in the Delfield factory of the part claimed to be defective, the Original Purchaser must accept delivery of the replacement part on a C.O.D. basis, with credit being issued after the part has been received and inspected at Delfield's plant and determined by Delfield to be within this warranty.

Under no condition does this warranty give the Original Purchaser the right to replace the defective Unit with a complete Unit of the same manufacturer or of another make. Unless authorized by Delfield in writing, this warranty does not permit the replacement of any part, including the motor-compressor, to be made with the part of another make or manufacturer.

No claims can be made under this warranty for spoilage of any products for any reason, including system failure.

The installation contractor shall be responsible for building access, entrance and field conditions to insure sufficient clearance to allow any hood(s), vent(s), or Unit(s) if necessary, to be brought into the building. Delfield will not be responsible for structural changes or damages incurred during installation of the Unit or any exhaust system.

Delfield shall not be liable in any manner for any default or delay in performance hereunder caused by or resulting from any contingency beyond Delfield's control, including, but not limited to, war, governmental restrictions or restraints, strike, lockouts, injunctions, fire, flood, acts of nature, short or reduced supply of raw materials, or discontinuance of the parts by the original part manufacturer.

Except as provided in any Additional Four Year Protection Plan, if applicable, and the Service Labor Contract, if applicable, the foregoing is exclusive and in lieu of all other warranties, whether written or oral, express or implied. This warranty supersedes and excludes any prior oral or written representations or warranties. Delfield expressly disclaims any implied warranties of merchantability, fitness for a particular purpose or compliance with any law, treaty, rule or regulation relating to the discharge of substances into the environment. The sole and exclusive remedies of any person relating to the Unit, and the full liability of Delfield for any breach of this warranty, will be as provided in this warranty.

Other than this Delfield Standard One Year Limited Warranty, any applicable Delfield Additional Four Year Protection Plan or applicable Delfield Service Labor Contract, the Original Purchaser agrees and acknowledges that no other warranties are offered or provided in connection with or for the Unit or any other part thereof.

In no event will Delfield be liable for special, incidental or consequential damages, or for damages in the nature of penalties.



Additional Four Year Protection Plan (for Motor-Compressor only)

Delfield Model#	Serial #	Installation Date

In addition to the Standard One Year Warranty on the Motor-Compressor contained in the above listed Delfield product (the "Unit"), The Delfield Company ("Delfield") also agrees to repair, or exchange with similar or interchangeable parts in design and capacity at Delfield's option, the defective Motor-Compressor contained in the Unit (the "Motor-Compressor), or any part thereof, for the Original Purchaser only, at any time during the four (4) years following the initial one (1) year period commencing on the date of installation for the Original Purchaser. Failure of the Original Purchaser to register the registration card containing the Original Purchasers name, address, date of installation, model number and serial number of the Unit containing the Motor-Compressor within 30 days from the date of installation shall void this warranty. This additional warranty is only available if the Motor-Compressor is inoperative due to defects in material or factory workmanship, as determined by Delfield in its sole judgement and discretion. The Original Purchaser shall be responsible for returning the defective Motor-Compressor to Delfield prepaid, F.O.B. at the address shown on the back cover of this manual.

The term "Original Purchaser" as used herein means that person, firm, association, or corporation for whom the Unit was originally installed.

The term "Motor-Compressor" as used herein does not include unit base, air or water cooled condenser, receiver, electrical accessories such as relay, capacitors, refrigerant controls, or condenser fan/motor assembly. This warranty does not cover labor charges incidental to the replacement of parts. warranty further does not include any equipment to which said condensing unit is connected, such as cooling coils, temperature controls or refrigerant metering devices. This warranty shall be void if the Motor-Compressor, in Delfield's sole judgement, has been subjected to misuse, neglect, alteration or accident, operated contrary to the recommendations specified by the Unit manufacturer, repaired or altered by anyone other than Delfield in any way so as, in Delfield's sole judgment, to affect its quality or efficiency or if the serial number has been altered, defaced or removed. This Warranty does not apply to a Motor-Compressor in any Unit that has been moved from the location where it was originally installed. The addition of methyl chloride to the condensing unit or refrigeration system shall void this warranty.

General Conditions

Delfield shall not be liable in any manner for any default or delay in performance hereunder caused by or resulting from any contingency beyond Delfield's control, including, but not limited to, war, governmental restrictions or restraints, strike, lockouts, injunctions, fire, flood, acts of nature, short or reduced supply of raw materials, or discontinuance of any part or the Motor-Compressor by the unit manufacturer.

Replacement of a defective Motor-Compressor is limited to one (1) Motor-Compressor by us during the four (4) year period. Delfield shall replace the Motor-Compressor at no charge.

This warranty does not give the Original Purchaser of the Motor-Compressor the right to purchase a complete replacement Motor-Compressor of the same make or of another make. It further does not permit the replacement to be made with a Motor-Compressor of another kind unless authorized by Delfield. In the event Delfield authorizes the Original Purchaser to purchase a replacement Motor-Compressor locally, only the wholesale cost of the Motor-Compressor is refundable.

Expressly excluded from this warranty are damages resulting from spoilage of goods.

Except as provided in any applicable Standard One Year Limited Warranty or applicable Service Labor Contract, the foregoing is exclusive and in lieu of all other warranties, whether written or oral, express or implied. This Warranty supersedes and excludes any prior oral or written representations or warranties. Delfield expressly disclaims any implied warranties of merchantability, fitness for a particular purpose or compliance with any law, treaty, rule or regulation relating to the Motor-Compressor, and the full liability of Delfield for any breach of this warranty, will be as provided in this warranty.

Other than any applicable Delfield Standard One year Limited Warranty, this Delfield Additional Four Year Protection Plan and any applicable Delfield Service Labor Contract, the Original Purchaser agrees and acknowledges that no other warranties are offered or provided in connection with or for the Motor-Compressor or any part thereof.

In no event will Delfield be liable for special, incidental or consequential damages, or for damages in the nature of penalties.











Covington, TN

Thank you for choosing Delfield!

Help is a phone call away. Help our team of professional, courteous customer service reps by having your model number and serial number available at the time of your call (800) 733-8829.

Model:	S/N:
Installation Date:	



For a list of Delfield's authorized parts depots, visit our website at www.delfield.com.

