IMPORTANT INFORMATION ON ATTACHING THE WALL HOOK TO THE WALL:

Kit included with your new Powersoak. All necessary fasteners are found in the Installation

29189), to tile or concrete. drywall when used with toggle fasteners (marked metal studs, FRP-over-plywood, 5/8 inch (16mm) (marked 29188) are for attaching the wall hook to sheetmetal screws for this purpose. These screws Use the #10 x 1-1/2 stainless flat Phillips head 29191), or, when used with conical anchors (marked

Use a 5/32 inch (4mm) dia drill bit for pilot holes when fastening to studs or FRP-over-plywood.

concrete, see Anchor Installation Tips below. FASTENER. If installing on drywall, see Toggle IN DRYWALL WITHOUT THE USE OF A TOGGLE NOTE: NEVER INSTALL SHEETMETAL SCREWS Installation Tips below. If installing on tile or

Toggle Installation Tips

anchors with setting key included in Installation Kit. Use only TOGGLER® BRAND TC® hollow-wall

- 1. Drill a 5/16 inch (8mm) diameter hole through the
- 2. Fold the toggle fastener in the middle and tap it flush to the wall
- pictographs on the TOGGLER® TC® anchor the key inward to set the toggle, then withdraw the key. Never hammer the key. Refer to the 3. Insert the red "key" into the toggle fastener. Push
- toggle fastener. Tighten flush, then stop. 4. Insert the screw through the fixture and into the

Anchor Installation Tips

1. Using a masonry bit, drill a 1/4 inch (6.3mm) dia hole at least 1-1/2 inch (38mm) deep.

 \bigcirc

VALVE AND HOSE O-RINGS

FOR REPLACEMENT OF

AND SEAT WASHERS USE KIT No. 28224

00000 00000

000000

- 2. Blow all dust from the hole.
- 3. Drive the anchor into the hole until it's flush with the surrounding surface.
- anchor. 4. Insert the screw through the fixture and into the


METCRAFT 26984 SECURITY PRE-RINSE TO ORDER SERVICE PARTS **INSTALLATION GUIDE**

METCRAFT, INC.

800-444-9624

GRANDVIEW, MO 64030 13910 KESSLER DRIVE

E-MAIL service@powersoak.com FAX 816-761-0544

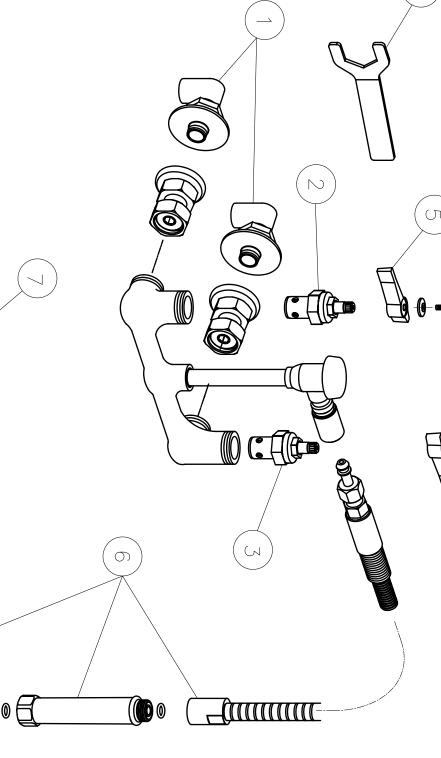

26984

8	7	6	5	4	З	2	ے	Item	
28224	29117	28226	28227	29111	28219	28220	29110	Part Number	
O-Ring & Seat Washer Replacement Kit	Wall Hook Assembly	Hose Assembly with Utility Spray	Designer Handle Kit	1-3/8" Wrench	Cold Valve Assembly	Hot Valve Assembly	Mounting Kit	Description	

œ	7	6	5	4	З	2	_	Item
28224	29117	28226	28227	29111	28219	28220	29110	Part Number
O-Ring & Seat Washer Replacement Kit	Wall Hook Assembly	Hose Assembly with Utility Spray	Designer Handle Kit	1-3/8" Wrench	Cold Valve Assembly	Hot Valve Assembly	Mounting Kit	Description

K53-2000-PSP