Parts Manual

Gas Floor Type Convection Steamer




Series: SteamCraft Model 24CGA10


1333 East 179th Street Cleveland, Ohio 44110


Phone: (216) 481-4900 1-800-338-2204


Fax: (216) 481-3782 www.clevelandrange.com




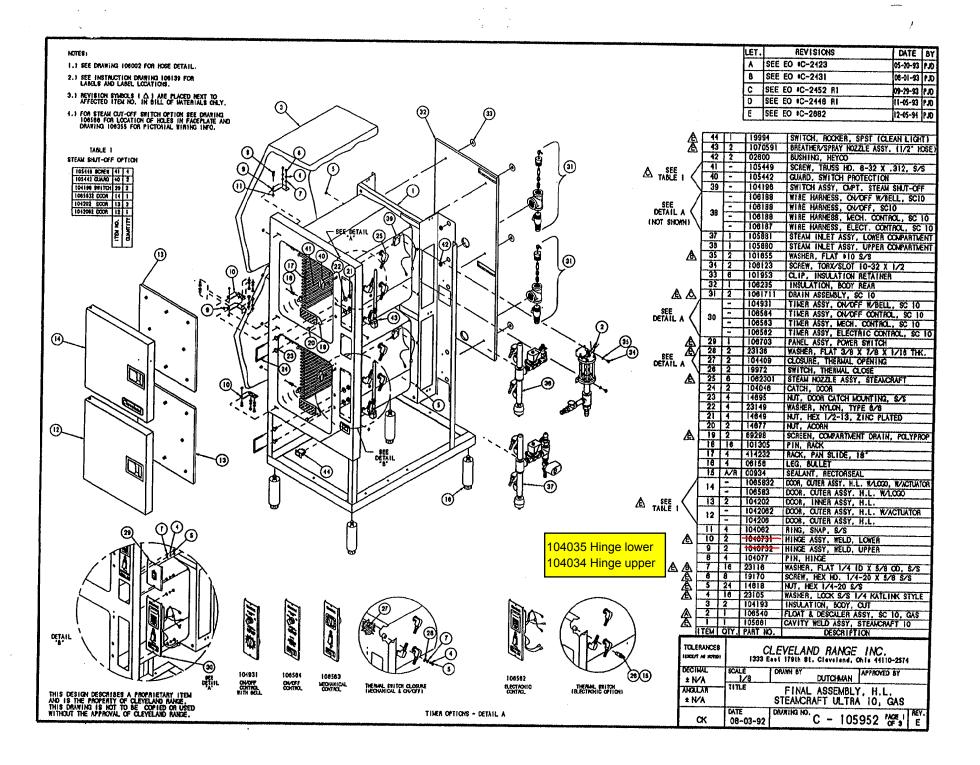

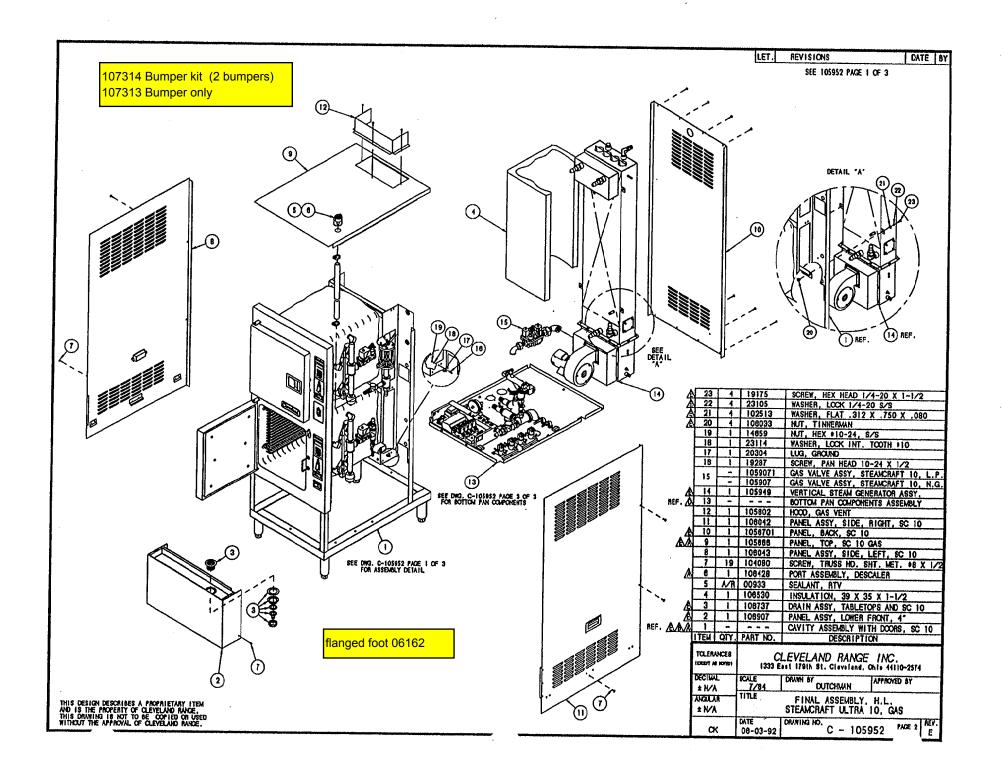

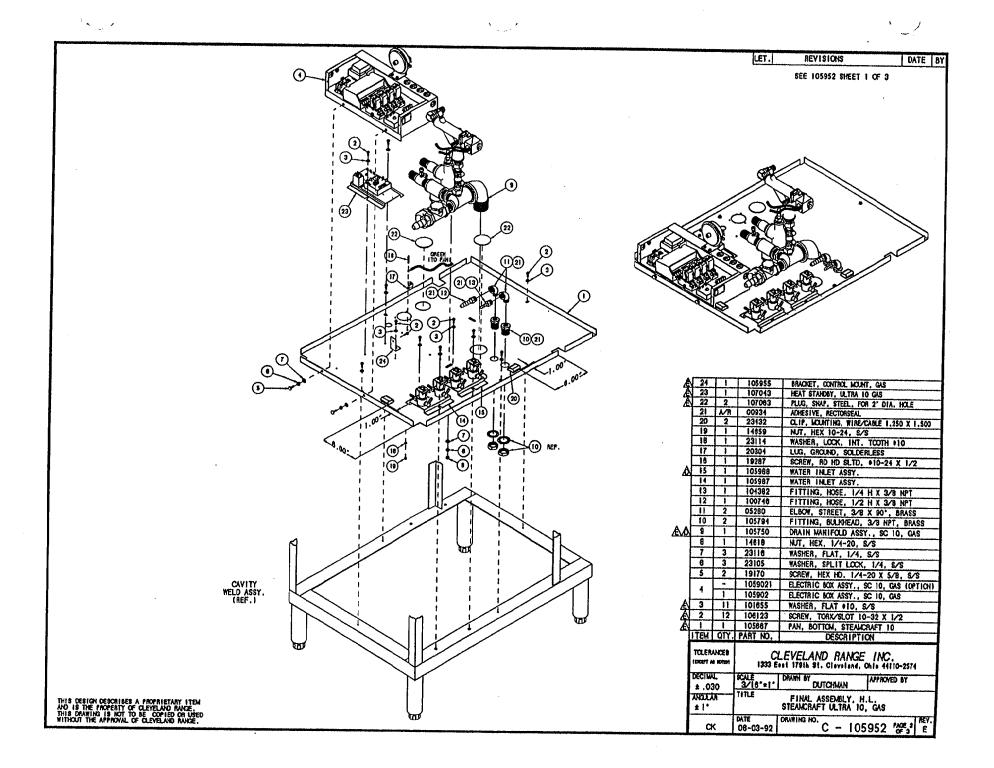


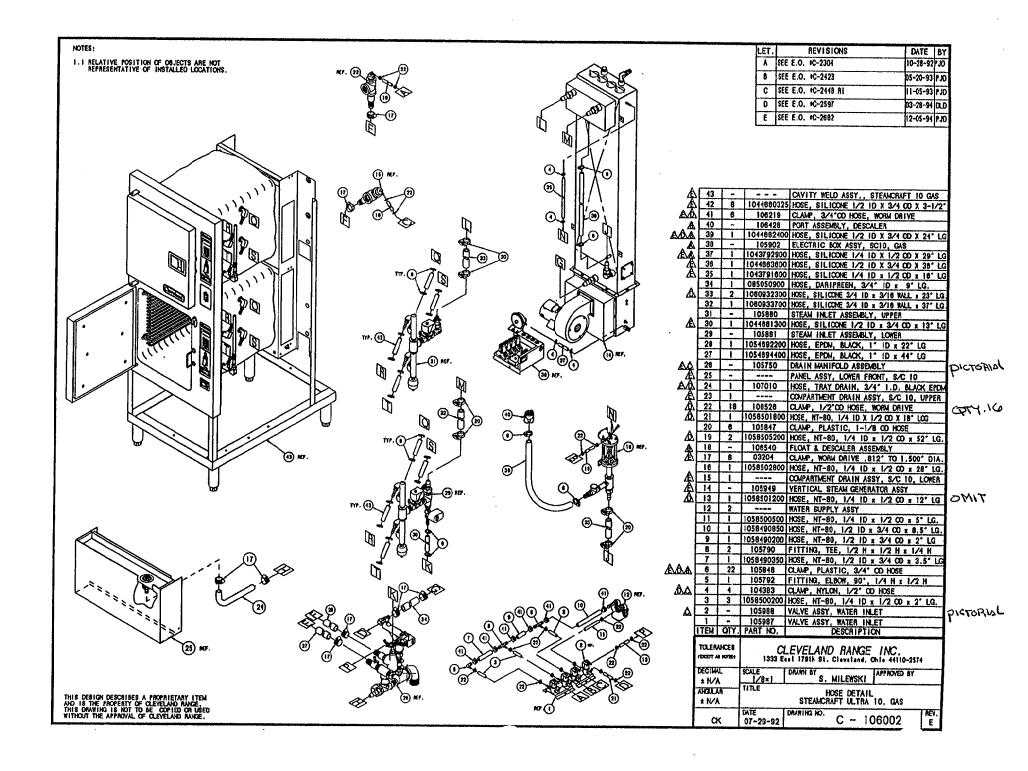

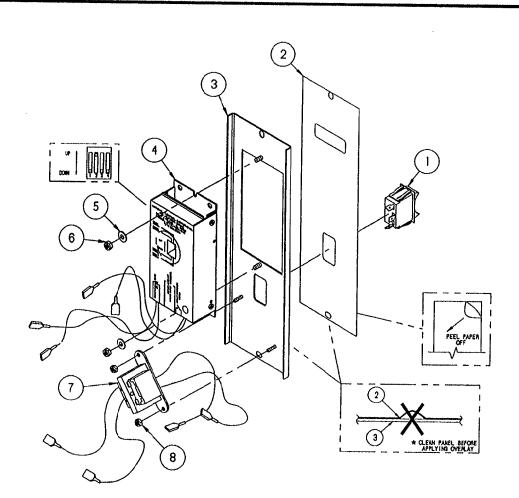


THIS DESIGN DESCRIBES A PROPRIETARY ITEM AND IS THE PROPERTY OF CLEVELAND RANGE. THIS DRAWING IS NOT TO BE COPIED OR USED WITHOUT THE APPROVAL OF CLEVELAND RANGE.

LET. REVISIONS DATE BY

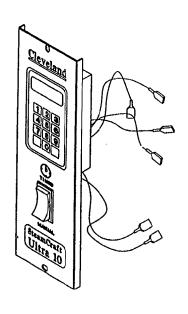

	,				
8	2	104223	NUT, HEX, \$6-32, ELASTIC LOCK		
7	1	104390	TRANSFORMER ASSEMBLY		
6	2	14692	NUT, HEX, #10-24, ELASTIC LOCK		
5	2	101655	WASHER, FLAT, #10, S/S		
4	1	104389	TIMER ASSEMBLY, NCC		
3	1	104704	PANEL, WELDMENT, ELEC TIMER		
2	1	106454	LABEL, CONTROL PANEL, ELEC		
_ 1	_1	.104224	SWITCH, ROCKER, SPDT		
ITEM	QTY.	PART NO.	DESCRIPTION		
TOLERANCES CLEVELAND RANGE INC. 1333 East 179th St. Cleveland, Ohio 44110-					
DECIMA		SCALE	DRAWN BY APPROVED BY		
± N/	Ά	3/8=1 DUTCHMAN			
ANGULAR		TITLE TIMER ASS'Y, ELECTRIC CONTROL			
± N/A		REAR MO	UNTED, STEAMCRAFT ULTRA TO		
СК		DATE	DRAWING NO. REV.		

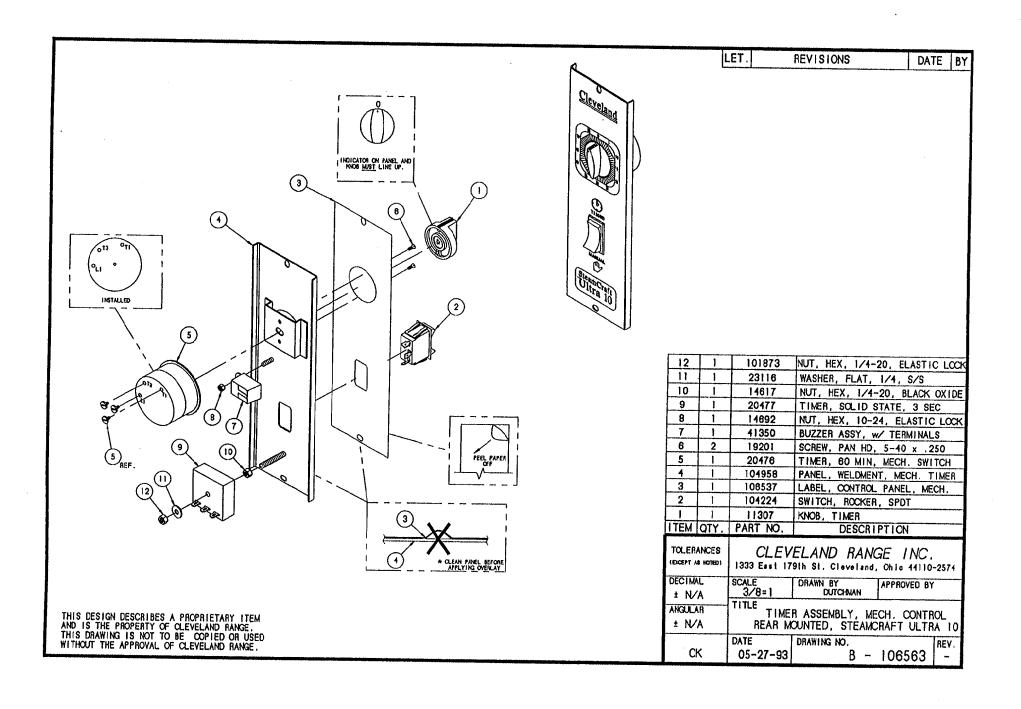

LET. REVISIONS DATE BY 102533 BLOCK, CONTACT 3 102534 SWITCH, SELECTOR 2 106538 LABEL, CONTROL PANEL, ON/OFF 104961 PANEL WELDMENT, ON/OFF CONTROL ITEM QTY. DESCRIPTION PART NO. **TOLERANCES** CLEVELAND RANGE INC. (EXCEPT AS NOTED) 1333 East 179th St. Cleveland, Ohio 44110-2574

> DRAWN BY DUTCHMAN

DRAWING NO.

E TIMER ASSEMBLY, ON/OFF CONTROL REAR MOUNTED, STEAMCRAFT ULTRA 10

APPROVED BY

B - 106564

SCALE 3/8=1

DATE


05-27-93


DECIMAL


± N/A ANGULAR

± N/A


CK

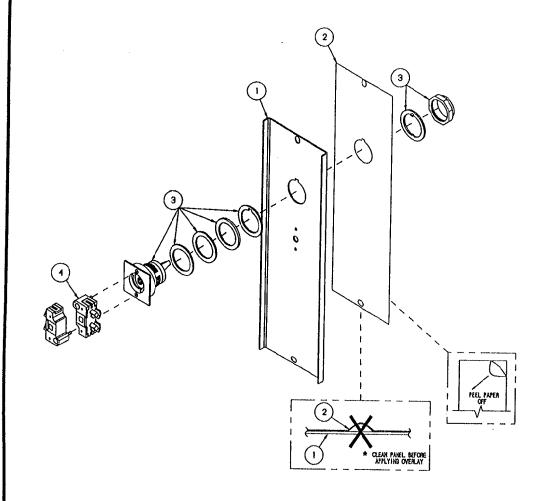


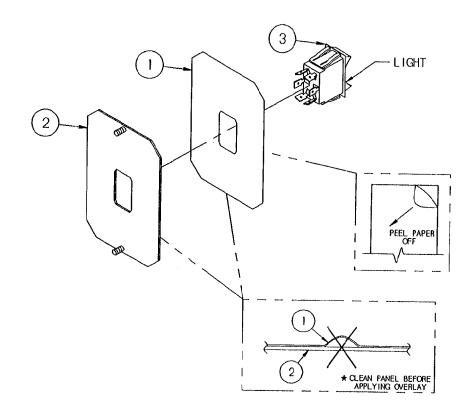


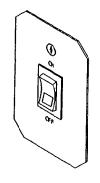

_3	1	19993	SWITCH, ROCKEI	R, DPDT,	LIGHT	
2	1	105851	PANEL, CONTROL			
1	1	105723	LABEL, CONTRO			
I TEM	QTY.	PART NO.	DESCRI			
TOLER	S NOTED)		EVELAND RA 19th St. Cleveland,			
DECIMAL		SCALE 1/2=1	DRAWN BY S. MILEWSKI	APPROVED BY	,	
± N∕						
ANGULAR		TITLE PANEL ASSEMBLY				
± N/A			POWER SWITCH STEAMCRAFT 10		ł	
~	· ·	DATE 6-10-92	DRAWING NO.	105910	REV.	

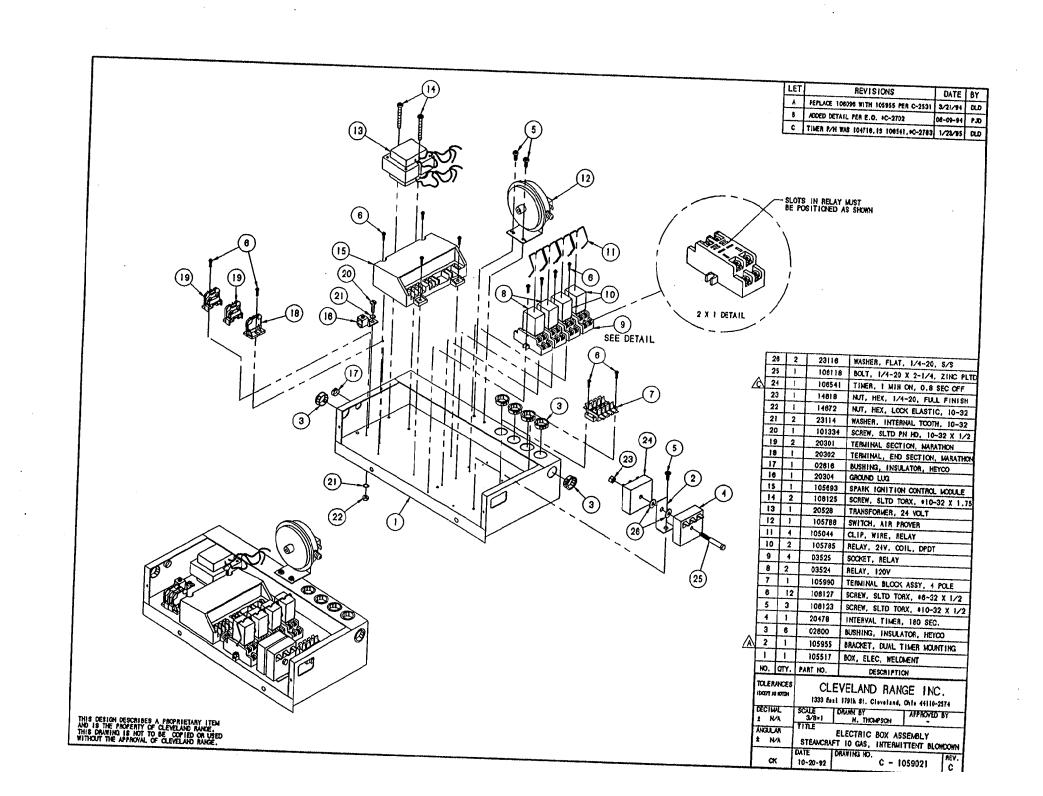

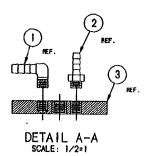

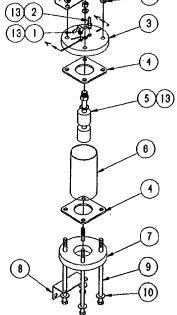

	13	A/R	00934	SEALANT, RECTORSEAL
	12	4	14818	NUT, HEX HEAD, 1/4-20, 8/8
	11	4	23105	WASHER, SPLIT LOCK, 1/4, S/S
	10	4	23116	WASHER, FLAT, 1/4, S/S
	9	4	104276	SCREW, HEX HEAD, 1/4-20 x 5.5, S/S
	8	2	105925	BRACKET, MOUNTING, FLOAT ASSY
	7	1	104040	CAP, FLOAT BOTTOM
	6	1	104190388	TUBE, POLYSULFONE, 2 x .125 x 3.875
	5		103728	SWITCH ASSEMBLY, FLOAT
	4	2	104041	GASKET, FLOAT ASSEMBLY
	3	ı	104039	TOP, FLOAT, STEAMCRAFT
8	2	ı	104381	FITTING, HOSE BARB, 1/4 H x 1/4 MPT
	1		105787	FITTING, HOSE BARB, 90°, 1/4 H x 1/8 MPT
	ITEM	QTY.	PART NO.	DESCRIPTION
	IEXCEPT A			EVELAND RANGE INC. 9th St. Cleveland, Ohio 44110-2574
	DECIM	_	SCALE AS SHOWN	DRAWN BY APPROVED BY
ļ	± N/		TITLE	
	ANZII	IR .		ELOAT ACCELUI V



ASSEMBLED VIEW SCALE: 1/4=1

EXPLODED ASSEMBLY SCALE: 1/4=1

THIS DESIGN DESCRIBES A PROPRIETARY ITEM AND IS THE PROPERTY OF CLEVELAND RANGE. THIS DRAWING IS NOT TO BE COPIED OR USED WITHOUT THE APPROVAL OF CLEVELAND RANGE.

	_	
		/ _
	3	(11)
(13)(2)-	\$ \$	_
\simeq	12	(3)
(13)(1)	1	
$\mathcal{O}_{\mathcal{L}}$,
	7	-(4)
	\bigcirc	
	8	(5)(1:
	سرافي	
	١	
	\sim	(6)
	1 1	
		(4)
	(A)	
		•
		(7)
	1 Th	
$\widehat{}$	K P J	
(8)		(9)
\sim	////	
A	74 II A	(10)
`	. ஈ 11 ந	\sim
	e.	

	13	A/R	00934	SEALANT, RECTORSEAL
	12	4	14818	NUT, HEX HEAD, 1/4-20, S/S
	11	4	23105	WASHER, SPLIT LOCK, 1/4, S/S
	10	4	23116	WASHER, FLAT, 1/4, S/S
	9	4	104278	SCREW, HEX HEAD, 1/4-20 x 5.5, S/S
	8	2	105925	BRACKET, MOUNTING, FLOAT ASSY
	7	1	104040	CAP, FLOAT BOTTOM
	6	1	104190388	TUBE, POLYSULFONE, 2 x .125 x 3.875
	5	1	103726	SWITCH ASSEMBLY, FLOAT
	4	2	104041	GASKET, FLOAT ASSEMBLY
	3	1	104039	TOP, FLOAT, STEAMCRAFT
A	2	<u> </u>	104381	FITTING, HOSE BARB, 1/4 H x 1/4 MPT
	1	1	105787	FITTING, HOSE BARB, 90°, 1/4 H x 1/8 MPT
	ITEM	QTY.	PART NO.	DESCRIPTION
	TOLERANCES (EXCEPT AS HOTED)			EVELAND RANGE INC. 9th St. Cleveland, Ohlo 44110-2574
	DECIM ± N/	_	SCALE AS SHOWN	DRAWN BY APPROVED BY S. MILEWSKI
	ANGULAR ± N/A		TITLE	FLOAT ASSEMBLY STEAMCRAFT 10, GAS
	С	К	DATE 06-29-92	DRAWING NO. B - 105957 C

LET.

В

REVISIONS

REMOVED P/N 06240 PER E.O. #C-2423

P/N 104381 WAS P/N 104380 PER EO C-2575


ROTATED 90° P/NS 105787 & 104380 PER EO #C-2304


DATE BY

10-05-92 PJD

05-20-93 PJD

02/24/94 DFA

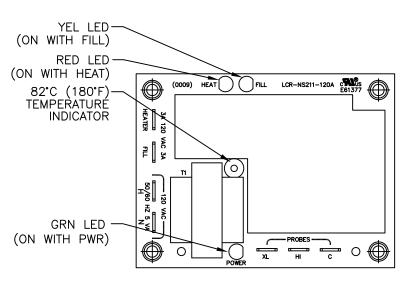

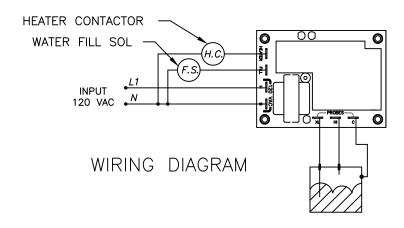

107241 Water Level Board

GENERAL DESCRIPTION

THIS SOLID STATE CONTROLLER SERVES AS A DUAL LEVEL WATER SENSING DEVICE. IT'S FUNCTIONS ARE TO:

- 1. MONITOR AND MAINTAIN A PRESET OPERATING WATER LEVEL WITHIN A STEAM GENERATOR VESSEL, AND
- 2. MONITOR THE SAFE LOW WATER LIMIT FOR HEATER OPERATION AND PROVIDE HEATER LOCK-OUT FOR UNSAFE OPERATION.


EACH FUNCTION WILL BE CONTROLED BY RESISTANCE SENSING BETWEEN THE PROBES ("HI" & "LOW" TERMINALS) AND A GROUNDED COMMON ("C" TERMINAL).


LOW PROBE OPERATION

WHEN WATER CONTACTS PROBE, RESISTANCE BETWEEN "LOW" PROBE AND COMMON "C" WILL BE BELOW SET POINT (50 K OHM) AND OUTPUT RELAY WILL BE ACTIVATED IMMEDIATELY TO SUPPLY 120 VAC FROM L1 TO HTR TERMINAL. WHEN CONTACT BETWEEN WATER AND PROBE IS BROKEN (RESISTANCE GREATER THAN 50 K OHM) THE RELAY WILL BE DEACTIVATED WITHIN 0-2 SECONDS.

HI PROBE OPERATION


AS WATER MAKES CONTACT WITH PROBE, RESISTANCE BETWEEN "HI" AND COMMON "C" WILL BE BELOW SET POINT (50 K OHM) AND OUTPUT RELAY IS DEACTIVATED IMMEDIATELY. WHEN WATER BREAKS CONTACT WITH "HI" PROBE DELAY TIMING STARTS. TIMING IS NOT ACCUMULATIVE AND DELAY TIMER WILL BE RESET TO ZERO ANY TIME RESISTANCE BETWEEN "HI" PROBE AND COMMON "C" GOES BELOW SET POINT (50 K OHM). WHEN RESISTANCE BETWEEN HI PROBE AND COMMON "C" REMAINS ABOVE SET POINT FOR MORE THAN 5 SEC. (-2,+0 SEC.) THE OUTPUT RELAY ACTIVATED TO PROVIDE 120 VAC FROM L1 TO WF TERMINAL.

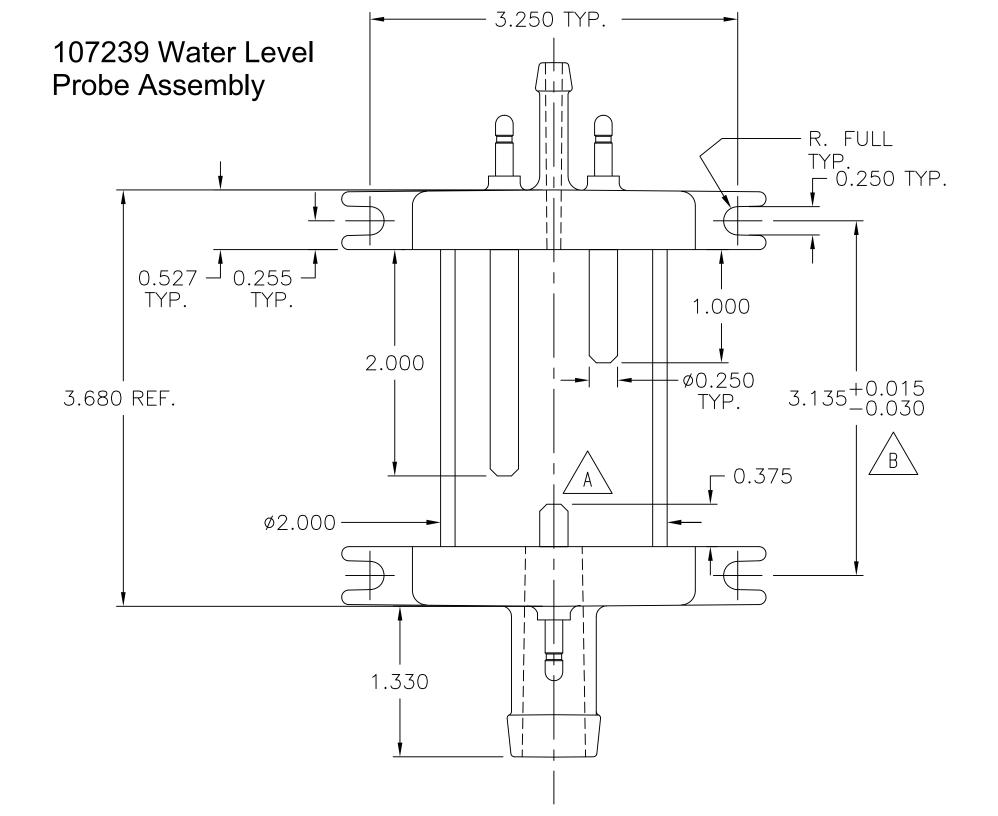


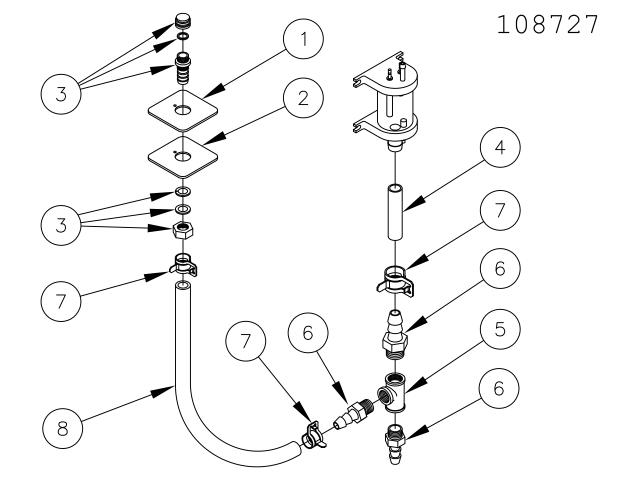


8	1	085112700	HOSE, WHITE, EPDM, 3/4 ID X 27.000 LG
7	2	107312	CLAMP, HOSE METAL TENSION, 1.125 OD HOSE
6	2	06240	FITTING, HOSE BARB, 3/4 X 3/4
5	1	20206	TEE, 3/4 BRASS
4	1	085110600	HOSE, WHITE, EPDM, 3/4 ID X 6.000
3	1	109641	PORT ASSEMBLY, DESCALER
2	1	108724	PLATE, DESCALER PORT CVRSN
1	1	108723	GASKET, DESCALER PORT CVRSN


LET. REVISIONS DATE BY

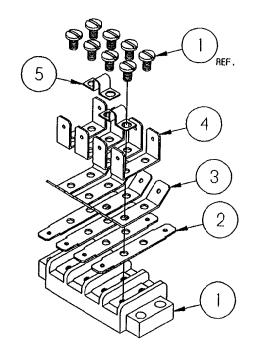

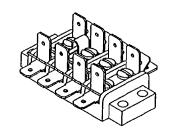


- 1	~	_				
	5	2	20328	TERMINAL CONNECTOR, JI	JMPER	
	4	4	20327	TERM. CONN., MALE TAB		
ĺ	3	4	20326	TERM. CONN., MALE TAB	45°	
	2	4	20325	TERMINAL CONN., MALE	TAR	
	1	1	02192	TERMINAL BLOCK, 4 TERM		
	ITEM	QTY.	PART NO.	DESCRIPTION	VIIIVAL.	
	TOLERANCES (EXCEPT AS NOTED)		CLEVELAND RANGE INC. 1333 East 179th St. Cleveland, Ohio 44110-2574			
	DECIMAL ± N/A		SCALE 5/8=1	5/8=1 S. MILEWSKI JTW		
	ANGULAR ± N/A		TITLE TE	RMINAL BLOCK ASSEMBLY 4 POLE		
	CK.		DATE 07-22-92	DRAWING NO. A - 105990	REV.	

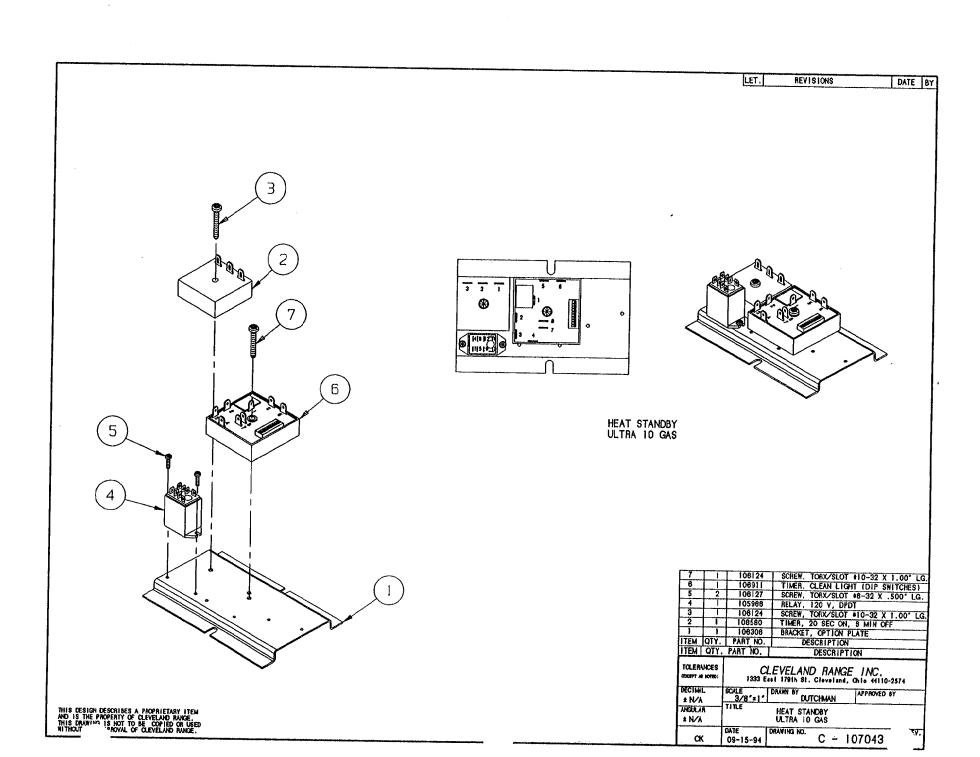

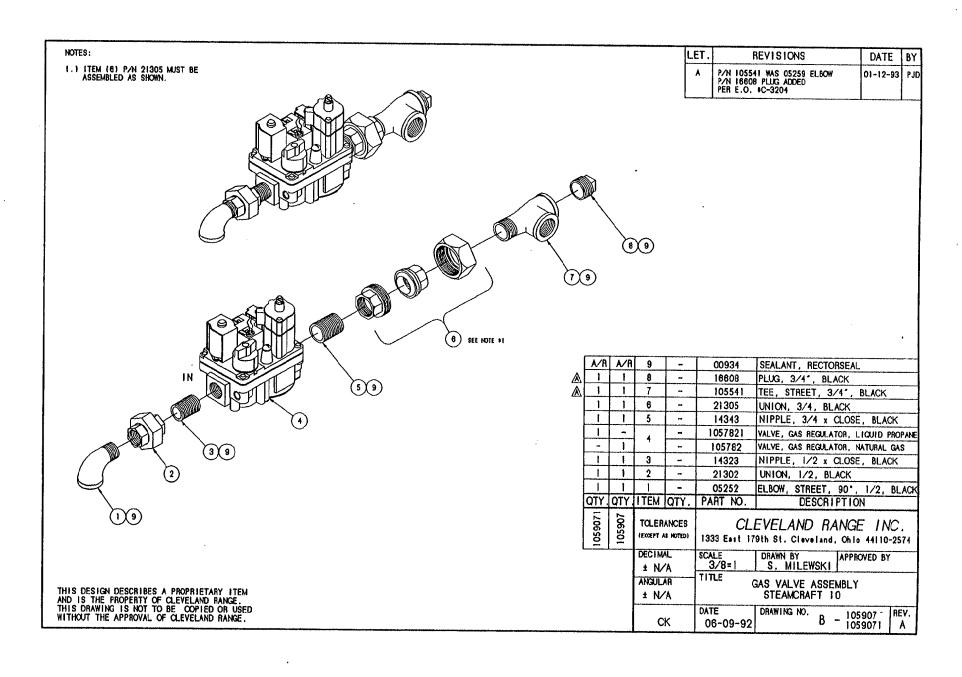


LET. REVISIONS DATE BY

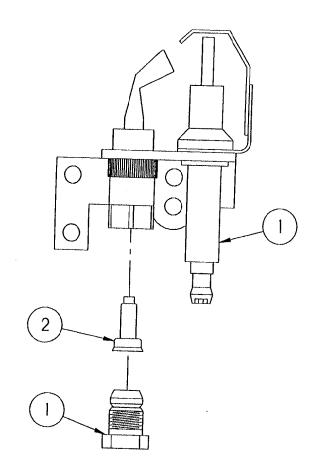



NOTE:


- 1.) REMOVE ORIFACE FROM P/N 105784 AND DISCARD.
- 2.1 INSTALL P/N 106375.


2 1 ITEM	1 QTY,	106375 105784 PART NO.	ORIFICE, PILOT, 0.012" PILOT DESCRIPTION
TOLERANCES (EXCEPT AS NOTED)		CLEV	VELAND RANGE INC. 79th St. Cleveland, Ohio 44110-2574
DECIMA ± N/A		SCALE 1=1	DRAWN BY APPROVED BY -
ANGULAR ± N/A		TITLE P	ILOT ASSEMBLY, L.P. STEAMCRAFT 10
Ck	<	DATE 02-22-93	DRAWING NO. A - 1057841 -

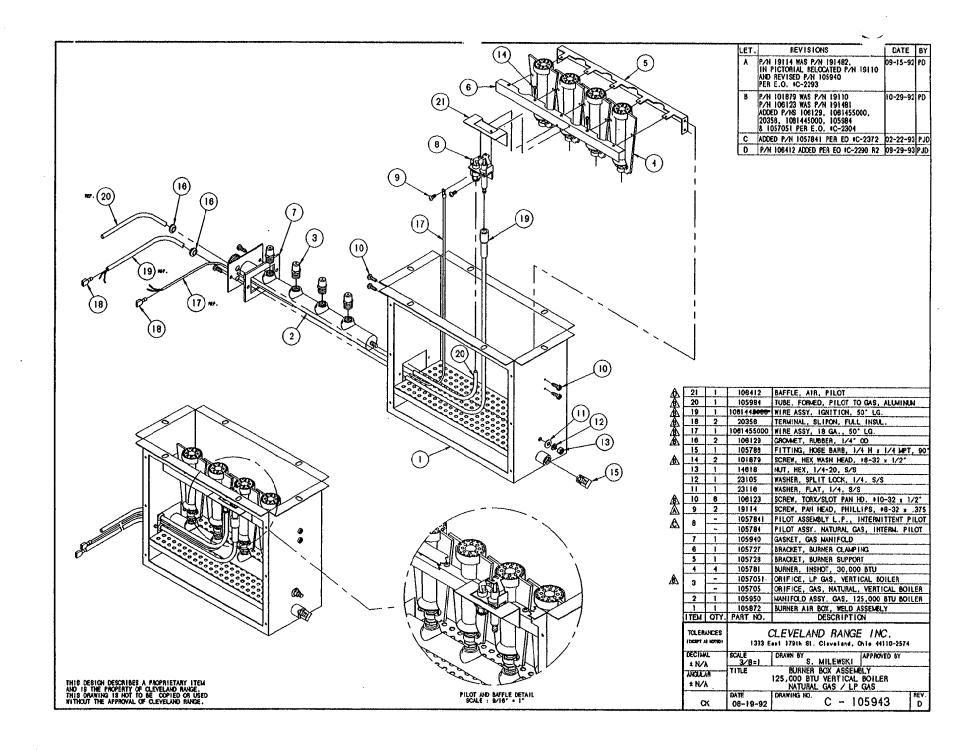

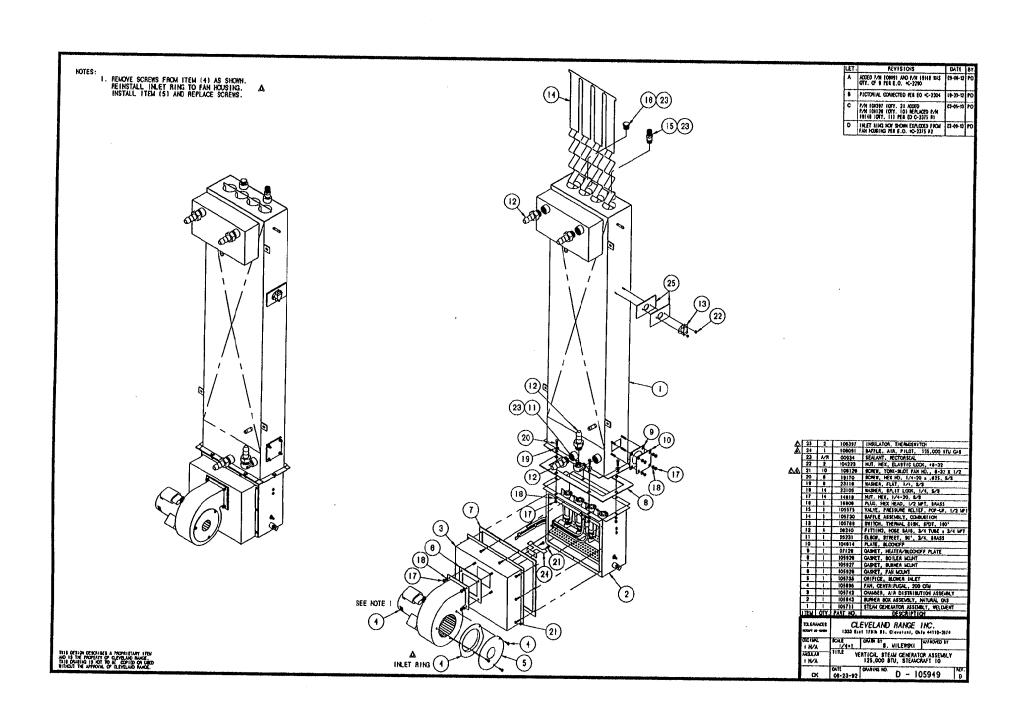


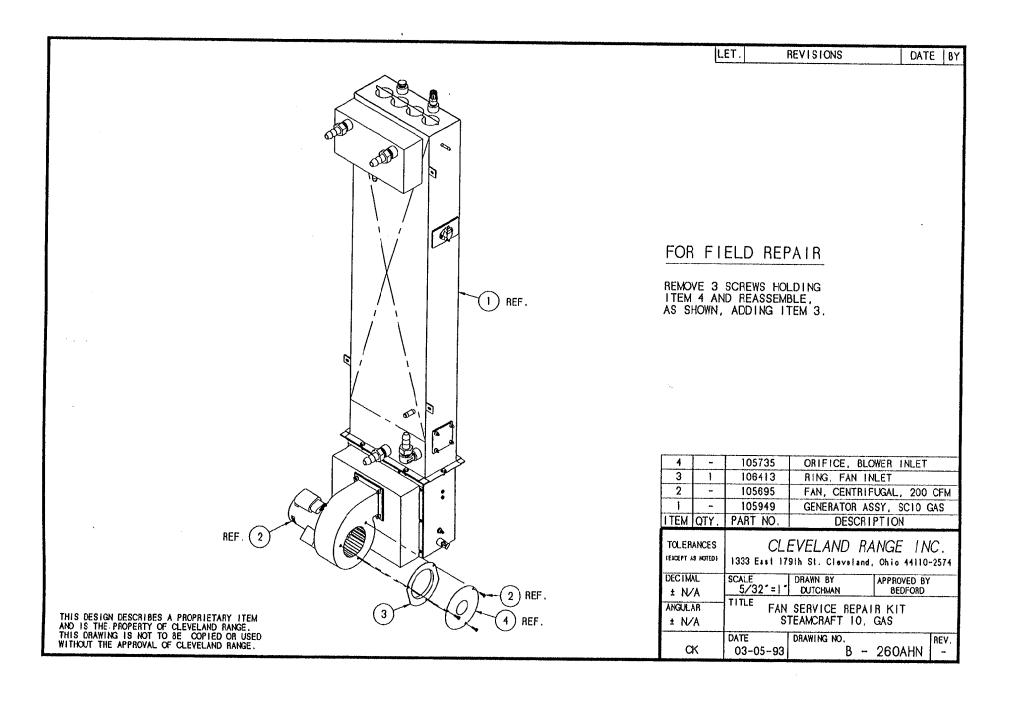


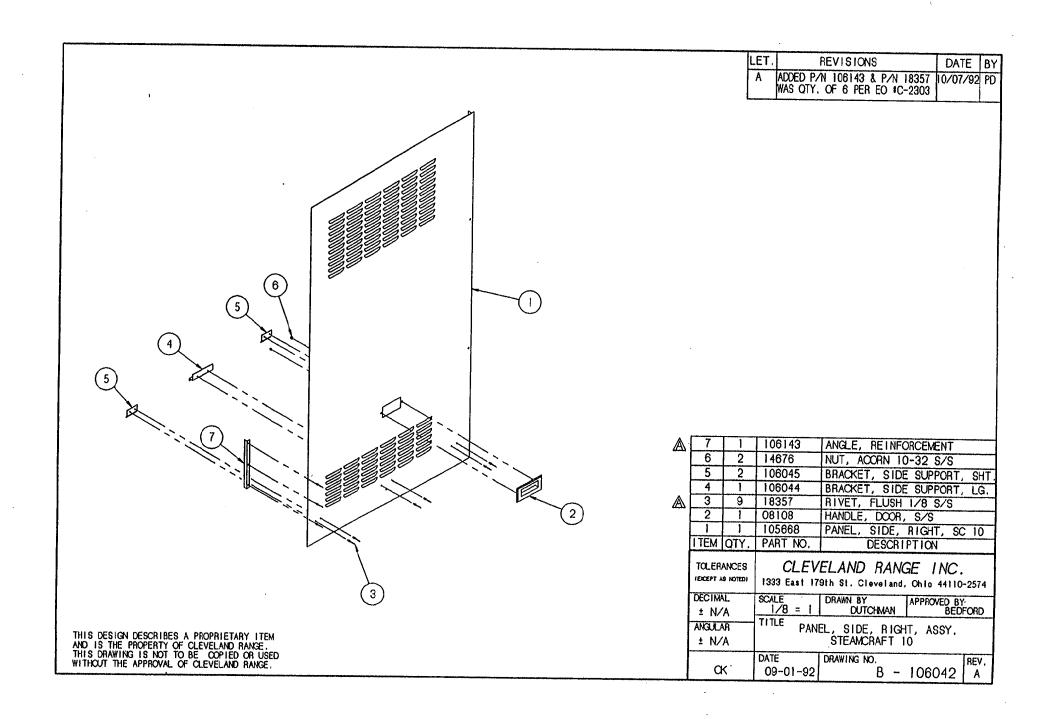

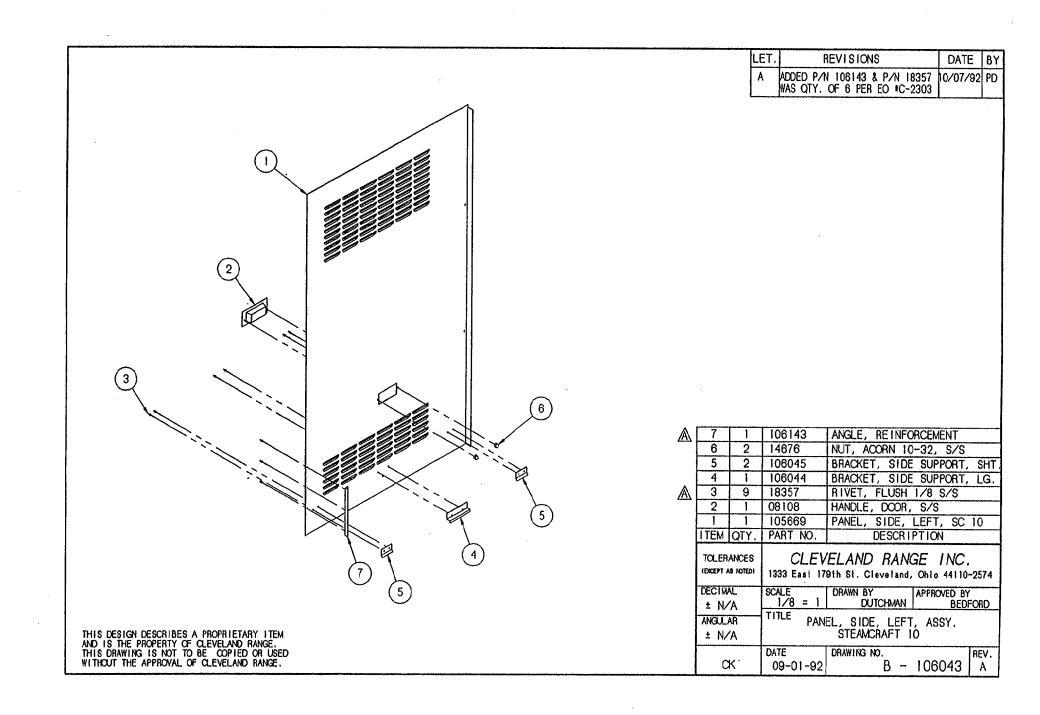


-				
	LET.	REVISIONS	DATE	BY
	<u> </u>	NEW VALVE REPLACING P/N 22218 (PICTORIAL ONLY) PER E.O. 4C-2221 RI	01-28-93	PJD
	В	REPLACED ONE 105786 WITH 106588. EO #C-2448RI.	11/4/93	NLT

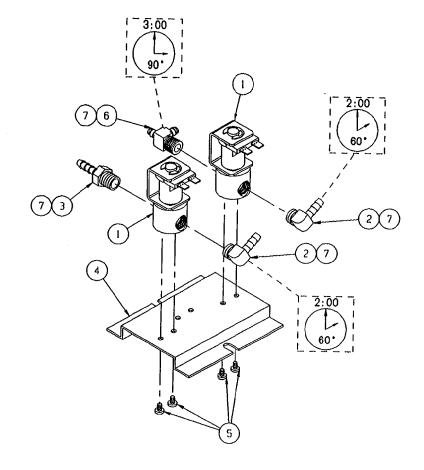


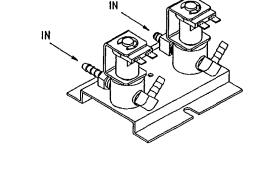


		,	T	
	7	A/R	00934	SEALANT, RECTORSEAL
ΔŁ	6	1 1	106588	FITTING, HOSE, TEE, MALE RUN 1/4"
	5	4	101872	SCREW, THREAD CUTTING, #8-32 x .25
	4	1	104284	BRACKET, MOUNTING, STEAM SOLENOID
	3	1	104381	FITTING, HOSE BARB, 1/4 H x 1/4, ST.
	2	2	105786	FITTING, HOSE BARB, 1/4 H x 1/4, 90°
Δ	1	2	22218	VALVE, SOLENOID, 1/4", N.C., 120 V
	ITEM	QTY.	PART NO.	DESCRIPTION
	TOLERANCES (EXCEPT AS HOTED)		CLEV 1333 East 17	ELAND RANGE INC. 9th St. Cleveland, Chio 44110-2574
	DECIM		SCALE 1/2=1	DRAWN BY APPROVED BY
	± №	Ά		S. MILEWSKI
1	ANGUL	\R	TITLE	VALVE ASSEMBLY
	± N/A			WATER INLET STEAMCRAFT 10
ı			DATE	
	a	К	7-21-92	B - 105988 B


LET.	REVISIONS	DATE	BY
A	NEW YALVE REPLACING P/N 22218 (PICTORIAL ONLY) PER E.O. #C-2221 R1	01-28-93	PJD

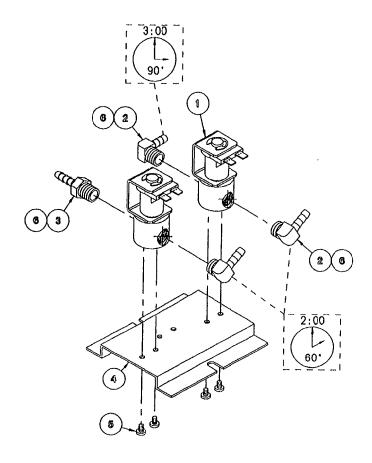


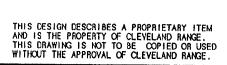


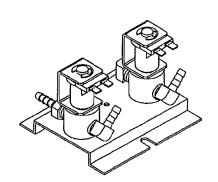

	6	A/R	00934	SEALANT, RECTORSEAL	
	5	4	101872	SCREW, THREAD CUTTING, #8-32	. 25
	4	1	104284	BRACKET, MOUNTING, STEAM SOLE	101D
	3	1	104381	FITTING, HOSE BARB, 1/4 H x 1/	4, ST.
	2	3	105786	FITTING, HOSE BARB, 1/4 H x 1/	'4, 90°
\triangle	1	2	22218	VALVE, SOLENOID, 1/4", N.C.,	20 V
	ITEM	QTY.	PART NO.	DESCRIPTION	
j	TOLERANCES LEXCEPT AS HOTEDS DECTIMAL ± N/A			ELAND RANGE INC. 9th St. Cleveland, Ohio 44110	
			SCALE 1/2=1	DRAWN BY APPROVED BY S. MILEWSKI	
	ANGULAR ± N/A		TITLE	VALVE ASSEMBLY	
				WATER INLET STEAMCRAFT 10	
			DATE	DRAWING NO.	REV.
- 1	С	K !	7-21-92	B - 105988	A

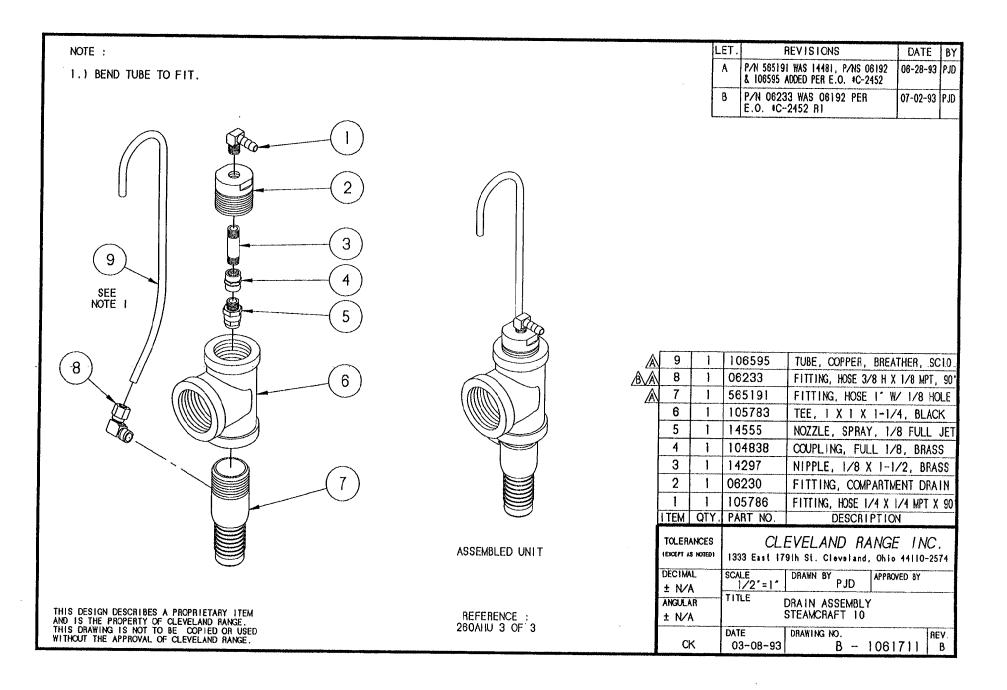

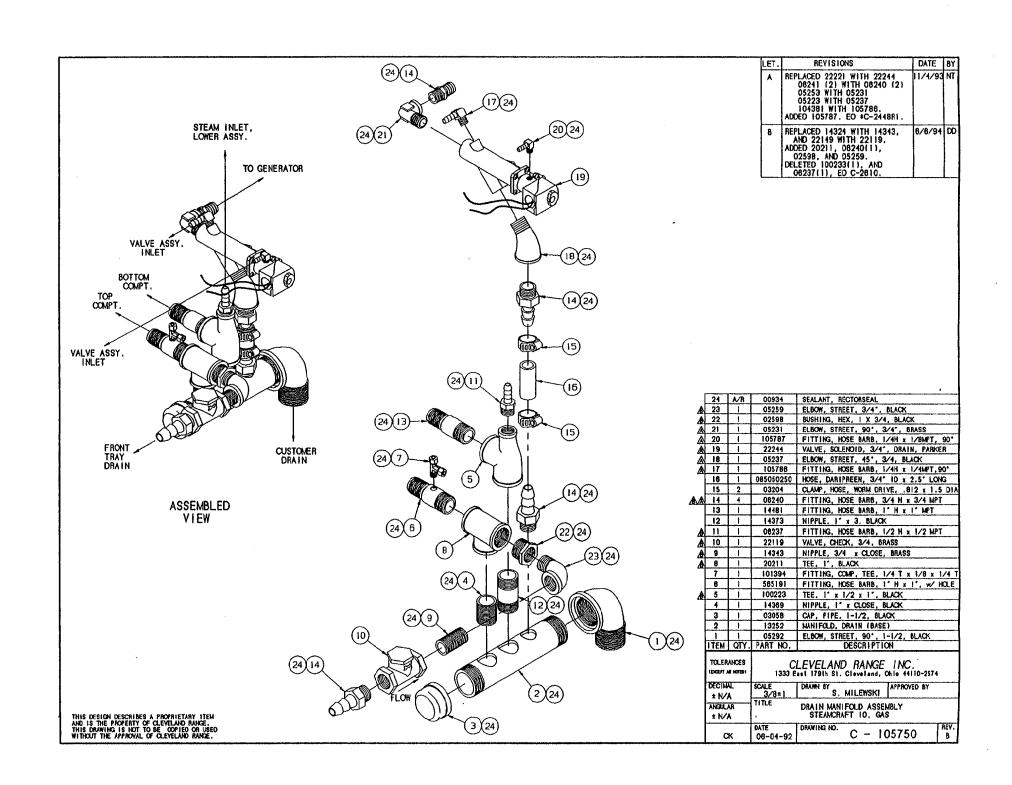

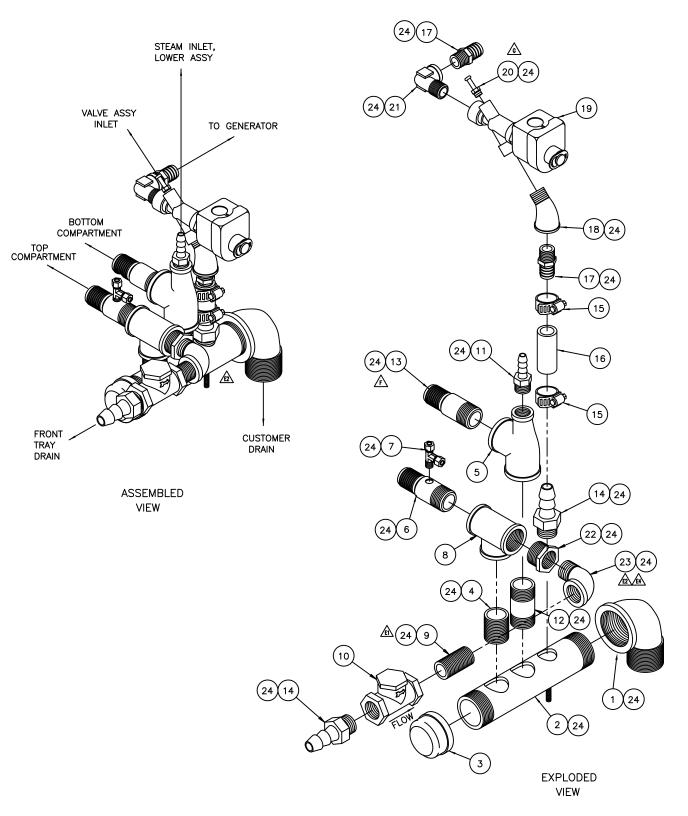

24	A/R	00934	SEALANT, PIPE DOPE
23	1	05259	ELBOW, STREET, 90°, 3/4, BLACK
22	1	02598	BUSHING, HEX, 1 x 3/4, BLACK
21	1	05253	ELBOW, STREET, 90°, 1/2, BRASS
20	1	109866	FITTING, HOSE BARB, RADIUS TIP, 1/4 HOSE
19	1	22221	VALVE, SOLENOID, 1/2, 15 PSI
18	1	05223	ELBOW, STREET, 45°, 1/2, BRASS
17	2	06241	FITTING, HOSE BARB, 3/4 H x 1/2 MPT
16	1	085110250	HOSE, DARIPREEN, 3/4 ID x 2.500 LG
15	2	03204	CLAMP, HOSE, WORM DRIVE, 0.812 TO \$1.500
14	2	06240	FITTING, HOSE BARB, 3/4 H x 3/4 MPT
13	1	14481	FITTING, HOSE BARB, 1 H x 1 MPT
12	1	14373	NIPPLE, 1 x 3, BLACK
11	1	06237	FITTING, HOSE BARB, 1/2 x 1/2 MPT
10	1	22119	VALVE, CHECK, 3/4, BRASS
9	1	14343	NIPPLE, 3/4 x CLOSE, BRASS
8	1	20211	TEE, 1, BLACK
7	1	101394	FITTING, COMP, TEE, 1/4 T x 18 x 14 T
6	1	565191	FITTING, HOSE BARB, 1 H x 1, W/HOLE
5	1	100223	TEE, 1 x 1/2 x 1, BLACK
4	1	14369	NIPPLE, 1 x CLOSE, BLACK
3	1	03058	CAP, PIPE, 1-1/2, BLACK
2	1	132521	MANIFOLD ASS'Y, DRAIN (STUD LOCATION)
1	1	05292	ELBOW, STREET, 90°, 1-1/2, BLACK

NOTE:


REMOVE AND DISCARD PLASTIC TAIL PIECE; REPLACE WITH ITEM 2





REVISIONS

DATE


BY

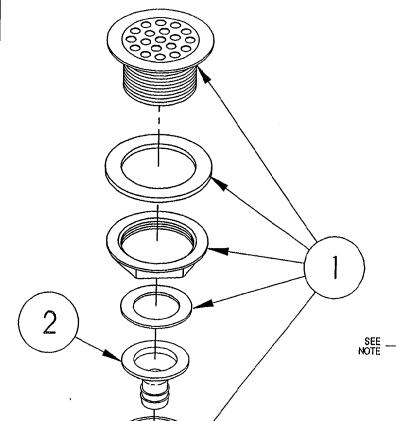


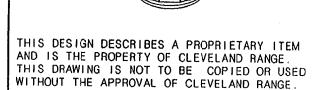

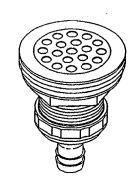


		······································				
	2	1	106736	TAIL PIECE, DRAIN		
	1	1	105280	DRAIN, FITTING HOSE ADAPTER		
	ITEM	QTY.	PART NO	DESCRIPTION	•	
	TOLERANCES (EXCEPT AS NOTED)			CLEVELAND RANGE INC. 1333 East 179th St. Cleveland, Ohio 44110-2574		
	DECIMAL ± N/A ANGULAR ± N/A		SCALE 1/2"	DRAWN 8Y ATHERTON APPROVED BY		
			TITLE T	DRAIN ASSEMBLY ABLETOPS AND STEAMCRAFT 10		
	****		DATE	DRAWING NO.	REV.	
	C	к	01-06-92	A-106737 -	-	

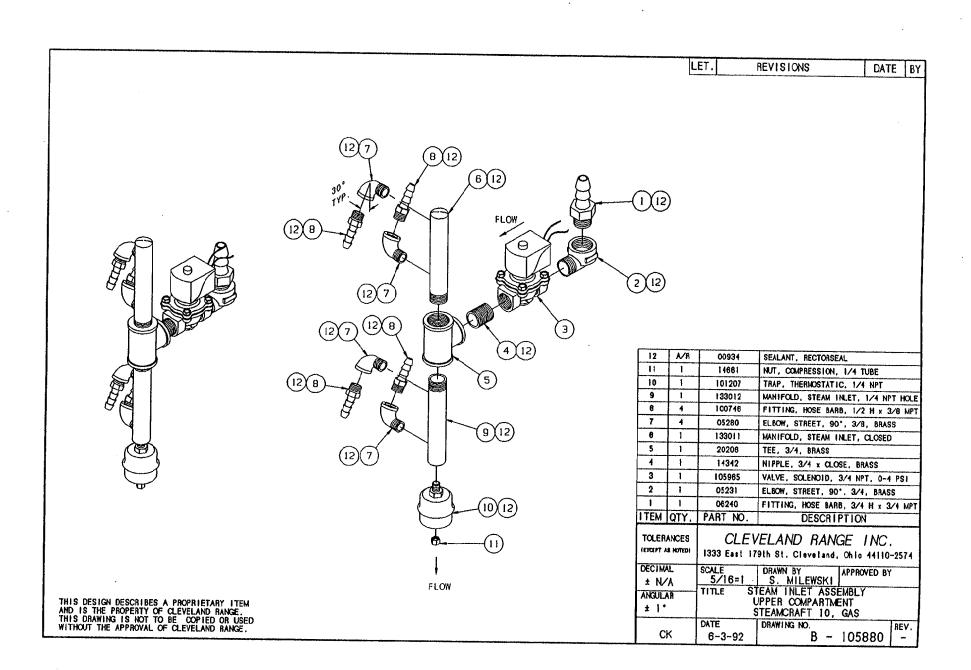

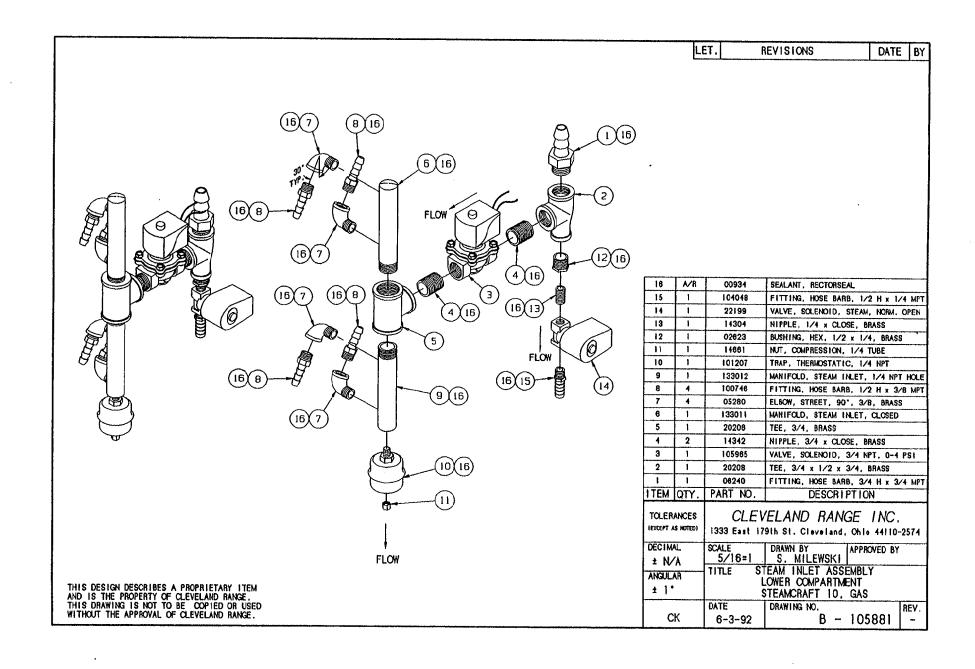


LET. REVISIONS DATE BY

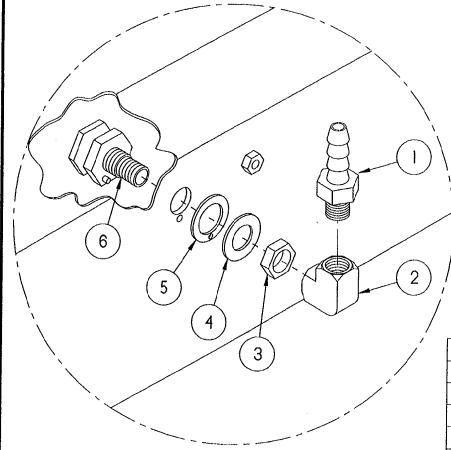



TYPICAL APPLICATION

		·	
6	1	104009	FITTING, ASSY, STEAM SUPPLY
5	1	104082	GASKET, STEAM INJECTOR
4	1	104232	WASHER, FLAT S/S
3	. 1	104081	NUT, JAM 5/8-18, BRASS
2	1	05236	ELBOW, 1/4" X 90°, BRASS
1	1	104048	FITTING, HOSE 1/2 H X 1/4 MPT
ITEM	QTY.	PART NO.	DESCRIPTION
		01.51	ELAND DANGE ING

TOLERANCES (EXCEPT AS NOTED)	1333 East 17	ELAND RANC 9th St. Cleveland,		-2574
DECIMAL ± .030	SCALE 1/2"	DRAWN BY DUTCHMAN	APPROVED BY	MPSON
ANGULAR ± 1°		PRAY NOZZLE AS AMCRAFT 3.1, 5		
CK	DATE 02-12-93	DRAWING NO. A - 1	062301	REV.

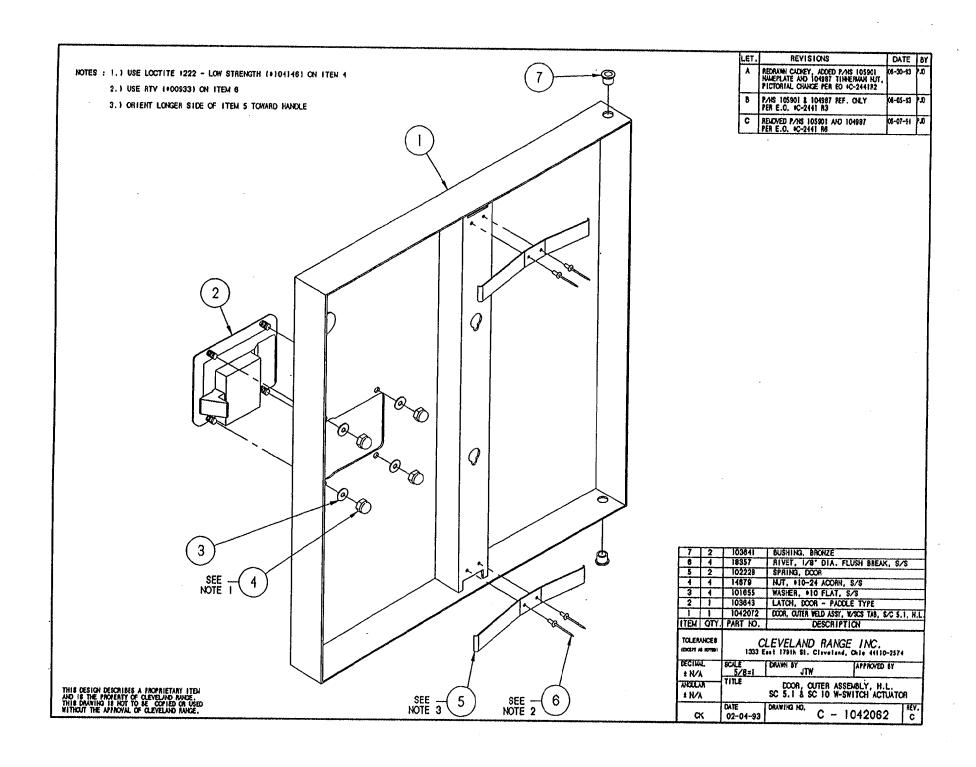

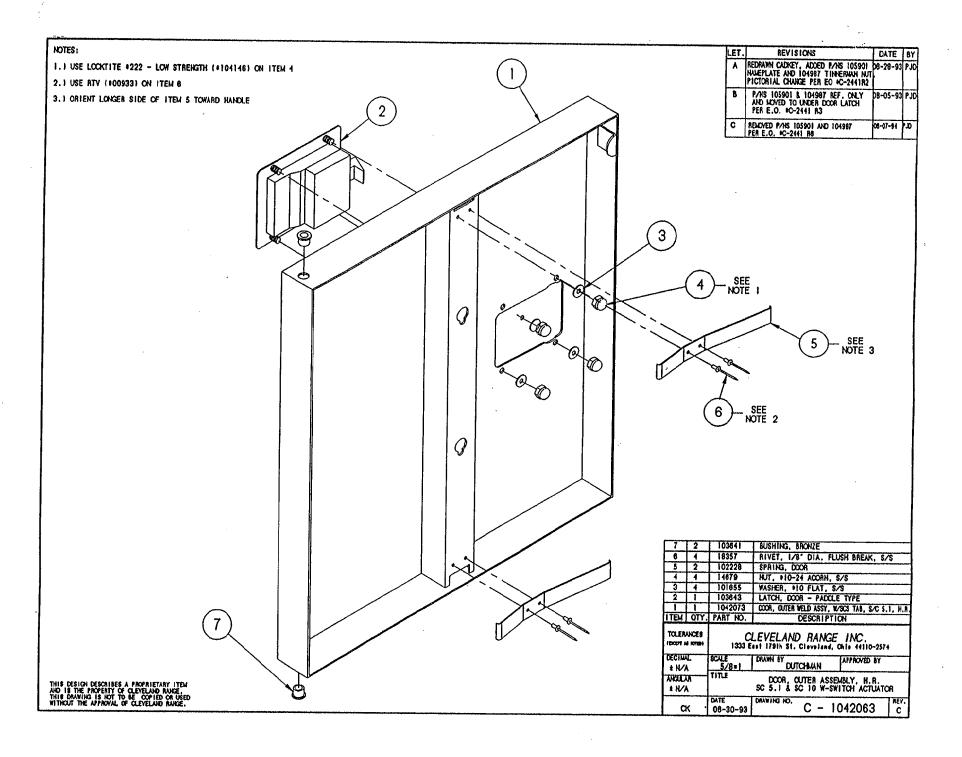

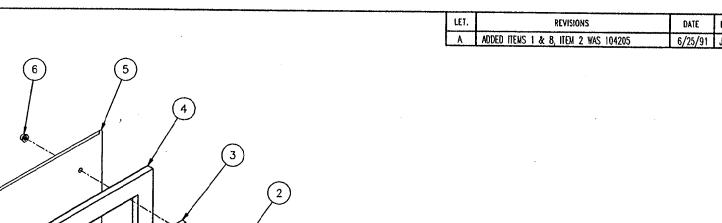

TIV APPLIED AROUND SQ. ON BASE OF HEAD
SQ. ON BASE OF HEAD




	8	A/R	00932	SEALANT, CLEAR RIV	
į	7	2	66508	STUD, DOOR MOUNTING, INNER	
	6	6	14665	NUT, HEX LOCK, 1/4-20 S/S	
	5	1	104204	DOOR WELDMENT, INNER, S/C 5.1	
	4	1	104026	GASKET, DOOR S/C 5.1	
	3	1	104022	PLATE, INNER GASKET RETAINER, S/C 5.1	
	2	1	104021	PLATE, GASKET RETAINER, S/C 5.1	
	1	6	104719	BOLT, CARRIAGE 1/4-20 X 1.000"	
	FTEM	QTY	PART NO.	DESCRIPTION	
	TOLERANCES (EXCEPT AS HOTED)			CLEVELAND DANCE INC	
				CLEVELAND RANGE INC. 1333 East 179th St. Cleveland, Ohio 44110-2574	
			SCALE NON	1333 East 179th St. Clerekond, Ohio 44110-2574	
	(EXCEPT A	S HOTED)	cone	1333 East 179th St. Clerekond, Ohio 44110-2574	


THIS DESIGN DESCRIBE THIS DRAWING IS NOT . PRIETARY ITEM AND IS THE PROPERTY OF CLEVELAND RANGE.
OPIED OR USED WITHOUT THE APPROVAL OF CLEVELAND RANGE

NOTES:

1) FIRST ATTACH BOTTOM ANGLE (P/N 106844)
NEXT ASSEMBLE DOOR (P/N 106845) INTO PLACE
THEN ATTACH TOP ANGLE ON TO SIDE PANEL


LET.	REVISIONS	DATE	BY
-	NEW RELEASE PER E.O. C-2769	12-12-94	PJD

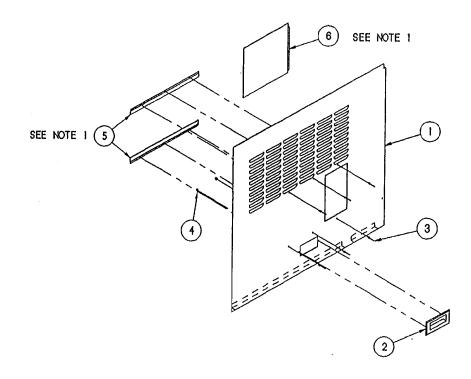


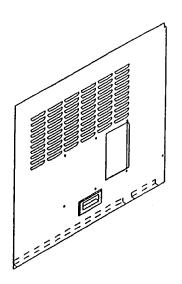

	· · · · · · · · · · · · · · · · · · ·					
6	1 1	106845	DOOR, PANEL, RIGHT, SC 10			
5	2	106844	ANGLE, SOOR, PANEL, SC 10			
4	2	14676	NUT, ACORN 10-32 S/S			
3	6	18357	RIVET, FLUSH, 1/8' S/S			
2	1	08108	HANDLE, DOOR, S/S			
1	1	107119	PANEL, SIDE, RIGHT, TOP HALF			
ITEM	QTY.	PART NO.	DESCRIPTION			
TOLERANCES (EXCEPT AS NOTED)		CLEVELAND RANGE INC. 1333 East 179th St. Cleveland, Ohio 44110-2574				
DECIMAL ± N/A		SCALE DRAWN BY APPROVED BY DUTCHMAN				
ANGULAR		TITLE PANEL ASSY., RIGHT SIDE				
± N/A		TOP HALF, S/C 10 PRESSURE				
СК		DATE 12-12-94	DRAWING NO. B - 107271 -			

LET.	REVISIONS	DATE	BY
•	NEW RELEASE PER E.O. C-2769	12-12-94	PJD

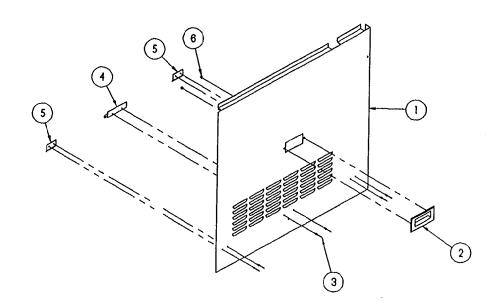


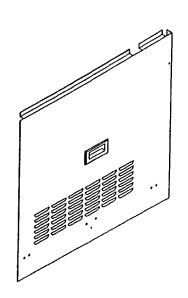


		y		
6	2	14676	NUT, ACORN 10-32 S/S	
5	2	106045	BRACKET, SIDE SUPPORT, SHORT	
4	1	106044	BRACKET, SIDE SUPPORT, LONG	
3	6	18357	RIVET, FLUSH, 1/8' S/S	
2	1	08108	HANDLE, DOOR, S/S	
1	1	1071201	PANEL, SIDE, RIGHT, BTM. HALF	
ITEM	QTY.	PART NO.	DESCRIPTION	
TOLERANCES (EXCEPT AS HOTED)		CLEVELAND RANGE INC. 1333 East 179th St. Cleveland, Ohio 44110-2574		
DECIMAL ± N/A		SCALE 1/8 = 1	DRAWN BY APPROVED BY	
ANGULAR ± N/A		PANEL ASSY., RIGHT SIDE BOTTOM HALF, S/C 10		
СК		DATE 12-12-94	DRAWING NO. B - 107272 -	

THIS DESIGN DESCRIBES A PROPRIETARY ITEM AND IS THE PROPERTY OF CLEVELAND RANGE. THIS DRAWING IS NOT TO BE COPIED OR USED WITHOUT THE APPROVAL OF CLEVELAND RANGE.


-				
	LET.	REVISIONS	DATE	BY
	-	NEW RELEASE PER E.O. C-2769	12-12-94	PJD

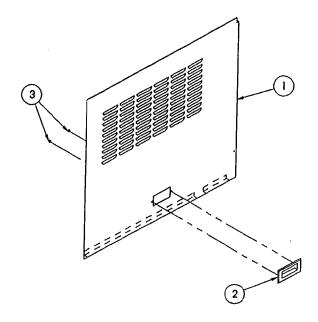


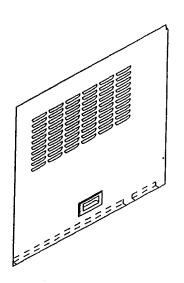


		1 1 1 2 2 2 2			
3_	2	14676	NUT, ACORN 10-	-32 S/S	
2	1	08108	HANDLE, DOOR,	S/S	
1_1	1	107121	PANEL, SIDE, F	IGHT. TOP	HALF
ITEM	QTY.	PART NO.	DESCRI		
TOLERANCES (EXCEPT AS NOTED)		CLEVELAND RANGE INC. 1333 East 179th St. Cleveland, Ohio 44110-2574			
DECIMAL ± N/A		SCALE 1/8 = 1	DRAWN BY DUTCHMAN	APPROVED BY	
ANGULAR ± N/A		TITLE PANEL ASSY., RIGHT SIDE TOP HALF. S/C 10 ULTRA & D.C.			
СК		DATE 12-12-94	DRAWING NO. B -	107273	REV.

THIS DESIGN DESCRIBES A PROPRIETARY ITEM AND IS THE PROPERTY OF CLEVELAND RANGE. THIS DRAWING IS NOT TO BE COPIED OR USED WITHOUT THE APPROVAL OF CLEVELAND RANGE.

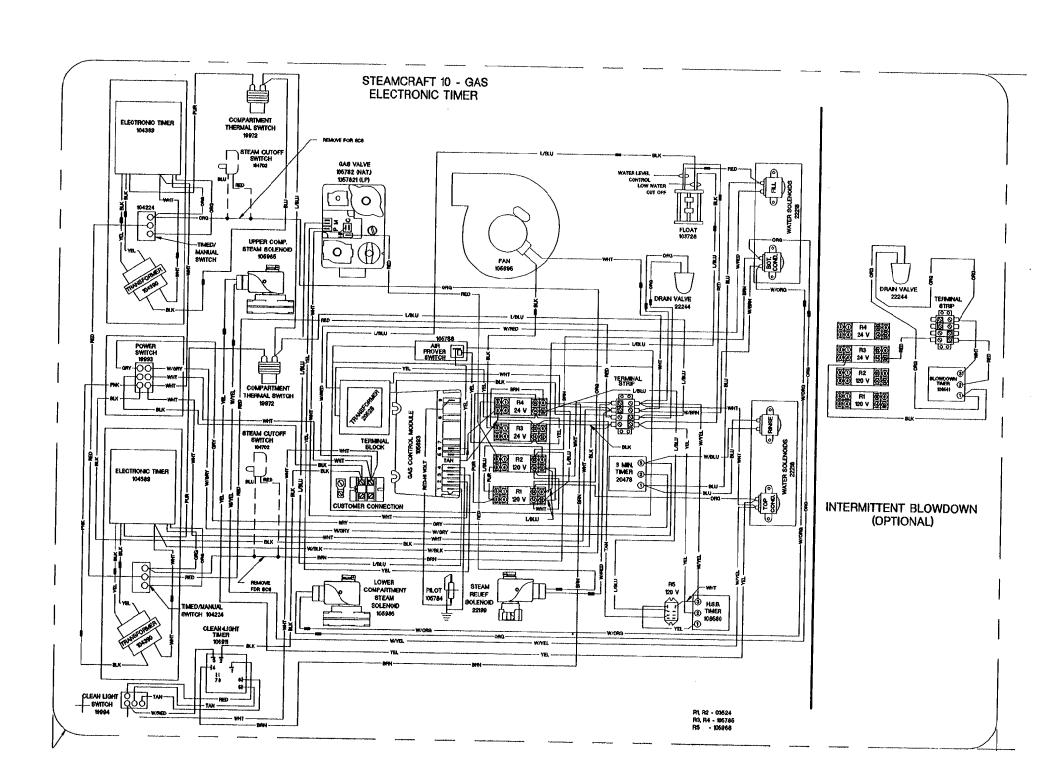

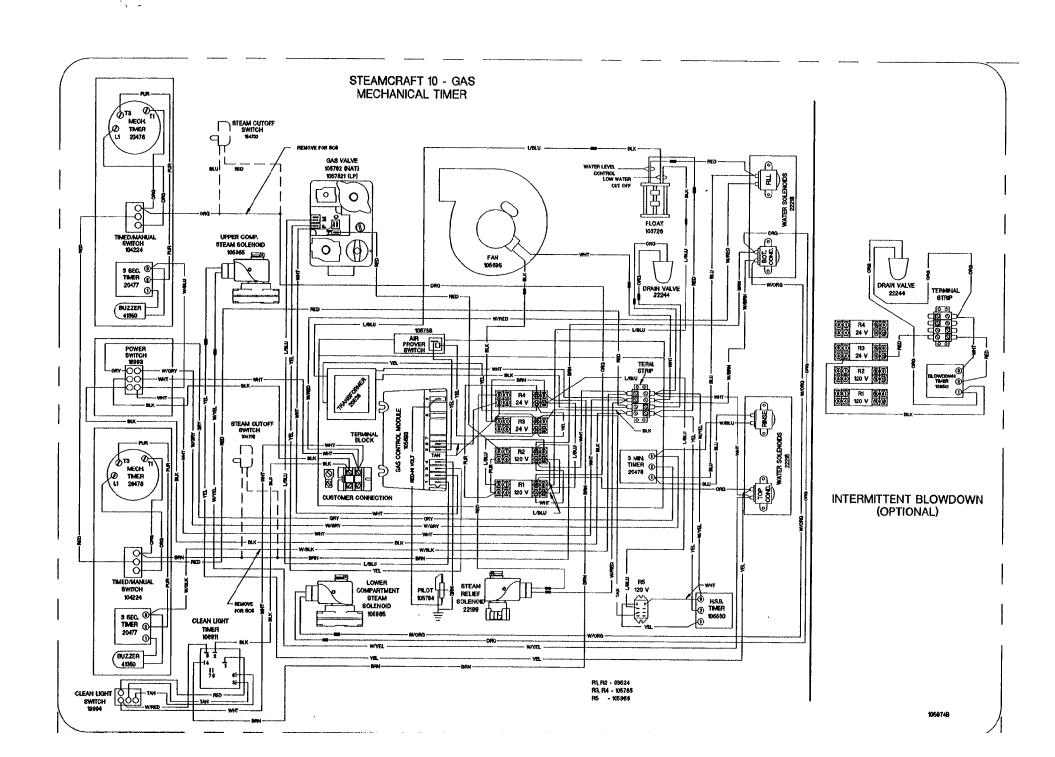

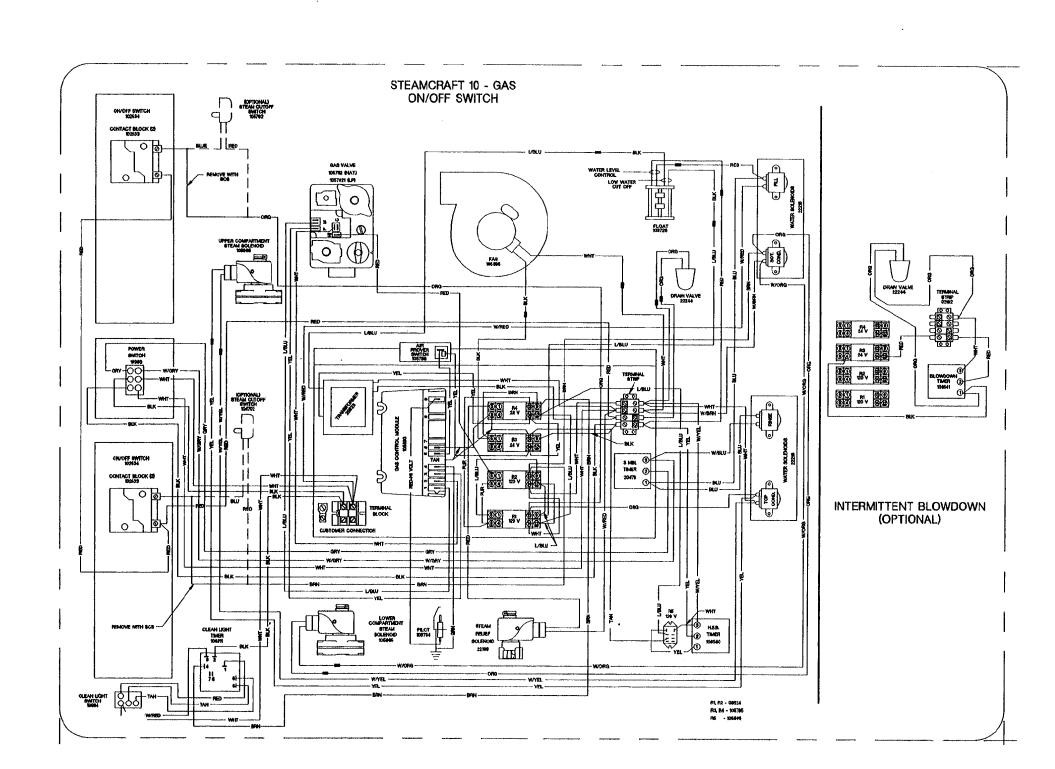

CLEVELAND RANGE 24CGA10 SEQUENCE OF OPERATIONS

Mechanical Timer


- 1. To turn the unit on, depress the red on/off rocker switch.
 - 115 VAC is sent to the red indicator light.
 - 115 VAC is sent to normally open drain valve closing it.
 - 115 VAC is sent to H and N of the water level board
 - 115 VAC is sent to the timed/manual switches.
 - 115 VAC is sent to the heat standby timer which will energize the R5 relay 20 seconds every 6 minutes to maintain heat while unit is idle
- 2. With the water level board energized and no water in the generator
 - After a 5 second delay 115 VAC is sent from the FILL terminal to the fill solenoid.
 - The fill solenoid opens and the generator fills through the drain valve.
 - The water fills to the low probe shorting it to ground
 - 115 VAC is sent from the HEAT terminal to the 24 VAC heat circuit transformer.


•

- 3. When the timed/manual switch is in the timed position and time is on the timer for the top cabinet only
 - 115 VAC is sent from the timer to the coil of the R6 relay.
 - The R6 relay energizes
 - R6B contacts close sending 115 VAC to the timer motor.
 - R6A contacts close sending 115 VAC through the door switch (optional) to the steam solenoid, condensate solenoid and R1 relay.
 - R1 is energized closing the R1 contacts.
 - 24 VAC is sent from the 24VAC transformer to the normally open contacts of R2.
 - 24 VAC is sent from the 24VAC transformer to the R4 coil.
 - R4 is energized and the R4 contacts are closed.
 - 24 VAC is sent to one side of the ignition module.
 - 24 VAC is sent to the R3 relay coil
 - R3 is energized and the R3 contacts are closed.
 - 115 VAC is sent through the now closed R4 contacts to the normally open steam relief valve closing it.
 - 115 VAC is sent to the fan motor.
 - The fan motor is energized and the air prover switch closes.
 - 24 VAC is sent through the normally closed highlimit and the now closed air prover switch to the other side of the ignition module.
- 4. With 24 VAC to both sides of the ignition module.
 - Spark is sent to the igniter.
 - 24VAC is sent to the pilot coil on the gas valve and gas is sent to the pilot.
 - When flame is generated and 1.0 micro amps DC is detected, 24 VAC is sent to the main coil of the gas valve igniting the main burner on low flame.

- Steam is energized and sent to the cooking compartment.
- When the mechanical timer times down a buzzer will sound and the timer will open removing 115 VAC from the heat circuit.
- 5. When the timed/manual switch is in the timed position and time is on the timer for the bottom cabinet only
 - 115 VAC is sent from the timer to the coil of the R7 relay.
 - The R7 relay energizes
 - R7B contacts close sending 115 VAC to the timer motor.
 - R7A contacts close sending 115 VAC through the door switch (optional) to the steam solenoid, condensate solenoid and R2 relay.
 - R2 is energized closing the R2 contacts.
 - 24 VAC is sent from the 24VAC transformer to the normally open contacts of R1.
 - 24 VAC is sent from the 24VAC transformer to the R4 coil.
 - R4 is energized and the R4 contacts are closed.
 - 24 VAC is sent to one side of the ignition module.
 - 24 VAC is sent to the R3 relay coil.
 - R3 is energized and the R3 contacts are closed.
 - 115 VAC is sent through the now closed R4 contacts to the normally open steam relief valve closing it.
 - 115 VAC is sent to the fan motor.
 - The fan motor is energized and the air prover switch closes sending 24 VAC to the other side of the ignition module.
- 6. With 24 VAC to both sides of the ignition module.
 - Spark is sent to the igniter.
 - 24VAC is sent to the pilot coil on the gas valve and gas is sent to the pilot.
 - When flame is generated and 1.0 micro amps DC is detected, 24 VAC is sent to the main coil of the gas valve igniting the main burner on low flame.
 - Steam is energized and sent to the cooking compartment.
 - When the timer times down, the closed contact will open removing 115 VAC from the heat circuit.
 - 115 VAC will be sent through the now closed contacts to the 3-second timer.
 - For 3 seconds 115 VAC will be sent to the buzzer and it will buzzzzzz.
- 7. When the timed/manual switch is in the timed position and time is on the timer for both cabinets
 - 115 VAC is sent from the timer through the door switch (optional) to both steam solenoids, both condensate solenoids and both relays.
 - Both relays are energized closing the relay contacts.
 - 24 VAC is sent from the 24VAC transformer through the R1 and R2 contacts to the high coil on the gas valve.
 - 24 VAC is sent from the 24VAC transformer to the R4 coil.
 - R4 is energized and the R4 contacts are closed.
 - 24 VAC is sent to one side of the ignition module.

- 24 VAC is sent to the R3 relay coil.
- R3 is energized and the R3 contacts are closed.
 - 115 VAC is sent through the now closed R4 contacts to the normally open steam relief valve closing it.
 - 115 VAC is sent to the fan motor.
 - The fan motor is energized and the air prover switch closes sending 24 VAC to the other side of the ignition module.
- 8. With 24 VAC to both sides of the ignition module.
 - Spark is sent to the igniter.
 - 24VAC is sent to the pilot coil on the gas valve and gas is sent to the pilot.
 - When flame is generated and 1.0 micro amps DC is detected 24 VAC is sent to the main coil of the gas valve igniting the main burner on high flame (the high coil was energized in step 7).
 - Steam is energized and sent to the cooking compartments.
 - When the timers time down the buzzers will sound and each timer will open removing 115 VAC from the heat circuit.
- 9. When the water level reaches the high probe then 115 VAC is removed form the FILL terminal and the fill solenoid is turned off.
- 10. After the water level drops below the high probe for 5 seconds 115 VAC is sent to the FILL terminal again.
- 11. 115 VAC is turned of by depressing the red on/off rocker switch.
 - 115 VAC is removed from the timer and heating circuits.
 - 115 VAC is removed from the normally open drain valve allowing the steamer to drain.
 - 115 VAC is sent to the 3-minute timer.
 - The fill solenoid is energized for 3 minutes flushing the drain.

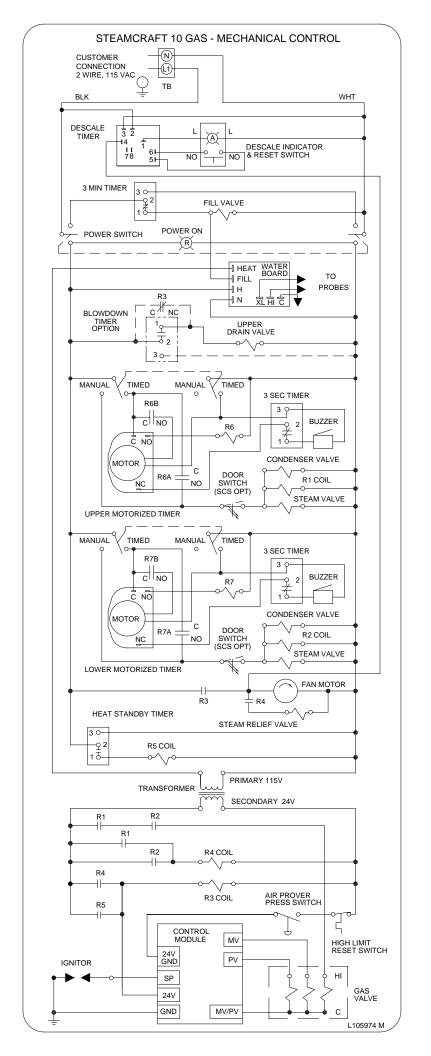

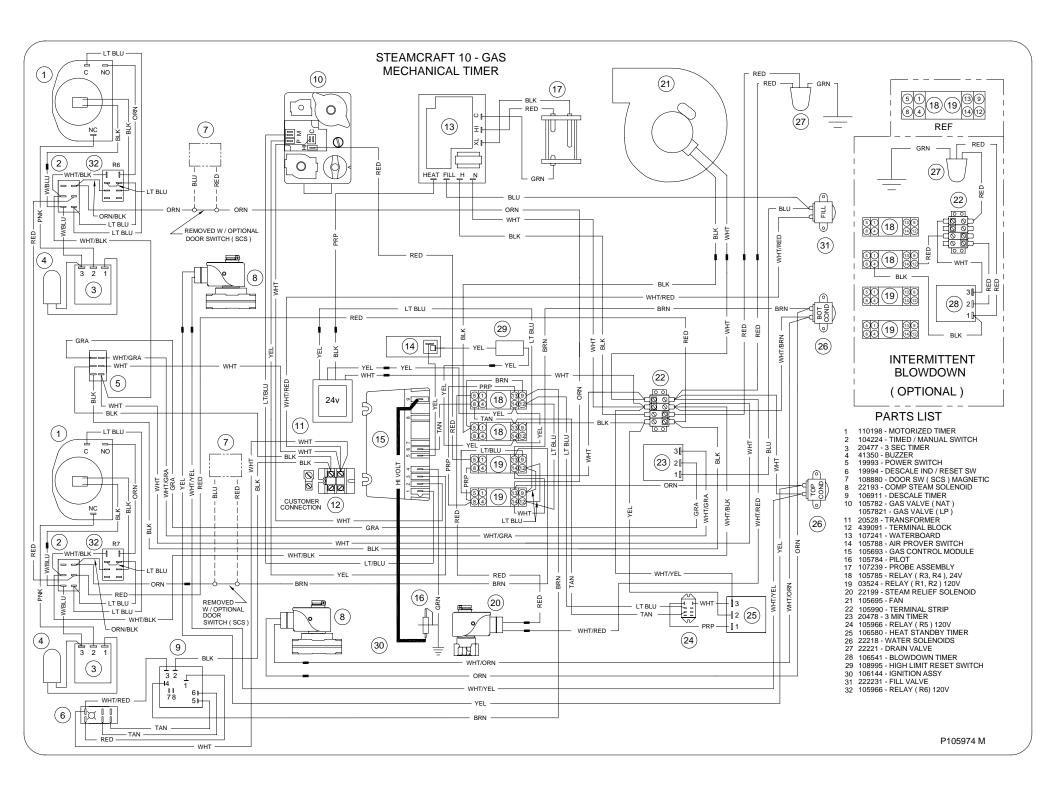


CLEVELAND RANGE 24CGA10 SEQUENCE OF OPERATIONS


Electronic Timer

- 1. To turn the unit on, depress the red on/off rocker switch.
 - 115 VAC is sent to the red indicator light.
 - 115 VAC is sent to normally open drain valve closing it.
 - 115 VAC is sent to H and N of the water level board
 - 115 VAC is sent to the 24VAC transformer for the electronic timer.
 - 115 VAC is sent to the normally open compartment thermostat switch.
 - 115 VAC is sent to the timed/manual switch.
- 2. With the water level board energized and no water in the generator
 - After a 5 second delay 115 VAC is sent from the FILL terminal to the fill solenoid.
 - The fill solenoid opens and the generator fills through the drain valve.
 - The water fills to the low probe shorting it to ground
 - 115 VAC is sent from the HEAT terminal to the 24 VAC heat transformer.
 - 115 VAC is sent to the heat standby timer which will energize 20 seconds every 6 minutes to maintain heat while unit is idle
- 3. When the timed/manual switch is in the timed position and time is on the timer for the top cabinet only
 - 115 VAC is sent from the timer through the door switch (optional) to the steam solenoid, condensate solenoid and R1 relay.
 - R1 is energized closing the R1 contacts.
 - 24VAC is sent from the 24VAC transformer to the normally open contacts of R2.
 - 24VAC is sent from the 24VAC transformer to the R4 coil.
 - R4 is energized and the R4 contacts are closed.
 - 24VAC is sent to one side of the ignition module.
 - 24VAC is sent to the R3 relay coil
 - R3 is energized and the R3 contacts are closed.
 - 115 VAC is sent through the now closed R4 contacts to the normally open steam relief valve closing it.
 - 115 VAC is sent to the fan motor.
 - The fan motor is energized and the air prover switch closes.
 - 24VAC is sent through the normally closed highlimit and the now closed air prover switch to the other side of the ignition module.
- 4. With 115 VAC to both sides of the ignition module.
 - Spark is sent to the igniter.
 - 24VAC is sent to the pilot coil on the gas valve and gas is sent to the pilot.
 - When flame is generated and 1.0 micro amps DC is detected, 24VAC is sent to the main coil of the gas valve igniting the main burner on low flame.
 - Steam is energized and sent to the cooking compartment.


- When the cooking compartment reaches 193 degrees the compartment thermostat closes sending 115 VAC to the timer.
- The timer will then begin counting down.
- When the electronic timer times down a buzzer will sound and the timer will open removing 115 VAC from the heat circuit.
- 5. When the timed/manual switch is in the timed position and time is on the timer for the bottom cabinet only
 - 115 VAC is sent from the timer through the door switch (optional) to the steam solenoid, condensate solenoid and R2 relay.
 - R2 is energized closing the R2 contacts.
 - 24VAC is sent from the 24VAC transformer to the normally open contacts of R1.
 - 24VAC is sent from the 24VAC transformer to the R4 coil.
 - R4 is energized and the R4 contacts are closed.
 - 24VAC is sent to one side of the ignition module.
 - 24VAC is sent to the R3 relay coil.
 - R3 is energized and the R3 contacts are closed.
 - 115 VAC is sent through the now closed R4 contacts to the normally open steam relief valve closing it.
 - 115 VAC is sent to the fan motor.
 - The fan motor is energized and the air prover switch closes sending 24VAC to the other side of the ignition module.
- 6. With 24VAC to both sides of the ignition module.
 - Spark is sent to the igniter.
 - 24VAC is sent to the pilot coil on the gas valve and gas is sent to the pilot.
 - When flame is generated and 1.0 micro amps DC is detected, 24VAC is sent to the main coil of the gas valve igniting the main burner on low flame.
 - Steam is energized and sent to the cooking compartment.
 - When the cooking compartment reaches 193 degrees the compartment thermostat closes sending 115 VAC to the timer.
 - The electronic timer will stop flashing "PAUS" and then begin counting down.
 - When the timer times down a buzzer will sound and the timer will open removing 115 VAC from the heat circuit.
- 7. When the timed/manual switch is in the timed position and time is on the timer for both cabinets
 - 115 VAC is sent from the timer through the door switch (optional) to both steam solenoids, both condensate solenoids and both relays.
 - Both relays are energized closing the relay contacts.
 - 24VAC is sent from the 24VAC transformer through the R1 and R2 contacts to the high coil on the gas valve.
 - 24VAC is sent from the 24VAC transformer to the R4 coil.
 - R4 is energized and the R4 contacts are closed.
 - 24VAC is sent to one side of the ignition module.


- 24VAC is sent to the R3 relay coil.
- R3 is energized and the R3 contacts are closed.
 - 115 VAC is sent through the now closed R4 contacts to the normally open steam relief valve closing it.
 - 115 VAC is sent to the fan motor.
 - The fan motor is energized and the air prover switch closes sending 24VAC to the other side of the ignition module.
- 8. With 24VAC to both sides of the ignition module.
 - Spark is sent to the igniter.
 - 24VAC is sent to the pilot coil on the gas valve and gas is sent to the pilot.
 - When flame is generated and 1.0 micro amps DC is detected 24VAC is sent to the main coil of the gas valve igniting the main burner on high flame (the high coil was energized in step 7).
 - Steam is energized and sent to the cooking compartments.
 - When the cooking compartments reach 193 degrees the compartment thermostats close sending 115 VAC to the timers.
 - The timers will then begin counting down.
 - When the timers time down a buzzer will sound and the timer will open removing 115 VAC from the heat circuit.
- 9. When the water level reaches the high probe then 115 VAC is removed form the FILL terminal and the fill solenoid is turned off.
- 10. After the water level drops below the high probe for 5 seconds 115 VAC is sent to the FILL terminal again.
- 11. 115 VAC is turned of by depressing the red on/off rocker switch.
 - 115 VAC is removed from the timer and heating circuits.
 - 115 VAC is removed from the normally open drain valve allowing the steamer to drain.
 - 115 VAC is sent to the 3-minute timer.
 - The fill solenoid is energized for 3 minutes flushing the drain.

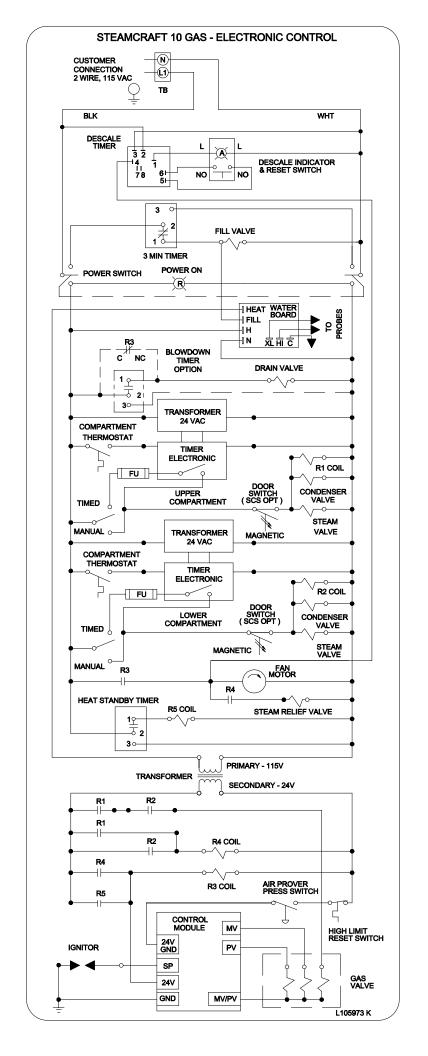


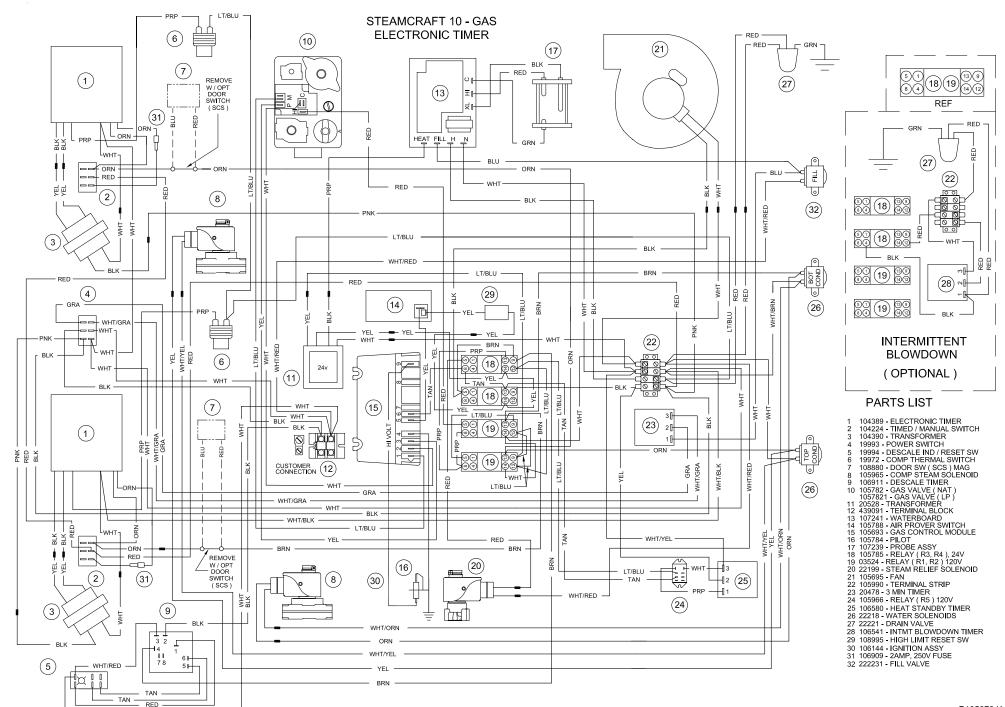


WHT

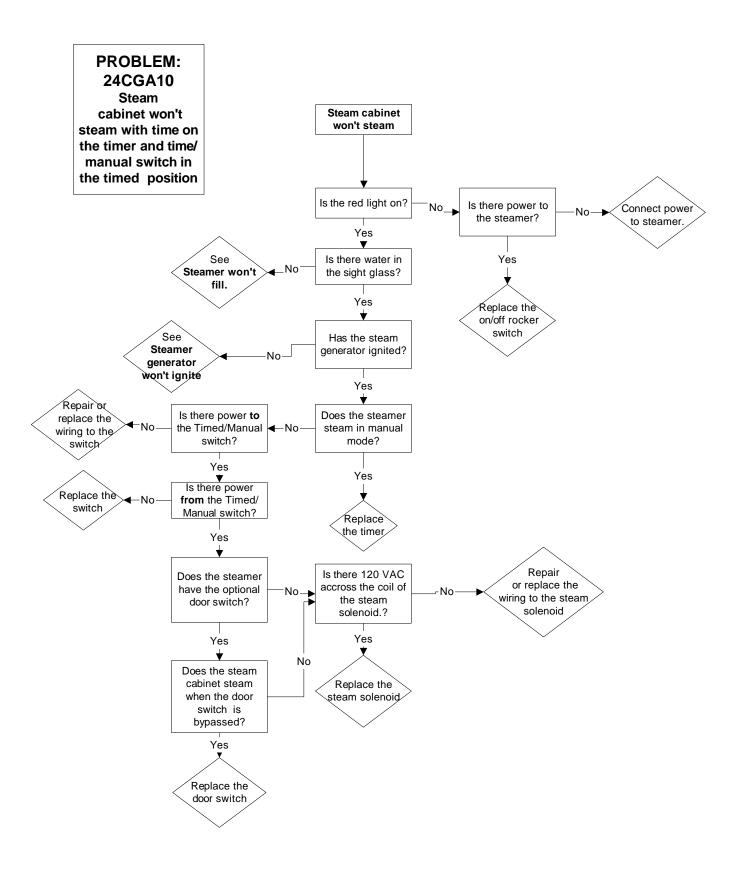

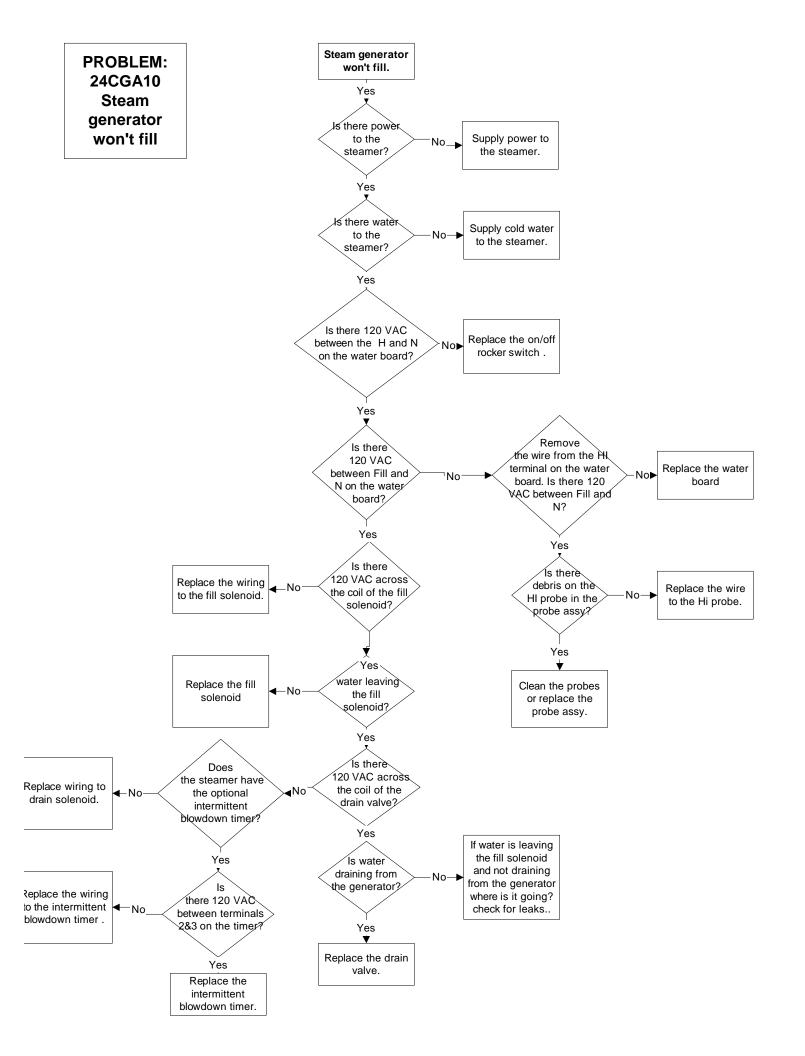


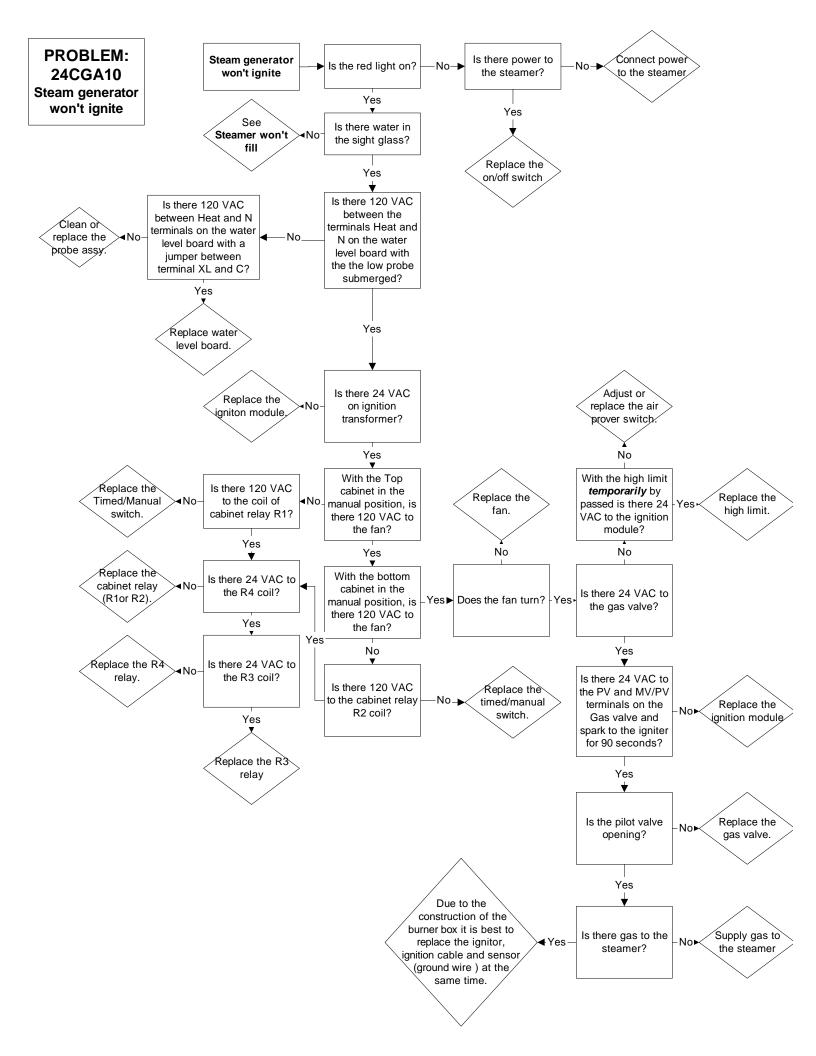


PROBLEM: 24CGA10 Electronic timer displays "PAUS" and won't count down

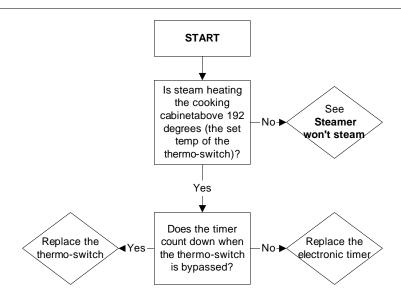



PROBLEM: 24CGA10 Steam leaks around the door.

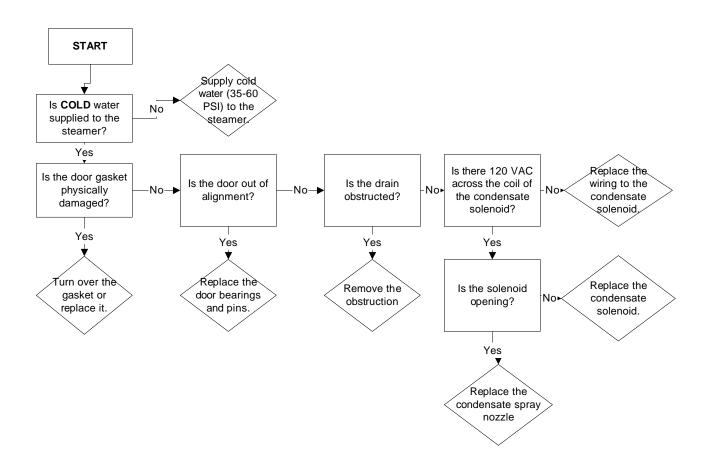

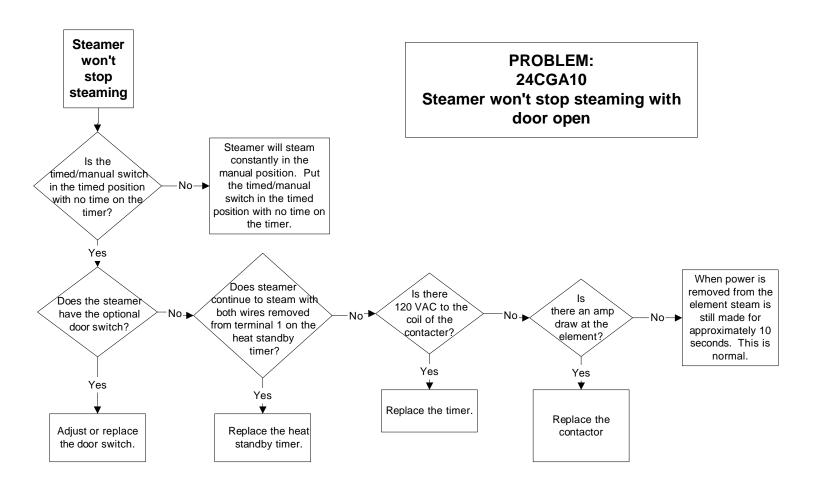


Problem: 24CGA10 Steamer won't preheat

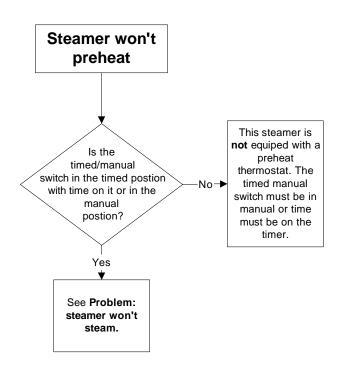

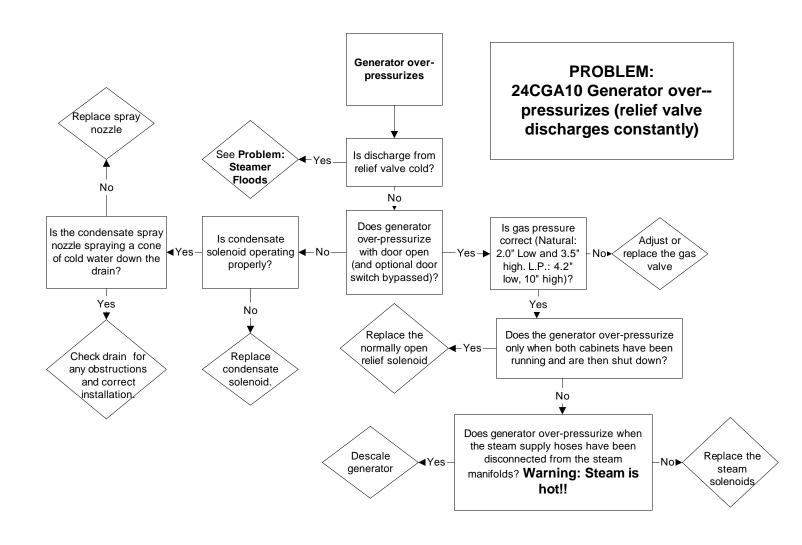

Problem: 24CGA10 Steamer Floods (Water is entering cabinet through the steam nozzles)

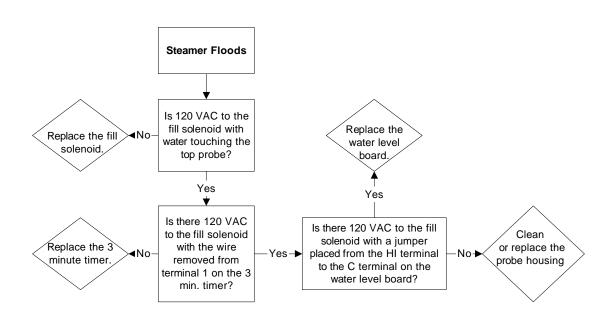



Descaling Procedure-SteamCraft Ultra and Gemini Series

How Much DISSOLVE to Use		
Model	Dissolve	
Ultra 3	1/2 Gallon	
Ultra 5	1 Gallon	
Ultra 10 (Elec.)	1 Gallon (ea.)	
Ultra 10 (Gas)	1½ Gallon	
Gemini 6 & 10	1 Gallon (ea.)	

Turn the unit OFF and open the doors:

This will drain and rinse the generator for about 3 minutes.

2. Turn the unit power back On:

The generator will begin to refill with water.

3. Select Timed with the Timed/Manual switch:

DO NOT start the timer, since you do not want to heat the water during descaling. Leave the doors open.

4. Remove descaling port cap and add with the specified amount of DISSLOVE: (See chart above)


Do this while the unit is refilling. The generators can take-up to 8 minutes to refill.

 After refill has stopped, add extra tap water into the descaling port until liquid is seen entering the cooking cabinet. Note: Ultra 10 gas will have liquid coming out of the drain,

Adding extra water when descaling will raise the descaling solution higher than the normal fill level, allowing the DISSOLVE to work on sensors and surfaces above the water line

Note: Some SteamCraft Ultra models (the electric powered Ultra 10 and Gemini 6 and 10, for example) have two generators and two descaling ports. Both units should be descaled at the same time, using this procedure

- 6. Let the descaler soak in generator for approximately one hour:
- After one hour, turn the unit power
 Off: This will drain and rinse the generator for about 3 minutes.

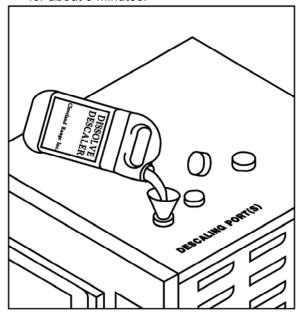

- 8. After the 3-minute drain cycle completes, turn the unit back ON. After the filling has stopped, add water until liquid enters the cooking compartment (or drain for the ultra 10 gas), and then turn the unit OFF. This will drain and flush any residue from the water level control assembly. Replace descaling cap.
- After the 3 minute drain cycle completes, Turn the unit ON and set the Timer for 20 minutes: Make sure the Time/Manual switch is in the timed setting and the doors are closed.
- 10. When the timer times out (after 20 minutes) turn the power Off:

This will drain and rinse the generator for about 3 minutes.

This ends the descaling procedure. You can now turn the unit back on and resume normal startup and cooking operations.