




Service Manual

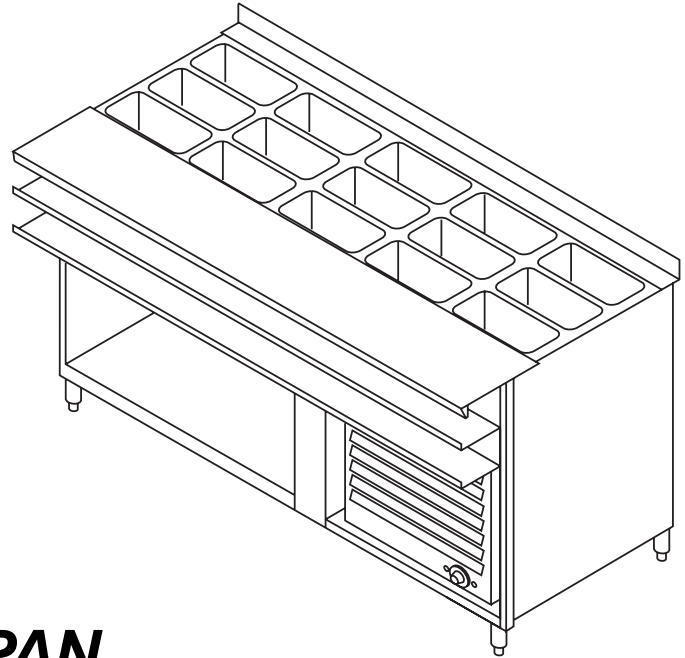

TRI-CHANNEL COLD PAN

MODEL
SUB-GP

**Please read this manual completely before attempting to
install, operate or service this equipment**

*This manual is Copyright © 2005 Duke Manufacturing Company. All rights reserved.
Reproduction without written permission is prohibited. Duke is a registered
trademark of the Duke Manufacturing Company.*

Duke Manufacturing Company

**2305 N. Broadway
St. Louis, MO 63102
Phone: 314-231-1130
Toll Free: 1-800-735-3853
Fax: 314-231-5074
www.dukemfg.com**

IMPORTANT WARNING AND SAFETY INFORMATION

WARNING

READ THIS MANUAL THOROUGHLY BEFORE OPERATING, INSTALLING, OR PERFORMING MAINTENANCE ON THE EQUIPMENT.

WARNING

FAILURE TO FOLLOW INSTRUCTIONS IN THIS MANUAL CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH.

WARNING

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

WARNING

UNLESS ALL COVER AND ACCESS PANELS ARE IN PLACE AND PROPERLY SECURED, DO NOT OPERATE THIS EQUIPMENT.

CAUTION

Observe the following:

- Minimum clearances must be maintained from all walls and combustible materials.
- Keep the equipment area free and clear of combustible material.
- Adequate clearance for air openings.
- Operate equipment only on the type of electricity indicated on the specification plate.
- Retain this manual for future reference.

Contents

SPECIFICATIONS	4
INSTALLATION	4
Location	4
Inside Unit	4
Outside Unit	4
Leveling	4
Stabilizing	4
Electrical Connection	4
MAINTENANCE	5
Stainless Steel Care and Cleaning	5
PREVENTIVE MAINTENANCE	6
Cleaning the Condenser Coil	6
PARTS REPLACEMENT	7
Thermostat Replacement	7
General	7
Evaporator	7
General	7
Refrigeration System Replacement	8
General	8
Recharging Refrigeration System	8
General	8
Tools	8
Charging Procedure	9
ELECTRICAL	10
Electrical Schematic	10
TROUBLESHOOTING	11

SPECIFICATIONS

MODEL	DESCRIPTION	VOLTAGE	AMPS	PH.
SUB-GP	Tri-Channel Cold Pan	120 VAC (60Hz)	7.9	1
		220 VAC (50Hz)	4.4	1

MODEL	DESCRIPTION	HEIGHT	WIDTH	LENGTH
SUB-GP	Tri-Channel Cold Pan	36.00 In.	30.00 In.	48.00 In.
				60.00 In.
				74.00 In.
				86.00 In.

INSTALLATION

Location

The unit represented in this manual is intended for indoor use only. Be sure the chosen location has a floor strong enough to support the total weight of the unit. Reinforce the floor if necessary to provide for maximum loading. For the most efficient operation, be sure to provide good air circulation inside and out.

The outline dimensional drawing for the unit is shown below in Figure 1.

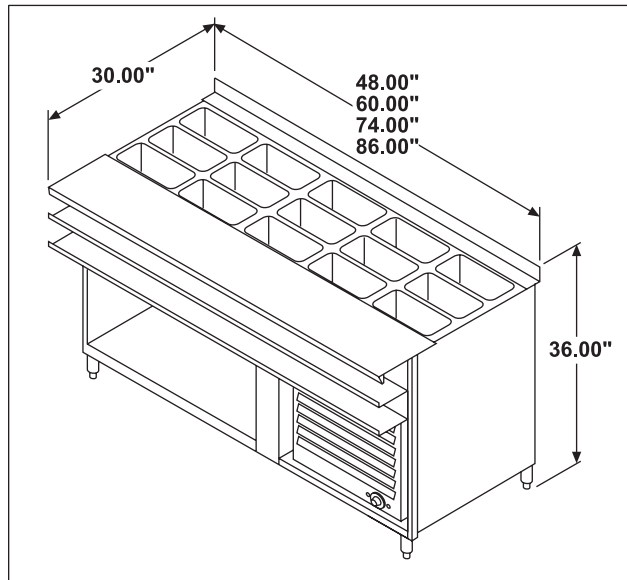


Figure 1
Tri-Channel Cold Pan

Inside Unit

Provide adequate space along the front and back taking care to not block airflow to the fan.

Outside Unit

Be sure that the unit has access to ample air; avoid hot corners and locations near stoves and ovens.

Leveling

Be sure that the unit is placed on a firm, flat surface/floor. Check for cracks in flooring or tile and avoid these areas if possible. If necessary place support pads, properly rated for the weight of the unit, to “bridge” uneven or cracked flooring. Level unit accordingly.

Stabilizing

Use the leg adjustments to insure that the unit is solid to the floor surface at all four contact points. Insure that the unit does not “rock” when pressure is applied to the top corners.

Electrical Connection

The Tri-Channel Cold Pan is available as a 120VAC, 60 Hz or as a 220VAC, 50 Hz dependent on model. All electrical connections should be performed by a certified electrician and should comply with local electrical codes for your municipality.

WARNING

REFER TO THE AMPERAGE DATA LIST IN THE SPECIFICATIONS OR THE SERIAL TAG DATA AND YOUR LOCAL CODE OR THE NATIONAL ELECTRICAL CODE TO BE SURE UNIT IS CONNECTED TO THE PROPER POWER SOURCE. A PROTECTED CIRCUIT OF THE CORRECT VOLTAGE AND AMPERAGE MUST BE RUN FOR CONNECTION OF THE SUPPLY CORD OR PERMANENT CONNECTION TO THE UNIT. THE POWER MUST BE TURNED OFF AND DISCONNECTED WHENEVER PERFORMING MAINTENANCE OR REPAIR FUNCTIONS.

MAINTENANCE

Stainless Steel Care and Cleaning

Stainless steel contains 70-80% iron, which will rust. It also contains 12-30% chromium, which forms an invisible passive film over the steel surface and acts as a shield against corrosion. As long as the protective film remains intact, the metal will not corrode. However, if the film is broken or contaminated, outside elements can begin to breakdown the steel and begin to form rust or discoloration. To prevent rust and discoloration on stainless steel, several important steps need to be taken.

CAUTION: Never use steel wool pads or wire brushes or scrapers. Avoid cleaning solutions that contain alkaline or chloride.



Use alkaline based or non-chloride cleaning solutions. Anything containing chloride will damage the protective film on stainless steel. Chlorides are found in household and industrial cleaners and also in hard water and salts. If a chloride or alkaline cleaner has been used, rinse repeatedly and dry thoroughly.

Always use only soft cloths or plastic scouring pads. For routine cleaning, use warm soapy water. For stubborn stains use a non-abrasive cleanser. For heavy grease use a degreaser. For best results, rub with the grain of the steel.

Pitting and cracking are early signs of stainless steel breakdown. But special stainless steel cleaners can restore and preserve the protective film. If signs of breakdown appear, thoroughly clean and dry all surfaces. Begin regular application of a high quality stainless steel cleaner according to the manufacturer's instructions. Again, always rub with the grain of the steel for best results.

CAUTION: Never use an acid-based cleanser! Be sure to clean all food products from any stainless surface. Many food products contain acid, which can deteriorate the finish. Common foods include tomatoes, peppers and other vegetables.



WARNING

THE POWER MUST BE TURNED OFF AND DISCONNECTED AT ALL TIMES DURING MAINTENANCE OR REPAIR FUNCTIONS.

PREVENTIVE MAINTENANCE

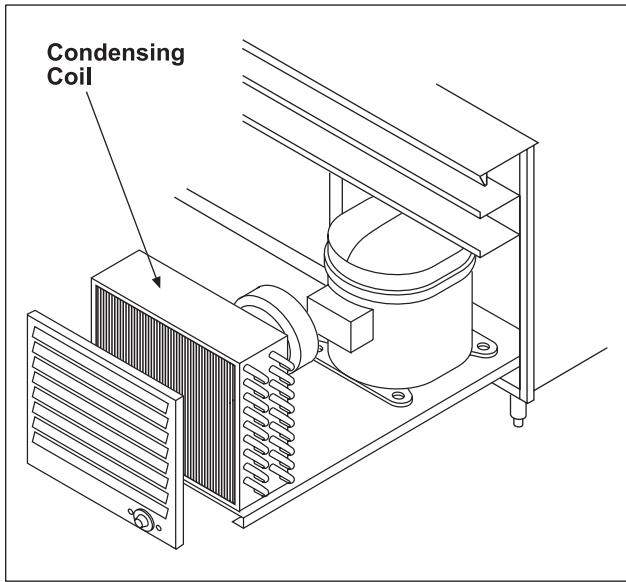


Figure 2
Location of Condensing Coil

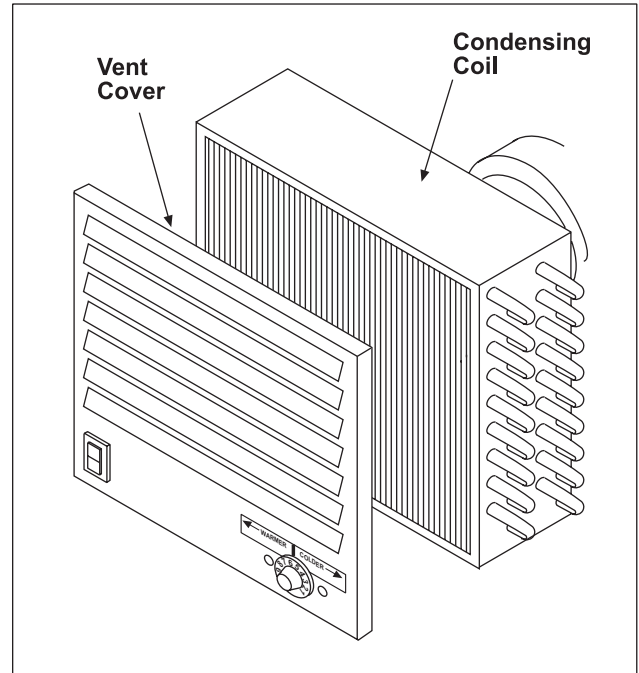


Figure 3
Location of Condensing Coil

Cleaning the Condenser Coil

Failure to maintain a clean condenser coil can initially cause high temperatures and excessive run times. Continuous operation with dirty or clogged condenser coils can result in compressor failure. Neglecting the condenser coil cleaning procedures will void all warranties and repair or replacement costs associated with the compressor.

CAUTION: To clean the condenser, never use a high-pressure water wash, which can damage electrical components located at or near the condenser coil.



The condenser coil is located and accessed from the front of the unit, (Figure 3). A vent cover protects the condenser from damage. The condenser coil requires regular cleaning and should be done every 60 days. However, if large amounts of dust and grease accumulate sooner, clean the condenser coil every 30 days.

For light dust, use a soft, non-wire brush. For heavier dust, use a vacuum or blow with compressed air.

For heavy grease, use a degreasing agent made specifically for condenser coils on refrigeration units. Spray the degreasing agent on the coil and then blow with compressed air. Never wash with high-pressure water, which can damage the electrical components located at or near the condenser coil.

PARTS REPLACEMENT

Thermostat Replacement

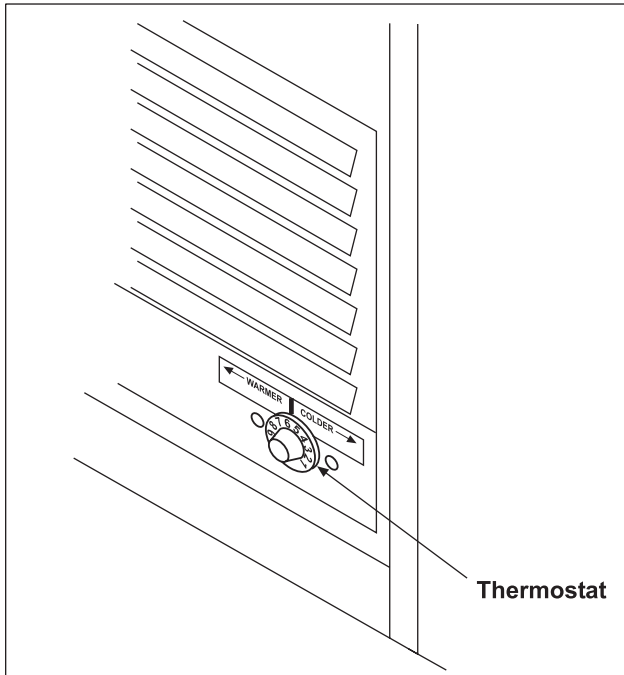


Figure 4
Location of Thermostat

General

The thermostat is located in front on the control panel below the refrigeration assembly, (Figure 4).

1. Disconnect unit from power source.
2. Remove control panel cover with thermostat.
3. Tag and disconnect thermostat wiring.
4. The evaporator coil is located above the refrigeration assembly. Remove thermostat probe from evaporator coil.
5. Remove knob.
6. Remove thermostat mounting screws.
7. Remove thermostat from control panel.
8. Install replacement thermostat, mounting screws and knob.

NOTE: Do not kink thermostat probe.

9. Install thermostat probe in evaporator coil.
10. Using tags, connect thermostat wiring.
11. Install control panel cover and mounting screws.
12. Install condenser
13. Connect unit to power source and test refrigeration assembly.

Evaporator

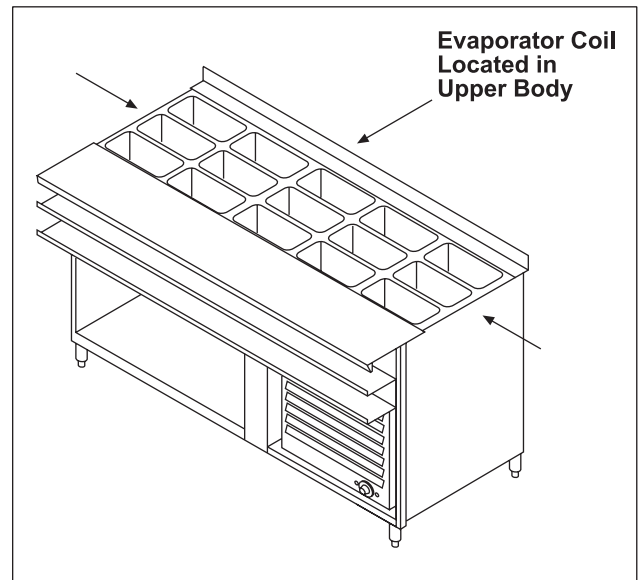


Figure 5
Location of Evaporator Coil

General

The evaporator coils are embedded in the upper body, (Figure 5) of the Tri-Channel Cold Pan. They cannot be serviced or replaced. The entire upper body must be replaced.

Refrigeration System Replacement

General

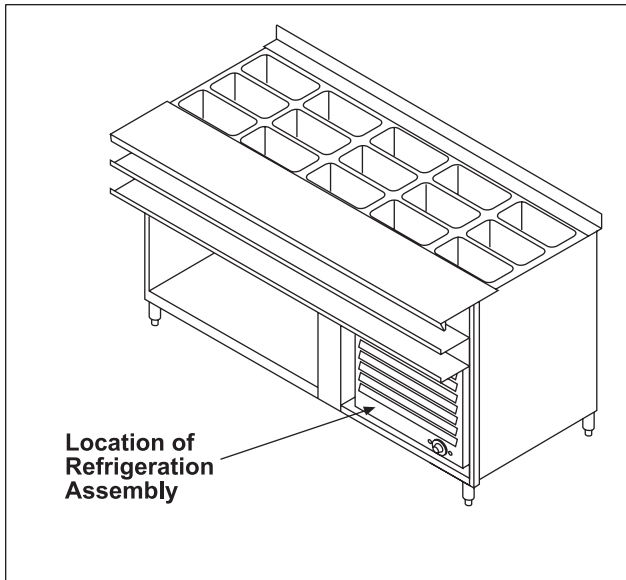


Figure 6
Location of Refrigeration Assembly

The refrigeration system assembly is located in the front of the unit, (Figure 6).

1. Disconnect unit from power source.
2. Remove vent cover.
3. Using a refrigeration-charging unit, evacuate refrigerant from the system according to Duke Manufacturing Service Bulletin Number 26.
4. Remove expansion valve and evaporator tubing from refrigeration assembly.
5. Remove refrigeration assembly mounting hardware.
6. Tag and disconnect wiring at junction box.
7. Slide out refrigeration assembly through vent.
8. Thoroughly clean the refrigeration assembly compartment.

NOTE: Before installing replacement refrigeration assembly, pressure check evaporator coils for leaks.

9. Install replacement refrigeration assembly onto slide bars.
10. Slide in refrigeration assembly to original position.
11. Install refrigeration assembly mounting hardware.
12. Install expansion valve and evaporator tubing from refrigeration assembly.
13. Using tags, connect wiring at junction box.
14. Connect unit to power source and test unit.
15. Charge system according to Duke Manufacturing Service Bulletin Number 26.
16. Install vent cover.

Recharging Refrigeration System

General

To analyze the performance of a refrigeration system, temperature readings are recorded and converted to pressure readings using a standard pressure/temperature chart.

When it is necessary to service a factory sealed refrigeration system and return it to its properly sealed condition, strictly adhere to the following approved procedure.

Tools

- Standard hand and refrigeration tools
- Refrigerant Type: R-134A, 4.5 ounces

Charging Procedure

NOTE: Prior to refrigeration system service, special care must be taken during the evacuation process to remove air, moisture and other non-condensables from the system. Duke Manufacturing recommends the following triple evacuation method. Failure to follow this procedure may result in poor refrigeration system performance.

1. Evacuate system to 1500 microns.
2. Break vacuum to 2 psig with dry nitrogen. If dry nitrogen is unavailable, use same type of refrigerant as used in system.
3. Evacuate system to 500 microns.
4. Break vacuum to 2 psig with dry nitrogen. If dry nitrogen is unavailable, use same type of refrigerant as used in system.
5. Evacuate system to 500 microns.

The system is now ready to receive refrigerant charge according to information on data plate.

CAUTION: Never use oxygen or acetylene in place of dry nitrogen or refrigerant for leak testing. A violent explosion may result, causing property damage, personal injury or death. When using nitrogen to pressure test, always use a pressure regulator. Failure to do so will result in extremely high pressure of the compressor or other system components and result in property damage, personal injury and death.



1. Install a temporary access valve on the high and low side of process hoses as close to factory crimps as possible.
2. Use temporary valves to perform repair. Duke Manufacturing will not reimburse the cost of permanently installed valves.
3. After completing repair, evacuate system using the triple evacuation method described in Duke Manufacturing Service Bulletin Number 26.
4. After completing proper evacuation method, recharge system, using proper refrigerant according to information on data plate.
5. Continue crimping process hose just below temporary valve and again 2" below crimp.
6. With crimp tool in place, remove temporary valve.
7. Braze shut end of process hose.
8. Allow to cool for about 5 minutes.
9. Remove crimp tool.
10. Check brazed end for leaks.

NOTE: Prior to repair, ensure there is enough process hose (approximately 12") present to complete the repair using the above procedure. If not, install a new process hose before repair sequence.

ELECTRICAL

Electrical Schematic

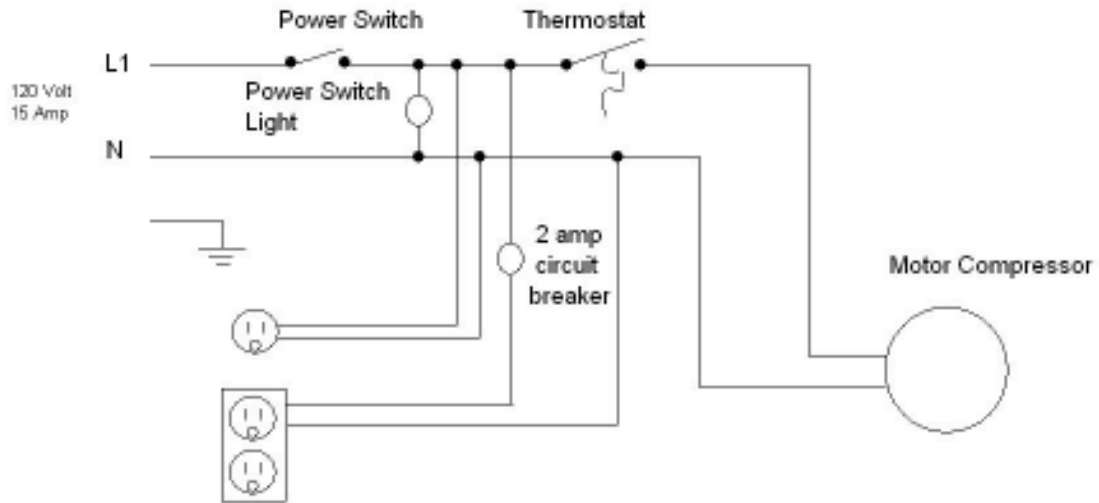


Figure 7 Electrical Schematic

TROUBLESHOOTING

SYMPTOM	CAUSE	REMEDY
Cabinet too warm	Unit not plugged in	Plug unit in
	Thermostat set too warm	Set thermostat to a higher number for a colder temperature
	Thermostat switch stuck open in coldest position	Replace thermostat
	Doors not sealing	Adjust doors
	Torn or damaged door gaskets	Replace gaskets
	Evaporator fan not running	Check and repair or replace motor
	Condenser fan motor not running	
	Dirty condenser coil or filter	Check and repair or replace motor
Cabinet too cold	Refrigerant leak	Clean coil or filter
	Thermostat set too cold	Find leak, repair and recharge
	Thermostat switch is stuck in the closed position	Set thermostat to a lower number for a warmer temperature
Water in bottom of unit	Drain hose plugged	Replace thermostat
	Drain hose loose or disconnected from drain pan	Clear drain hose
		Tighten or connect drain hose