



# **STAR®** HOT FOOD HUMIDITY CABINET

MODEL

HFD2A-120V/230V

HFD3A-120V/230V

## Installation and Operation Instructions

2M-Z3437 Rev. L 1/17/07



HFD2A



## SAFETY SYMBOL



These symbols are intended to alert the user to the presence of important operating and maintenance instructions in the manual accompanying the appliance.

## RETAIN THIS MANUAL FOR FUTURE REFERENCE NOTICE

Using any part other than genuine Star factory supplied parts relieves the manufacturer of all liability.

Star reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.

Due to periodic changes in designs, methods, procedures, policies and regulations, the specifications contained in this sheet are subject to change without notice. While Star Manufacturing exercises good faith efforts to provide information that is accurate, we are not responsible for errors or omissions in information provided or conclusions reached as a result of using the specifications. By using the information provided, the user assumes all risks in connection with such use.

## MAINTENANCE AND REPAIRS

Contact your local authorized service agent for service or required maintenance. Please record the model number, serial number, voltage and purchase date in the area below and have it ready when you call to ensure faster service.

### Authorized Service Agent

Reference the listing provided with the unit

or

for an updated listing go to:

**Website:** [www.star-mfg.com](http://www.star-mfg.com)  
**E-mail** [Service@star-mfg.com](mailto:Service@star-mfg.com)  
**Telephone:** (800) 807-9054 Local (314) 781-2777

### The Star Service Help Desk

**Business Hours:** 8:00 am to 4:30 p.m. Central Standard Time

**Telephone:** (800) 807-9054 Local (314) 781-2777  
**Fax:** (800) 396-2677 Local (314) 781-2714

**E-mail** [Parts@star-mfg.com](mailto:Parts@star-mfg.com)  
[Service@star-mfg.com](mailto:Service@star-mfg.com)  
[Warranty@star-mfg.com](mailto:Warranty@star-mfg.com)

**Website:** [www.star-mfg.com](http://www.star-mfg.com)

**Mailing Address:** Star Manufacturing International Inc.  
10 Sunnen Drive  
St. Louis, MO 63143  
U.S.A

## SPECIFICATIONS

---

### HFD-2A SERIES

<b>Capacity:</b>	72 large pretzels/bagels (P models), 3 16" pizzas (CR models) 3 Multipurpose Shelves, additional pizza shelves can be added
<b>Electrical:</b>	120 volt, 60 hertz, single phase, 1550 watts, 12.9 amps 230 volt, 60 hertz, single phase, 1550 watts, 6.7 amps Cord Length - 6 ft.
<b>Plug NEMA Spec - NEMA 5-15P (5-20P Canadian Models) (120V Models)</b> <b>CEE7-7 (230V Models)</b>	
<b>Dimensions:</b>	21-1/8"W x 21-1/8"D x 34 - 1/2"H (55.37 cm W x 55.37 cm D x 87.63 cm H)

---

### HFD-3A SERIES

<b>Capacity:</b>	112 large pretzels/bagels (P models), 4 18" pizzas (CR models) 4 Multipurpose Shelves, additional pizza shelves can be added
<b>Electrical:</b>	120 volt, 60 hertz, single phase, 1800 watts, 15 amps 230 volt, 60 hertz, single phase, 1800 watts, 7.8 amps Cord Length - 6 ft.
<b>Plug NEMA Spec - NEMA 5-20P (120V Models)</b> <b>CEE7-7 (230V Models)</b>	
<b>Dimensions:</b>	24-1/8"W x 28-1/8"D x 36"H (61.28 cm W x 71.44 cm D x 91.44 cm H)

---

### RECOMMENDED CONTROL SETTINGS AND HOLDING TIMES

Chefs, cooks and other specialized food service personnel employ varied methods of cooking. Proper holding temperatures for a specific food product must be based on the moisture content of the product, density, volume, and proper serving temperatures. Safe holding temperatures must also be correlated with palatability in determining the length of holding time for a specific product. The following are some recommended settings and holding times for products generally held in the cabinet.

See the control label or the Temperature and Humidity Control Operation section of this manual for instructions on changing the presets. Temperatures indicated on the cabinet display do not always match the product temperature.

PRODUCT TIME	PRESET NUMBER	PRESET SETTING	RECOMMENDED HOLDING
Pizza	1	(T-175°F, H-10)	1 Hour
Bread Products	2	(T-120°F, H-10)	3 Hours
Sandwiches	3	(T-170°F, H-6)	2 Hours
Chicken	4	(T-175°F, H-6)	5 Hours
General Use	5, 6	(T-150°F, H-5)	

# GENERAL INSTALLATION INSTRUCTIONS

## CAUTION



This equipment is designed and sold for commercial use only by personnel trained and experienced in its operation and is not sold for consumer use in and around the home nor for use directly by the general public in food service locations.

All shipping containers should be checked for freight damage both visible and concealed. This unit has been tested and carefully packaged to insure delivery of your unit in perfect condition. If equipment is received in damaged condition, either apparent or concealed, a claim must be made with the delivering carrier.

Concealed damage or loss - if damage or loss is not apparent until after equipment is unpacked, a request for inspection of concealed damage must be made with carrier within 15 days. Be certain to retain all contents plus external and internal packaging materials for inspection. The carrier will make an inspection and will supply necessary claim forms.

## INSTALLATION

Each machine has been properly wired and inspected at the factory for operation on the voltage and type of current specified on the nameplate. Machines with a nameplate stamped 120V, are equipped for operation on 120 volt 60 hertz AC single phase service and must be connected to a separate 15 amp circuit with a 3 wire grounded, polarized receptacle. 230V models must be connected to a 230V, 60Hz, AC single phase service.

Water hardness in some areas will cause scaling (lime scale buildup) in your equipment. This scaling will coat the inside of the reservoir and waterlines of your Hot Food Humidity Cabinet. Therefore, STAR Manufacturing recommends using distilled water for the prevention of scaling in your equipment. This will prolong the life of your STAR equipment.



**CAUTION**  
**DO NOT CONNECT TO ANY  
OTHER TYPE OF CURRENT  
SOURCE OR THE MACHINE WILL  
BE SERIOUSLY DAMAGED.**

The guarantee of this machine covered by the warranty card does not apply if an improper installation has been made.



**CAUTION**  
**DO NOT BLOCK VENT HOLES ON TOP  
OF THE CABINET.**

5. Fill Light - This is used as a reminder during start up. When the power switch is pushed on the fill light will illuminate to remind the operator to fill the reservoir. The fill light will go OFF when the reservoir is filled to the maximum.

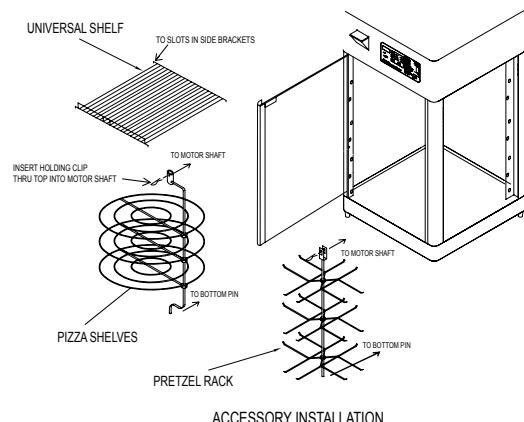


FIGURE 1

IL1028

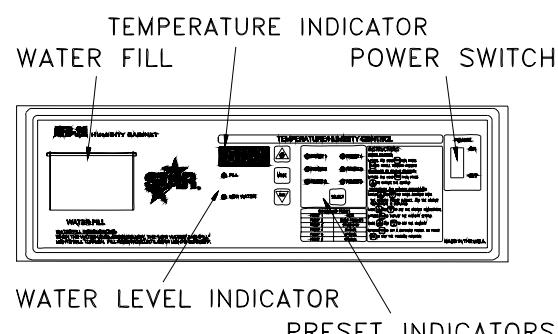


FIGURE 2

IL1033

6. Temperature and Humidity Control Operation -
  - a. Fahrenheit or Celsius Selection - The control will read cabinet air temperature in F° or C°. To change this indication press and hold the **MODE** switch and then press + to change the setting.
  - b. Pre-set Selection - This control comes from the factory with 6 programmed pre-set selections indicated as Preset 1, etc. These correspond to the temperature and humidity setting as indicated in the table below:

<b>Cabinet Air</b>		
<b>Preset No.</b>	<b>Temp. Setting</b>	<b>Humidity Setting</b>
1	175F°	10
2	120F°	10
3	170F°	6

## **GENERAL OPERATING INSTRUCTIONS**

1. Install inside food rack or pizza/pretzel shelves depending on the model unit purchased. The shelves are in the enclosed accessory carton (See Figure 1).
2. **Plug the unit into a grounded 120 V.A.C. receptacle (230V receptacle for European models).**

## **LOCATION AND FUNCTION OF CONTROLS**

The operating controls are located above the door on the side of the unit next to the water fill (See Figure 2).

1. Temperature Indicator - Displays temperature
2. Water Level Indicators - When ON water level is too low
3. ON/OFF Switch - Activates lights, digital thermometer and air circulation system.
4. Low Water Light - When the light is ON this indicates that water must be added. The fill light will also come on. Element shuts OFF until water is added.

4	175F°	6
5	150F°	5
6	150F°	5

To select Pre-Sets press and hold **MODE** then press **SELECT** to toggle through pre-sets. Stop on the desired pre-set setting. For specific food products, see the Recommended Control Settings and Holding Times section.

- c. Temperature and Humidity Programming- A pre-set can be changed. Hold + and - for 3 seconds until the current temperature is displayed. Push + up or - down to set the desired cabinet temperature. Press **MODE** to display the humidity setting. Press + up or - down to set the desired humidity level. A setting of 5 will be about 25% relative humidity. Press **MODE** to leave program.

By pressing and holding **MODE** and then **SELECT** different pre-sets can be individually chosen and reset to a specific temperature and humidity setting. (Maximum temperature is 175°F and humidity 10).

## **NOTE**

**Using tap water will promote scaling that will eventually cause clogging of water tubes and prevent the proper operation of the Humidity Cabinet. The use of distilled water will prevent scaling inside the water lines of the cabinet.**

- Fill reservoir by lifting reservoir lid and pouring water in until both the fill and low water light should be "OFF" when the tank is full. HFD-2A holds approximately 3 quarts and HFD-3A holds approximately 5 quarts. Both lights will be off until the water level drops below a specified set level and the low water light comes on. The water heater will stop operating until water is added. The fill light will be "ON" until the water level reaches the fill water indicator probe. 5 quarts. Both lights will be off until the water level drops below a specified set level and the low water light comes on. The water heater will stop operating until water is added. The fill light will be "ON" until the water level reaches the fill water indicator probe.

## OPERATING PROCEDURES

- Turn power switch on.
- Set desired temperature and humidity or desired pre-set. Allow approximately 20 minutes for machine to reach proper temperature. (Time will vary depending on temperature setting.)
- Fill water reservoir.
- Monitor cabinet temperature via the digital thermometer on the control (See Figure 2).
- Periodically monitor water level by indicator on control panel (See Figure 2).

## DOOR REVERSAL

Doors are supplied from the factory mounted on the left side of the cabinet but can be mounted on the right side by following the instructions listed below.

### DOOR REMOVAL (See Figure 3)

- Remove the top left mounting bracket while holding door. Replace screws in holes. Keep the bracket for installation on the right side.
- Lift door carefully off of bottom pin bracket and set down.
- Remove the bottom pin bracket by removing the 2 bottom screws. Replace screws in holes. Keep the bracket for installation on the right side.
- For models using the rotating pizza or pretzel racks only, remove the rectangular bracket magnet assembly in the upper right corner of the door being careful not to crack glass. Slide a razor under to break adhesive. Keep this assembly because this will be located in a new position after the door is moved.

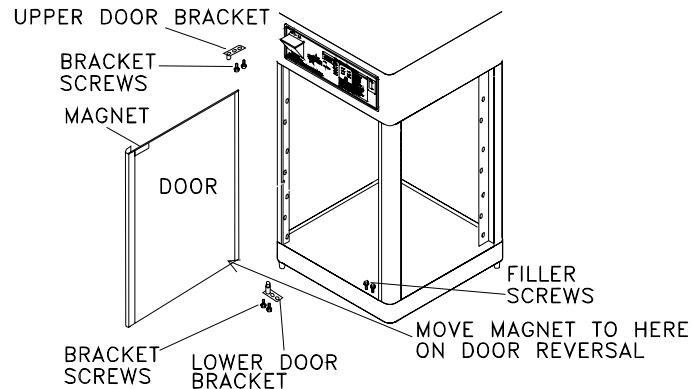


FIGURE 3

IL1034

### DOOR INSTALLATION (See Figure 3)

- Remove the 2 bottom and 2 top screws on the right side of cabinet door opening.
- Mount the bottom "taller" mounting pin first and screw in place using the 2 screws removed earlier.
- Mount the bottom door hinge hole into the bottom pin, while holding door. The handle should be on the outside of door on the left side of the unit.
- Locate the top mounting pin into top door hinge hole. Slide the top bracket into place, holding door, and attach top bracket using the 2 screws removed earlier.
- Check door for proper alignment in opening. Door can be adjusted slightly up and down by sliding the lower bracket back or forth. Door can be adjusted slightly in and out of cabinet by adjusting top bracket in and out. Tighten all door mounting screws securely.
- For rotating models, locate the magnet assembly at the top right hand corner of the installed door. Use RTV silicone to hold it in place. Check for rotisserie operation by opening and closing door.

## CLEANING INSTRUCTIONS



### **WARNING** DISCONNECT ELECTRICAL CORD BEFORE CLEANING THE CABINET

1. To maintain finish and shine of unit, wipe daily with a damp cloth and mild soap. Do not use harsh detergents or scouring pads.
2. Daily cleaning of inside glass, bottom pan and racking system with a damp cloth is required.



### **CAUTION** **Be sure cabinet has cooled down prior to opening drain to avoid burning fingers while unscrewing plug.**

3. It is required that the water reservoir be drained daily and re-filled with fresh water. This can be done by placing a 5 quart container under the drain plug and un-screwing the drain plug.

# TROUBLE SHOOTING GUIDE

This guide is recommended for use by a qualified service technician familiar with electrical commercial equipment.

## 1. Unit does not operate.

- Be sure unit is plugged into correct supply voltage.
- Be sure power switch is turned on.
- Disconnect power cord and check power switch and wiring connections for bad connections.

## 2. Unit turns on but unit light or blower does not come on. Blower and light should always be on whenever unit is energized.

- If the light is not on, check and replace the light bulb with a standard 75 watt bulb.
- If the blower is not on, turn off power switch and disconnect power cord. Check wiring to blower motor. Check motor to see if it turns freely. Check motor and replace blower if showing an open circuit on continuity test.

## 3. Center rotisserie motor does not work. Motor will turn only when door is closed completely.

- Check for door magnet on top door glass. This energizes a proximity switch in the unit when the door is closed. If it is not there it must be replaced to energize motor. If it is there and motor does not work, try repositioning on door glass to energize motor. If this fails then check rotisserie motor and wire connections. Also check proximity switch by doing a continuity check on switch with door closed. If switch is working on a closed door then the rotisserie motor must be checked and replaced if necessary.

## 4. Unit turns on, everything works but cabinet does not heat up.

- Check electronic control on top front of unit. Verify that the unit is set for a warmer air temperature than room temperature. Set it for 140°.
- If unit does not heat up after operating for several minutes, several things must be checked to determine the cause.
  - a. With the control set at 140°F, check the power to the air heater element relay from the control board. It should be about 12 V.D.C. to the relay coil. If it is then the board and the air temperature thermistor sensor are working. If not then the sensor and board must be checked. The sensor should read about 4,000-5,000 ohms at room temperature. Resistance on the probe will drop as the temperature increases. If it reads open then replace it. To check the board, install a 5,000 ohm 1/2 watt resistor for the suspect sensor. The board should supply 12 V.D.C. power to the relay. If it doesn't, then the board is defective.
  - b. If the relay is getting energized by the board and the air heater element is still not working, check the voltage out of the power side of the relay. It should be 0 VAC. If not, then replace the relay.
- If relay is working and the wiring is all intact and tightly connected, then the heating element must be checked.
- Disconnect heating element and check for continuity. You should measure a low ohms reading like 15-20 ohms. If nothing, then replace heating element.

**5. Unit turns on, everything works but water heater does not work.**

- Check electronic control on the front of unit. Verify that the humidity setting is set for a value of 10 to check control.
- Be sure water tank is filled with water and the water fill light is off.
- With the unit operating for several minutes the water in the fill should be getting warm. If not then troubleshoot the water heating element following the same steps in 4a. and 4b. on the previous page, except on the water heater relay, sensor and heating element.

**6. Unit turns on, everything works, but the low water light is on. When the low water light is on and blinking there will be no voltage to the relay or water heating element.**

- Check and make sure unit is full of water. If yes, then shut off the power switch and disconnect power cord. Remove top and check the water sensor board (3 connections on water tank). Remove sensor board and verify the 2 sensor rods are attached to the underside of board. The long rod should be attached to the terminal connector marked "L" for low water indicator. The short rod to the "H" terminal for high water. The green ground wire must be attached to the "G" connection. Using a fine sandpaper, sand both sensing rods to remove any corrosive buildup. Re-attach the sensor assembly securely using the screws removed. Be sure wires are attached and routed back correctly to the marked control board terminals. Re-attach the top and energize unit. Low water light should be off. If not, then control board is not functioning properly and should be replaced.

**THOROUGHLY INSPECT YOUR UNIT ON ARRIVAL**

This unit has been tested for proper operation before leaving our plant to insure delivery of your unit in perfect condition. However, there are instances in which the unit may be damaged in transit. In the event you discover any type of damage to your product upon receipt, you must immediately contact the transportation company who delivered the item to you and initiate your claim with same. If this procedure is not followed, it may affect the warranty status of the unit.

**LIMITED EQUIPMENT WARRANTY**

All workmanship and material in Star products have a one (1) year limited warranty on parts & labor in the United States and Canada. Such warranty is limited to the original purchaser only and shall be effective from the date the equipment is placed in service. Star's obligation under this warranty is limited to the repair of defects without charge, by the factory authorized service agency or one of its sub-agencies. Models that are considered portable (*see below*) should be taken to the closest Star service agency, transportation prepaid.

- > Star will not assume any responsibility for loss of revenue.
- > On all shipments outside the United States and Canada, see International Warranty.
- \* The warranty period for the JetStar six (6) ounce & Super JetStar eight (8) ounce series popcorn machines is two (2) years.
- \* The warranty period for the Chrome-Max Griddles is five (5) years on the griddle surface. See detailed warranty provided with unit.
- \* The warranty period for Teflon/Dura-Tec coatings is one year under normal use and reasonable care. This warranty does not apply if damage occurs to Teflon/Dura-Tec coatings from improper cleaning, maintenance, use of metallic utensils, or abrasive cleaners, abrasive pads, product identifiers and point-of-sale attachments, or any other non-food object that comes in continuous contact with the roller coating. This warranty does not apply to the "non-stick" properties of such materials.
- > This warranty does not apply to "Special Products" but to regular catalog items only. Star's warranty on "Special Products" is six (6) months on parts and ninety (90) days on labor.
- > This warranty does not apply to any item that is disassembled or tampered with for any purpose other than repair by a Star Authorized Service Center or the Service Center's sub-agency.
- > This warranty does not apply if damage occurs from improper installation, misuse, wrong voltage, wrong gas or operated contrary to the Installation and Operating instructions.
- > This warranty is not valid on Conveyor Ovens **unless** a "start-up/check-out" has been performed by a Factory Authorized Technician.

**PARTS WARRANTY**

Parts that are sold to repair out of warranty equipment are warranted for ninety (90) days. The part only is warranted. Labor to replace the part is chargeable to the customer.

**SERVICES NOT COVERED BY WARRANTY**

- |  |   |
|--|---|
| 1. Travel time and mileage rendered beyond the 50 mile radius limit  | 10. Voltage conversions   |
| 2. Mileage and travel time on portable equipment ( <i>see below</i> )  | 11. Gas conversions   |
| 3. Labor to replace such items that can be replaced easily during a daily cleaning routine, ie; removable kettles on fryers, knobs, grease drawers on griddles, etc. | 12. Pilot light adjustment  |
| 4. Installation of equipment   | 13. Miscellaneous adjustments   |
| 5. Damages due to improper installation  | 14. Thermostat calibration and by-pass adjustment   |
| 6. Damages from abuse or misuse  | 15. Resetting of circuit breakers or safety controls or reset buttons                           |
| 7. Operated contrary to the Operating and Installation Instructions  | 16. Replacement of bulbs  |
| 8. Cleaning of equipment   | 17. Replacement of fuses  |
| 9. Seasoning of griddle plates   | 18. Repair of damage created during transit, delivery, & installation OR created by acts of God |

**PORTABLE EQUIPMENT**

Star will not honor service bills that include travel time and mileage charges for servicing any products considered "Portable" including items listed below. These products should be taken to the Service Agency for repair:

- \* The Model 510FD Fryer.
- \* The Model 526TOA Toaster Oven.
- \* The Model J4R, 4 oz. Popcorn Machine.
- \* The Model 518CMA & 526CMA Cheese Melter.
- \* The Model 12MC & 15MC & 18MCP Hot Food Merchandisers.
- \* The Model 12NCPW & 15NCPW Nacho Chip/Popcorn Warmer.
- \* All Hot Dog Equipment **except** Roller Grills & Drawer Bun Warmers.
- \* All Nacho Cheese Warmers **except** Model 11WLA Series Nacho Cheese Warmer.
- \* All Condiment Dispensers **except** the Model HPD & SPD Series Dispenser.
- \* All Specialty Food Warmers **except** Model 130R, 11RW Series, and 11WSA Series.
- \* All QCS/RCS Series Toasters **except** Model QCS3 & RCS3 Series.


**ALL:**

- \* Pop-Up Toasters
- \* Butter Dispensers
- \* Pretzel Merchandisers  
*(Model 16PD-A Only)*
- \* Pastry Display Cabinets
- \* Nacho Chip Merchandisers
- \* Accessories of any kind
- \* Sneeze Guards
- \* Pizza Ovens  
*(Model PO12 Only)*
- \* Heat Lamps
- \* Pumps-Manual

The foregoing warranty is in lieu of any and all other warranties expressed or implied and constitutes the entire warranty.

**FOR ASSISTANCE**

Should you need any assistance regarding the Operation or Maintenance of any Star equipment; write, phone, fax or email our Service Department. In all correspondence mention the Model number and the Serial number of your unit, and the voltage or type of gas you are using.

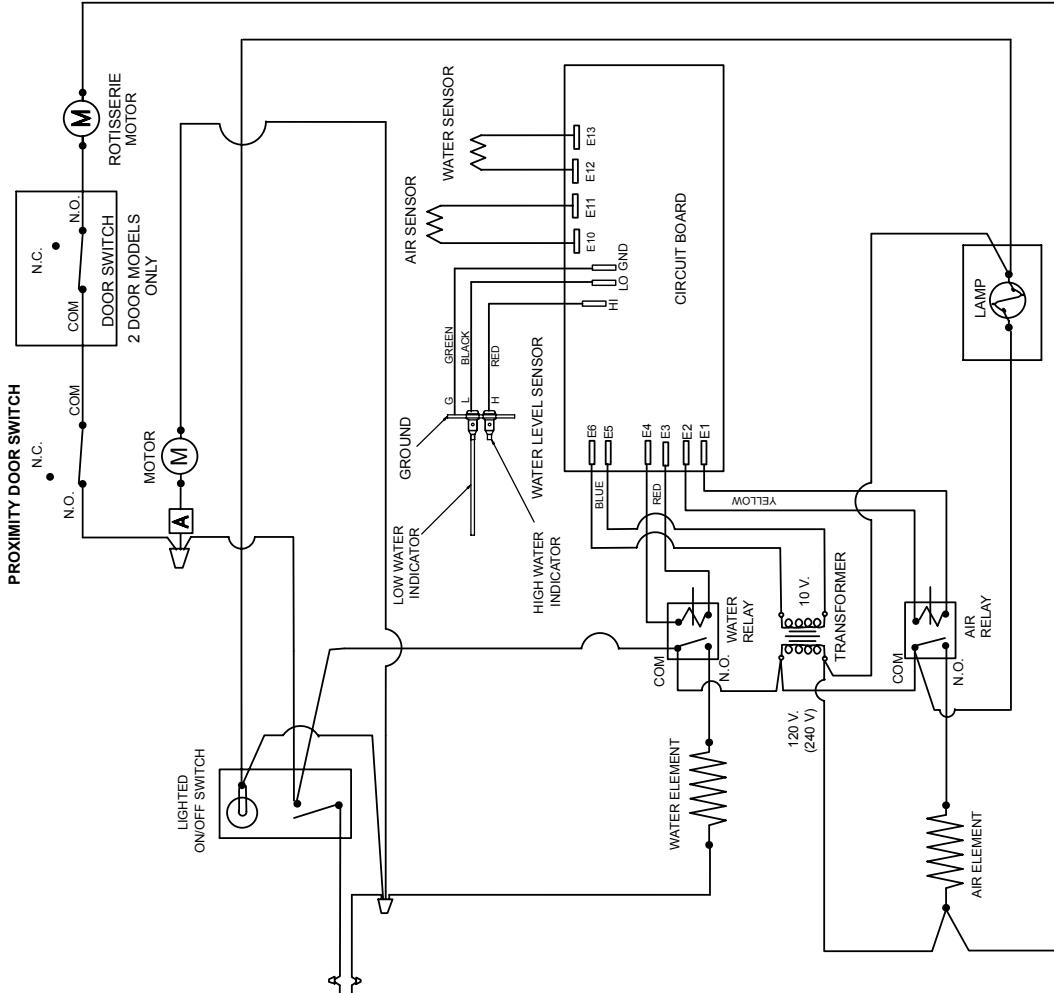

### MODEL: HFD-2A

THIS DRAWING CONTAINS INFORMATION CONFIDENTIAL TO STAR MFG. INTL. INC.  
 NO REPRODUCTION OR DISCLOSURE OF ITS CONTENTS IS PERMITTED.




**STAR MANUFACTURING INTERNATIONAL INC.**

05/06/2002

Rev B


SK1813

**MODEL: HFD-3A**  
 THIS DRAWING CONTAINS INFORMATION CONFIDENTIAL TO STAR MFG. INT'L. INC.  
 NO REPRODUCTION OR DISCLOSURE OF ITS CONTENTS IS PERMITTED.

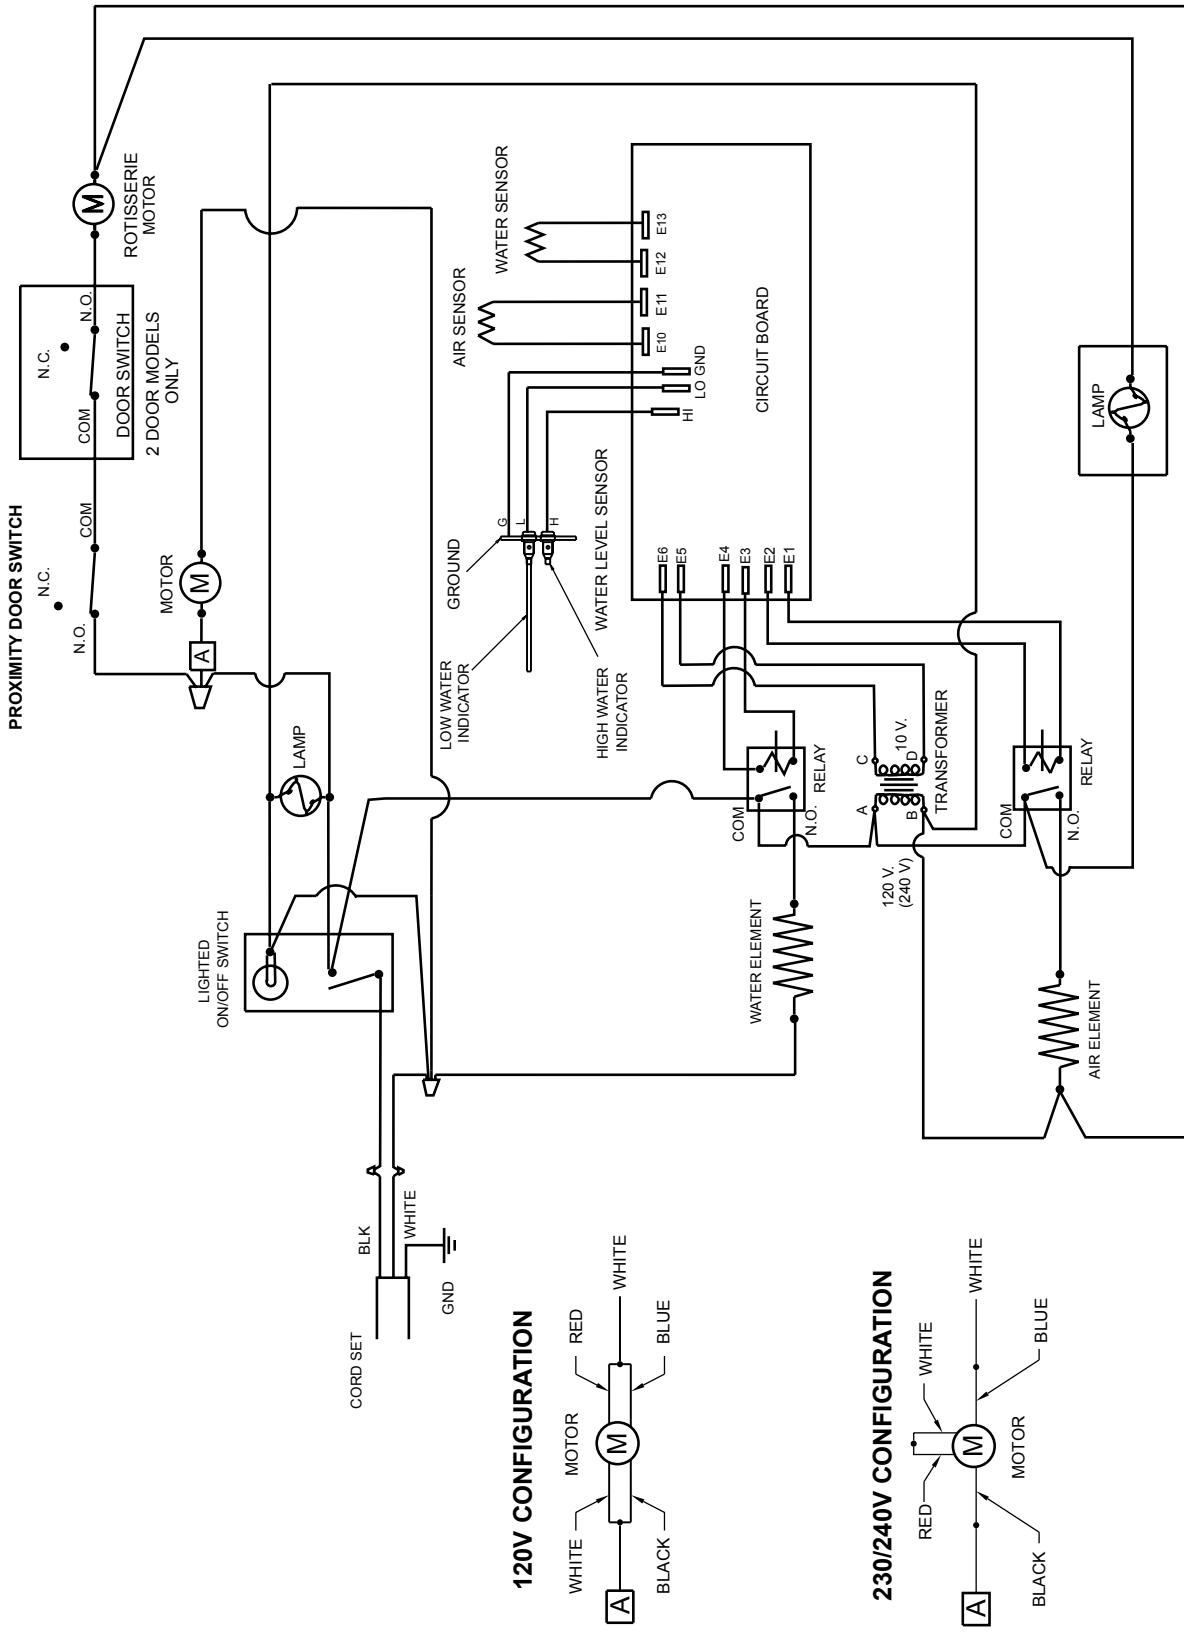


## INSTALLATION OF RACKS ON HFD-2 MODELS

FRD TO CONTROL PANEL

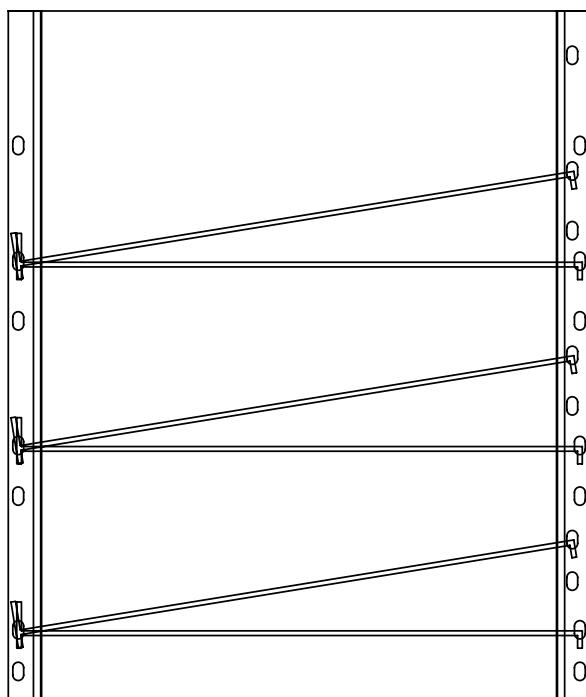

INSTALLATION OF 3 RACKS

FRD TO CONTROL PANEL

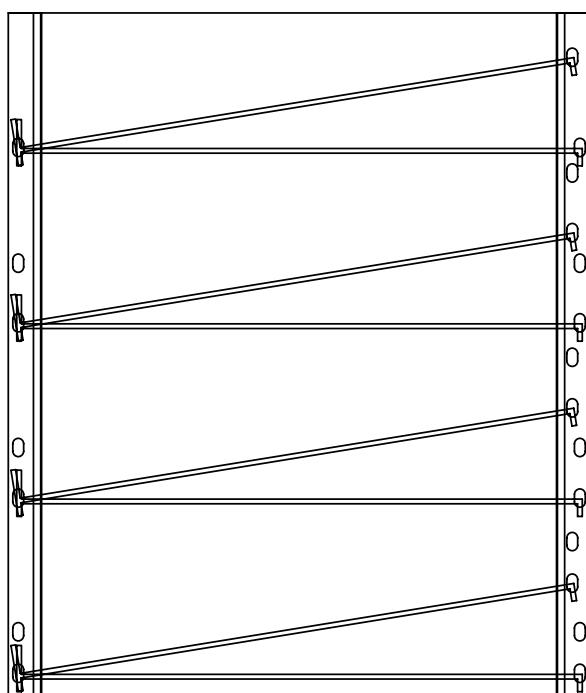

INSTALLATION OF 4 RACKS

SOME ITEMS ARE INCLUDED FOR  
ILLUSTRATIVE PURPOSES ONLY AND IN  
CERTAIN INSTANCES MAY NOT BE AVAILABLE

**MODEL: HFD-2**

THIS DRAWING CONTAINS INFORMATION CONFIDENTIAL TO STAR MFG. INT'L. INC.  
NO REPRODUCTION OR DISCLOSURE OF ITS CONTENTS IS PERMITTED.


**STAR MANUFACTURING INTERNATIONAL INC.**

SK1858

Rev -

04/26/2001



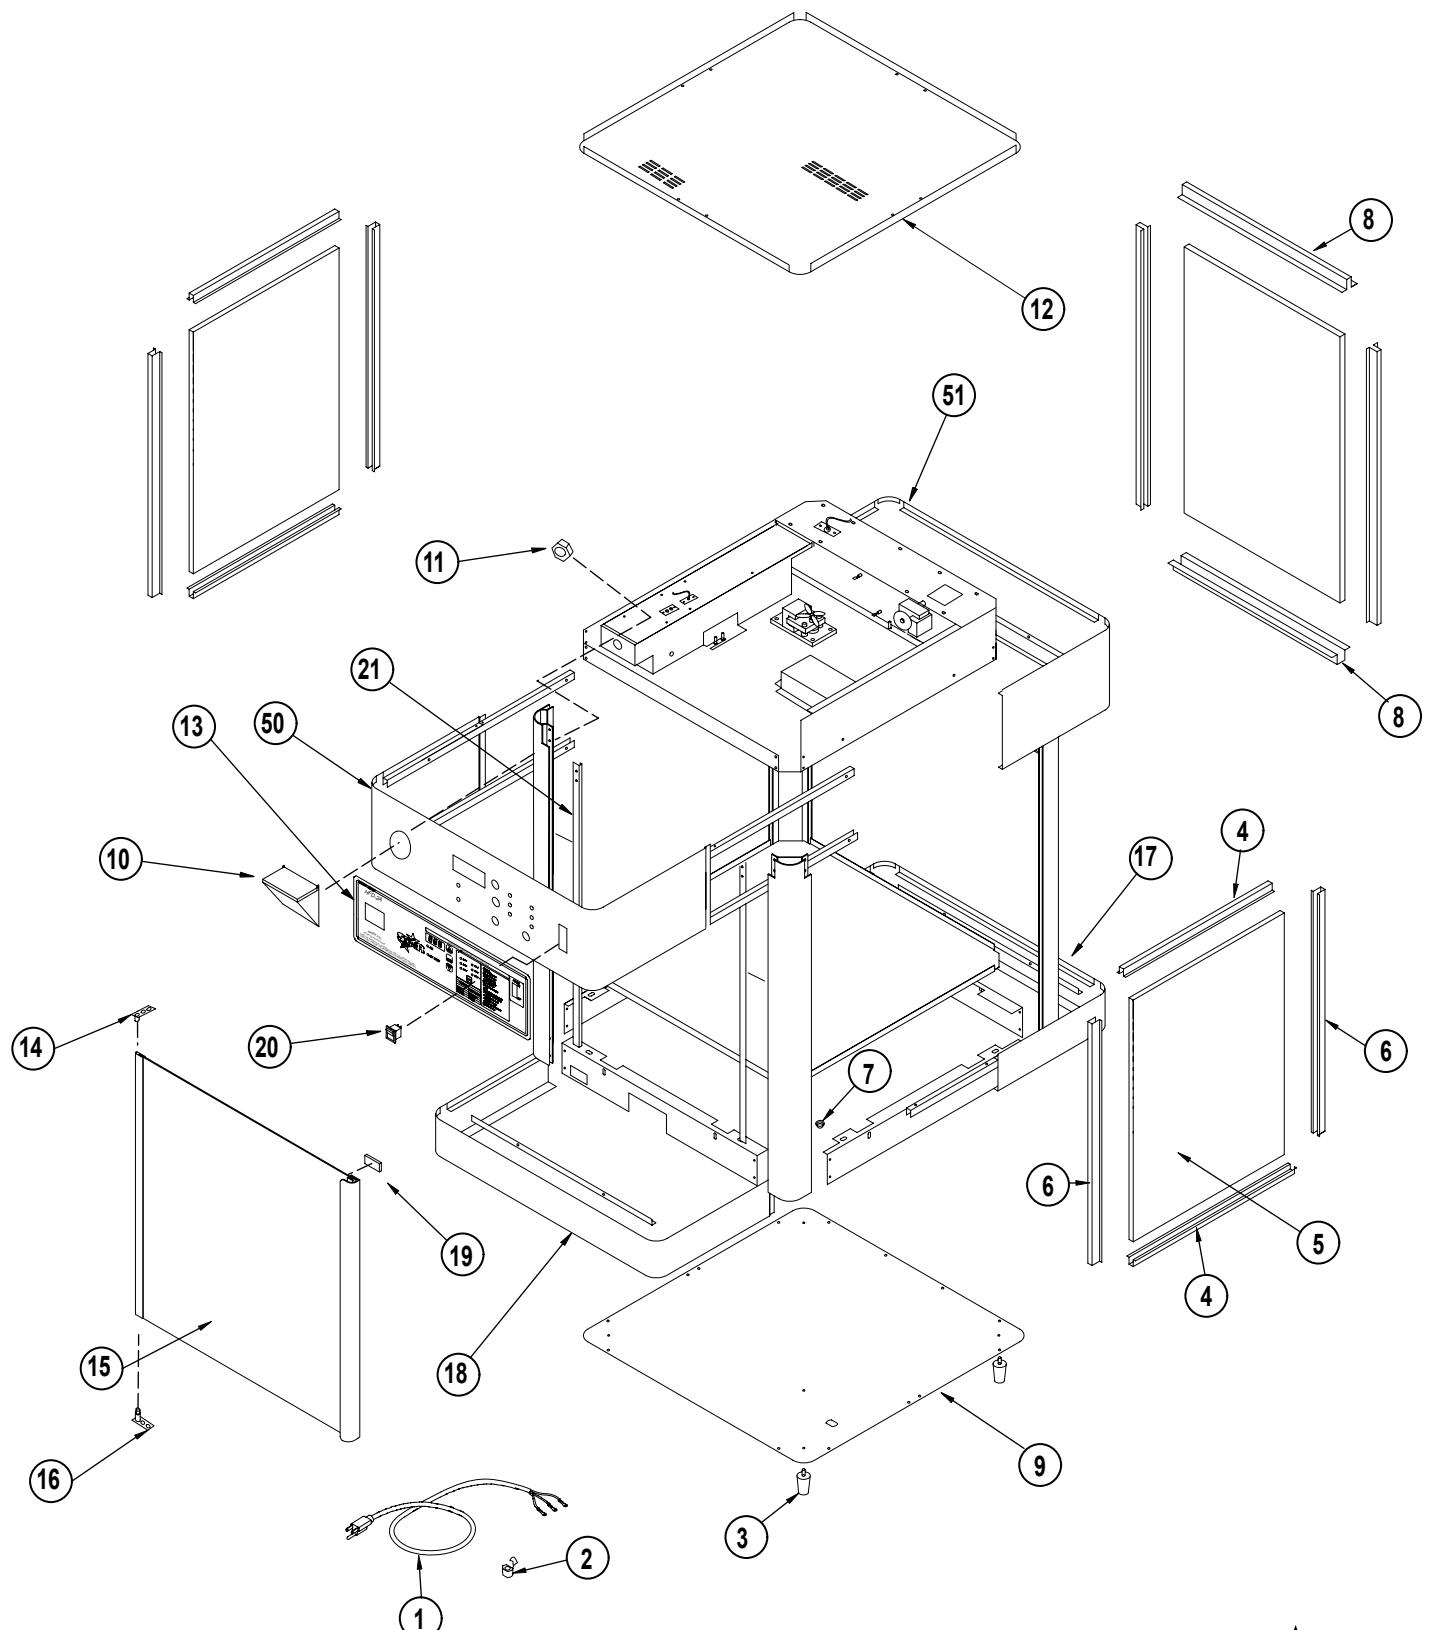


SOME ITEMS ARE INCLUDED FOR  
ILLUSTRATIVE PURPOSES ONLY AND IN  
CERTAIN INSTANCES MAY NOT BE AVAILABLE  
  
MODEL: HFD-2A,-3A

**STAR MANUFACTURING INTERNATIONAL, INC.**  
SK1714 REV. - 10/9/00



This drawing contains information confidential  
to Star Manufacturing International, Inc.  
No reproduction or disclosure of its  
contents is permitted.

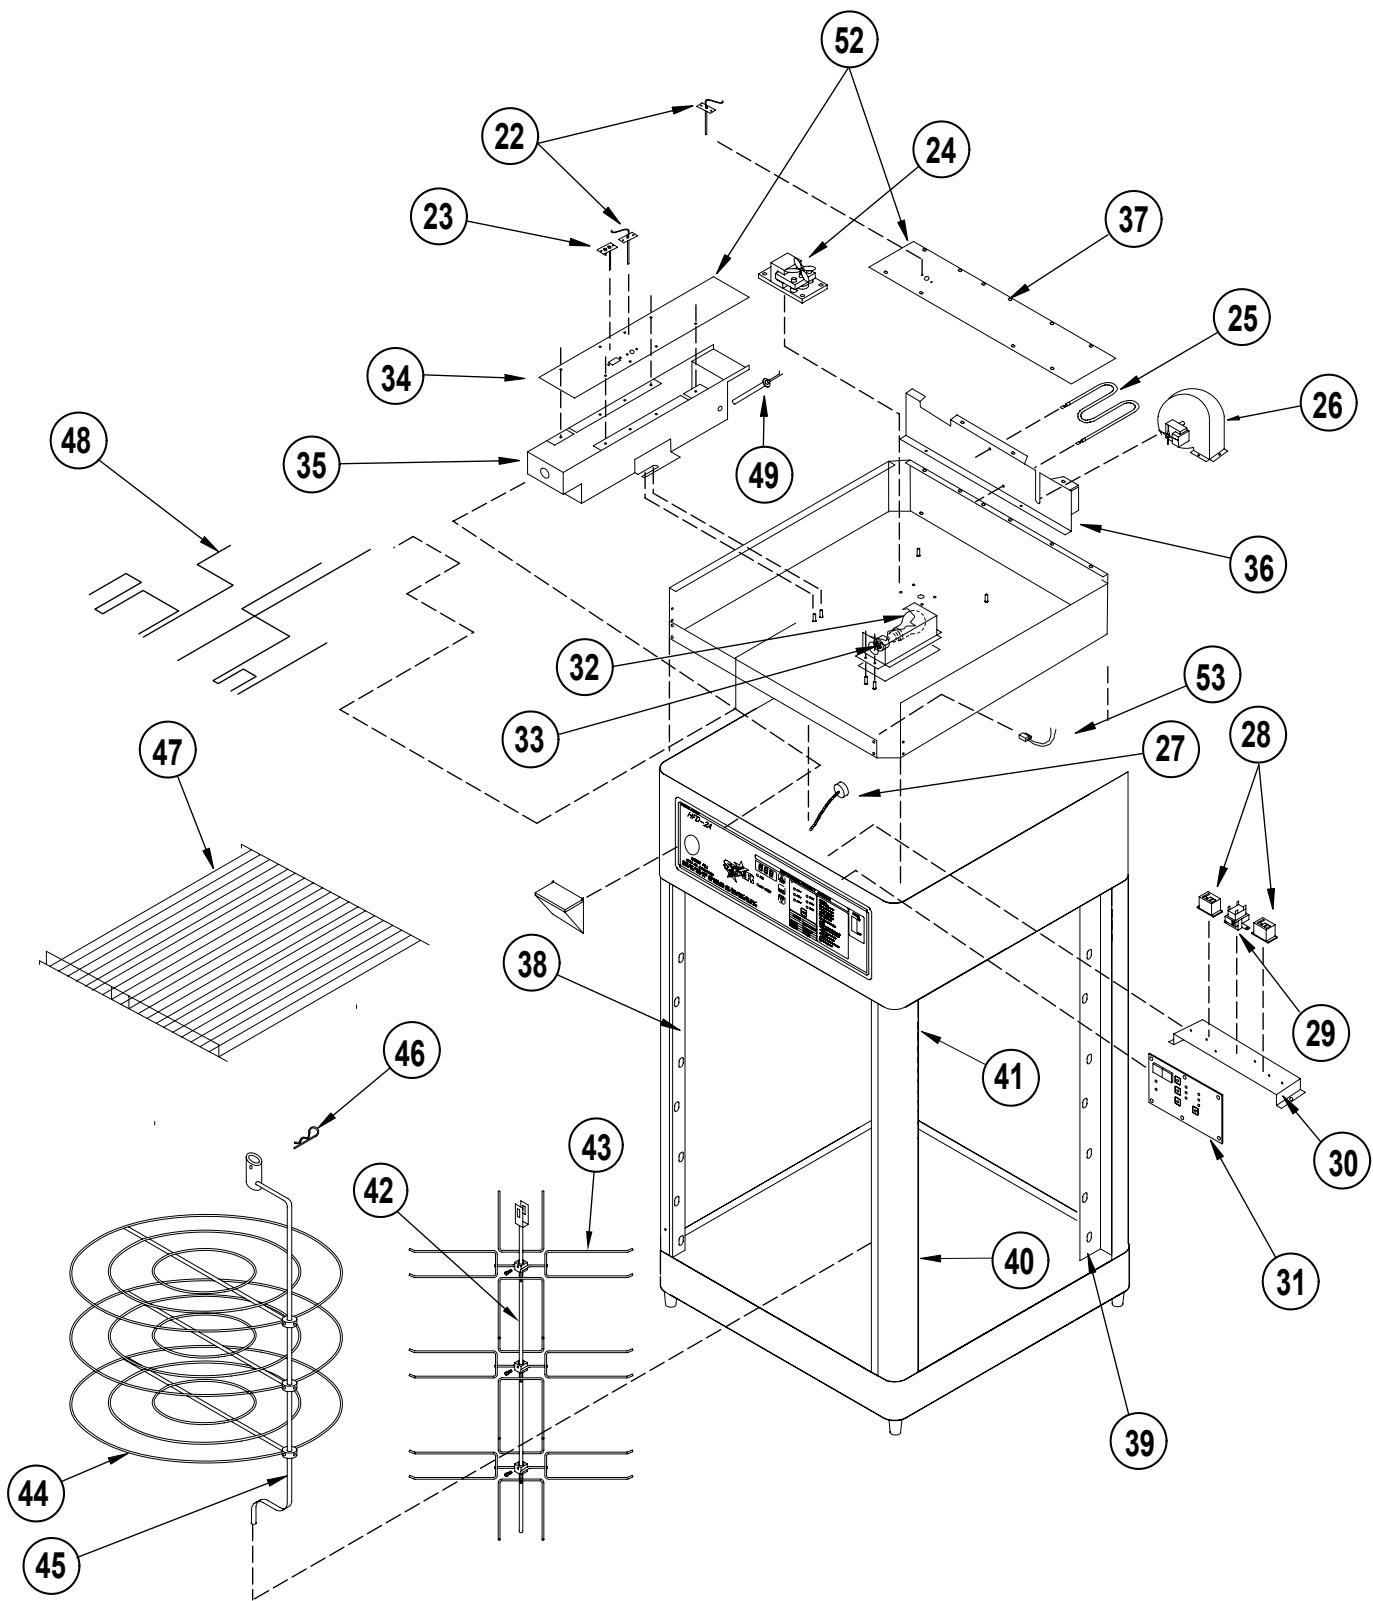

This drawing contains information confidential  
to Star Manufacturing International, Inc.  
No reproduction or disclosure of its  
contents is permitted.

SOME ITEMS ARE INCLUDED FOR  
ILLUSTRATIVE PURPOSES ONLY AND IN  
CERTAIN INSTANCES MAY NOT BE AVAILABLE

**MODEL: HFD-2A,-3A 120V/230V**

**STAR MANUFACTURING INTERNATIONAL, INC.**

**SK1375**

**REV. E**



**10/9/00**

# PARTS LIST

January 17, 2007 Rev. L

MODEL HFD2A and HFD3A HUMIDIFIED CABINET

Key Number	Part Number	Number Per Unit	Description and Model Designation
1	C3-G8021	1	CORD ASSEMBLY
	2E-05-07-0169	1	CORD ASSEMBLY
	A4-120165	1	CORD ASSEMBLY (230V)
2	2K-Y2968	1	BUSHING - STRAIN RELIEF
3	2A-6904	4	FOOT
4	D5-Y9623	6/4	GLASS CHANNEL
	2I-Y7838	6/4	GLASS CHANNEL
5	2Q-Y9567	3/2	GLASS - SIDE
	2Q-Y9110	2	GLASS - SIDE
	2Q-Y9121	1	GLASS - BACK
6	D5-Y9624	6/4	GLASS CHANNEL
	2I-Y7840	6/4	GLASS CHANNEL
7	2K-Y1139	1	BUSHING - HEYCO
8	2I-Y7839	2	GLASS CHANNEL-TOP AND BOTTOM
9	D5-220038	1	BOTTOM ASSEMBLY
	D5-220029	1	BOTTOM ASSEMBLY
10	D5-HFD004	1	WATER FILL ASSEMBLY
11	2C-Z3389	1	NUT, WATER FILL ASSEMBLY
12	D5-Z3401	1	TOP COVER
	D5-Z3409	1	TOP COVER
13	2M-Z4180	1	LABEL-OPERATOR PANEL
	2M-Z4181	1	LABEL-OPERATOR PANEL
14	D5-HFD014	1/2	TOP DOOR BRACKET ASSEMBLY
15	D5-HFD032	1/2	GLASS DOOR ASSEMBLY w/ MAGNET
	D5-HFD033	1/2	GLASS DOOR ASSEMBLY w/ MAGNET
NI	2R-Z3494	1	MAGNET, DOOR
16	D5-HFD017	1/2	BOTTOM DOOR BRACKET ASSEMBLY
17	D5-Z3573	1	BOTTOM REAR - CUSTOMER
	D5-Z3418	1	BOTTOM REAR - CUSTOMER
18	D5-Z3417	1	BOTTOM WRAP - OPERATOR
	D5-Z3574	1	BOTTOM WRAP - OPERATOR
19	D5-HFD034	1/2	DOOR SWITCH BRACKET ASSEMBLY
20	2E-Z3392	1	SWITCH ON/OFF
21	D5-Z3729	2/4	DOOR STOP FILLER
	D5-Z3730	2/4	DOOR STOP FILLER
22	2E-Z3236	2	THERMISTER SENSOR
23	D5-HFD003	1	WATER LEVEL SENSOR ASSEMBLY
24	2U-Z3641	1	ROTISSERIE MOTOR (120V), <b>Fan Blade Not Included</b>
	2U-Z3642	1	ROTISSERIE MOTOR (230V), <b>Fan Blade Not Included</b>
NI	2U-Z9811	1	FAN BLADE, MOTOR
25	2N-Y9145	1	AIR HEATER (120V)
	2N-Z0628	1	AIR HEATER (230V)
	2N-Z3678	1	AIR HEATER (120V)
	2N-Z4150	1	AIR HEATER (230V)
26	2U-Z3412	1	BLOWER (120V/230V)
27	A3-35219	1	CAP AND CHAIN
28	2E-05-07-0352	2	RELAY
29	2E-05-07-0351	1	TRANSFORMER (120V)
	2E-05-07-0350	1	TRANSFORMER (230V)
30	D5-Z3543	1	CONTROL MOUNTING BRACKET

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED  
INCLUDE MODEL AND SERIAL NUMBER

PAGE 1  
OF 2

Some items are included for illustrative purposes only and in certain instances may not be available.



Star Manufacturing International, Inc.

# PARTS LIST

January 17, 2007 Rev. L

MODEL HFD2A and HFD3A HUMIDIFIED CABINET

Key Number	Part Number	Number Per Unit	Description and Model Designation
31	2E-Z3287	1	CONTROL BOARD (120V/230V)
32	2S-Z3608	1/2	BULB - STANDARD 75 WATT (120V)
	2S-Z0630	1	BULB - STANDARD 100 WATT (230V)
33	2E-Y9184	1	SOCKET
34	D5-Z3396	1	COVER RESERVOIR
	D5-Z3406	1	COVER RESERVOIR
35	D5-HFD007	1	RESERVOIR ASSEMBLY
	D5-HFD008	1	RESERVOIR ASSEMBLY
36	D5-Z3399	1	FRONT AIR DUCT
	D5-Z3410	1	FRONT AIR DUCT
37	D5-Z3400	1	COVER AIR DUCT
	D5-Z3408	1	COVER AIR DUCT
38	D5-Z4435	1	DOOR RACK ANGLE-LEFT
	D5-Z0285	1	DOOR RACK ANGLE-LEFT
39	D5-Z4437	1	RACK ANGLE-LEFT
	D5-Z0309	1	RACK ANGLE-LEFT
40	D5-Z4436	1	DOOR RACK ANGLE-RIGHT
	D5-Z0286	1	DOOR RACK ANGLE-RIGHT
41	D5-Z4438	1	RACK ANGLE-RIGHT
	D5-Z0310	1	RACK ANGLE-RIGHT
42	D5-220055	1	PRETZEL SHAFT
	D5-220058	1	PRETZEL SHAFT
43	2B-Z7205	3	PRETZEL HOLDER
	2B-Z7206	4	PRETZEL HOLDER
44	2B-Z4279	3	PIZZA SHELF
	2B-Z4280	4	PIZZA SHELF
45	2B-Z8982	1	PIZZA SHAFT
	2B-Z8983	1	PIZZA SHAFT
46	2C-Z0812	1	HAIRPIN
47	2B-Z0289	3	SHELF
	2B-Z0290	4	SHELF
48	2E-Z3393	1	UPPER WIRE HARNESS
	2E-Z3394	1	UPPER WIRE HARNESS
49	2N-Z3435	1	CARTRIDGE HEATER 120V
	2N-Z4149	1	CARTRIDGE HEATER 230V
50	D5-Z3402	1	TOP WRAP - OPERATOR
	D5-Z3411	1	TOP WRAP - OPERATOR
51	D5-Y9591	1	TOP WRAP - CUSTOMER
	D5-Y9741	1	TOP WRAP - CUSTOMER
52	1P-E1525		FOAM GASKET TAPE
53	2E-Z3713	1/2	PROXIMITY SWITCH - DOOR
54	2M-Z4187	1	TOP GRAPHIC LABEL - FRESH & FAST (not shown)
	2M-Z4188	1	TOP GRAPHIC LABEL - FRESH & FAST (not shown)
55	2Q-Y9212	1	GLASS BACK

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED  
INCLUDE MODEL AND SERIAL NUMBER

PAGE 2  
OF 2

Some items are included for illustrative purposes only and in certain instances may not be available.



Star Manufacturing International, Inc.





**STAR MANUFACTURING**

10 Sunnen Drive, St. Louis, MO 63143 U.S.A.  
(800) 807-9054 (314) 781-2777  
Parts & Service (800) 807-9054  
[www.star-mfg.com](http://www.star-mfg.com)